

DuPont[™] Ultra Wall System Detail Sets

Detailing Recommendations

OVERVIEW & CONTENTS

Overview


The DuPont™ Ultra Wall System (UWS) detail set outlines the general guidelines for design using the system, focusing on maintaining continuity of the thermal, air, and water control layers. These details are meant to be used as guides during the design phase of a project.

"UWS-CM" details show the DuPont™ Cavitymate™ Ultra Wall System, using Styrofoam™ Brand Cavitymate™ Ultra insulation (15.75"x96") between masonry ties with DuPont™ Great Stuff Pro™ Gaps & Cracks as adhesive and joint treatment. This system is commonly used in block and brick construction.

"UWS-SL" details show the DuPont™ Ultra SL Wall System, using Styrofoam™ Brand Ultra SL (48"x96" with ship lap on long edges) with DuPont™ LiquidArmor™ Flashing & Sealant as joint treatment. This system is commonly used over studs, CMU, or concrete walls




Other system detail sets available at <u>building.dupont.com</u>

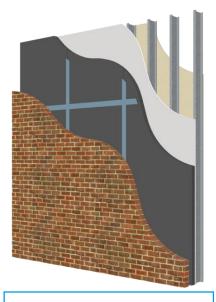

UWS-SL

For steel stud, CMU, or concrete construction, installing 4'x8' insulation

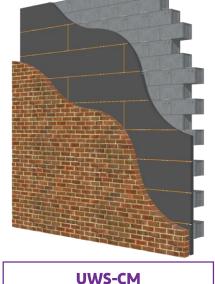





DuPont[™] Ultra Wall System Cavitymate[™] Ultra Wall System

Detailing Recommendations

CONTENTS

UWS-CM Ca	avitymate [™] Ultra Wall System	1-0
UWS-CM01	Control Layer Summary	1-1
UWS-CM02	System Options	1-2
UWS-CM03	Fastening Guidelines	1-3
UWS-CM04	Transitions	1-4
UWS-CM05	Penetrations	1-5
UWS-CM06	Patching Insulation	1-6
UWS-CM07	Foundation	1-7
UWS-CM08	Window Head Mineral Wool	1-8
UWS-CM09	Window Head Mineral Wool 2	1-9
UWS-CM10	Window Jamb	1-10
UWS-CM11	Window Sill	1-11
UWS-CM12	Edge of Slab / Relief Angle	1-12
UWS-CM13	Corners	1-13
UWS-CM14	Change in Plane	1-14
UWS-CM15	Expansion Joint	1-15
UWS-CM16	Control Joint	1-16
UWS-CM17	Parapet	1-17
UWS-SL Ult	ra SL Wall System	2-0

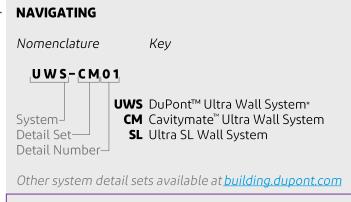

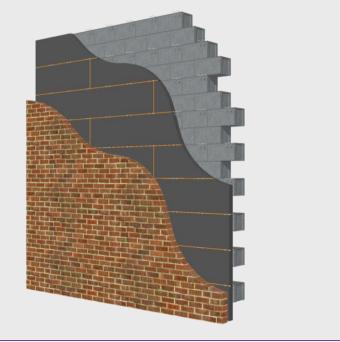

Cavitymate™ Ultra Wall System

Control Layer Summary


DESIGN INTENT

- STYROFOAM™ BRAND EXTRUDED POLYSTYRENE RIGID INSULATION ACTS AS PRIMARY CONTROL LAYERS: THERMAL (CI), WATER-RESISTIVE, AND AIR SEALING, WHILE DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT SEALS ALL VERTICAL & HORIZONTAL BOARD JOINTS TO MAKE THE CONTROL LAYERS CONTINUOUS.
- CONTINUOUS INSULATION THICKNESS TO BE DETERMINED TO MINIMIZE CONDENSATION POTENTIAL AND COMPLY WITH ENERGY CODE.

DESIGN STANDARDS

STYROFOAM™ BRAND CAVITYMATE™ ULTRA INSULATION WITH DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS

- CLASS A PER ASTM E84
- AIR BARRIER PER ASTM E2357
- WATER BARRIER PER ASTM E331
- R-5.6 @ 1" PER ASTM C518
- NFPA 285 APPROVED ASSEMBLIES PER ENGINEERING JUDGMENT LETTERS

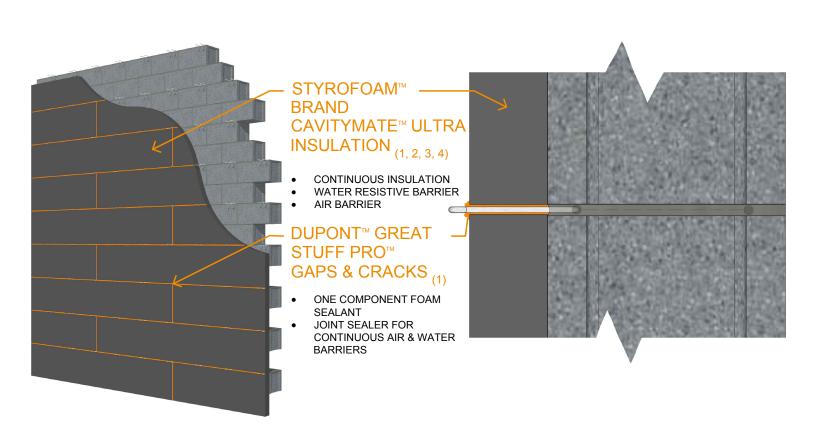

MINIMUM REQUIREMENTS

- SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER JOINT TREATMENT OPTIONS AND SYSTEM CONFIGURATIONS.
- STYROFOAM™ BRAND EXTRUDED POLYSTYRENE (XPS) INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".

UWS-CM01.1 (EXCLUDES BASE FLASHINGS, FASTENERS, CLADDINGS, ETC.)

SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

CAVITYMATE ULTRA SYSTEM | ISOMETRIC

THRU-WALL / SURFACE-MOUNT FLASHINGS BY OTHER.

CAVITYMATE ULTRA SYSTEM | SECTION

UWS-CM01.2

Cavitymate™ Ultra Wall System


System Options

DESIGN INTENT

- BASIS OF DESIGN FOR THE CAVITYMATE™ ULTRA WALL SYSTEM USES STYROFOAM™ BRAND CAVITYMATE™ ULTRA INSULATION AND DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS
- 2. THE CAVITYMATE™ ULTRA WALL SYSTEM CAN BE COMPOSED BY CHOOSING COMBINATIONS OF ITEMS FROM SECTIONS (A) AND (B). OPTIONS WILL MEET CODE FOR CONTINUOUS INSULATION (R-VALUE REQUIREMENTS VARY BY CLIMATE ZONE), AIR BARRIER, VAPOR RETARDER, AND WATER BARRIER.
- VERIFY ASSEMBLY HAS NFPA 285 APPROVAL IF APPLICABLE. INCLUDING SEAM TREATMENT AND FLASHING MAX. WIDTHS.

WARRANTY AVAILABLE

50 YEAR THERMAL LIMITED WARRANTY FOR STYROFOAM™ BRAND EXTRUDED POLYSTYRENE (XPS) INSULATION 1.5" THICK AND GREATER.

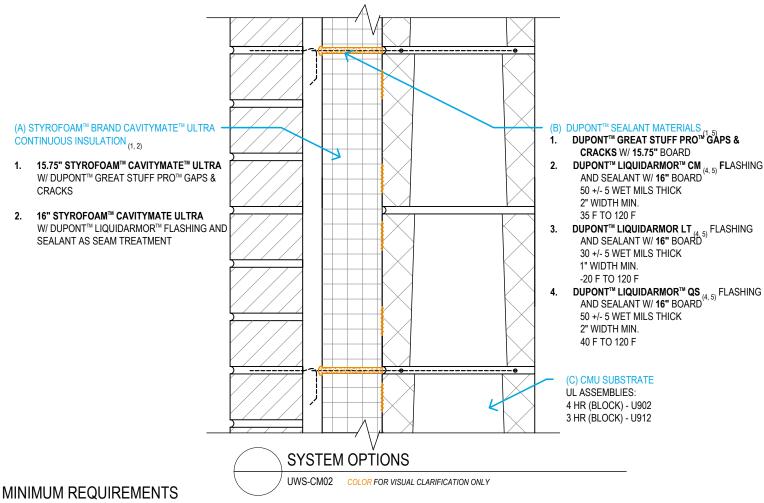

- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR APPROVED TIES.
- DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT CAN SPAN A MAX. 1/4" GAPS AREAS WHERE JOINTS BETWEEN CAVITYMATE™ ULTRA BOARDS EXCEED 1/4" REQUIRE DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE INSTALLED. GREAT STUFF PRO MUST TACK OVER (10-15 MIN.) PRIOR TO INSTALLATION OF DUPONT™ LIQUIDARMOR™ FLASHING.
- AT BOARD JOINTS, SELF ADHERED TAPE AND FLASHING MATERIALS ARE NOT ACCEPTABLE FOR THIS APPLICATION DUE TO THE DIFFICULTY IN CREATING A PROPER SEAL AROUND MASONRY WIRE TIES.
- DUPONT™ LIQUIDARMOR™ CM AND LIQUIDARMOR™ QS CANNOT BE APPLIED OVER LIQUIDARMOR™ LT. LIQUIDARMOR™ LT CAN BE APPLIED OVER LIQUIDARMOR™ CM AND LIQUIDARMOR™ QS.

Cavitymate™ Ultra Wall System


Fastening Guidelines

DESIGN INTENT

- SECURE STYROFOAM™ BRAND CAVITYMATE™ ULTRA INSULATION TO CMU BETWEEN MASONRY TIES.
- MASONRY TIE LENGTH TO BE DETERMINED BY INSULATION THICKNESS.
- BOARDS ARE INSTALLED PRIOR TO JOINT TREATMENT TO ACHIEVE A FULL SEAL FROM THE FACE OF CMU TO FACE OF INSULATION.

ACCEPTABLE ADHESIVE:

DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS

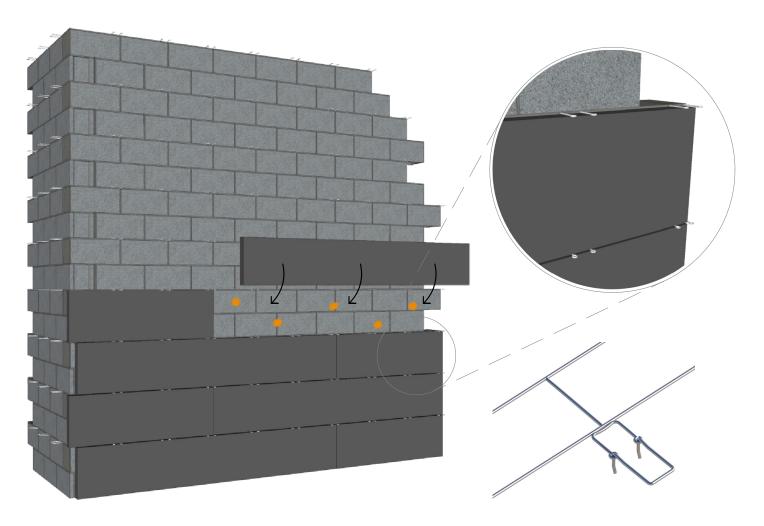



FASTENING GUIDELINES | ISOMETRIC

UWS-CM03 COLOR FOR VISUAL CLARIFICATION ONLY

- VERIFY SUBSTRATES HAVE NO VISIBLE WATER DROPLETS BEFORE INSTALLING BOARDS.
- 2. APPLY MIN. FIVE (5) DAUBS OF DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS TO WALL BEFORE FITTING BOARD BETWEEN MASONRY TIES.
- 3. INSTALL INSULATION IN RUNNING BOND PATTERN.
- 4. DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS MAY BE LEFT EXPOSED FOR 60 DAYS MAX.

Cavitymate™ Ultra Wall System


Transitions


DESIGN INTENT


- MUST MAINTAIN CONTINUITY OF ALL CONTROL LAYERS AT TRANSITIONS FROM ULTRA WALL SYSTEM TO OTHER **SYSTEMS**
- ENSURE COMPATIBILITY WHERE DUPONT™ FLASHING MATERIALS JOIN MATERIALS PRODUCED BY OTHER MANUFACTURERS.
- 3. COUNTERFLASH MATERIALS TO PROMOTE WATERSHEDDING AT TRANSITION LOCATIONS.
- 4. CONCRETE & CMU APPLICATIONS: ENSURE ADEQUATE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT THICKNESS IS APPLIED FOR PROPER ADHESION TO AGGREGATE.

COMPATIBILITY RECOMMENDATIONS

- CHEMICALLY COMPATIBLE ADHESIVE TECHNOLOGIES WITH STYROFOAM™ BRAND XPS INSULATION AND DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT (NOTE CHEMICAL COMPATIBILITY IS NOT A QUALIFIER OF LONG-TERM ADHESION): ACRYLIC & ACRYLIC LATEX • BUTYL • RUBBERIZED ASPHALT • SILICONE • HOT RUBBER
- COMPATIBILITY OF PRODUCTS/CHEMISTRIES NOT LISTED ABOVE MUST BE VERIFIED BY RESPECTIVE MANUFACTURER.
- DESIGNER IS RESPONSIBLE TO VERIFY COMPATIBILITY OF MATERIALS WITH ADDITIONAL COMPONENTS IN ASSEMBLY.

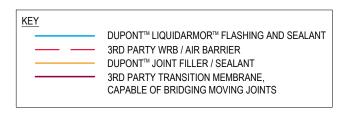





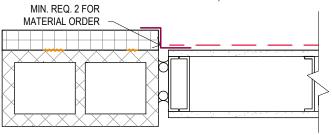


FIG 3: TRANSITION FROM ULTRA TO WRB ON EXT. GYP. | PLAN UWS-CM04.3

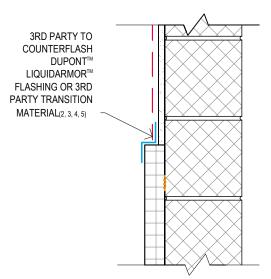


FIG. 2: VERTICAL TRANSITION OF OTHER WRB TO ULTRA | SECTION UWS-CM04.2

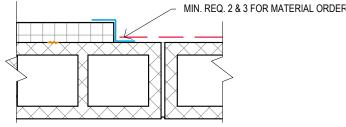


FIG 4: HORIZONTAL TRANSITION OF ULTRA TO OTHER WRB | PLAN UWS-CM04.4


TRANSITIONS

UWS-CM04 **COLOR FOR VISUAL CLARIFICATION ONLY**

- OVERLAP OF SEALANT ADHESION ON ANY TRANSITION FROM FACE OF INSULATION ONTO ADJACENT MATERIALS MUST USE DUPONT™ LIQUIDARMORTM FLASHING AND SEALANT AND APPLY USING REQUIREMENTS ON DETAIL UWS-CM02 "SYSTEM OPTIONS".
- CONFIRM WITH MATERIAL MANUFACTURERS FOR ADHESION COMPATIBILITY AND ORDER OF INSTALLATION.
- DUPONT™ LIQUIDARMOR™ CM AND LIQUIDARMOR™ QS CANNOT BE APPLIED OVER LIQUIDARMOR LT OR ANY OTHER SILICONE PRODUCTS. FIG.1, DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO FILL JOINTS \geq 1/4" PRIOR TO FLASHING WITH MIN. OVERLAP TO FACE OF REQUIREMENTS ON DETAIL UWS-CM02 TO EACH FACE OF BOARD.
- MIN. WIDTH OF DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT BASED ON DETAIL UWS-CM02 ONTO FACE OF BOARD AND FACE OF OTHER SUBSTRATE.

Cavitymate™ Ultra Wall System

Penetrations

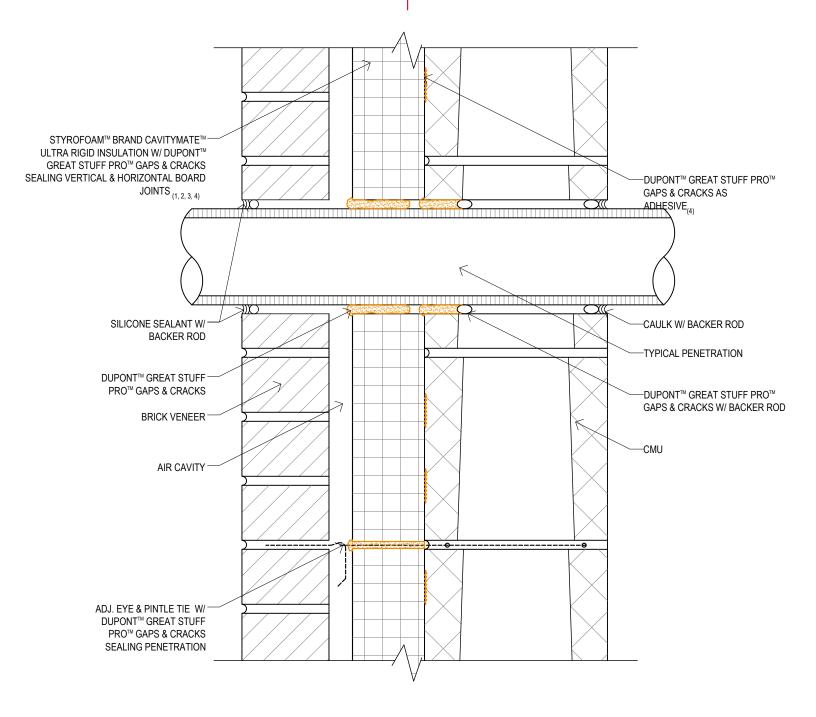

PENETRATIONS UWS-CM05 COLOR FOR VISUAL CLARIFICATION ONLY

- SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS..
- 2. VOIDS SURROUNDING PENETRATION TO BE MIN. $rac{1}{4}$ " AND MAX. 1" AND MUST BE FILLED WITH DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM06 "PATCHING INSULATION".
- 5. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

Cavitymate™ Ultra Wall System

Patching Insulation

DESIGN INTENT


- MAINTAIN INTEGRITY OF 4 CONTROL LAYERS BY PATCHING AS APPROPRIATE
- USE RESPECTIVE PATCHING TECHNIQUE, DICTATED BY SIZE OF DAMAGED AREA.

SEALANT OPTIONS

ONE COMPONENT FOAM

- DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS
- DUPONT™ GREAT STUFF PRO™ WINDOW & DOOR

 FILLID APPLIED.
- DUPONT™ LIQUIDARMOR™ LT FLASHING AND SEALANT
- DUPONT™ LIQUIDARMOR™ QS FLASHING AND SEALANT
- DUPONT™ LIQUIDARMOR™ CM FLASHING AND SEALANT

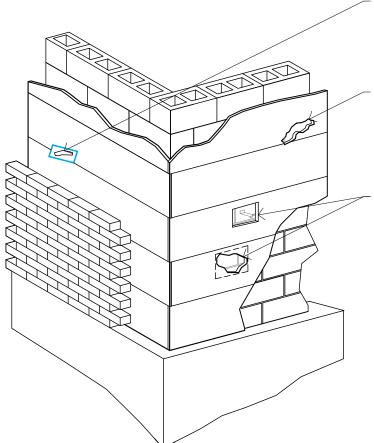

NON-FULL DEPTH HOLE IN XPS SURFACE

NO INFILL OR SEALING REQUIRED IF MINIMUM OF 1" OF XPS REMAINS INTACT BETWEEN THE AIR SPACE AND EXTERIOR FACE OF CMU. OPTIONAL: SEAL SURFACE OF HOLE WITH DUPONT LIQUIDARMOR (1) FLASHING AND SEALANT

FULL DEPTH HOLE 3" OR LESS ACROSS: INFILL HOLE WITH DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS. IF GREAT STUFF PRO™ FOAM EXPANDS TO A POINT THAT WILL IMPACT AIR GAP, CUT FLUSH TO FACE AFTER CURED AND SEAL WITH DUPONT™ LIQUIDARMOR™ (1) FLASHING AND SEALANT


FULL DEPTH HOLE LARGER THAN 3" ACROSS: CUT FOAM TO RECTANGULAR SHAPE AND INFILL WITH INSULATION PATCH. SEAL EDGES OF PATCH WITH DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS. IF GREAT STUFF PRO™ FOAM EXPANDS TO A POINT THAT WILL IMPACT AIR GAP, CUT FLUSH TO FACE AFTER CURED AND SEAL WITH DUPONT™ LIQUIDARMOR™ (1.3) FLASHING AND SEALANT

REPAIRING HOLES IN INSULATION

UWS-CM06 COLOR FOR VISUAL CLARIFICATION ONLY

- 1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS.
- 2. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- . SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

Foundation

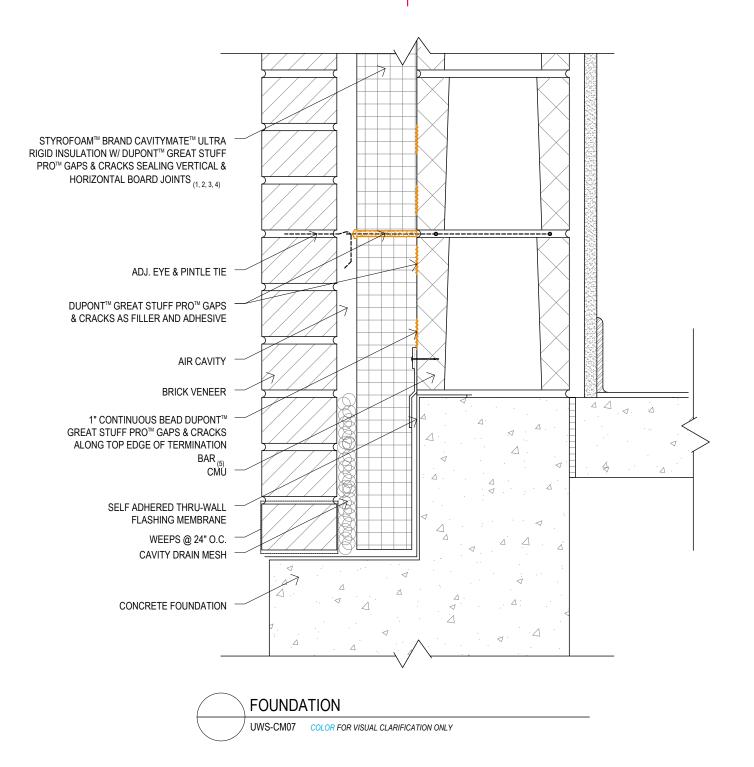

- 1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 3. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- 4. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.
- 5. TERMINATION BAR TO BE INSTALLED MIN. 16" ABOVE GRADE.


Win. Head w/ Mineral Wool

DESIGN INTENT

- USE LIQUIDARMORTM FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS, SILLS, HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- SEALANTS AND CAULKS AS SPECIFIED BY WINDOW
 MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST
 MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DOW SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DOW FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS, SILLS, HEADS.
- 3. DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

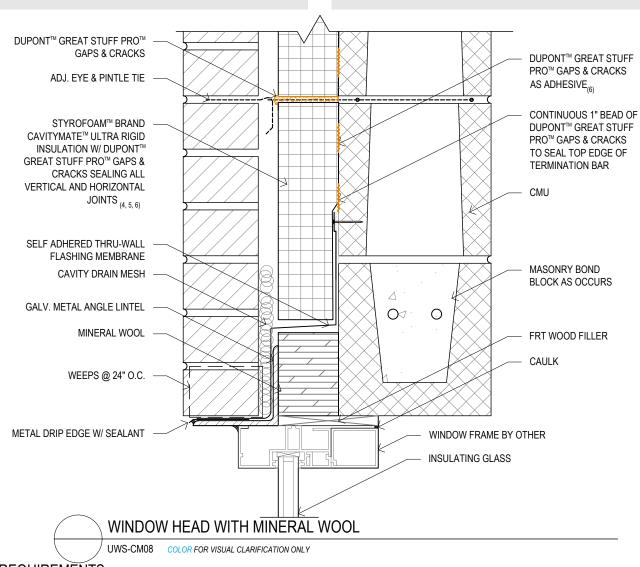

- DUPONT™ SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-CM-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- 2. IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- 3. ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLE TRIM ("SHINY 90").
- 4. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- 5. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- S. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.


Win. Head w/ Mineral Wool 2

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS, SILLS, HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- 2. SEALANTS AND CAULKS AS SPECIFIED BY WINDOW MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT™ SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DOW FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS, SILLS, HEADS.
- B. DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

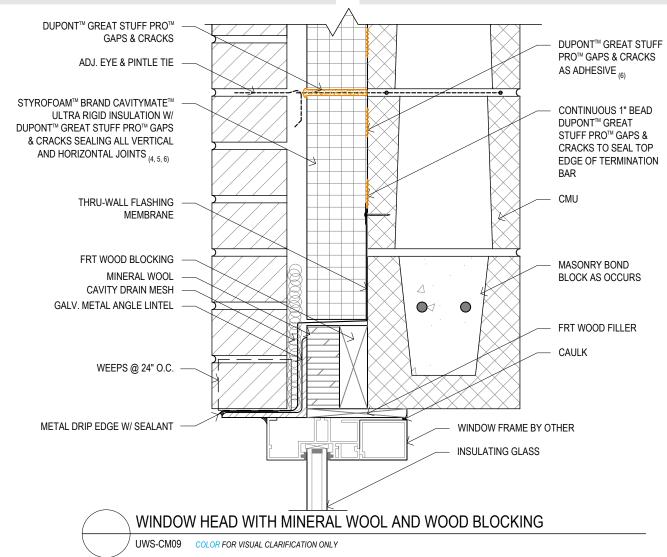

- DUPONT™ SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-CM-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- 2. IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- 3. ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLE TRIM ("SHINY 90").
- 4. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- 5. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 6. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.


Window Jamb

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS, SILLS, HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- SEALANTS AND CAULKS AS SPECIFIED BY WINDOW
 MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST
 MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT™ SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DUPONT™ FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS, SILLS, HEADS.
- 3. DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

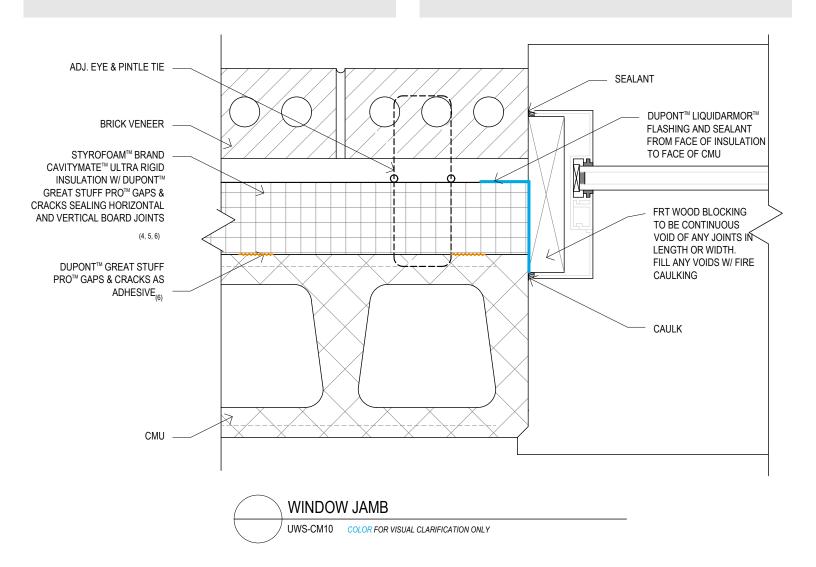

- DUPONT™ SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-CM-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLE TRIM ("SHINY 90")
- 4. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- 5. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 6. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.


Window Sill

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS, SILLS, HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- 2. SEALANTS AND CAULKS AS SPECIFIED BY WINDOW MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT™ SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.


GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DUPONT™ FOR LONG-TERM ADHESION TO DUPONT™ FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS. SILLS. HEADS.
- B. DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

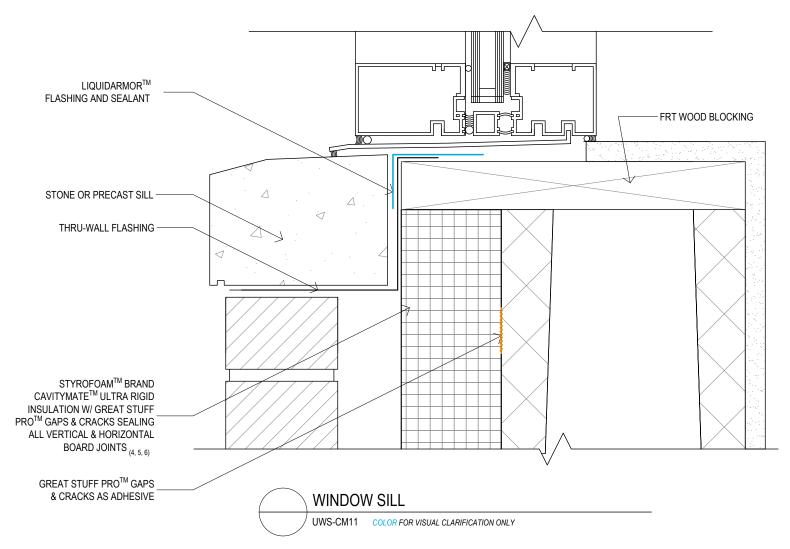


- DUPONT™ SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-CM-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- 2. IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- 3. ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLÉ TRIM ("SHINY 90").
- 4. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- 5. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 6. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

Edge of Slab Relief Angle

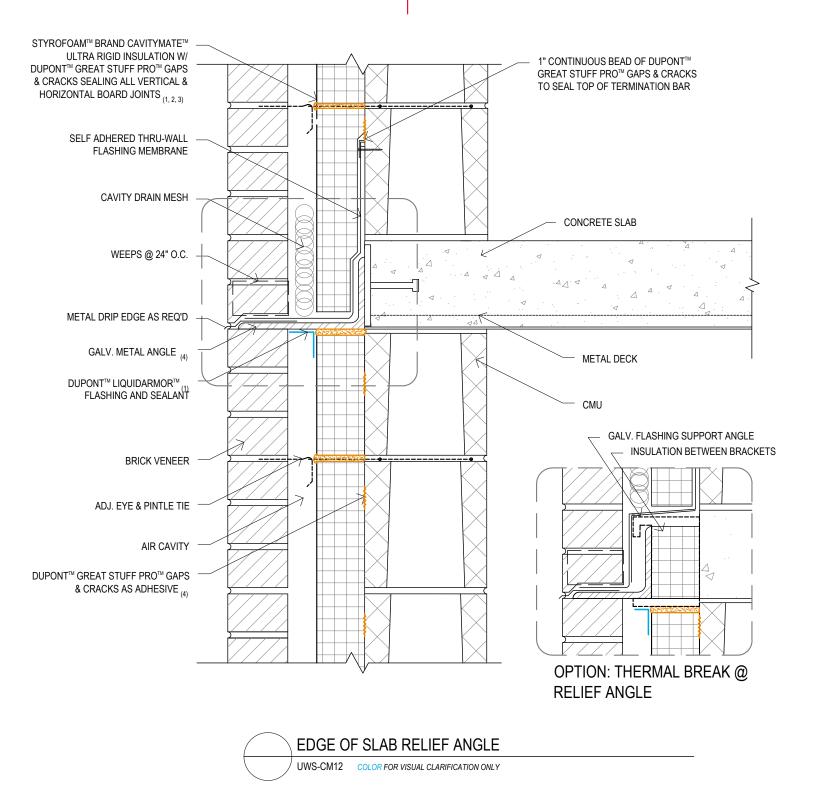

- 1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 3. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.
- 4. 1" GAP MAX. BETWEEN BOTTOM OF METAL ANGLE AND TOP OF INSULATION BOARD.

Corners

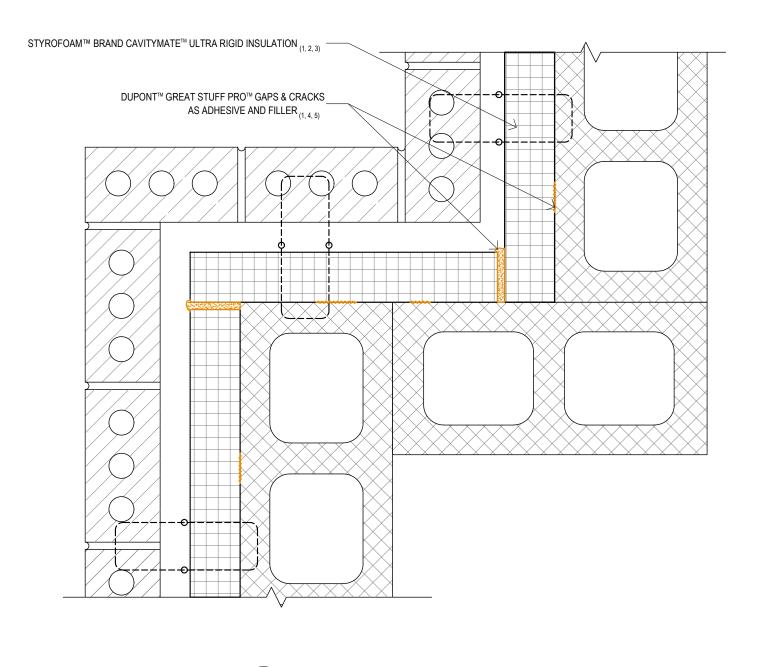

UWS-CM13 COLOR FOR VISUAL CLARIFICATION ONLY


MINIMUM REQUIREMENTS

1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.

CORNERS

- 2. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 3. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- 4. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.
- 5. ALLOW MIN. ¼" TO MAX. 3" GAP BETWEEN INSULATION BOARDS TO ALLOW PROPER INSTALLATION OF DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS.

Change in Plane

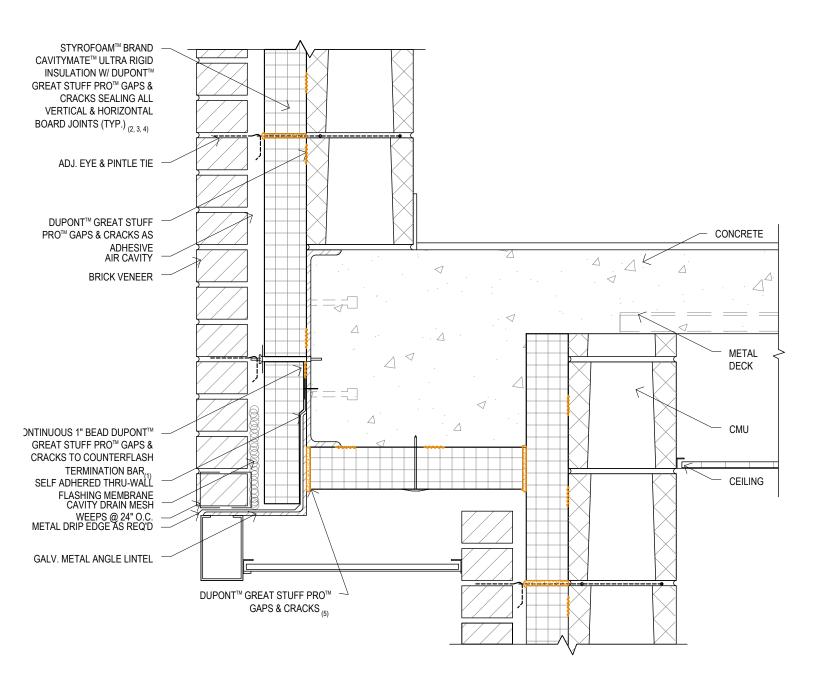



- 1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- 2. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 3. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- 4. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.
- 5. ALLOW MIN. ¼" TO MAX. 3" GAP BETWEEN INSULATION BOARDS TO ALLOW PROPER INSTALLATION OF DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS.

Expansion Joint UP TO 50% MOVEMENT

DESIGN INTENT


- ALLOW UP TO 50% MOVEMENT OF EXPANSION JOINT.
- 2. MAINTAIN CONTINUITY OF AIR AND WATER BARRIERS ACROSS EXPANSION JOINT USING TRANSITION MEMBRANE.

TRANSITION MEMBRANE RECOMMENDATIONS


 SILICONE TRANSITION STRIP* W/ DUPONT™ LIQUIDARMOR™ LT FLASHING AND SEALANT TO SEAL EDGES TO FACE OF INSULATION.

*OTHER EXPANSION TRANSITION MEMBRANES MAY BE USED.

DESIGNER IS RESPONSIBLE FOR SELECTING EXPANSION TRANSITION
MEMBRANE AND VERIFYING MATERIAL & ADHESION COMPATIBILITIES.

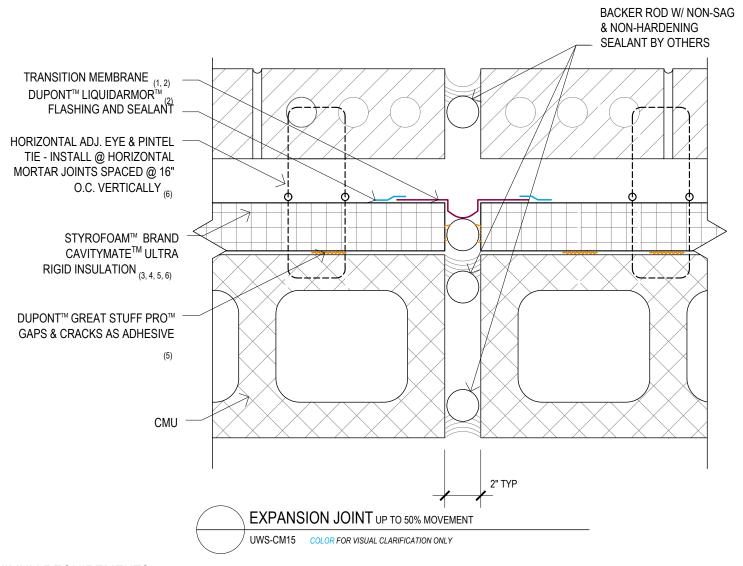

- 1. TRANSITION MEMBRANE MUST BE CAPABLE OF BRIDGING JOINT WITH UP TO 50% MOVEMENT AND SEALED TO FACE OF INSULATION.
- 2. CONFIRM WITH MATERIAL MANUFACTURERS ON ADHESION COMPATIBILITY.
- SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- 4. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 5. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- 6. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

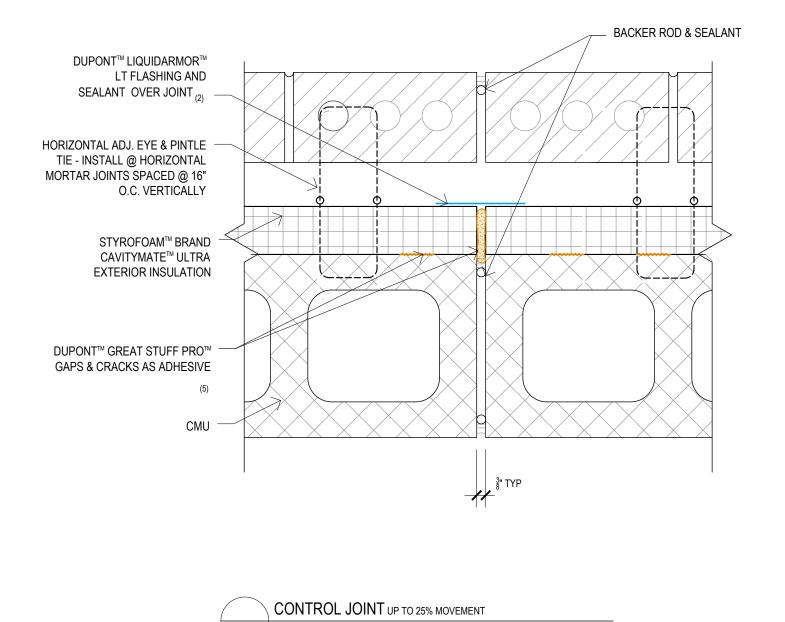

MINIMUM REQUIREMENTS

1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.

UWS-CM16 COLOR FOR VISUAL CLARIFICATION ONLY

- 2. DUPONT™ LIQUIDARMOR™ CM AND LIQUIDARMOR™ QS NOT ACCEPTABLE OVER CONTROL JOINT.
- 3. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 4. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- 5. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.




Parapet

DESIGN INTENT

- SUCCESSFULLY TRANSITION 4 CONTROL LAYERS FROM VERTICAL WALL PLANE TO HORIZONTAL ROOFING PLANE WITHOUT INTERRUPTION.
- INSULATION & AIR BARRIER TO SEAL OFF UNCONDITIONED PARAPET WALL FROM INTERACTING WITH CONDITIONED INTERIOR AIR TO FURTHER PREVENT CONDENSATION POTENTIAL.
- TRANSITION TO ROOFING MEMBRANE MATERIALS USING COMPATIBLE MATERIALS.

GENERAL RECOMMENDATIONS

- COMBINATION OF MATERIALS MAY BE USED TO ENCAPSULATE PARAPET WALL - ALL MANUFACTURERS SHOULD BE CONSULTED TO ENSURE CHEMICAL COMPATIBILITY OF MEMBRANE/TRANSITION MATERIALS TO INSULATION.
- 3RD PARTY MATERIAL TO TRANSITION FROM ROOFING MEMBRANE OVER/UNDER COPING TO TERMINATE ON FACE OF RIGID INSULATION.
- DUPONT™ FROTH-PAK™ INSULATION (CLASS A) AT ROOF DECK / PARAPET JUNCTURE TO BE INSTALLED PRIOR TO ROOF INSULATION & MEMBRANE.

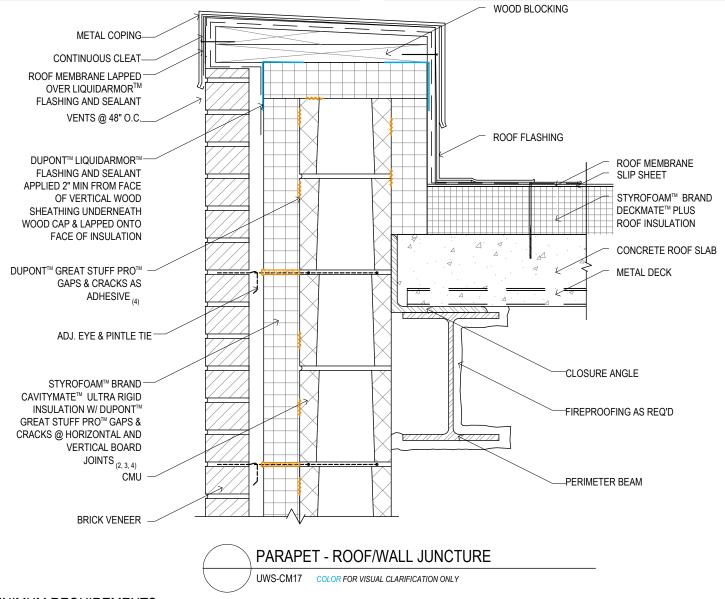

- 1. SEE DETAIL UWS-CM02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 3. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-CM08 "PATCHING INSULATION".
- 4. SEE DETAIL UWS-CM03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.




DuPont[™] Ultra Wall System Ultra SL Wall System

Detailing Recommendations for Jobs Using Masonry Cladding

CONTENTS

UWS-CM Cavitymate [™] Ultra Wall System		
UWS-SL U	tra SL Wall System	2-0
UWS-SL01	Control Layer Summary	2-1
UWS-SL02	System Options	2-2
UWS-SL03	Fastening Guidelines	2-3
UWS-SL04	Transitions	2-4
UWS-SL05	Expansion Joint	2-5
UWS-SL06	Control Joint	2-6
UWS-SL07	Penetrations	2-7
UWS-SL08	Patching Insulation	2-8
UWS-SL09	Foundation - Face Flashed	2-9
UWS-SL10	Foundation - Stud Flashed	2-10
UWS-SL11	Window Head In-Wall Fireblock	2-11
UWS-SL12	Window Head Face Mineral	2-12
UWS-SL13	Window Head Stud Mineral	2-13
UWS-SL14	WindowSill	2-14
UWS-SL15	Edge of Slab Relief Angle	2-15
UWS-SL16	Corners	2-16
UWS-SL17	Change in Plane	2-17
UWS-SL18	Parapet	2-18

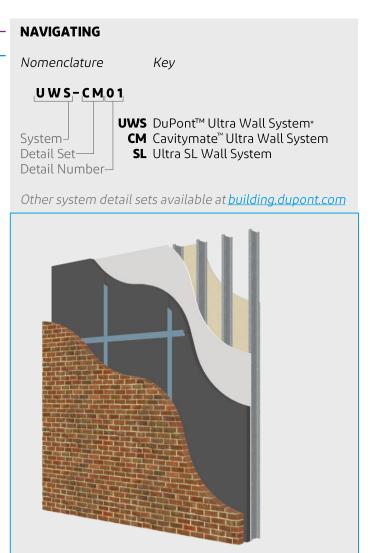

Ultra SL Wall System

Control Layer Summary


DESIGN INTENT

- STYROFOAM™ BRAND EXTRUDED POLYSTYRENE RIGID INSULATION ACTS AS PRIMARY CONTROL LAYERS: THERMAL (CI), WATER-RESISTIVE, AND AIR SEALING, WHILE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT WILL SEAL ALL VERTICAL & HORIZONTAL BOARD JOINTS TO MAKE THE CONTROL LAYERS CONTINUOUS.
- CONTINUOUS INSULATION THICKNESS TO BE DETERMINED TO MINIMIZE CONDENSATION POTENTIAL AND COMPLY WITH ENERGY CODE.

ASTM STANDARDS

STYROFOAM™ BRAND ULTRA SL INSULATION WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT

- CLASS A PER ASTM E84
- AIR BARRIER PER ASTM E2357
- WATER BARRIER PER ASTM E331
- R-5.6 @ 1" PER ASTM C518

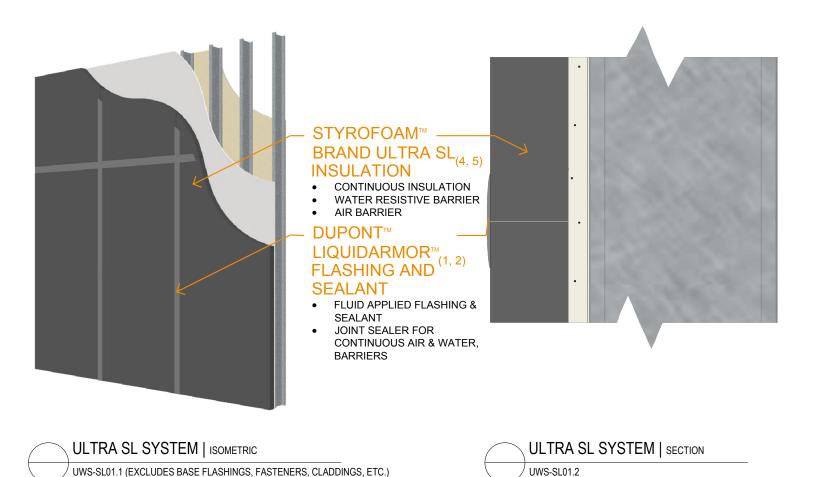

- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR LIQUIDARMOR[™] FLASHING AND SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS. DUPONT[™] GREAT STUFF PRO[™] GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT[™] LIQUIDARMOR[™] FLASHING AND SEALANT.

 STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.



Ultra SL Wall System


SL System Options

DESIGN INTENT

- THE BASIS OF DESIGN FOR THE ULTRA (SL) WALL SYSTEM USES STYROFOAM[™] BRAND ULTRA SL INSULATION AND LIQUIDARMOR[™] CM OR LT FLASHING AND SEALANT. NOTE THAT OTHER OPTIONS SHOWN ON PAGE ARE ACCEPTABLE PER CODE.
- 2. THE ULTRA (SL) WALL SYSTEM CAN BE COMPOSED OF SEVERAL DIFFERENT OPTIONS, CHOOSING COMBINATION OF ITEMS FROM SECTIONS (A) THRU (E). ALL OPTIONS WILL MEET CODE FOR CONTINUOUS INSULATION (R-VALUE REQUIREMENTS VARY BY CLIMATE ZONE), AIR BARRIER, AND WATER BARRIER.
- VERIFY ASSEMBLY HAS NFPA 285 APPROVAL IF APPLICABLE, INCLUDING SEAM TREATMENT AND FLASHING MAX. WIDTHS.

WARRANTY AVAILABLE

50 YEAR THERMAL LIMITED WARRANTY FOR STYROFOAMTM BRAND XPS INSULATION 1.5" THICK AND GREATER.

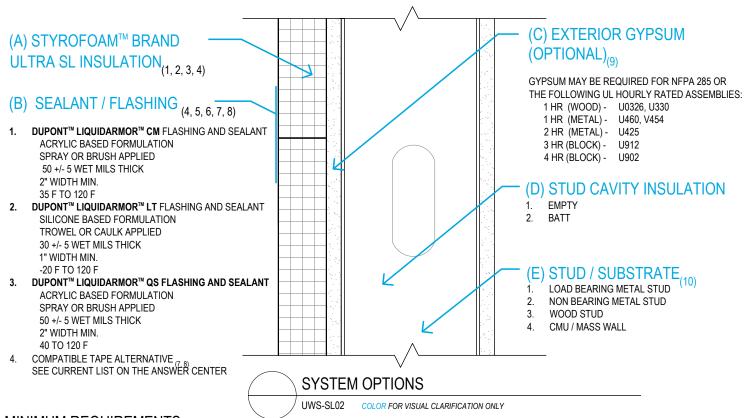

- 1. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- 3. SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES & FASTENERS.
- INSULATION JOINTS TO BE SEALED CENTERED OVER JOINT WITH MIN. 2" WIDTH (CENTERED OVER JOINT) LIQUIDARMOR™ CM OR QS FLASHING AND SEALANT @ 50 +/- 5 WET MILS
 - OR MIN. 1" WIDTH (CENTERED OVER JOINT) LIQUIDARMOR LT @ 30 +/- 5 WET MILS OR 4" WIDTH COMPATIBLE TAPE (SEE ANSWER CENTER FOR CURRENT LIST).
- 5. DUPONT™ LIQUIDARMOR™ CM AND QS CANNOT BE APPLIED OVER LIQUIDARMOR™ LT OR ANY OTHER SILICONE PRODUCTS. LIQUIDARMOR™ LT CAN BE APPLIED OVER LIQUIDARMOR™ CM AND QS.
- 6. DUPONT™ GREAT STUFF PROTM GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH LIQUIDARMOR™.
- 7. ALL APPLICATIONS USING COMPATIBLE TAPE MUST BE INSTALLED IN A "SHINGLE LAP" PATTERN VERTICALLY TO PROMOTE WATER SHEDDING.
- 8. ALL APPLICATIONS USING COMPATIBLE TAPE TO BE INSTALLED USING HARD STRAIGHT EDGING TOOL (HAND PRESSURE NOT ACCEPTABLE).
- 9. EXTERIOR GYPSUM SHEATHING IS NOT REQUIRED TO MEET WEATHER RESISTIVE & AIR BARRIER REQUIREMENTS, BUT MAY BE REQUIRED FOR
- HOURLY RATED WALL ASSEMBLIES OR OTHER PROJECT SPECIFICS.

 10. STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.

Ultra SL Wall System

Fastening Guidelines

DESIGN INTENT

- SECURE STYROFOAM™ BRAND ULTRA SL INSULATION TO STRUCTURE
- USE SELF-SEALED MASONRY TIES AS INSULATION FASTENERS
 TO MINIMIZE NUMBER OF PENETRATIONS AND MAINTAIN
 INTEGRITY OF 4 CONTROL LAYERS.
- MASONRY TIE LENGTH TO ACCOMMODATE INSULATION THICKNESS.


FASTENER / MASONRY TIE RECOMMENDATIONS

SELF-SEALING BARREL STYLE MASONRY TIES (PICTURED BELOW)

- HECKMANN POS-I-TIE WITH RODENHOUSE THERMAL-GRIP CI WASHER
- HOHMANN & BARNARD 2-SEAL TIE, 2-SEAL THERMAL WINGNUT ANCHOR, & THERMAL 2-SEAL TIE
- WIRE-BOND SURE TIE WITH THERMAL WASHER

INSULATION FASTENERS (FOR TEMPORARY BOARD PLACEMENT)

- RODENHOUSE THERMAL GRIP CI WASHER WITH SELF TAPPING SCREW (FOR STEEL STUD WALLS)
- RODENHOUSE THERMAL GRIP WASHER WITH TAP-CON OR SIMILAR MASONRY SCREW (FOR CMU OR CONCRETE WALLS)

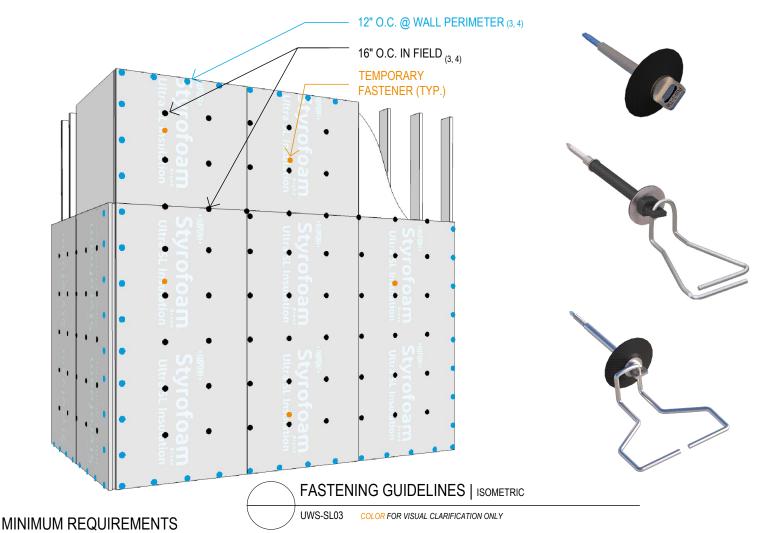

- 1. STEEL STUDS MIN. 18 GA. @ 24" MAX. O.C. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- 2. INSULATION BOARDS SHOULD BE INSTALLED IN RUNNING BOND PATTERN.
- 3. INSULATION TO BE FASTENED @ MAX. 12" O.C. AT WALL PERIMETERS AND AROUND OPENINGS AND MAX 16" O.C. IN WALL FIELD.
- 4. ALL FASTENERS USED TO SECURE ULTRA SL TO SUBSTRATE TO HAVE A MIN. 2" DIA. WASHER. IF NOT USING RECOMMENDED FASTENERS / TIES, OR IF THESE ARE COUNTERSUNK INTO INSULATION, MUST SEAL WITH LIQUIDARMORTM FLASHING AND SEALANT USING GUIDELINES ON DETAIL UWS-SL02 "SYSTEM OPTIONS".
- 5. ONE FASTENER CAN BE USED FOR NO MORE THAN 2 BOARDS. WHERE 3 OR MORE BOARDS MEET, USE AT LEAST 2 FASTENERS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- . BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".



Ultra SL Wall System

Transitions

DESIGN INTENT


- MUST MAINTAIN CONTINUITY OF ALL CONTROL LAYERS AT TRANSITIONS FROM ULTRA SL WALL SYSTEM TO OTHER SYSTEMS
- ENSURE COMPATIBILITY WHERE DOW FLASHING MATERIALS
 JOIN MATERIALS PRODUCED BY OTHER MANUFACTURERS.
- 3. COUNTERFLASH MATERIALS TO PROMOTE WATERSHEDDING AT TRANSITION LOCATIONS
- CONCRETE & CMU APPLICATIONS: ENSURE ADEQUATE LIQUIDARMORTM FLASHING AND SEALANT THICKNESS IS APPLIED FOR PROPER ADHESION TO AGGREGATE.

COMPATIBILITY RECOMMENDATIONS

 CHEMICALLY COMPATIBLE ADHESIVE TECHNOLOGIES WITH STYROFOAMTM BRAND XPS INSULATION AND LIQUIDARMORTM FLASHING AND SEALANT (NOTE CHEMICAL COMPATIBILITY IS NOT A QUALIFIER OF LONG-TERM ADHESION):

ACRYLIC & ACRYLIC LATEX ● BUTYL ● RUBBERIZED
ASPHALT ● SILICONE ● HOT RUBBER

- COMPATIBILITY OF PRODUCTS/CHEMISTRIES NOT LISTED ABOVE MUST BE VERIFIED BY RESPECTIVE MANUFACTURER.
- DESIGNER IS RESPONSIBLE TO VERIFY COMPATIBILITY OF MATERIALS WITH ADDITIONAL COMPONENTS IN ASSEMBLY.

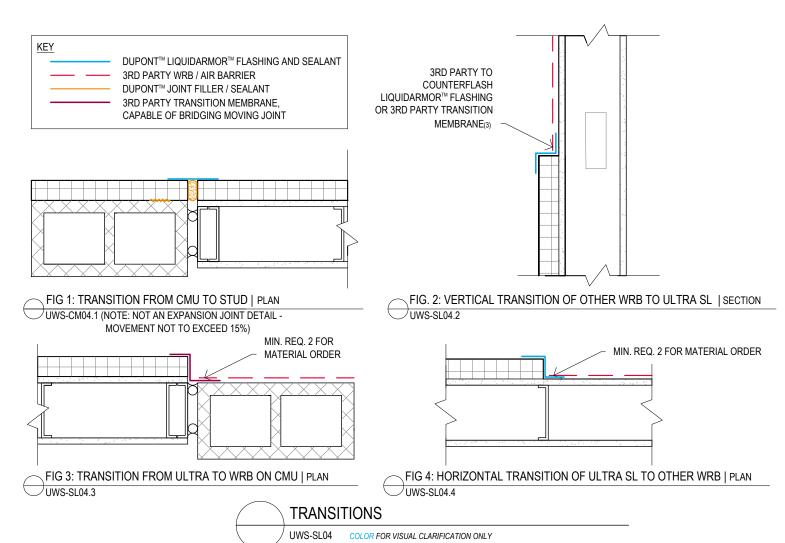

- OVERLAP OF SEALANT ADHESION ON ANY TRANSITION FROM FACE OF ULTRA SL ONTO ADJACENT MATERIALS MUST USE LIQUIDARMOR[™] FLASHING AND SEALANT. SEE APPLICATION REQUIREMENTS ON DETAIL UWS-SL02.
- CONFIRM WITH MATERIAL MANUFACTURERS FOR ADHESION COMPATIBILITY AND ORDER OF INSTALLATION.
- 3. FIG.1, GREAT STUFF PROTM GAPS & CRACKS OR WINDOW & DOOR TO FILL JOINTS ≥ 1/4" PRIOR TO FLASHING WITH MIN. OVERLAP TO FACE OF REQUIREMENTS ON DETAIL UWS-SL02 TO EACH FACE OF ULTRA SL.
- FIG. 2, 3, 4, SEE MIN. WIDTH OF LIQUIDARMOR[™] FLASHING AND SEALANT REQUIREMENTS ON DETAIL UWS-SL02 ONTO FACE OF ULTRA SL AND FACE OF OTHER SUBSTRATE.

Ultra SL Wall System

Expansion Joint UP TO 50% MOVEMENT

DESIGN INTENT


- ALLOW UP TO 50% MOVEMENT OF EXPANSION JOINT.
- 2. MAINTAIN CONTINUITY OF AIR AND WATER BARRIERS ACROSS EXPANSION JOINT USING TRANSITION MEMBRANE.

TRANSITION MEMBRANE RECOMMENDATIONS

SILICONE TRANSITION STRIP* WITH LIQUIDARMOR[™] LT FLASHING AND SEALANT TO SEAL EDGES TO FACE OF INSULATION.


*OTHER EXPANSION TRANSITION MEMBRANES MAY BE USED.

DESIGNER IS RESPONSIBLE FOR SELECTING EXPANSION TRANSITION
MEMBRANE AND VERIFYING MATERIAL & ADHESION COMPATIBILITIES.

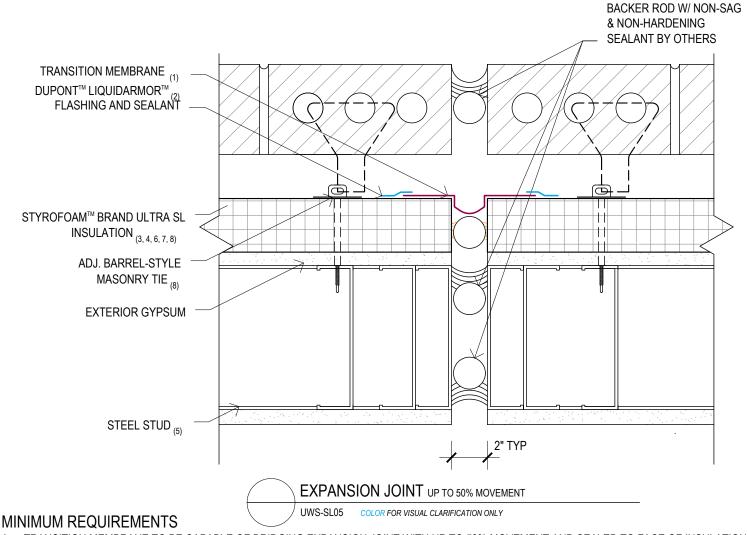

- 1. TRANSITION MEMBRANE TO BE CAPABLE OF BRIDGING EXPANSION JOINT WITH UP TO 50% MOVEMENT AND SEALED TO FACE OF INSULATION.
- 2. CONFIRM WITH MATERIAL MANUFACTURERS ON ADHESION COMPATIBILITIES.
- 3. SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR LIQUIDARMOR OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- GREAT STUFF PRO[™] GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH LIQUIDARMOR[™] FLASHING AND SEALANT
- 5. STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- 6. INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- B. SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.


Control Joint UP TO 25% MOVEMENT

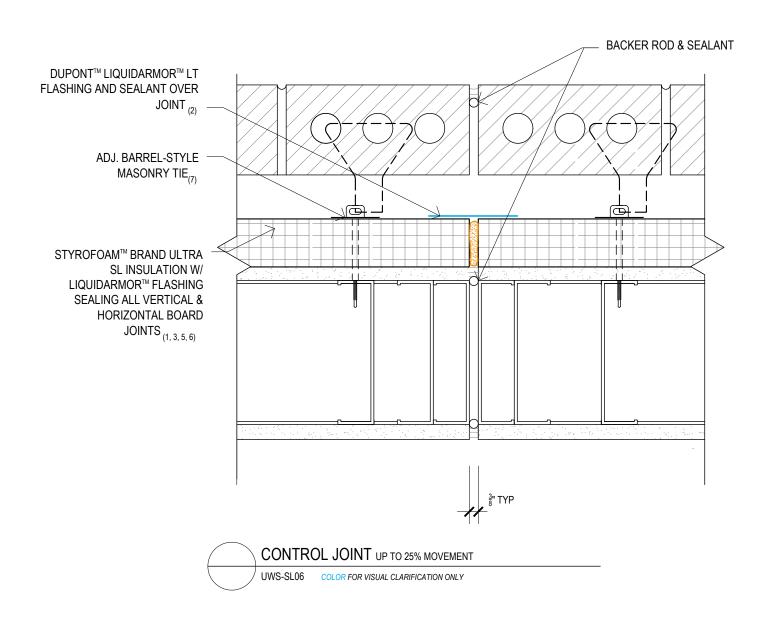

- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR LIQUIDARMOR™ FLASHING AND SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- DUPONT™ LIQUIDARMOR™ CM FLASHING AND SEALANT NOT ACCEPTABLE OVER CONTROL JOINT.

 DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH LIQUIDARMOR™ FLASHING AND SEALANT.
- STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.

Penetration

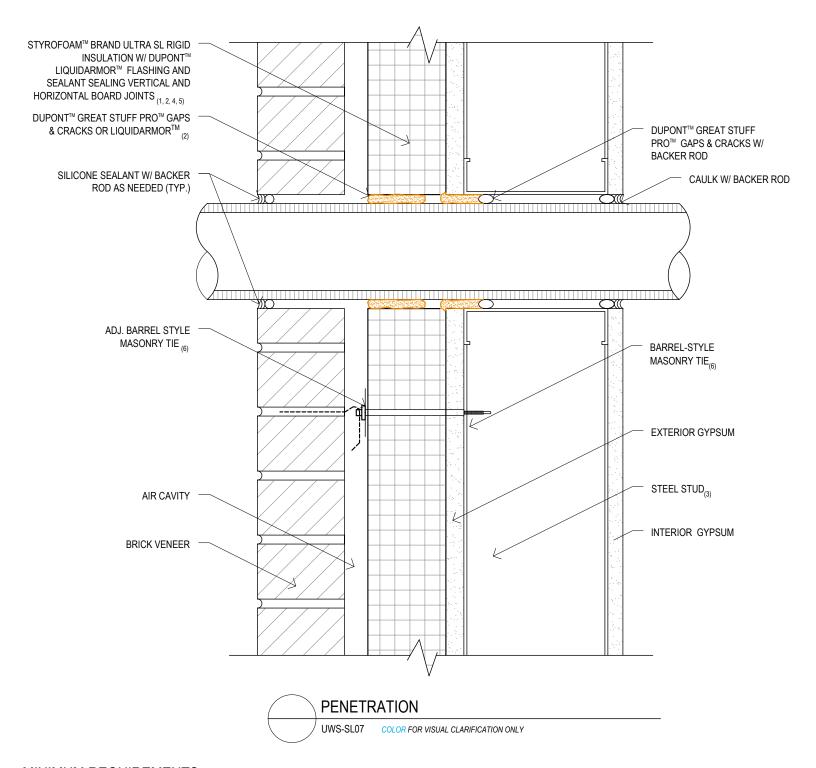

- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR LIQUIDARMOR[™] FLASHING AND SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
 GREAT STUFF PRO[™] GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH LIQUIDARMOR[™].
- STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.



Ultra SL Wall System

Patching Insulation


DESIGN INTENT

- MAINTAIN INTEGRITY OF 4 CONTROL LAYERS BY PATCHING AS
- USE RESPECTIVE PATCHING TECHNIQUE, DICTATED BY SIZE OF OPENING OR DAMAGED AREA.

SFALANT OPTIONS

ONE COMPONENT FOAM

- DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS
- DUPONT™ GREAT STUFF PRO™ WINDOW & DOOR
- FLUID APPLIED DUPONT LIQUIDARMOR LT FLASHING AND SEALANT
- DUPONT™ LIQUIDARMOR™ QS FLASHING AND SEALANT DUPONT™ LIQUIDARMOR™ CM FLASHING AND SEALANT COMPATIBLE TAPE (SEE DETAIL UWS-SL02)

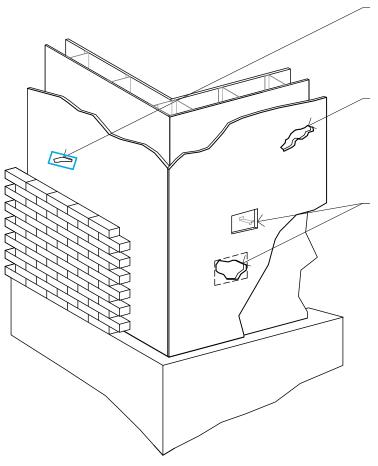

NON-FULL DEPTH HOLE IN XPS SURFACE:

NO INFILL OR SEALING REQUIRED IF MINIMUM OF 1" OF XPS REMAINS INTACT BETWEEN THE AIR SPACE AND FACE OF CMU. OPTIONAL: SEAL SURFACE OF HOLE WITH DUPONT™ LIQUIDARMOR™ (1) FLASHING AND SEALANT

FULL DEPTH HOLE 3" OR LESS ACROSS: INFILL HOLE WITH GREAT STUFF PRO™ GAPS & CRACKS. IF GREAT STUFF PRO FOAM EXPANDS TO A POINT THAT WILL IMPACT AIR GAP, CUT FLUSH TO FACE AFTER CURED AND SEAL WITH $\mathsf{DUPONT}^\mathsf{TM}$ LIQUIDARMOR $^\mathsf{TM}$ (1) FLASHING AND SEALANT

FULL DEPTH HOLE LARGER THAN 3" ACROSS: CUT FOAM TO RECTANGULAR SHAPE AND INFILL WITH STYROFOAM™ BRAND ULTRA INSULATION PATCH, SEAL EDGES OF PATCH WITH GREAT STUFF PRO™ GAPS & CRACKS. IF GREAT STUFF PRO™ FOAM EXPANDS TO A POINT THAT WILL IMPACT AIR GAP, CUT FLUSH TO FACE AFTER CURED AND SEAL WITH DUPONT™ LIQUIDARMOR™ (1) FLASHING AND SEALANT

MINIMUM REQUIREMENTS

1. SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR LIQUIDARMOR OPTIONS AND OTHER SYSTEM CONFIGURATIONS.


REPAIRING HOLES IN INSULATION

COLOR FOR VISUAL CLARIFICATION ONLY

- DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT.
- STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.

UWS-SL08

Foundation - Face Flashed

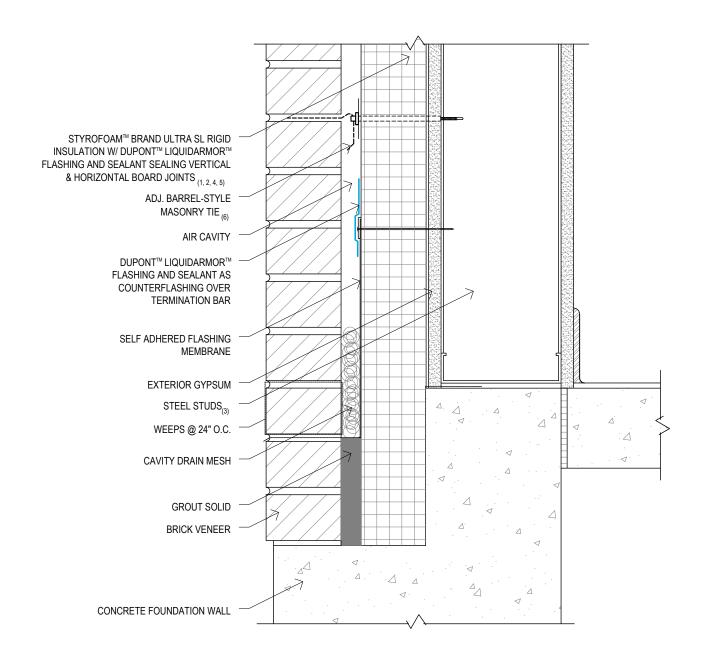




- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT.

 STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.

Foundation - Stud Flashed

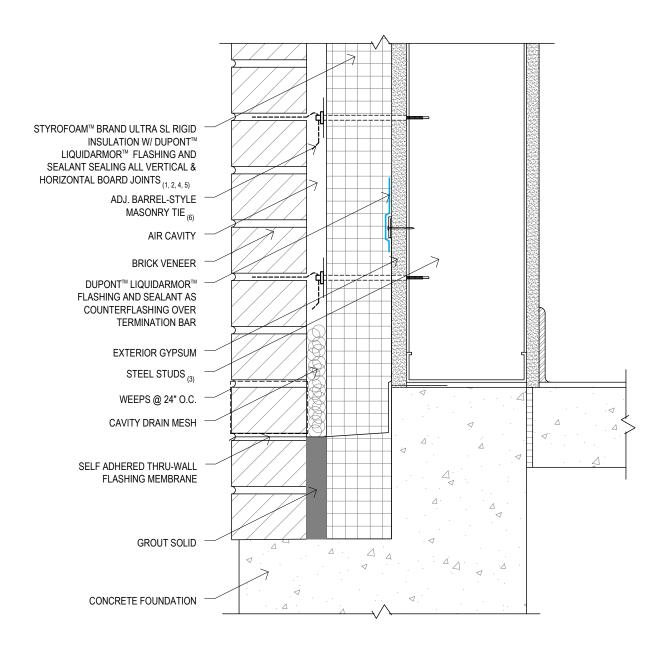



- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR LIQUIDARMOR™ FLASHING AND SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT.
 STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.

Ultra SL Wall System


Win. Head - In-Wall Fireblock

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS. SILLS. HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- SEALANTS AND CAULKS AS SPECIFIED BY WINDOW MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT™ SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DOW FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS, SILLS, HEADS,
- DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

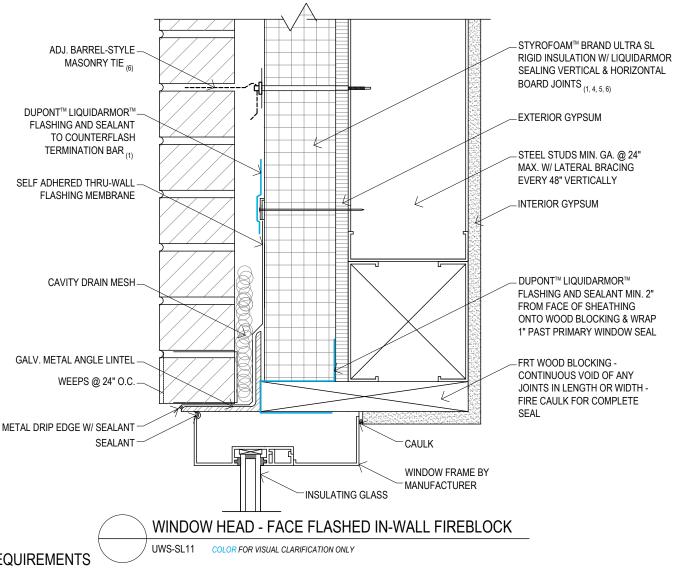

- DUPONT™SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-SL-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLE TRIM ("SHINY 90").
- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

Ultra SL Wall System


Win. Head - Face Mineral Wool

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS, SILLS, HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- SEALANTS AND CAULKS AS SPECIFIED BY WINDOW
 MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST
 MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT™ SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DOW FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS. SILLS. HEADS.
- B. DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

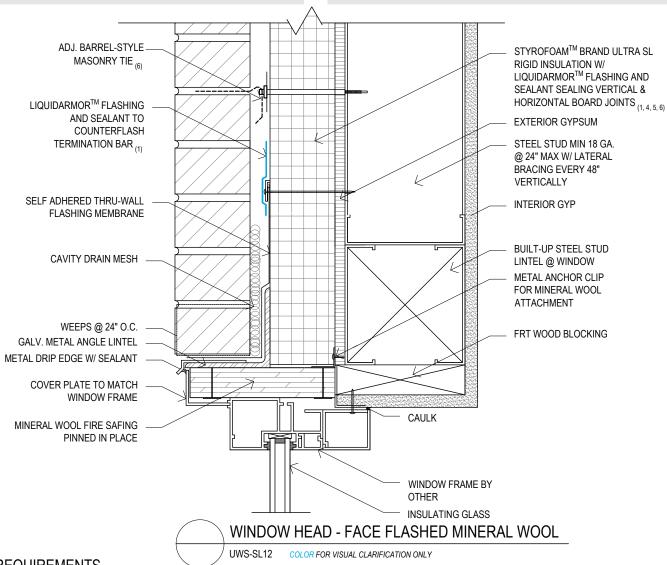

- 1. DUPONT™ SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-SL-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- 2. IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- 3. ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLÉ TRIM ("SHINY 90").
- 4. SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 6. SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.

Ultra SL Wall System


Win. Head Stud Mineral Wool

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS. SILLS. HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- SEALANTS AND CAULKS AS SPECIFIED BY WINDOW MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DOW FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS, SILLS, HEADS,
- DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

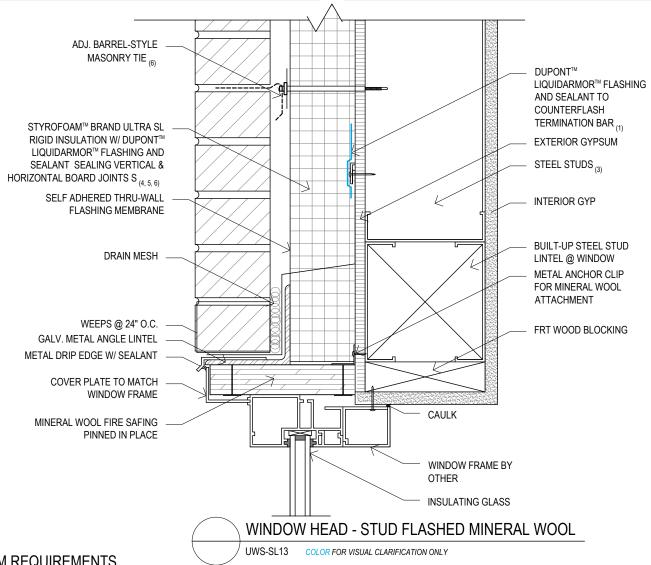

- 1. DUPONT™ SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-SL-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLE TRIM ("SHINY 90").
- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.


Window Sill

DESIGN INTENT

- USE DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT TO TRANSITION THE AIR & WATER BARRIERS FROM THE FACE OF INSULATION INTO ALL JAMBS, SILLS, HEADS PRIOR TO INSTALLATION OF WINDOWS & RECEPTORS.
- 2. SEALANTS AND CAULKS AS SPECIFIED BY WINDOW MANUFACTURER TO BE USED AS PRIMARY DEFENSE AGAINST MOISTURE INTRUSION & AIR INFILTRATION.
- WINDOW RECEPTOR TO ATTACH TO WOOD BLOCKING THROUGH DUPONT SEALANT MEMBRANE FOR ENHANCED AIR AND MOISTURE SEALING.

GENERAL RECOMMENDATIONS

- WINDOW SEALANT COMPATIBILITY SHOULD BE VERIFIED WITH DOW FOR LONG-TERM ADHESION TO DOW FLASHING.
- WOOD BLOCKING IS PREFERRED TO PROVIDE ADDED RIGIDITY AND A NAILING BASE AT JAMBS, SILLS, HEADS.
- DOUBLE STUD IS RECOMMENDED AT JAMBS TO ALLOW FOR GREATER FLEXIBILITY WITH CLADDING TERMINATION AROUND WINDOWS & DOORS.

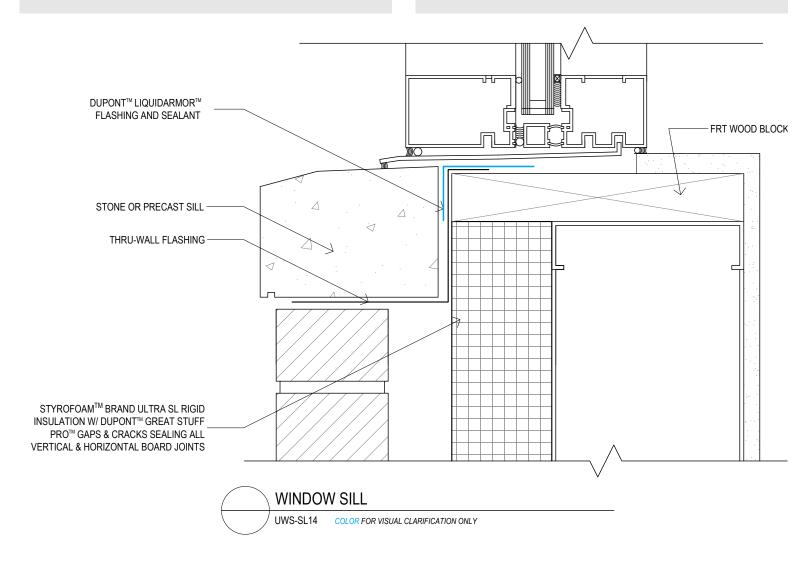


- 1. DUPONT SEALANT TO BE INSTALLED ONTO FACE OF INSULATION BASED ON WIDTH REQUIREMENTS ON DETAIL UWS-SL-02 "SYSTEM OPTIONS" AND MIN . 2" INTO ROUGH OPENING (SILL, JAMB, HEADER) OR 1" PAST INTERIOR CAULK JOINT, WHICHEVER IS GREATER.
- 2. IF NOT USING WOOD BLOCKING AT JAMB, HEAD, SILL, MUST USE METAL ANGLE TRIM ("SHINY 90") TO BRIDGE INSULATION.
- 3. ACCEPTABLE BLOCKING TYPES: DIMENSIONAL LUMBER (SHOWN), OSB, PLYWOOD, METAL ANGLE TRIM ("SHINY 90").
- 4. SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR OTHER SYSTEM CONFIGURATIONS AND SEALANT OPTIONS & REQUIREMENTS.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 6. SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED ATTACHMENT.



Ultra SL Wall System


Edge of Slab Relief Angle

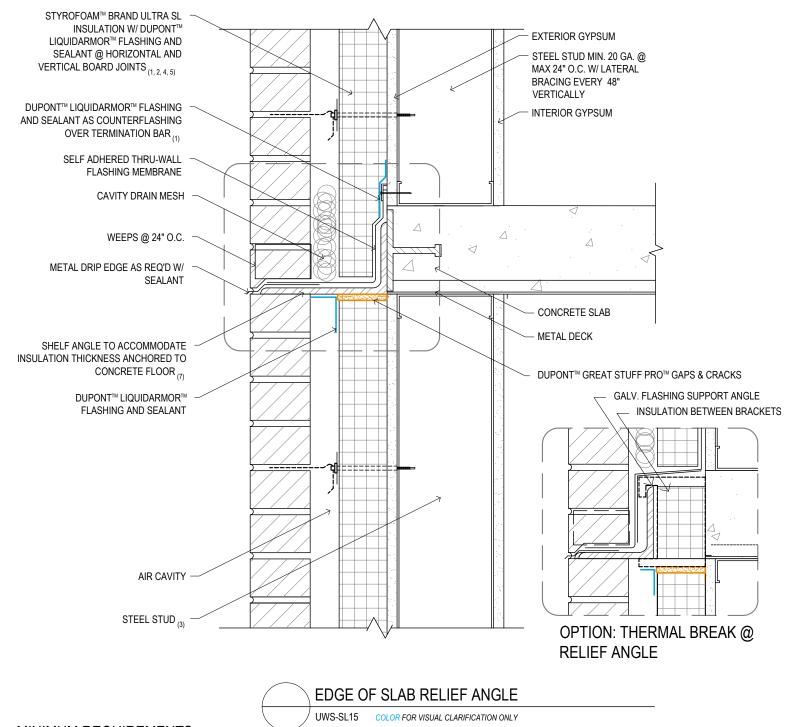

- 1. SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR DUPONT™ LIQUIDARMOR™ FLASHING OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- 2. DUPONTTM GREAT STUFF PROTM GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS $\geq 1/4$ " BEFORE SEALING WITH DUPONTTM LIQUIDARMORTM FLASHING AND SEALANT.
- 3. STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- 5. BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- 6. SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.
- 7. 1" GAP MAX. BETWEEN BOTTOM OF METAL ANGLE AND TOP OF INSULATION BOARD.






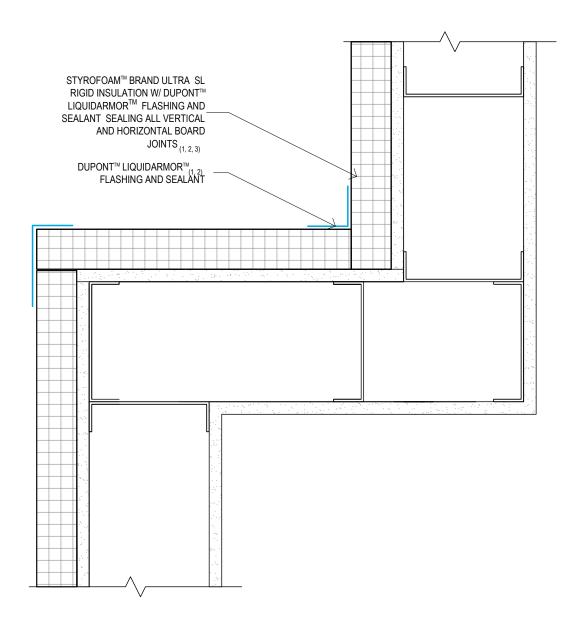



- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT APPLICATION REQUIREMENTS AND OTHER SYSTEM CONFIGURATIONS.
- 2. DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT.
- 3. INSULATION MUST BE COVERED WITHIN 90 DAYS.

Change in Plane

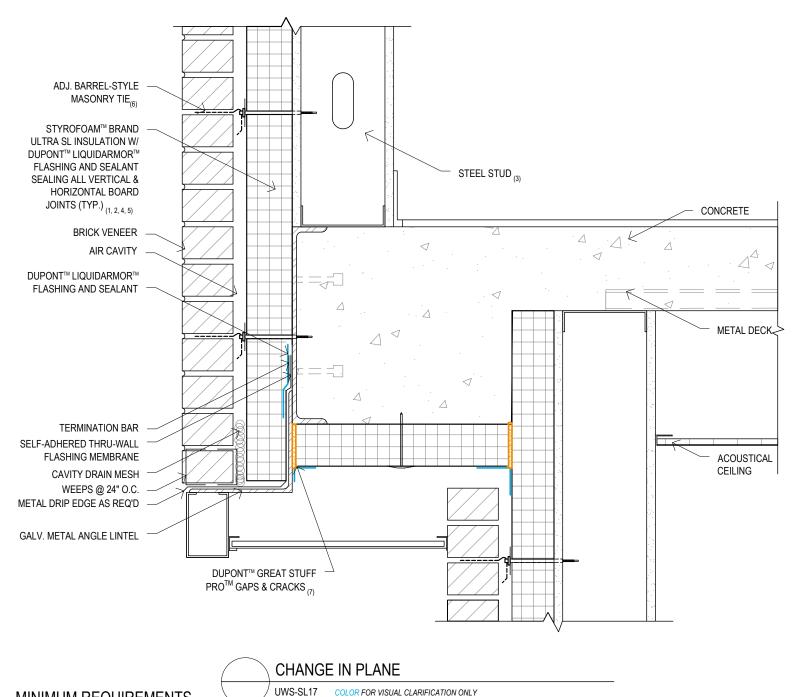

- MINIMUM REQUIREMENTS
- 1. SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT.
- STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.
- INSULATION BOARDS TO HAVE MIN. 1 TO MAX. 1 GAP TO ALLOW FOR PROPER INSTALLATION OF DUPONT™ GREAT STUFF PRO™ GAPS & CRACKS7

Ultra SL Wall System


Parapet & Roof Edge

DESIGN INTENT

- SUCCESSFULLY TRANSITION 4 CONTROL LAYERS FROM VERTICAL WALL PLANE TO HORIZONTAL ROOFING PLANE WITHOUT INTERRUPTION.
- INSULATION & AIR BARRIER TO SEAL OFF UNCONDITIONED 2. PARAPET WALL FROM INTERACTING WITH CONDITIONED INTERIOR AIR TO FURTHER PREVENT CONDENSATION POTENTIAL.
- TRANSITION TO ROOFING MEMBRANE MATERIALS USING 3. COMPATIBLE MATERIALS.

GENERAL RECOMMENDATIONS

- COMBINATION OF MATERIALS MAY BE USED TO ENCAPSULATE PARAPET WALL - ALL MANUFACTURERS SHOULD BE CONSULTED TO ENSURE CHEMICAL COMPATIBILITY OF MEMBRANE/TRANSITION MATERIALS TO INSULATION.
- 3RD PARTY MATERIAL TO TRANSITION FROM ROOFING MEMBRANE OVER/UNDER COPING TO TERMINATE ON FACE OF RIGID INSULATION.
- DUPONTTM FROTH-PAKTM INSULATION (CLASS A) AT ROOF DECK / PARAPET JUNCTURE TO BE INSTALLED PRIOR TO ROOF INSULATION & MEMBRANE.

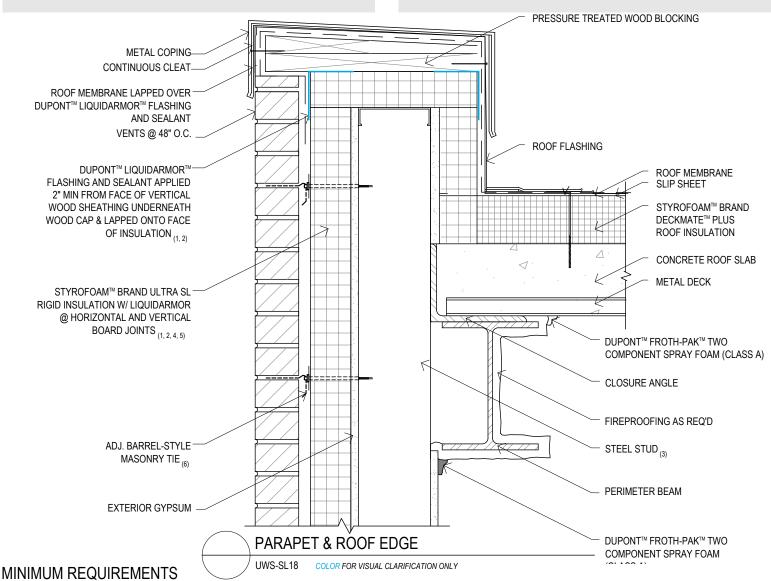

- SEE DETAIL UWS-SL02 "SYSTEM OPTIONS" FOR DUPONT™ SEALANT OPTIONS AND OTHER SYSTEM CONFIGURATIONS.
- DUPONT™ GREAT STUFF PROTM GAPS & CRACKS OR WINDOW & DOOR TO BE USED FOR GAPS ≥ 1/4" BEFORE SEALING WITH DUPONT™ LIQUIDARMOR™ FLASHING AND SEALANT.
 STEEL STUDS MIN. 18 GA. @ 24" MAX. W/ LATERAL BRACING EVERY 48" VERTICALLY.
- INSULATION MUST BE COVERED WITHIN 90 DAYS.
- BREACHES TO INSULATION MUST BE SEALED PER DETAIL UWS-SL08 "PATCHING INSULATION".
- SEE DETAIL UWS-SL03 "FASTENING GUIDELINES" FOR RECOMMENDED TIES.

NOTICE: No freedom from any patent owned by DuPont or others is to be inferred. Because use conditions and applicable laws may differ from one location to another and may change with time, Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other government enactments. The product shown in this literature may not be available for sale and/or available in all geographies where DuPont is represented. The claims made may not have been approved for use in all countries or regions. DuPont assumes no obligation or liability for the information in this document. References to "DuPont" or the "Company" mean the DuPont legal entity selling the products to Customer unless otherwise expressly noted. NO EXPRESS WARRANTIES ARE GIVEN EXCEPT FOR ANY APPLICABLE WRITTEN WARRANTIES SPECIFICALLY PROVIDED BY DOW. ALL IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

Illustrations are not intended to replace the need for design by appropriate professionals such as architects or engineers.

Styrofoam™ Brand Spray Polyurethane Foam contains isocyanate, hydrofluorocarbon blowing agent and polyol. Read the instructions and (Material) Safety Data Sheet ((M)SDS) carefully before use. Wear protective clothing (including long sleeves), gloves, goggles and proper respiratory protection. Supplied air or an approved air-purifying respirator equipped with an organic vapor sorbent and a P100 particulate filter is required to maintain exposure levels below ACGIH, OSHA, WEEL or other applicable limits. Provide adequate ventilation. Contents under pressure. STYROFOAM™ Brand SPF should be installed by a trained SPF applicator.
CAUTION: When cured, these products are combustible and will burn if exposed to open flame or sparks from highenergy sources. Do not expose to temperatures above 240°F (116°C). For more information, consult (Material) Safety Data Sheet ((M)SDS), call DuPont at 1-866-583-BLUE (2583) or contact your local building inspector. In an emergency, call 1-989-636-4400 in the U.S. or 1-519-339-3711 in Canada.

DuPont ™ Great Stuff Pro™ Insulating Foam sealant and adhesive products contain isocyanate and a flammable blowing agent. Read all instructions and (Material) Safety Data Sheet ((M)SDS), carefully before use. Eliminate all sources of ignition before use. Cover all skin. Wear long sleeves, gloves, and safety glasses or goggles. Not for use in aviation, or food/beverage contact, or as structural support in marine applications. Provide adequate ventilation or wear proper respiratory protection. Contents under pressure. Not to be used for filling closed cavities or voids such as behind walls and under tub surrounds. CAUTION: When cured, these products are combustible and will burn if exposed to open flame or sparks from highenergy sources. Do not expose to temperatures above 240°F (116°C). For more information, consult (Material) Safety Data Sheet ((M)SDS), call DuPont at 1-866-583-BLUE (2583) or contact your local building inspector. In an emergency, call 1-989-636-4400 in the U.S. or 1-519-339-3711 in Canada.

Polyurethane Foam Insulation and Sealant

Polyurethane Foam Insulation and Sealant CAUTION: When cured, these products are combustible and will burn if exposed to open flame or sparks from high-energy sources. Do not expose to temperatures above 240°F (116°C). For more information, consult (Material) Safety Data Sheet ((M)SDS), call DuPont at 1-866-583-BLUE (2583) or contact your local building inspector. In an emergency, call 1-989-636-4400 in the U.S. or 1-519-339-3711 in Canada. CAUTION: This product is combustible and shall only be used as specified by the local building code with respect to flame spread classification and to the use of a suitable thermal barrier. For more information, consult (Material) Safety Data Sheet ((M)SDS), call DuPont at 1-866-583-BLUE (2583) or contact your local building inspector. In an emergency, call 1-989-636-4400 in the U.S. or 1-519-339-3711 in Canada.

DuPont ™ LiquidArmor™*Read the instructions and (Material) Safety Data Sheets ((M)SDS) carefully before use. It is recommended that spray applicators and those working in the spray area wear eye protection. Contact with exposed skin may cause skin discoloration and dryness. Gloves are recommended for prolonged exposures. Ensure adequate ventilation during

DuPont ™ Thermax™* Brand Polyisocyanurate InsulationCAUTION: This product is combustible and shall only be used as specified by the local building code with respect to flame spread classification and to the use of a suitable thermal barrier. For more information, consult (Material) Safety Data Sheet ((M)SDS), call DuPont at 1-866-583-BLUE (2583), or contact your local building inspector. In an emergency, call 1-989-636-4400.

DuPont™ Styrofoam™* Brand Extruded Polystyrene Foam InsulationCAUTION: This product is combustible. Protect from high heat sources. A protective barrier or thermal barrier may be required as specified in the appropriate building code. For more information, consult (Material) Safety Data Sheet ((M)SDS), call DuPont at 1-866-583-BLUE (2583) or contact your local building inspector. In an emergency, call 1-989-636-4400 in the U.S. or 1-519-339-3711 in Canada.

WARNING: Rigid foam insulation does not constitute a working walkable surface or qualify as a fall protection

Building and/or construction practices unrelated to building materials could greatly affect moisture and the potential for mold formation. No material supplier including DuPont can give assurance that mold will not develop in any specific system.

References to "DUPONT" or the "Company" mean DuPont de Nemours, Inc., and its consolidated subsidiaries unless otherwise expressly noted.

*A former product of The Dow Chemical Company

DuPont[™], the DuPont Oval Logo, and all trademarks and service marks denoted with $^{™}$, $^{™}$ or $^{@}$ are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted. © 2019 DuPont