CAR MULTIMEDIA SYSTEM

USER'S MANUAL





Thank you for purchasing this multimedia system.

This user's manual explains how to use the Kia multimedia system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precaution for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device.
 Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

• SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm. com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic informa-

tion not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

WARNING

 Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Read the following safety precautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

- ** The design and specifications of this product may change without prior notification for product and service improvement.
 - The actual images in the vehicle may differ from the illustrations.
 - For more accurate information about the vehicle, please refer to the catalogue.
- ** This Multimedia system contains open source software, including without limitation, software distributed and/or modified under the GNU General Public license, Version 2, June 1991, and the GNU lesser General Public License, Version 2.1, February 1999.

For additional information and to obtain related materials including without limitation, the previous referred to licenses and software, please contact us at MOBIS_OSSrequest@mobis.co.kr

Notations used within this User's Manual

▲ WARNING

 A WARNING indicates a situation in which harm, serious bodily injury or death could result if the warning is ignored.

A CAUTION —

 A CAUTION indicates a situation in which damage to your vehicle could result if the caution is ignored.

Information -

 Information and tips that provide additional user convenience in using the product.

NOTICE

- Information on specific features that facilitate proper product use and functional understanding.
- Information on terminology used within this manual.

Table of Contents

1.Basic

Warnings and Cautions	1-2
Component Names and	
Functions	1-4
Head Unit	1-4
Steering Wheel Controls	1-6
Starting the System for the	
First Time	1-8
Turning the System On/Off	1-8
System Reset	1-8
Battery Warning Message	1-9
Restrictions on Features for Safe	ety
Measures	1-9
Home Screen	1-10
On-Screen Touch Controls	1-12

2. Plug-in Hybrid Electric Vehicle (PHEV)

node	2-2
Menu screen for Plug-in Hybrid mode	2-2
ECO Driving	2-
Fuel Economy	. 2-0
ECO Level	. 2-0
History	. 2-4
Energy Information	2-4
Battery Information	. 2-4
Energy Flow	. 2-5
Driving Status of Hybrid	
Vehicle	
Tharging Settings	2-7
Electric Charging Stations	2-8
Sas Stations	2-8
PHEV Settings	2-9
ECO Driving	
Energy Information	
Charging Current	

3. Radio/Media

FM/AM (with HD Radio™)	3-2
HD Radio™ Technology	
(if equipped)	3-4
HD Radio™	3-5
FM/AM	3-6
SiriusXM™	3-8
Selecting through Channel/	
Category List	3-10
Direct Tune	3-10
Viewing Menu	3-10
USB	3-13
Before Playing a USB MP3	3-13
Supported USB music	
specifications	3-15
USB Music	3-16
iPod	3-19
Using iPod Devices	3-19
iPod	3-23
AUX	3-26
Connecting an External	
Device	3-26

Bluetooth® Audio	3-27
Bluetooth Connection	3-28
4. Bluetooth	
Before Using the Bluetooth® Handsfree	4-2
What is <i>Bluetooth</i> ® Wireless Technology?	4-2
Precautions for Safe Driving	4-2
CAUTIONS upon Connecting Bluetooth® Phone	4-3
Bluetooth Connection	4-4
Pairing a New Device	4-4
Connecting Bluetooth Devices	4-4
Disconnecting Bluetooth Devices	4-5
Deleting Bluetooth Devices	4-5

Bluetooth Phone	4-6
Phone Status Icons	4-6
Dial	4-7
Accept/Reject Call	4-7
Using the Menu During a Phone Call	4-8
Call History	
Contacts	
Favorites	. 4-11

5.UVO eServices

lear view mirror key	
unction	5-2
Before using UVO eServices	5-3
What is UVO eServices?	5-3
What is Telematics?	5-3
Regarding the TX and RX of radio	5-3
Setting Started with UVO Services	5-4
Services	5-5
Services Roadside Assist	5-5 5-5
PServices Roadside Assist Vehicle Diagnostics	5-5 5-5 5-6
Roadside Assist Vehicle Diagnostics Vehicle Diagnostics	5-5 5-5 5-6

6. Voice Recognition

What is Voice Recognition?	6-2
Precautions Required for Successful Voice Recognition	6-2
Starting/Ending and Setting Voice Recognition	6-3
Starting Voice Recognition	6-3
Ending Voice Recognition	6-3
Combining Voice Recognition with On-Screen Commands Extending the Listening Time	
Skipping Prompt Messages	6-5
Adjusting Voice Recognition Volume	6-5
Voice Recognition Screen	
Overview	6-6
Help Display	6-6
Instructions for Using Voice Recognition	6-7

Voice Commands	6-8
Types of Commands	6-8
Call Commands	6-8
Radio Commands	6-9
Media Commands	6-10
Other Commands List (Commands used in List/Help)	6-12
Siri Eyes Free	6-13
How to start Siri	6-13
How to use Siri	6-13

7. Apps/Info

iiriusXM™ Data	7-2
Accessing SiriusXM™ Data	. 7-2
SiriusXM™ Weather	
Announcement	. 7-2
SiriusXM™ Sports Information	. 7-3
SiriusXM™ Stock Information	. 7-5
SiriusXM™ Fuel Price	
Information	. 7-6
SiriusXM™ Movie Information	. 7-8
3. Other Features	
Ilimate	8-2
Basic Mode Screen	. 8-2

Steering-linked camera 8-5
Using Voice Memo 8-6

9. Setup

Sound Settings	9-2
Display Settings	9-3
Bluetooth Settings	9-3
Bluetooth Connection	9-3
Auto Connection Priority	9-4
Bluetooth Voice Prompts	9-5
Privacy Mode	9-5
Bluetooth System Info	9-5
Default Factory Settings	9-5
UVO eServices Settings	9-5
Service Activation (when the service is not	
activated)	9-5
Service Activation	
(when the service is expired)	9-7
911 Connect	9-8
Modem Information	9-9

Phone Projection Settings	9-9
Home Screen Settings	9-9
Voice Recognition Settings	9-10
Date/Time Settings	9-10
Language Settings	9-10
Keyboard Settings	9-11
Screen Saver Settings	9-11
Advanced Settings	9-11
System Info	9-12
System Update	9-12

10. Appendix

Product Specification	10-2
roubleshooting1	10-4
-AQ	10-7
About Pairing Mobile Phones	10-7
About Making/ Answering Phone Calls	10-8
About Bluetooth® Wireless Technology/Multimedia System Use Environment	10-8

iPod[®]

iPod® is a registered trademark of Apple Inc.

Bluetooth® Wireless Technology

A compatible *Bluetooth*® Wireless Technology-enabled cell phone is required to use *Bluetooth*® Wireless Technology.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license.

Other trademarks and trade names are those of their respective owners.

A Bluetooth® enabled cell phone is required to use *Bluetooth®* Wireless Technology.

Bluetooth® Wireless Technology phone compatibility can be checked by visiting http://www.kia.com.

HD Radio™ Technology

HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

For patents see http://patents.dts.com/. HD Radio™ and the HD, HD Radio™, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.



part.1 Basic

Warnings and Cautions Component Names and Functions Starting the System for the First Time

Basic



Park the vehicle before operating the device.

- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device.
 Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.

- For most multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.(The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Cautions

Turn on the car ignition before using this device. Do not operate the Multimedia system for long periods of time with the ignition turned off as such operations may lead to battery discharge.

Pay attention to traffic conditions while driving.

- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure
 to turn off the device and use a dry and
 smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol,
 benzene, thinners, etc.) as such materials may damage the device panel or
 cause color/quality deterioration. When
 experiencing product concerns, inquire
 with your place of purchase or service
 maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Component Names and Functions

Head Unit



Name		Description
0	● PWR/ VOL	 When power is off, press to turn power on. When power is on, press and hold (over 0.8 seconds) to turn the power off. When power is on, press quickly (less than 0.8 seconds) to turn Audio off. Turn left/right to adjust the volume.
2	RADIO	Selects FM/AM/SiriusXM [™] mode Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM [™] → FM.
3	MEDIA	Selects MEDIA mode. • If the media is not connected MEDIA mode will not be activated.

	Name	Description	
4	✓ SEEK TRACK ∧	 When the key is pressed quickly (less than 0.8 seconds), FM/AM mode: Plays the previous/next frequency. SiriusXM™ mode: Changes the channel. MEDIA mode: Changes the track, file or title (except for AUX). When the key is pressed and held (over 0.8 seconds), FM/AM mode: moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency. MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth Audio and AUX). 	



Name		Description	
5	APPS/(i)	Moves to the Apps/Info screen.	
6	UVO	Moves to the UVO mode	
7	● TUNE	 FM/AM mode: Changes the frequency. SiriusXM™ mode: Changes the channel. MEDIA mode: Changes the track, file or title (except for Bluetooth Audio and AUX). 	
8	PHONE	Displays the Bluetooth phone mode.	
9	SETUP	Moves to the Setup screen.	

Name		Description
10	RESET	Resets the system settings. (Preset radio channels and other data will not be deleted)

* The actual image in the vehicle may differ from the illustration.

Steering Wheel Controls



Name		Description
	(K	When the key is pressed quickly (less than 0.8 seconds), Activates voice recognition. When the key is pressed and held (over 0.8 seconds), Ends voice recognition. If iOS device is connected through Bluetooth, activates or ends Siri Eyes Free.

Name		Description		
Turrio		!		
in the following USB or iPod → i You can sele settings. If the media is modes will be depended on the image of the image		 If the media is not connected, the corresponding modes will be disabled. Press and hold (over 0.8 seconds) to turn the Audio system on/off. When power is off, press button to turn power 		
	+	Use to adjust the volume of audio or call.		
3	州	Mutes the audio. (Media will be paused in some media modes.) Mutes the microphone during a call		
4	^ <u>`</u>			



Name Description		Description
5	C	When the key is pressed quickly (less than 0.8 seconds), • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting) When the key is pressed and held (over 0.8 seconds), • When pressed in Bluetooth® Hands-free, redials the last dialed call • When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected)
6		When pressed during a call, ends the phone call When pressed in the incoming call screen, rejects the call

^{*} The actual image in the vehicle may differ from the illustration.

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the safety guide.

NOTICE

 You cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

information

 If you turn off the system during a phone call using the Hands-free feature, then the call will automatically switch to your mobile phone.



 Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset



The System Reset function restores the system when it is not operating correctly. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.



NOTICE

 If you use the system for a long time with the engine off, the battery may become completely discharged.

Restrictions on Features for Safety Measures

Several features are limited while driving. The restriction screen will disappear when shifting gears into P or putting the parking brake on.

WARNING

- Blank Screen
- Refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock).

WARNING

- Touching the Antenna During A Thunder Storm
- Do not touch the antenna during thunder or lightning as such acts may lead to lightning induced electric shock.

Home Screen

Controls Menu Configuration for the Home Screen

Tap the ☆ icon on any screen to display the Home Screen below.



Features	Description
Radio/ Media Widget	 Shows brief information on the radio or media that is now playing. Tap the area to move to the mode that you are listening to.
Phone Projection Widget	Shows any connected devices such as iPod, and Bluetooth.
3 All Menus	Shows all of the items in the system menu.
4 My Menu	Add your favorite menus to have quick and easy access to them.
5 Apps/Info	Moves to the Apps/Info screen.
6 Setup	Moves to the Setup screen.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

Icon	Description	
Audio	Displayed when the audio is muted.	
[IIII]•	Displays the remaining battery of the Bluetooth phone.	
₿ ე	Displayed when connected to Bluetooth for handsfree.	
*1	Displayed when connected to Bluetooth for streaming audio.	
3 7	Displayed when connected to Bluetooth for streaming audio and handsfree.	
Displayed when downloading contacts or recent calls the Bluetooth phone.		
Displayed while on a call with the Bluetooth phone.		
Displayed when the microphone of the Bluetooth UVO is muted.		
8 Y.111	Displays the signal strength of the Bluetooth phone.	
Yall	Displays the signal strength of the Bluetooth phone.	
*	Displayed when 911 connect is available.	
ZG LTE	Displays when using 2G/LTE data.	
<u> </u>	Voice memo recording.	

Information

 Received signal strength indicator of UVO and 2G/LTE information are displayed only in the devices that support the telematics system.

Adding a Feature to My Menu

Select My Menu on the Home Screen to add the most frequently used menus, change the menu order, or delete menus.



Information

• Up to 24 menus can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select

Tap lightly on a menu or an item to select it.



 The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.

Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.



Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

Flick (Quick Scrolling)



Quickly moves up and down in the list.

NOTICE

 Moving the list when there are many items will display a handler on the right of the display.
 You can easily move many items at a time with the handler.

Select and Hold

Selecting and holding the or buttons in the music player will rewind or fast forward the music.



MEMO

Part.2 Plug-in Hybrid Electric Vehicle (PHEV)

Starting Plug-in Hybrid mode
Menu screen for Plug-in Hybrid mode
ECO Driving
Energy Information
Charging Settings
Electric Charging Stations
Gas Stations
PHEV Settings

Plug-in Hybrid Electric Vehicle (PHEV)

Starting Plug-in Hybrid mode PHEV: Plug-in Hybrid Electric Vehicle

Select the PHEV menu in the My Menu, or select the PHEV icon in All Menus.

Menu screen for Plug-in Hybrid mode

Plug-in Hybrid mode consists of menus and settings including ECO Driving, Energy Information, Charging Settings, Charging Stations (Search for Charging Stations), and Gas Stations (Search for Gas Stations).



Features	Description
1 ECO Driving	Displays a real-time image for fuel economy or ECO level based on the user's selection. Provides detailed information on fuel economy, ECO level, or history when this menu is selected
2 Energy Information	Displays a real-time image showing information about the battery and the flow of energy based on the user's selection.
Charging Settings	Goes to the menu to set times for charging.
4 Charging Stations (Search for Charging Stations)	Displays a list of charging stations nearby.
5 Gas Stations (Search for Gas Stations)	Displays a list of gas stations nearby.
6 Settings	Goes to the settings menu to select the realtime information that will be displayed on the Home Screen.

ECO Driving

Displays fuel economy, information about ECO level, and history of ECO driving.

Fuel Economy



Features	Description
1 Average fuel econ- omy	Shows average fuel economy according to the vehicle's driving.
2 Reset	Resets information of the fuel economy graph displayed.
3 History	Shows fuel economy for the last 30 minutes (the graph is updated every 2 minutes and 30 seconds)

Information

- The fuel economy graph is reset when the vehicle's ignition is turned off.
- Average shows cumulative average fuel efficiency since last refuelling and is preserved even when the graph is reset.

ECO Level



History



Driving dates, distance and fuel economy for the past 30 drives in the History are displayed.

Information

 Press the Menu button at the top to delete History.

Energy Information

Displays detailed information about the battery and the flow of energy.

Battery Information



Features	Description
1 Total Range	Possible driving distance at current fuel level (sum of electricity and gasoline)
2 Electric	Possible driving distance with the currently remaining battery level
3 Gasoline	Possible driving distance with the currently remaining gasoline

Features	Description
4 Battery Gauge	Current level of battery charge
5 Expected Charging Time	Time required to complete charging when a charging cable is connected

Information

 Depending on the type of charging cable used, the time remaining until charging is complete will be displayed when the cable is connected.



Energy Flow

Status of power delivery is shown for each component according to the vehicle's driving.



- summer		
Features	Description	
11 Engine	Shows operating status of the engine.	
2 Electric Motor	Shows operating status of the hybrid motor.	
3 Battery	Shows operating status and remaining battery power for driving the motor.	
4 Shows flow of power delivery between the components.		
5 Shows driving status of the hybrid vehicle.		

Driving Status of Hybrid Vehicle

Idle Mode

The vehicle is in the Idle mode with no delivery of power.



Engine Mode

The engine's power is used for driving the vehicle.



Hybrid Mode

The engine's power and the motor's power are both used for driving the vehicle.



Engine Mode Charging

The engine's power is used for driving the vehicle and the battery is charged at the same time.



Idle Mode Charging 1

While the vehicle is in the Idle mode, the engine's power is used for charging the battery.



Engine Braking

The engine's power is reduced for slowing down the vehicle.



Charging

The deceleration energy from braking is used for charging the battery.



Electric Mode

The battery power is used for driving the motor, which drives the vehicle. The engine's power is not used.



Electric Mode Charging

The engine's power is used for charging the battery, and the motor's power is used for driving the vehicle at the same time.



Engine Braking Charging

The engine's power is reduced for slowing down the vehicle, and the deceleration energy is used for charging the battery at the same time.



Idle Mode Charging 2

Both the engine's power and the deceleration energy from braking are used for charging the battery.



Charging Settings

This function enables charging to start automatically at the scheduled time on the day that you select.

Two different schedules can be set.



Features	Description
1 Departure Time	Sets the time when the car will be driven after charging.
2 Repeat	Automatically schedule according to the current settings. Select the day of the week you want to charge the battery.



Information

- The time when charging will start is set based on the current time displayed on the head unit.
- The battery will start charging only if a charging cable is connected.
- When a charging cable is connected, the remaining charging time for the cable type will be displayed.
- Scheduling is not available if the set departure times and days of the week overlap.

Once the settings have been saved, the setting information will be displayed on the screen.

Name	Description
1	Check a box to use the respective settings.
2	Select to change the set values.
3	Select the Charge Now button to start charging immediately regardless of the scheduled charging times.
4	Select the Charge On Schedule button to use the scheduled charging times.
5	Select and configure to use inexpensive service plans during weekdays/weekends.

Electric Charging Stations

Shows the list of nearby EV charging stations within a driving distance.



Gas Stations


Search for gas stations.



PHEV Settings

You can change the settings for which real-time information will be displayed on the Home Screen.

ECO Driving

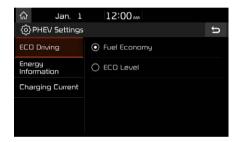


You can select for the widget to display either fuel economy or ECO level.

Energy Information



You can select for the widget to display either information about the battery or the flow of energy.

Charging Current

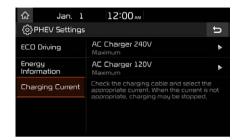

The Charging Current for AC Charger 240V mode and AC Charger 120V mode can be set.

MEMO

part.3 Radio/Media

FM/AM (with HD Radio™)

HD Radio[™] Technology (if equipped)

FM/AM

SiriusXM™

USB

iPod

AUX

Bluetooth® Audio

Radio/Media

FM/AM (with HD Radio™)

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu from All Menus on the Home screen.



Information

 If you press the RADIO key when the power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

Features	Description
1 Preset Frequencies	 The stored preset frequencies are displayed for user selection. After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button. Flick the preset frequencies up/down to scroll quickly through presets.
2 Frequency	Displays the current frequency.
3 Menu	 Station List Moves to the station list. Delete Presets Delete saved radio stations from the preset list. Info Turns the Radio text information transmitted from the broadcasting station on and off. Sound Settings Moves to the Sound Settings.





Features	Description
realures	Description
4 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
HD Radio (if equipped)	Used to set whether to turn HD Radio™ reception On or Off.
6 Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.
7 SEEK/TRACK	When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency. When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
8 TUNE	Turn the TUNE knob to manually seek available frequencies.

HD Radio™ Technology (if equipped)



This HD Radio receiver enables:

Program Info)
Digital Sound)

HD2/HD3)

Program Info Program Service Data: Presents song name, artist, station IDs, and other relevant data streams.

Digital Sound

Digital, CD-quality sound. HD Radio™ Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.

HD2/HD3

FM stations can provide additional digital-only audio programming on HD2/HD3 Channels.

If an HD Radio[™] broadcast is received, the radio mode will switch from analog broadcast to HD Radio[™] broadcast.

- The HD Radio[™] screen is displayed only when a HD Radio[™] broadcast is being received.
- HD Radio is only available in Metro areas.

HD Radio™



Name	Description
1 HD Radio™ Reception & Channel buttons	Displays main HD Radio™ channels and used to directly select the current available channels. The HD Radio™ related icon display becomes active within regions where an HD Radio™ signal can be received.
2 HD Channel Number	Analog station and corresponding HD Radio channel number saved in the preset list.
3 HD Radio Broadcast Info	Displays detailed information about the current broadcast (the details of the information shown are different depending on whether the Info button is selected)
4 HD Radio	When the HD Radio soft button is ON (the red indicator on the HD Radio button is illuminated), HD Radio signals will be received.

FM/AM

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu from All Menus on the Home screen.



Information

• If you press the RADIO key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

Fast	Description
Features	Description
1 Preset Frequencies	 The stored preset frequencies are displayed for user selection. After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button. Flick the preset frequencies up/down to scroll quickly through presets.
2 Frequency	Displays the current frequency.
3 Menu	Station List Moves to the station list. Delete Presets Delete saved radio stations from the preset list. Sound Settings Moves to the Sound Settings.





Features	Description
4 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
5 Info	Turns the Radio text information transmitted from the broadcasting station on and off.
6 Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.
7 SEEK/TRACK	When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency. When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
8 TUNE	Turn the TUNE knob to manually seek available frequencies.

SiriusXM™

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu option from All Menus on the Home screen. Select the SiriusXMTM band from the radio player.



- If you press the RADIO key when the power is off, the power will turn on and a radio broadcast will be tuned from the current mode.
- If you are in the SiriusXM[™] mode, select the SiriusXM[™] radio widget from the Home screen to access the radio player.
- When the power is off, pressing the RADIO key will turn the power on and play a SiriusXMTM Radio broadcast.

Features	Description
1 Preset Frequencies	Shows the stored presets for user selection. After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.
2 Channel Logo	Displays the current channel logo.
3 Channel Info	Displays the current channel number and name.
4 Content Info	Displays the artist, title and other information about the current playing song.
5 Category Info	Displays the category of the currently playing song.
6 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
7 Direct Tune	Used to search for the desired channel by entering the channel number.
8 Scan	Plays all receivable channels for 5 seconds per item.
Play Live	Switches to the live broadcast mode.
10 Skip Backward	Repeats the previously broadcasted program. Holding for less than 0.8 seconds: Moves to the previous segment. Holding for more than 0.8 seconds: Moves to the previous 5 seconds.






- REC icon is shown next to the first 10 SXM presets saved.
- With presets saved, each time the vehicle is started that preset station will be automatically buffered for your convenience.

Features	Description
II Play/Pause	Pauses/plays the current broadcasting program.
12 Skip Forward	Moves to the next segment.
13 Weak Signal	Displays the weak radio reception.
14 Channel List	Moves to the channel list.
15 Menu	 Delete Presets Delete saved radio stations from the preset list. What is on My Presets? The program schedule saved in my preset. (For more details, see Section 3.11. Viewing Menu.) Featured Favorites Theme channels recommended by SiriusXM™. (For more details, see Section 3.12. Viewing Menu.) Sound Settings Moves to the Sound Settings.
16 SEEK/TRACK	 When the key is pressed quickly (less than 0.8 seconds): Plays the previous/next channel. When the key is pressed and held (over 0.8 seconds): Continuously changes the channel until the key is released and plays the current channel.
17 TUNE	Changes the channel.


Selecting through Channel/Category List

Select the Channel List > Select the desired category and channel.

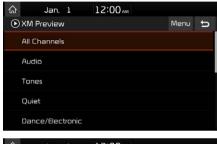



Select the desired category and the channel. Once selected, the previous screen will be restored and the selected channel will begin playing. If you select the Skip button, you can scan channels using the SEEK TRACKA key or the TUNE knob by skipping the channels that you chose to skip.

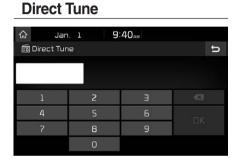


Enter the number of the channel you want to receive.

Viewing Menu

Using the Menu button on the right, you can view the program schedule and information about the Featured Favorites provided by SiriusXMTM.



What is on My Presets? (Program Schedule)

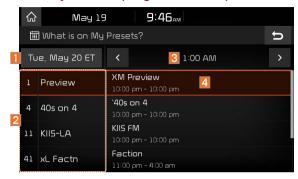

You can select Menu to see program information and the schedules of broadcast channels listed in the presets.

Name	Description
Change Broadcast Date	By selecting this option, you can select a broadcasting date. Broadcast information will be provided for one week from the current date. Jan. 1 12:00 Jan. 1 Jan. 2 Jan. 1 Jan. 1 Jan. 1 Jan. 2 Jan. 1 Jan. 1 Jan. 2 Jan. 1 Jan. 2 Jan. 1 Jan. 2 Jan. 2 Jan. 2 Jan. 2
2 Preset	Shows saved presets for user selection A total of 40 frequencies for SiriusXM™ modes can be displayed.
3 Broadcasting Time	You can select the time that you want.
4 Program Information	Shows you the program titles to be broadcasted at the time that you have chosen. Select a program to see more details. If there is more information on the program you selected, an arrow button will be displayed on the right of the list. You can see more program information by selecting the arrow button.

Featured Favorites



Featured Favorites feature allows
SiriusXM[™] to broadcast additional presets.

- Example 1: "Martha's Favorites" may represent Martha Stuart's favorites presets on her radio.
- Example 2: During holidays, "Holiday Music" may represent all the SiriusXM™ channels that are playing the holiday music for easy access by users.

Multiple sets Featured Favorites data can be broadcast by SiriusXM[™] and can change from time to time.

USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8Kbps to 320Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- USB devices, formatted to the FAT12, FAT16, or FAT32 file system, are recommended. File systems other than FAT12, FAT16, FAT32, exFAT, and NTFS are not supported.
- Some USB devices may not be supported due to compatibility issues.
- · Take caution so that the USB connector does not come in con-

- tact with body parts or objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB.
- The use of USB devices for purposes other than playing music files is prohibited.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used.
 Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- When application programs are installed to specific USBs, files may not properly play.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- When playing iPods, please use a dedicated iPod car cable.
- Normal operation cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM (Digital Rights Management).
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.
- To play USB MP3, the USB device must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.



Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

Information

 Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.

Supported USB music specifications

Name	Description
Audio File Specification	MPEG-1/2 layer3, OGG (Vorbis), FLAC, WAV, WMA (Standard/Professional)
	MPEG-1/2 layer3 • 8 kbps to 320 kbps (CBR or VBR), to 48 kHz • ID3 Tag: Suppor ts ID3v1.0 and ID3v1.1, ID3v2.3, ID3v2.4 ID3 tags
Recommended	OGG (Vorbis): From Q1 to Q10, to 48 kHz
Bit Rates and Sampling Frequency	FLAC: 8/16/24 bit, to 48 kHz WAV: 8/16 bit, to 48 kHz
	 WMA Standard (0x161): to support L3 Profile: to 385 kbps, to 48 kHz Professional (0x162): to support M0b: to 192 kbps, to 48 kHz
Detailed Specifications	Maximum directory layers: 20 layers Maximum length of folder name/file name: 255 bytes Supported characters for folder name/file name: Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 characters Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT) Maximum number of files which can be stored onto one USB: 8000

Information


 The sound quality of audio files that use bitrates exceeding 192 kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not operate properly.

USB Music



Features	Description
Mode	Displays the current operating mode.
2 Number of files	Number of files on the current playlist.
Repeat/ Shuffle	From Repeat/Shuffle, displays the current operating function.
4 Play Time	Displays the current play time/total play time.
5 Song Info	Displays the artist/title/album info.
6 List	Moves to the list screen.
7 Back Button	Move to the previous screen.

Features	Description
8 Previous File	If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning. (depends on the play time) If play time is less than 3 seconds, moves to previous file. If play time is over 3 seconds, play the current file from the beginning. If the button is selected (over 0.8 seconds): It rewinds the track.
Play/Pause	Plays/pauses the current file.
10 Next File	 If the button is selected (less than 0.8 seconds): Moves to the next file. If the button is selected (over 0.8 seconds): It fast-forwards the track.
11 Repeat	Repeats the current file. If select the file in the file tab on the list screen: select this button to switch between repeating the current file, repeating folder, and repeating all files. If select the song in the other tabs on the list screen: select this button to switch between repeating the current song and repeating all songs.
12 Shuffle	Plays files in random order. Select this button to switch between shuffle and turning shuffle off.

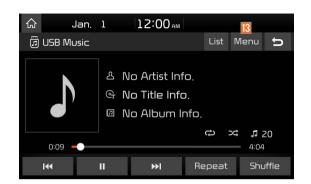



Features	Description
13 Menu	 Hide Current File: a selected file can be deleted. Deleted file can be found in the "Hidden_" folder. This function is only supported when USB format is compatible with FAT16 or FAT32. Sound Settings: Moves to the Sound Settings.
14 TUNE	Turn the ● TUNE knob to search a desired track. If the desired track is displayed, select the ● TUNE knob to play the track. If you do not anything with the ● TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.





Features	Description
Folder/ Category Name	Displays folder/category name in the list
2 Current Song	Displays the current playing file name
3 Back Button	Converts to basic mode screen
Upper Folder/ Category	Moves to Upper Folder/Category

Features	Description			
5 Menu	Now Playing: When moving to a different list screen, moves to the list page where the current file is located (becomes disabled when the current list includes the current file)			
6 Search Menu	Search songs by the list type.			
7 SEEK/TRACK	 When the key is pressed quickly (less than 0.8 seconds): Plays previous/next track. When the key is pressed and held (over 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. 			
8 TUNE	Turn the TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press TUNE knob to play the track.			

iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
- For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
- Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)

- If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in a short time, it may cause abnormal operation.
- The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
- For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
- To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.

- To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
- In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/ iPhone products)
- **During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/ iPhone product.) will charge the iPod through the head unit.
- **The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)
- **To play iPod music through cable connection, the iPod/USB cable must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1 to 2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict.
 If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano /Classic, the Kia logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.

- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications specifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the iPod mode.
- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in iPod mode.
- The screen of multimedia system can be different when you run other music players (e.g. iHeartRadio) on your connected device.

- While using a connected iPhone/iPod
 Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/ next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Multimedia system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.

- If you control pause, repeat, shuffle, or seek songs when the play time is less than 3s before the song is finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.
- If the iPhone/iPod Touch supports
 Bluetooth, the Apple device will not be
 able to use the Bluetooth function if the
 device is connected through both the
 USB port and via Bluetooth. Disconnect
 the USB connection then use Bluetooth
 Audio
- If iPod/iPhone connected to the Multimedia system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.

- If AUX cable connected to iPod/iPhone but not connect to the Multimedia system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Multimedia system via USB. Or change settings to "Dock" in iPod/iPhone.
- If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems.
 Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)

- iPhone and iPod Touch devices are guaranteed to work normally on iOS 9.3.2 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.
- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or other software related issues.

Туре	1G			2G	(3G	40	G	5G	6G	(6.5G			7G	
iPod Mini iPod Shuffle	Not Supported															
iPod Nano	0			0		0	0)	0	0	Not i	released			0	
iPod Touch	(iOS 1.1 not supported)		d)	0		0	0		0	0	Not released					
Туре	1G 2G 3G 40			4G 5G				6G	6.5G			7G				
iPad	O (Unable to charge, Not verified, Normal operation not guaranteed)															
iPad Mini	(Onable to charge, Not verified, Normal operation not guaranteed)															
iPod Classic	Not Supported				(iPod	o d with \	Video)	(iPod	O d Classic)	(iPod	O d Classic)	Not r	released		
Туре	3G	3	3GS	4	48	;	5	5C	5S	6	6+	6S	6S+	SE	7	7+
iPhone	Not verified Normal opera not guarante	tion	0	0	0		0	0	0	0	0	0	0	0	0	0

iPod



Features	Description
1 Mode	Displays the current operating mode.
2 Number of songs	Number of songs on the current playlist.
3 Repeat/Shuffle	From Repeat/Shuffle, displays the current operating function.
4 Play Time	Displays the current play time/total play time.
5 Song Info	Displays the artist/title/album info.
6 List	Moves to the list screen.

Features	Description
7 Previous File	If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning. (depends on the play time) If play time is less than 3 seconds, moves to previous file. If play time is over 3 seconds, play the current file from the beginning. If the button is selected (over 0.8 seconds): It rewinds the track.
8 Play/Pause	Plays/pauses the current file.
9 Next File	 If the button is selected (less than 0.8 seconds): Moves to the next file. If the button is selected (over 0.8 seconds): It fast-forwards the track.
10 Repeat	Repeats the current song. Select this button to switch between repeating the current song and repeating category all songs. (It all depends on the specification of your Apple device.)
11 Shuffle	Plays songs in random order. • Select this button to switch between shuffle category and turning shuffle off. (It all depends on the specification of your Apple device.)
12 Back Button	Move to the previous screen.
13 Menu	Sound Settings: Moves to the Sound Settings.



Features	Description
14 TUNE	Turn the Tune knob to search a desired track. If the desired track is displayed, press the Tune knob to play the track. If you do not anything with the Tune knob for 5 seconds of searching tracks, the track info for the current track is restored.





Features	Description
1 Category Name	Displays the category name.
2 Category List	Displays the contents of selected category. If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
3 Back Button	Move to the previous screen.
Upper Category	Moves to Upper Category.
5 Search Menu	Search songs by the list type.
6 SEEK/TRACK	 When the key is pressed quickly (less than 0.8 seconds): Plays previous/next track. When the key is pressed and held (over 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track.
7 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If you do not anything with the knob for 5 seconds, the TUNE knob search will be terminated.

AUX

Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

- AUX mode can be used only when an external audio player has been connected.
- The AUX volume can also be controlled separately through the connected device.



NOTICE

- If only a cable is connected to the AUX without an external device, the mode will be changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.



* The actual image in the vehicle may differ from the illustration.

Bluetooth® Audio





- Artist info and Title may not be supported by mobile phone.
- While in use of other functions after connecting your mobile phone through a USB cable, the Bluetooth audio is disabled.
- Depending on the connected Bluetooth device, mobile phone, or the music player you are using, playback controls may differ.
- Depending on the music player you are using, streaming may not be supported.

Features	Description
1 Mode	Displays the current operating mode.
2 Phone Name	Displays name of connected phone.
3 Artist Info	Name of current artist.
4 Title	Name of current song.
5 Previous File	 If play time is less than 3 seconds, moves to the previous file. If play time is more than 3 seconds, plays the current file from the beginning. This function may differ depending on the model of mobile phone.
6 Play/Pause	Plays/Pauses Bluetooth Audio.
Next File	Moves to the next file.
8 Repeat	Repeats the current file. This function may differ depending on the model of mobile phone.
9 Shuffle	Plays files in random order. This function may differ depending on the model of mobile phone.
10 Change Device	Search for and connect another Bluetooth device.
11 Menu	 Change Device: Search for and connect another Bluetooth device. Sound Settings: Moves to the Sound Settings.
12 SEEK/TRACK	Plays the previous/next file.
13 TUNE	TUNE is not supported.

Bluetooth Connection

Settings for pairing, connection and disconnection of a Bluetooth device.



• In Bluetooth Audio play screen, select

Menu and then Connections.

- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not be supported for some mobile phones.
- Please check the Bluetooth compatibility in below website: KIA Motors Corporation http://www.kia.com

part.4 Bluetooth

Before Using the Bluetooth® Handsfree
Bluetooth Connection
Bluetooth Phone

Bluetooth

Before Using the Bluetooth® Handsfree

What is *Bluetooth*® Wireless Technology?

- Bluetooth® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth[®] phones, PDAs, various electronic devices, and automotive environments, *Bluetooth*[®] Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth[®] Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth[®] mobile phones through the Multimedia system.

 The Bluetooth® Handsfree feature may not be supported in some mobile phones.
 For more information on mobile phone compatibility, visit the KIA Motor website
 KIA Motors Corporation: http://www.kia. com

WARNING

- Distracted Driving

- Focus on the road while driving. The driver's primary responsibility is in the safe and legal operation of the vehicle. Drivers should not use any hand held devices or other equipment or vehicle systems that distract the driver during vehicle operation.
- Do not stare at the multimedia screen for long periods of time while driving. Staring at the screen for prolonged periods of time can lead to traffic accidents and can result in personal injuries.

Precautions for Safe Driving

- Bluetooth[®] is a feature that enables drivers to make handsfree calls. Connecting the head unit with a Bluetooth[®] phone allows the user to conveniently make calls, receive calls, and manage the phonebook. Before using *Bluetooth*[®] Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

CAUTIONS upon Connecting Bluetooth® Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth[®] features
- Even if the phone supports Bluetooth
 Wireless Technology, the phone will
 not be found during device searches if
 the phone has been set to hidden state
 or the Bluetooth
 power is turned off.
 Disable the hidden state or turn on the
 Bluetooth
 power prior to searching/
 connecting with the head unit.
- If Auto Connection is used, the Bluetooth[®] phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.

- If you do not want automatic connection with your Bluetooth[®] device, turn the Bluetooth[®] feature off of the Bluetooth[®] device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth[®] connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 - Turn the Bluetooth function within the mobile phone OFF/ON and try again.
 - Turn the mobile phone power OFF/ON and try again.
 - 3. Completely remove the mobile phone battery, reboot, and then again.
 - 4. Reboot the Multimedia System and try again.
 - Delete all paired devices from both of Phone and Head Unit sides and then try again

- The Handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth[®] devices and use of other Bluetooth[®] features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- If you continue having issue downloading your contacts to your vehicle, contact your mobile phone provider.

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.

Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Pairing a New Device Through the Phone Settings

Press the SETUP key. ► Select Bluetooth.

► Select Bluetooth Connection. ► Select Add New. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.



The default passkey is 0000.

The vehicle name above is an example. Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.

Connecting Devices by Selecting Phone/Call



Connecting Devices Through the Phone Settings

Press the SETUP key. ➤ Select Bluetooth. ➤ Select the name of the device to connect. ➤ Connect Bluetooth.



Disconnecting Bluetooth Devices


Disconnects Bluetooth devices that are connected.

Press the SETUP key. ➤ Select Bluetooth. ➤ Select the name of the device to disconnect.



Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.





Bluetooth Phone

Phone Status Icons

Shows the current phone status in the right top of the display.



Icons	Description	
₿ ე	You can use Bluetooth phones when a Bluetooth Hands-free connection is established.	
*1	You can use Bluetooth audio features when a Bluetooth audio connection is established.	
3 1	You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established.	
® Y₁₁1	Call signal strength indicator.	
-	Battery level of the Bluetooth devices connected.	
C+	Downloading Call History list.	
(Downloading Contacts.	
C3	In a Bluetooth phone call.	
₽ ₽	Microphone muted.	

- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
- The battery level may differ from the actual level remaining.



Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Select and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone.
2 Call	Makes a call after you dial a number and select

Name	Description
3 Settings	Moves to a screen of Bluetooth Connection.
4 Delete	Deletes the numbers that you entered.
5 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
6 Change Device	Search for and connect another Bluetooth device.

Information

 Some types of mobile phones may not support the Speed Dial function.

Accept/Reject Call



If there is an incoming call after you made a Bluetooth connection, a popup message will appear.


Name	Description
Accept	Answers the call.
2 Reject	Ignores the call.

Information

 In some mobile phones, the caller's number may not be displayed, and the Reject feature may not be supported.

Using the Menu During a Phone Call



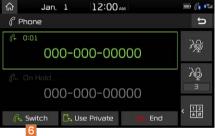

When making a call, you can use the following menu items.

Name	Description
1 Use Private	Switches a voice call from the car Hands-free to the mobile phone.
2 End	Ends a call.
3 Mute	Mutes the microphone during a call.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 to 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Handsfree, you cannot access other modes, such as Radio and Settings.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.



Name	Description
1 All	Lists the all call history.
2 Dialed	Lists the calls that you made.
3 Received	Lists the calls that you have received.
4 Missed	Lists the calls you missed.
5 Call History	Displays all of your call history. Select from the list to dial the number.
6 Download	Downloads the call history information from your mobile phone.
7 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
8 Change Device	Search for and con- nect another Bluetooth device.

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon (4).
- If the call history download is turned off on the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth Settings or display status are normal.
- Some devices do not support call history download. Check if your Bluetooth device supports download feature. For details regarding Bluetooth-supported devices and their functional compatibility, visit http://www. kia.com

Contacts



Name	Description
Contacts List	The list of Contacts. Select from the list to dial the number.
2 Download	Downloads contacts from your mobile phone.
3 Search	Searches Contacts.
4 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
5 Change Device	Search for and con- nect another Bluetooth device.

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit or delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the Multimedia system. Keep your important data in a safe place.
- Contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
- Only supported contacts format can be downloaded and displayed from the Bluetooth device, contacts from some applications will not be included.
- The download will not be available if the contacts download function is turned off on your Bluetooth device.

- Some devices require a device authentication for downloading your contacts. If download fails, check your phone screen and confirm the download if necessary.
- Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts download. For Bluetooth supporting devices details and compatibility, visit http://www.kia.com

Favorites



Name	Description
1 Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
2 Edit	Add or delete numbers from favorites.
3 Delete	Deletes numbers that you select from Favorites.
4 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
5 Change Device	Search for and connect another Bluetooth device.

MEMO

part.5 UVO eServices

Rear view mirror key function Before Using UVO eServices Getting Started with UVO eServices

UVO eServices

Rear view mirror key function



* The actual image in the vehicle may differ from the illustration.

Location	Description	
1	Connects to the UVO center and provides information about the UVO eServices features. (For more information, see the eServices Guide section.)	
2 UVO	Moves to the navigation map for Phone Projection, if connected. (For more details, refer to Phone Projection guide)	
3 🛦	Roadside Assist Connects to the center and provides vehicle towing services in case of a vehicle anomaly. (For more information, see the Roadside Assist section.)	

The UVO eServices function is supported for vehicles purchased in USA.

Before using UVO eServices

What is UVO eServices?

This is a Kia telematics service based on our cutting-edge IT system that makes your driving experience more convenient and fun and features safety, security, vehicle diagnostics, remote control and even smartphone synchronization functions. Enjoy a smarter driving style with UVO eServices.

What is Telematics?

The word "Telematics" stems from the combination of telecommunications and informatics, and refers to an information system that provides a variety of driving information through the built-in terminal by analyzing each symptom and driving state. This allows for a much safer and more comfortable driving experience.

Regarding the TX and RX of radio

There may be limitation of the UVO eServices depending on the environment of the mobile network since it communicates with UVO system using mobile communication network. It may affect UVO phone, the connection to the UVO center or the TX/RX of wireless data at the place as the following. Refer to the status icon () of the TX/RX signal on the top status display bar for the status of TX/RX signal. It is advisable to use the UVO system when the antenna level of the TX/RX signal is four or more.

Places where UVO may be disrupted depending on the transmission/reception status:

- Inside tunnels
- · Mountainous areas or dense forest
- · Roads close to cliff edges
- · Densely built-up areas
- On highways or roads underneath higher interchange roads
- Inside buildings

Getting Started with UVO eservices

You can use UVO features including Roadside Assist, Vehicle Diagnostics, eServices Guide, eServices Settings.

- 1. Press UVO key.
- 2. Select the desired item.



Name	Description
1 Roadside Assist	Provides services including emergency assistance and vehicle towing in case of a vehicle anomaly or emergency through a connection to the UVO center.
2 Vehicle Diagnostics	Diagnoses anomalies in the vehicle and checks diagnostic results.
3 eServices Guide	Connects to the UVO center and provides information about the UVO eServices features.
4 eServices Settings	Displays Service Activation, 911 Connect, and Modem Information.

Roadside Assist

Roadside Assist provides services including emergency assistance and vehicle towing in case of a vehicle anomaly or emergency through a connection to the UVO center.

You can still use the Roadside Assist feature without activating in UVO eServices. However, the Roadside Assist feature is not available if your UVO eServices period is expired. When your service period is expired, please reactivate your service to use the Roadside Assist feature.

1. Press UVO key ► Roadside Assist .

(Or, press the key on your rearview mirror.)





- You can still use the Roadside Assist feature without registering for UVO eServices.
- If you have no network coverage, please move to a new location and try again.


Vehicle Diagnostics

Manual Diagnostics

Vehicle Diagnostics diagnoses anomalies in the vehicle and provides diagnostic results. UVO eServices Activation(Enrollment) is needed to use Vehicle Diagnostics. This feature is only available when the vehicle is stationary because there are controls that are undiagnosable when the vehicle is in motion. If you switch to another screen during Vehicle Diagnostics, Vehicle Diagnostics will be cancelled.



2. Select the desired item.

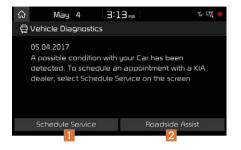

Name	Description
1 Schedule Service	Requests a service from your preferred dealership or a nearby dealership.
2 Roadside Assist	Connects to the center for Roadside Assist. (For more information, see the Roadside Assist section.)

3. If you select Schedule Service, choose your desired option.



Name	Description
1 Preferred	Sends vehicle diagnostics results to the registered dealer on MYUVO.com to request a phone appointment.
2 Nearby	Receives a list of nearby dealers, and after you have selected a dealer, sends vehicle diagnostics results to the dealer to request a phone appointment.


MOTICE

 To send a Schedule Service request to a preferred dealer, please register the dealer on MyUVO.com first.

Vehicle Diagnostics

Auto Diagnostics

The Vehicle Diagnostics (Auto Diagnostics) feature automatically performs diagnostics on your car when a warning light comes on the cluster panel and displays the details of the vehicle malfunction on the screen for the driver.

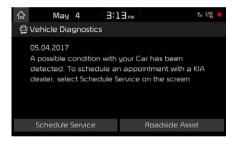

➢ NOTICE

 If Vehicle Diagnostics (Auto Diagnostics) was unsuccessful, the diagnostics is automatically performed again when you turn on your vehicle.

eServices Guide

eServices Guide connects to the UVO center and provides information about the UVO eServices features.

The eServices Guide feature is not available if your UVO eServices period is expired. When your service period is expired, please reactivate your service to use the eServices Guide feature.

1. Press UVD key ► e5ervices Guide .

(Or, press the key on your rearview mirror.)

ന് Aug. 9 3:06™	Tal LTE #
™UVO eServices	Ð
€ ₀ 0:14	.3VZ
eServices Guide 844-840-5554	3∕Q ₃
	(TI2 🔽
es End	` ★# 🔼

Name	Description
Outgoing Volume	Adjusts the microphone volume during a call.
2 Keypad	Displays the numeric key-pad.

NOTICE

 The eServices Guide is not available during a Bluetooth call.

UVO eServices Settings

For more details, refer to part 9. Setup UVO eServices Settings.

MEMO

part.6 Voice Recognition

What is Voice Recognition?
Precautions Required for Successful Voice Recognition
Starting/Ending and Setting Voice Recognition
Voice Recognition Screen Overview
Voice Commands
Siri Eyes Free

Voice Recognition

What is Voice Recognition?

The voice recognition feature operates the multimedia system by recognizing voice commands and enables hands-free operation of the system while you are driving your car.

Not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.

There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command in some circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

Precautions Required for Successful Voice Recognition

- Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
- To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
- 3. Voice recognition automatically ends if:
 - 1) A call is incoming or outgoing
 - 2) A media device (USB or iPod, etc.) is connected or disconnected
 - The rear view camera is operated (optional)
 - 4) The car engine starts or stops
 - 5) A system key, such as RADID key or MEDIA key is selected

- 4. The microphone used for the voice recognition system is located in the headliner directly above the driver's head. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
- Speaking naturally and clearly will ensure better recognition of your voice commands.
- 6. In the following cases voice recognition will be affected by ambient noise.
 - 1) The sound of the wind if any window or the sun roof is open.
 - High speed blower from the air vents.Set climate control to blow lower than level 3.
 - Vibrations from passing through a tunnel.
 - 4) Vibrations from driving on an uneven road.
 - 5) Storms and heavy rain.

Starting/Ending and Setting Voice Recognition

Starting Voice Recognition

Press the key briefly (less than 0.8 seconds) on the steering wheel control to activate voice recognition.



Ending Voice Recognition

- 1. Select "Exit" to the left of the bottom to end voice recognition.
- 2. Press and hold (more than 0.8 seconds) the key on the steering wheel control to end voice recognition.



Combining Voice Recognition with On-Screen Commands

After pressing the key, say a command after the beep. The voice recognition system will execute the desired operation after understanding the command.

Alternatively, you may touch any of the corresponding Commands on the screen while the Voice Recognition system is in operation.

Combining voice recognition with available on-screen commands is useful when the system is taking longer than expected or the voice command did not execute as desired.



Extending the Listening Time

When the system is waiting for your command, after the voice prompt and beep have been heard, if you press the key (less than 0.8 seconds), then the beep will sound again and standby mode will restart.

When activated, voice recognition waits for your command for 5 seconds. If you say nothing for 5 seconds, a voice prompt will ask for your command again.

Information

 Due to the sensitivity of the MIC, if too much time has passed since the MIC has opened and waiting for a command, small noises can sometimes be interpreted as a command.



Skipping Prompt Messages

When you hear the prompt message, press the key on the steering wheel control to skip the message and go directly to listening mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.

Information

• Refer to Part 9 for instructions on how to change the Voice Recognition Settings.



Adjusting Voice Recognition Volume

During voice recognition, rotate the volume knob to adjust the message volume.




Voice Recognition Screen Overview



Name	Description
Representative Commands	Displays frequently used commands.
2 Not available command	Unavailable voice commands are grey, a precondition was not met so the command is grey and unavailable. The conditions required for using the unavailable commands will be described under each command.

Name	Description
3 Voice recognition status icons	Standby✓ Voice guidance✓ Voice command process
4 Recognized results	Displays the voice recognition result.
5 User's speaking volume being recognized	Displays the voice command level real time as it is being spoken.
6 Help	Displays all available help commands in a tree format.
7 Exit	Ends the voice recognition.

Help Display

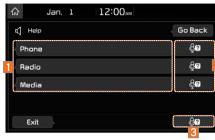

Name	Description
1 Command list	Shows the available commands. Select or say a command to display additional commands in detail.
2 How to use for selected item	This section shows how to use voice recognition for the selected item.
3 How to use in general	This section displays how to use voice recognition in general.

Instructions for Using Voice Recognition



Name	Description
1 Detail instruction	This section describes how to use voice recognition in detail.
2 Close button	Closes the screen and restarts voice recognition.

Information

 In the instructions screen, no voice is recognized, so you must manually issue commands. Because the instructions screen displays a lot of content, you cannot view it while driving for safety precautions.

Voice Commands

Types of Commands

Voice recognition commands are classified as "Global Commands" and "Local Commands".

- Global Commands (●): Commands that can be used immediately after activating voice recognition.
- Local Commands (○): Commands that can be used when a multimedia or Bluetooth function is running, or displayed on the screen, after activating voice recognition.

Call Commands

- * Check the following before using call commands:
- Voice commands related to phone calls can be used after connecting a Bluetooth device.
- To call a person, for example "Call <John Smith>" whose name
 is listed in Contacts, you must first download the Contacts list.
 For details on downloading contacts, see "Part 4 Bluetooth >
 Chapter 3. Bluetooth Phone > 4.10 Contacts".
- 3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time it takes to convert voice data may vary depending on the number of Contacts downloaded on the phone.

	Command	Operation
•	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
•	Call <name></name>	You can directly call a person by <name> in the downloaded Contacts.</name>
•	Call <name> on Mobile</name>	You can call a person <name> directly to the number that is saved as "Mobile" in the downloaded Contacts. e.g.) Call "John Smith" on Mobile</name>
•	Call <name> at Work</name>	You can call a person <name> directly to the number that is saved as "Work" in the downloaded Contacts. e.g.) Call "John Smith" at Work</name>
•	Call <name> at Home</name>	You can call a person <name> directly to the number that is saved as "Home" in the downloaded Contacts. e.g.) Call "John Smith" at Home</name>
•	Call <name> on Other</name>	You can call a person <name> directly to the number that is saved as other than "Mobile, Home, or Work" in the downloaded Contacts. e.g.) Call "John Smith" on Other</name>
•	Dial Number	Displays a screen where you can say a phone number to dial.
•	Dial <phone #=""></phone>	You can directly say the number to call. e.g.) Dial 111 555 1234
•	Redial	Directly calls at the number that you last dialed.
•	Call History	Displays your Call History, where you can say the list number to make a call.

Radio Commands

	Command	Operation
•	Radio	Plays the most recent radio channels from FM, AM, and SiriusXM™.
•	FM	Plays FM radio.
•	FM <87.5 to 107.9>	Tunes to FM <frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five</frequency>
•	SiriusXM	Plays SiriusXM™ radio.
•	SiriusXM <0 to 999>	Tunes to SiriusXM™ Channel <channel number=""> according to what you say. e.g.) SiriusXM 23: SiriusXM Twenty three</channel>
•	AM	Plays AM radio.
•	AM <530 to 1710>	Tunes to AM <frequency> according to what you say. e.g.) AM 530: AM Five thirty</frequency>
0	Preset <1 to 40>	Tunes to your preset stations (1 to 40).
0	Channel <0 to 999>	In SiriusXM™ Radio mode, turns on the <channel number=""> that you say.</channel>

Media Commands

- * Check the following before you use media commands.
- 1. If no media is connected or if no playable files exist at the time when you use these commands, a voice message will tell you that this is not available.
- If you say the name of the media that is currently playing again, then that media will continue playing.
 e.g.) Saying "USB" while USB content is playing.

Command		Operation
•	Music	Continues the last media you played.
•	iPod	Plays the iPod currently connected. This will work the same when an iPhone is connected. If a USB is connected, then it will be played instead of the iPod.
•	USB	Plays the music on the USB currently connected. If an iPod is connected, then the iPod will be played instead of the USB.
•	Bluetooth Audio	Plays the music on the Bluetooth phone currently connected. This may not be supported depending on the Bluetooth connection status.
•	AUX	Plays external devices that are currently connected.

1. USB Music/iPod Command

Command		Operation
0	Play	Plays a selected file. Maintains the current settings during playback.
0	Pause	Pauses a file that is playing. Maintains current settings while paused during playback.
0	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled playback.
0	Shuffle Off	Cancels Shuffle and plays tracks sequentially. Maintains current settings during sequential playback.
0	Repeat	Plays the current track or file repeatedly. Maintains the current settings during repeat playback.
0	Repeat Off	Cancels Repeat and plays multiple tracks or files. Maintains current settings during multiple track playback.

2. Bluetooth audio/AUX Command

For Bluetooth audio and external devices (AUX), local commands are unavailable, including Play, Pause, Repeat and Shuffle.

Other Commands List (Commands used in List/Help)

Command		Operation
•	Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
0	Line 1 to 4 (One to Four)	When you cannot select a certain name, such as in Call History, you can select it using numbers. Simple numbers can be recognized, such as "One" or "Two".
0	Yes/No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
0	Previous/Next	When four or more searched items are listed, you can move to the previous or next page using a voice command.
0	Manual Input	When Dial entry results are displayed, this command is used to search manually, rather than to search with a voice command. Voice recognition stops after this command is used.
0	Go Back	Moves to the previous screen.
•	Exit	Ends the voice recognition.

Siri Eyes Free

How to start Siri

If you want to use Siri, you have to connect your iOS device to the Multimedia system through Bluetooth.

(Please check whether your iOS device supports Siri and turning Siri On)

Then you can use Siri while pressing and holding key on the steering wheel.

How to use Siri

When you access the Siri screen while pressing and holding key on the steering wheel, you select the Speak button and then you can speak what you want. Note that the Multimedia system only supports "Phone" related functions. Other functions will be performed in your iOS device. If you press voice key quickly. Siri would re-start. If you hold down voice kev. Siri would be terminated and the screen would go back to the previous screen. Eves-Free mode would be activated automatically while you are driving. When shifting gears into P or putting the Parking brake on, Eyes-Free mode would be deactivated automatically.



Information

 Functions and feedbacks from voice commands via Siri are executed in the iOS device. If the iOS version is changed, the functions and response may be different according to the iOS device and the latest version.

MEMO

part.7 Apps/Info

SiriusXM™ Data

Apps/Info

SiriusXM™ Data

The SiriusXM™ Data Service is a paid membership satellite radio service that provides users with information such as Weather, Sports, Stocks, Fuel Prices and Movies.

Accessing SiriusXM[™] Data

Select the SiriusXM Data icon after selecting All Menus or the APPS/ key to enter the SiriusXMTM Data mode.



SiriusXM[™] Weather Announcement

At the "SiriusXM Data" screen, select the Weather icon to enter the Weather Announcement mode.

Weather Forecast

This service provides current weather information and weather forecasts for five days in your region. To change the region, select the Other City button and select the desired region.



Warnings and Advisories

This service provides weather warnings and advisories, such as tornado, storm, flood, etc.





SiriusXM[™] Sports Information

Select the Sports icon to enter the Sports mode.

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.



My Teams

You can save teams which you are interested in as part of My teams to easily view related scores and schedules.


Select the My Teams menu and then select the Add button to search for and register your favorite teams.

Search for your favorite teams and select the button on the right to add it to the "My Teams" list.





You can always check the list of teams that you added in the "My Teams" menu. Select the button on the right side of the team name to delete the team from "My Teams" or select the Add button to add other teams.

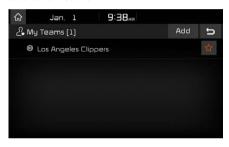


Select the team name to check daily results and recent schedules for that team.







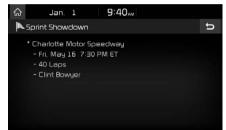

SiriusXM[™] Stock Information

In the "SiriusXM Data" screen, select the Stocks mode.

Stocks is a feature that shows the current value and change of stocks.

For symbols which you are interested in, select the icon to save the symbol as a part of the "Saved" symbols which can be viewed from the "My Favorites" button on the Stocks Main screen.

My Favorites

My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Select the Add button to move to the stock search screen.



Stock Search

Use the Stock Search menu to search for specific stocks.

Select the button after searching for your favorite stocks to save them in "My Favorites".




In the My Favorites screen, you can find the selected stock information that you registered.



SiriusXM[™] Fuel Price Information

At the "SiriusXM Data" screen, select the Fuel Prices icon to enter the Fuel Prices Information mode.

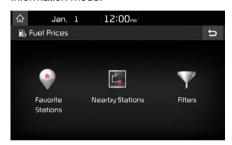

Search for Nearby Stations, and Register Key Locations as Favorite Stations.

Search for nearby stations with the "Nearby Stations" menu.

It shows station locations, starting from the nearest one, and select "Nearest" menu on the top right side to further sort them by price or brand name.



Select the button to the right of the list to register key locations as a Favorite Station so that you can go there again with the "Favorite Stations" menu.



My Fuel Type Settings

With the "Filters" menu, you can select fuel types and favorite brands.

When searching for Nearby Stations, the results will reflect selected fuel types and brand information.





SiriusXM™ Movie Information

Select the Movies icon to enter the Movie mode.


You can check recent movies and nearby theaters, and also register your favorite theater locations.



Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters.

In the "Nearby Theaters" menu, you can search for any nearby theaters.


It shows theaters, starting from the nearest one, and selecting the "Nearest" menu at the top right side will sort them by name.

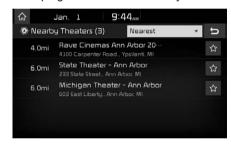



Select the button to the right of the list to register your favorite theater so that you can always check it again using the "Favorite Theaters" menu and selecting the button to view the current movie information for that theater.



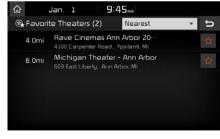

In the "Top Movies" menu, you can check for any movies that are currently popular. Select the ① button to the right of a movie title to view the plot summary and any other detailed information.



MEMO

part.8 Other Features

Climate Camera Using Voice Memo


Other Features

Climate

Press the **CLIMATE** key for the climate system to see status information in the full screen display.

While multimedia is in use, the climate system information will be displayed over top when you control the temperature (TEMP) or turn on the air conditioner (A/C).

Basic Mode Screen

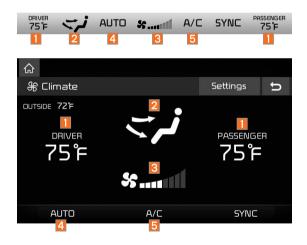

Name	Description
1 Set the temperature of the driver's seat and passenger seats	Displays the configured temperature settings for the driver's seat and the passenger seats. Cooling or heating will continue until the temperature matches the configured temperature settings. The interior temperature is displayed in units of 1 °F.
2 Air direction	Displays the configured air direction settings.
3 Air volume	Displays the configured air volume settings
4 Cooling/heating control status (AUTO)	Displayed when the AUTO key is pressed and cooling/heating operates automatically according to the configured temperature settings. AUTO will be turned off when you try to do the following with AUTO on: - Control the air volume - Control the air direction - Turn the air conditioning (A/C) on/off - Turn on the moisture removal function for the windshield
5 Air conditioning control status	Displayed when the A/C key is pressed and the air conditioning starts cooling/heating.



Name	Description
6 Simultaneous temperature settings for the driver's seat and the passenger seats (SYNC)	Displayed when the pressed and the temperatures of the driver's seat and the passenger seats can be configured at the same time.
7 Outside Temperature	Displays the current temperature outside the vehicle.
8 Settings	Goes to the Climate Settings screen. Smart Ventilation and Auto-Defog System can be turned on and off.

Camera

WARNING

When backing up, make sure to follow the guidelines below:

- Before entering your vehicle, always check the area behind your vehicle.
- Do not solely rely on the rear view camera when backing up. Always ensure that it is safe to back up by checking behind you and looking in the rearview mirrors.
- Always back up slowly and stop immediately if you suspect that a person, especially a child, might be behind you.

A CAUTION

- The distance shown in the rear view screen may differ from the actual distance. For safety, be sure to visually check the rear, left, and right sides of your vehicle.
- The color of the parking guidelines displayed in the picture may differ from the actual screen.
- When booted up, blinking may occur when you switch to a UI screen.

NOTICE

- The rear view screen remains active while you are backing up. When
 you move the transmission shift lever to any position other than
 the "R" (Reverse) position after backing up, the rear view screen
 will be deactivated and the system will display the previous screen
 automatically.
- As you steer your vehicle, the parking guides change accordingly to indicate your vehicle's path.



- Depending on vehicle models, the steering-interactive parking guides may not be supported.
- If an object comes too close to your vehicle as you are parking the vehicle, a warning beep will sound. To prevent an accident that might result if you do not hear the beep, you can set the system to decrease the volume level of any media playing automatically when you are parking the vehicle. On the Home screen, touch All Menus ▶ Setup ▶ Sound ▶ Priority ▶ Proximity Warning.

Steering-linked camera

When you put the transmission shift lever in the "R" (Reverse) position while the engine is running, the system screen will automatically display what is behind you.



Driving direction lines (yellow) 1 2

These lines show the directions of the vehicle according to the steering angle.

Neutral direction lines (blue) 3

These lines indicate your vehicle's expected path with the steering wheel in the neutral position. It can help you determine whether the vehicle is in the correct position in a parking space and prevent you from parking too close to the next vehicle.


Crash warning lines (red) 4

These lines are to prevent a collision.

Using Voice Memo

You can record voice memos using the microphone installed in your vehicle and play voice memos on your system.

On the Home screen, touch All Menus Voice Memo

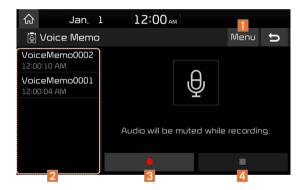

Features	Description		
1 Menu	 Delete: Delete voice memos. Save to USB Device: Save voice memos to a USB storage device. This option is available only for USB storage devices formatted in FAT16/32 formats. Storage Info: View information on the storage space used for your voice memos. 		
2 List	List of your voice memos. Touch a voice memo to play it.		
Record/Pause button	Touch to start recording. Touch to pause recording.		
4 Stop button	Touch to stop recording. The recorded memo is added to the voice memos list on the left of the screen. You can also press the button on the steering wheel.		

Information

- Voice memo recording mutes the function in operation or pauses media playback.
- If you make or answer a call while recording a voice memo, the recording pauses. If an emergency call is connected, the recording will stop and the recorded voice memo will be saved automatically.

part.9 Setup

Sound Settings
Display Settings
Bluetooth Settings
UVO eServices Settings
Phone Projection Settings
Home Screen Settings
Voice Recognition Settings
Date/Time Settings
Language Settings
Keyboard Settings
Screen Saver Settings
Advanced Settings
System Info

Setup

Setup is the screen to control Multimedia system settings.

To enter the screen, press the setup key or the setup icon in All Menus.

Sound Settings

Adjusts the sound effects for the whole system.





Features	Description		
1 Position	Select the Up/Down/Left/ Right button to control sound positioning. Select to concentrate the sound on the center of vehicle.		

Features	Description	
2 Volume Levels	Adjust the volume levels for various system features, including phone projection.	
3 Tone	Drag the slide bar to control Bass/Midrange/Treble settings. Select Center to initialize the settings.	
4 Priority	Sets the volume ratio when parking the vehicle, turning on the vehicle's ignition, etc.	
5 Advanced	Select additional audio options such as "Speed Dependent Volume Control" that automatically controls Audio volume according to vehicle speed.	
6 Default	Resets the sound to factory default settings.	
7 Beep	Select to activate a beep when pressing buttons.	

Information

- Advanced sound settings may differ according to selected AMP option.
- The seat shape may differ according to vehicle model.

Display Settings

Adjusts the level of illumination for the entire system.




Features	Description
1 Mode	Select any of LCD illumination change modes: Automatic (changes the level automatically), Daylight, and Night.
2 Illumination	Set the levels of illumination for day and night. Select Default to initialize the settings.
3 Default	Resets the display to factory default settings
4 Display Off	Provides the Display Off (touch activation) function.

Bluetooth Settings

Changes Bluetooth phone settings.



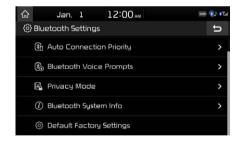

Add New

Delete Devices

Features	Description
1 Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or discon- nected.
2 Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.
3 Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth Hands-free connection.
4 Add New	Register a new Bluetooth device.
5 Delete Devices	Select and delete a paired device.
6 Help	Switches to the Bluetooth Connection Help screen.

information

- Some options will be displayed only when a mobile phone is connected to the system.
- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.

Auto Connection Priority

Press the SETUP key > Select Bluetooth

> Select Auto Connection Priority



When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially.

Depending on auto connection priority, connection to a device may take time.

Bluetooth Voice Prompts

Press the SETUP key ► Select Bluetooth

▶ Bluetooth Voice Prompts

Set whether to hear voice prompts for events related to Bluetooth connections.

Privacy Mode

Press the SETUP key ► Select Bluetooth
► Privacy Mode .

Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.

Bluetooth System Info

Press the SETUP key ► Select Bluetooth

▶ Bluetooth System Info .

View or edit your system's Bluetooth information.

Default Factory Settings

Press the SETUP key ► Select Bluetooth

▶ Default Factory Settings

Delete all paired Bluetooth devices and reset your Bluetooth settings to default values. All data related to Bluetooth devices will also be deleted.


UVO eServices Settings

Service Activation (when the service is not activated)


After you buy your car, you need to activate (register for) UVO eServices to use any UVO eServices features, including Vehicle Diagnostics, My POIs, and eServices Guide. If you are a first time user when you activate UVO eServices, you need to register for a new account by entering your email address, your phone number, and a password. (To register for a new account, you must accept the Terms & Conditions.) If you have an existing account registered on MyUVO.com, you must enter the email address and password you used when registering for an account.



- 2. Registering for a new account
- : Select the New Registration tab to enter your email address, your phone number, and a password twice. Select Submit.

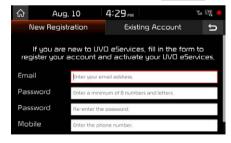

- 3. Registering for an existing account
- : Select the Existing Account tab to enter your email address and password. Select

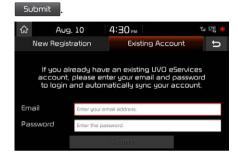

- **NOTICE**
- You cannot enter your email address, your phone number, or password while your vehicle is in motion. Please enter your information after your vehicle is parked.







- Do not turn the engine off while activation is in progress.
- If activation fails, contact the UVO Center at (800) 333-4KIA.
- During service activation, the hard keys in the head unit do not work.

Service Activation (when the service is expired)

If your UVO eServices period is expired, the UVO eServices features (911 Connect, Roadside Assist, Vehicle Diagnostics, My POIs, and eServices Guide) are not available. To use the UVO eServices features, please reactivate your service. When reactivating your service, please enter the email address and password you used when registering for an account on MyUVO.com.



2. Select Sign-in .

Aug. 10 4:37 M

W W W


W UVO eservices Sign-in

Your services period has expired.

STEP 1: Login or register an account on MyUVO.com and choose a payment plan, Once you have submitted your payment details, you can continue to the next step.

STEP 2: Press the [Sign-in] button below and enter in your MyUVO.com account credentials to complete the activation.

3. Enter your email address and password, and then select Submit.

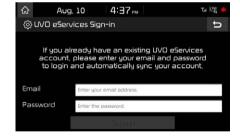







911 Connect

You can configure the 911 Connect feature. When an airbag deploys, the 911 Connect feature automatically calls 911 and sends the location information of your vehicle to a 911 operator. The 911 Connect feature is set to off by default. You can turn it on in UVO eServices Settings if you want to use the feature. You must accept the terms and conditions for 911 Connect in order to use the feature.

- 1. Press UVO key ▶ eServices Settings
- Select or deselect the check box next to
 g11 Connect to turn on or off the 911
 Connect feature.

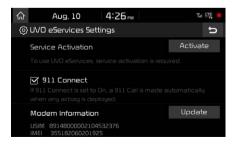

3. After you select the check box, read the user agreement and select Agree.

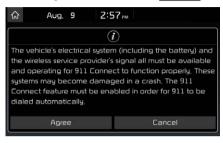

When an airbag deploys, the 911
 Connect feature automatically calls 911
 and sends the location information of your vehicle to a 911 operator.



NOTICE

- If 911 Connect is turned on, you can use the feature without registering for UVO eServices.
- If 911 Connect is turned on, the icon is displayed in the status bar.

Modem Information

This feature is used to show the USIM and IMEI modern information.

Press UVO key > eServices Settings



Phone Projection Settings

For more details, refer to Phone Projection guide.

Home Screen Settings

You can customize the three menu items at the bottom right of the Home Screen into the ones you want.

On the Home Screen Settings screen, drag the menu items on the right to the area marked in red in the screen below.




Information

• You can select the Default button to reset to the factory default settings.

Voice Recognition Settings

Configure how to make a call with Voice Recognition Guidance and Voice Recognition.

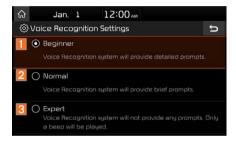

Features	Description	
1 Beginner	For beginners, the voice recognition system provides voice prompts.	
2 Normal	For normal users, the voice recognition system provides simple and short voice guidances.	
3 Expert	Voice Recognition system will not provide any prompts. Only a beep will be played.	

Date/Time Settings

Configure the settings for time and date. Using the arrow buttons, you can change the values. Date/Time settings do not automatically change when crossing into different time zones. The time must be changed manually on this screen.



Features	Description	
1 24 Hours	The time display is set in 24-hour format.	
2 Direct entry	If you tap any value, you can directly enter the number in the following screen.	
3 Daylight Saving Time	The daylight saving time (DST) is applied.	

Language Settings

You can configure the displayed system language.



When the language is changed, the system language is automatically changed.

Information

- This setting will not affect user data, such as MP3 file names.
- Depending on the system language, voice recognition may not be supported.

Keyboard Settings

You can configure the keyboard layout for each language.



Information

 Configured keyboard layouts are applied to all input modes.

Screen Saver Settings


You can select any of the following screen formats to be displayed when the screen or power is turned off (press and hold the Power button).

- · Digital clock and date
- · Analog clock and date
- None



Advanced Settings

Sets alerts per function if desired by the user.

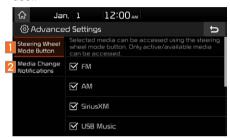

Features	Description		
1 Steering Wheel Mode Button	Sets the media to be played when the steering wheel or rear seat (if provided) MODE button is pressed.		
2 Media Change Notifications	Sets whether to display media information at the top of the screen as the next item is played when not on the media screen.		

System Info

System version information and update details are available.



Features	Description		
1 SW Info	Select the Update button to update the system.		
2 Storage	Displays the memory space available for media storage.		
3 Default	When Default is selected, the settings are changed to factory defaults.		

System Update

At the System Info screen, insert the USB memory with the latest file downloaded, and then select the Update button to begin updating. The system will then reboot automatically.

Information

 This product needs supplemental software updates and additional functions, which collectively may take some time to complete, depending on the amount of data.

NOTICE

- Do not turn off the system or remove the storage device while the update is in progress. If the power supply is cut off or the storage device is removed from the system, it may damage the data or cause a system malfunction.
- When Default is selected, it may delete all of the data and settings so be cautious of your action.

part.10 Appendix

Product Specification
Troubleshooting
FAQ

Appendix

Product Specification

TFT-LCD

Screen Size	7 inch(152.4 X 91.44 mm)	
Resolution	384000 pixels (Resolution: 800 x 480)	
Operating Method	TFT(Thin Film Transistor) Active Matrix	
Viewing Angle	Left/Right, Top/Bottom: ALL 89°	
Internal Lighting	LED	

Radio

Channels	FM: 87.5 MHz to 107.9 MHz(Step: 200 kHz)	
	AM: 530 kHz to 1710 kHz(Step: 10 kHz)	
Sensitivity	FM: Under 10dBuV/AM: Under 35dBu EMF	
Distortion Factor	Within 2 %	

Common

Power Supply	DC 14.4 V	Operating Power	DC 9 V to DC 16 V
Sleep Current	 Average current within 96 hours of ACC off: 10 mA or less Average current after 96 hours of ACC off: 1 mA or less 		
Operating Temperature	-20 to +70 °C (-4 to +158 °F)	Storage Temperature	-30 to +80 °C (-22 to +176 °F)
Dimensions	178 X 139.2 X 89 mm (Main BOX)		
Current Consumption	2.5 A	Weight	2.1 kg

MODEM RF SPEC

	_	-	
LTE	RX	Frequency	2110MHz~2155MHz(B4), 746MHz~756MHz(B13)
		Sensitivity	-96.3dBm under@10M(B4), -93.3dBm under@10M(B13) (Throughput ≥95%)
	TX	Frequency	1710MHz~1755MHz(B4), 777MHz~787MHz(B13)
		Max RF Output Power	Power Class3(B4, B13), 20.3dBm ~ 25.7dBm (conducted)
CDMA	RX	Frequency	869MHz~894MHz(BC0), 1930MHz~1990MHz(BC1)
		Sensitivity	-104dBm under (FER = 0.5% under)
	TX	Frequency	824MHz~849MHz(BC0), 1850MHz~1910MHz(BC1)
		Max RF Output Power	Power Class3(BC0), Power Class2(BC1), 23.01dBm ~ 30dBm(conducted)

Bluetooth® Wireless Technology

Frequency Range	2400 to 2483.5 MHz	Supported Bluetooth® Specification	3.0
Supported Profile	Handsfree(1.6), PBAP(1.1)	A2DP(1.2), A	VRCP(1.5),
Bluetooth Power Class2	-6~4 dBm		
Antenna power	3 mW (maximum)		
Number of Channels	79 channels		

Troubleshooting

- 1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
- 2. If you are having problems with the device, try the suggestions listed below.
- 3. If the problems persist, contact your Kia dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels
The sound or image is not working	 Has the Switch for the vehicle been turned to [ACC] or [ON]? Has the SYSTEM been turned OFF?
The screen is being displayed but sound is not working	 Has the volume been set to a low level? Has the volume been muted?
When the power is turned on, the corners of the screen are dark	The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction If the screen is very dark, contact your nearest Kia dealer for assistance
Sound is working from only one speaker	Are the positions of Fader or Balance sound controls adjusted to only one side?

Problem	Possible Cause
Sound does not work in AUX mode	Are the audio connector jacks fully inserted into the AUX terminal?
The external device is not working	Is the external device connected with a standard connector cable?
Upon turning power on, the most recent mode screen is not displayed	Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load If the corresponding device is not connected, the mode operated prior to the most recent mode will operate If the previous mode still cannot be properly played, the mode operated prior to that will operate

Problem	Possible Cause	Countermeasure
The power does not	The fuse is disconnected	Replace with a suitable fuse If the fuse is disconnected again, please contact your point of purchase or Kia dealer
turn on	Device is not properly connected	Check to see that the device has been properly connected
The system does not play	The vehicle battery is low	Charge the battery. If the problem persists, contact your point of purchase or Kia dealer

	o	
Problem	Possible Cause	Countermeasure
The image color/tone quality is low	The brightness, saturation, hue, and contrast levels are not set properly	Properly adjust the bright- ness, saturation, hue, and contrast levels through Display Setup
Sound does not work	The volume level is set to the lowest level The connection is not proper The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode	Adjust the volume level Check to see that the device has been properly connected The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode
The sound or image quality is low	Vibration is occurring from where the conversion switch has been installed Image color/tone quality is low	The sound may be short-circuited and the image distorted if the device vibrates The device will return to normal once vibrations stop

Problem	Possible Cause	Countermeasure
	USB memory is damaged	Please use the USB after formatting it.
	USB memory has been contaminated	Remove any foreign sub- stances on the contact sur- face of the USB memory and multimedia terminal
	A separately pur- chased USB HUB is being used	Directly connect the USB memory with the multime- dia terminal on the vehicle
The USB does not	A USB extension cable is being used	Directly connect the USB memory with the multime- dia terminal on the vehicle
work	A USB which is not a Metal Cover Type USB Memory is being used	Use standard USB Memory
	An HDD type, CF, SD Memory is being used	Use standard USB Memory
	There are no music files which can be played	Only MP3, WMA file for- mats are supported. Please use only the supported music file formats

Problem	Possible Cause	Countermeasure
The iPod is	There are no titles which can be played	Use iTunes to download and save MP3 files into the iPod
not recog- nized even though it has been	The iPod firmware version has not been properly updated	Use iTunes to update the firmware version and reconnect the iPod with the device
connected	The iPod device does not recognize downloads	Reset the iPod and recon- nect with the device
Bluetooth does not work or its	Bluetooth on your mobile phone is set to OFF	Set it to ON
limited func- tions are available	The Bluetooth con- nection is not made	Make the connection active

Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the RESET key to reset the system.
- Press and hold the RESET key (more than 1 second). The device power will turn off and the system will reset.

FAQ

About Pairing Mobile Phones

- Q I cannot pair my mobile phone. What is the cause?
- A Check to see that the mobile phone supports Bluetooth function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.
- **Q** What is the difference between pairing a mobile phone and connecting a mobile phone?
- A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth[®] Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?

A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with SETUP Bluetooth Bluetooth System Info Passkey menu options.

About Making/Answering Phone Calls

- Q How can I answer a call?
- A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the Accept button on the screen or the key on the steering wheel control.

To reject the call, select the Reject button on the screen or press the key on the steering wheel control.

- Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?
- A While on a call, press and hold (more than 0.8 seconds) the key on the steering wheel control or select the Use Private button at the bottom of the Phone screen to switch the call to your mobile phone.

About *Bluetooth*® Wireless Technology/ Multimedia System Use Environment

- Q What is the range of my wireless connection?
- A The wireless connection can be used within 15 yards.
- Q How many mobile phones can be paired?
- A It is possible to pair up to five mobile phones.
- Q Why is call quality sometimes poor?
- A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

C

Index

<u>0~9</u>	
911 Connect	9-8

Α

About <i>Bluetooth</i> ® Wireless Technology/Multimedia System Use Environment	10-8
About Making/	
Answering Phone Calls	10-8
About Pairing Mobile Phones	10-7
Accept/Reject Call	4-7
Accessing SiriusXM™ Data	7-2
Adjusting Voice Recognition	
Volume	6-5
Advanced Settings	9-11
Auto Connection Priority	9-4
AUX	3-26

В

Basic Mode Screen	8-2
Battery Information	2-4
Battery Warning Message	1-9
Before Playing a USB MP3	3-13
Before Using the Bluetooth®	
Handsfree	4-2
Before using UVO eServices	5-3
Bluetooth® Audio	3-27
Bluetooth Connection	. 4-4, 9-3
Bluetooth Phone	4-6
Bluetooth Settings	9-3
Bluetooth System Info	9-5
Bluetooth Voice Prompts	9-5

C

Call Commands	6-8
Call History	4-
Camera	8-
CAUTIONS upon Connecting Bluetooth® Phone	4-:
Charging Current	2-
Charging Settings	2-
Climate	8-
Combining Voice Recognition with	
On-Screen Commands	6-
On-Screen Commands Component Names and	1-4
On-Screen Commands Component Names and Functions Connecting an External	1-4 -2
On-Screen Commands Component Names and Functions Connecting an External Device	1-4 -2(4-4

D

Date/Time Settings	9-10
Default Factory Settings	9-5
Deleting Bluetooth Devices	4-5
Dial	4-7
Direct Tune	3-10
Disconnecting Bluetooth	
Devices	4-5
Display Settings	9-3
Driving Status of Hybrid	
Vehicle	2-5

<u>E</u>

ECO Driving2	-3, 2-9
ECO Level	2-3
Electric Charging Stations	2-8
Ending Voice Recognition	6-3
Energy Flow	2-5
Energy Information2	-4, 2-9
eServices Guide	5-7
Extending the Listening Time	6-4

<u>F</u>

FAQ	10-7
Favorites	4-11
FM/AM	3-6
FM/AM (with HD Radio™)	3-2
Fuel Economy	2-3

<u>G</u>

Gas Stations	2-8
Getting Started with UVO	
eServices	5-4

<u>H</u>

•	
HD Radio™	3-5
HD Radio [™] Technology (if equipped)	3-4
Head Unit	
Help Display	6-6
History	2-4
Home Screen1	-10
Home Screen Settings	9-9
How to start Siri6	3-13
How to use Siri6	3-13

1

Instructions for Using '	Voice
Recognition	6-7
iPod	3-19. 3-2

<u>K</u>	P
Keyboard Settings 9-11	Pairing a New Device PHEV Settings
L	Phone Projection Set
Language Settings 9-10	Phone Status Icons
	Precautions for Safe
M	Precautions Required Successful Voice Red
Media Commands6-10	Privacy Mode
Menu screen for Plug-in Hybrid mode2-2	Product Specification
Modem Information 9-9	R
0	Radio Commands
On-Screen Touch Controls 1-12	Rear view mirror key Regarding the TX and
Other Commands List (Commands	radio
used in List/Help)6-12	Restrictions on Featu Measures

P	_
Pairing a New Device4-	4
PHEV Settings2-	.9
Phone Projection Settings9-	9
Phone Status Icons 4-	6
Precautions for Safe Driving4-	2
Precautions Required for	
Successful Voice Recognition 6-	2
Privacy Mode9-	5
Product Specification10-	2
R	
Radio Commands 6-	.9
Rear view mirror key function 5-	2
Regarding the TX and RX of	
radio5-	3
Restrictions on Features for Safety	
Measures1-	9
Roadside Assist 5-	5

9	5	
	Screen Saver Settings	9-11
	Selecting through Channel/ Category List	3-10
	Service Activation	0.7
	(when the service is expired)	9-7
	Service Activation (when the service is not	
	activated)	9-5
	Siri Eyes Free	6-13
	SiriusXM TM	3-8
	SiriusXM™ Data	7-2
	SiriusXM™ Fuel Price	
	Information	7-6
	SiriusXM™ Movie Information	7-8
	SiriusXM™ Sports Information	7-3

SiriusXM™ Stock Information 7-5

Announcement7-2 Skipping Prompt Messages 6-5 Sound Settings......9-2

SiriusXM™ Weather

Starting/Ending and Setting Voice Recognition	6-3
Starting Plug-in Hybrid mode PHEV : Plug-in Hybrid Electric Vehicle	2-2
Starting the System for the First	
Time	1-8
Starting Voice Recognition	6-3
Steering-linked camera	8-5
Steering Wheel Controls	1-6
Supported USB music	
specifications	3-15
System Info	9-12
System Reset	1-8
System Update	9-12

V

Vehicle Diagnostics	. 5-5, 5-6
Voice Commands	6-8
Voice Recognition Screen	
Overview	6-6
Voice Recognition Settings	9-10

W

Warnings and Cautions	1-2
What is Bluetooth® Wireless	
Technology?	4-2
What is Telematics?	5-3
What is UVO eServices?	5-3
What is Voice Recognition?	6-2

Important Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions as you may to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the Multimedia system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Certification

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this device not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

MEMO

