(LECTRIC

1. COLD WATER INTAKE OF \$1/2", TEMPERATURE OF WATER 25°C, CONSUMPTION PER CYCLE 10-300

INTAKE BC
LITERS. (WATER CONSUMPTION DETERMINED BY DRYING TIME) THE VACUUM PUMP 10 L/MIN.

PRESSURE OF WATER 0.5-10 bar · HARDNESS OF WATER 0.9°fH(0.09mmol/L) · pH 7-9 · THE

CHLORIDES LEVEL WILL BE ≤ 0.1 mg/l, PLACED THE WALL WITH BUILT-IN AND ACCESSIBLE KEY.

2. COLD TREATEDWATER INTAKE OF \$1/2", SUPPLIED AT TEMPERATURE OF 25°C, CONSUMPTION PER

13L/CYC, PRESSURE OF WATER 0.5-10 bar · HARDNESS OF WATER ≤ 0.2°fH(0.02mmol/L) · pH 5-7AND

WITH CONDUCTIVITY ≤ 15µS/cm , PLACED THE WALL WITH BUILT-IN AND ACCESSIBLE KEY.

NOTE:

EACH TIME THE STEAM GENERATOR IS EMPTIED FOR CLEANING OR MAINTENANCE, A FURTHER 15 LITER OF WATER ARE NEEDED TO FILL IT UP AGAIN.

- DRAINAGE PIPE Ø≥1" METALLIC PIPE, CORROSION RESISTANCE 2"G. AND A TEMPERATURE OF 100°C ABOVE.
- 4.ELECTRIC INTAKE, 15kWx2 , WIRE 4 m LONG, (GENERAL POWER SUPPLY TO THE STERILIZER).

		230VAC		380VAC		415VAC			440VAC		
3ϕ	4W	78.	9A	47.	7A	43	3. 7	A	41.	. 1A	

NOTE: POWER INPUT MUST BE INSTALLED ACCORDING TO LOCAL APPLICABLE NORMS.

NOTE: ONCE THERE EXISTS REVERSING OF FAN BLADES THAT WILL CAUSED NO VACUUM VALUE,

TURN OFF THE MAIN POWER AND THEN SWITCH ANY TWO LINES OF THE THREE-PHASES EXCEPT GROUND LINE.

YOU MAY HAVE TO REPEAT THIS SWITCHING STEPS FOR TWO TIMES TO MATCH

WITH THE CORRECT ROTATING DIRECTION AS SHOWN ON THE PUMP.

- 5. CEILING MOUNTED AIR EXTRACTION WITH GRILLE DRAW 200 Kcal/h (LOADING / UNLOADING AREA).
 5-1 CFILING MOUNTED AIR EXTRACTION WITH GRILLE DRAW 400 Kcal/h (STERILIZE AREA).
- 6. A CHECK VALVE SHALL BE FITTED AS INDICATED IN THE DRAWING (6) and (7).
- B. THE EQUIPMENT SHALL BE ADJUST TO A ANGLE OF 1°-2° WITH REAR SITE HIGHER THAN FRONT SITE FOR THE PROPER OPERATION OF DRY AND DRAINAGE.

IMPORTANT: ENVIRONMENT CONDITIONS IN THE STERILE AREA:

- THE STERILE AREA TEMPERATURE MUST BE ≤ 40°C : HUMIDITY ≤ 85%RH
- TO KEEP THESE CONDITIONS IN THE STERILE AREA AND DEPENDING ON THE Kcal. LOST BY THE EQUIPMENT INDICATED IN THE ITEMS 5 & 5-1, WE SUGGEST THAT THE EXTRACTOR AND THE DIAMETER OF THE EXTRACTION TUBE ARE CALCULATED AND MADE BY A SPECIALIZED COMPANY.


ATTENTION

- THE ELECTRIC WIRES TO THE STERILIZER SHOULD BE DRIVEN BY AN HERMETIC CONDUIT.
- THE INDICATED AIR EXTRACTION IS ONLY TO DISSIPATE THE HEAT OF THE MACHINE AND MUST BE INDEPENDENT OF THE CLIMATE CONTROL SYSTEM OF THE ZONE.
- CHAMBER DIMENSIONS: \$4700x1500mm
- DEVICE OUTSIDE DIMENSIONS: W1030mmxH1843mmxD1730mm
- ALL THE OUTLETS MUST BE INSTALLED ACCORDING TO LOCAL APPLICABLE NORMS.
- IF THERE IS NO FALSE CEILING, THE AIR EXTRACTION, MUST BE INSTALLED IN THE WALL, AND HAVE THE SAME CAPACITY AS THOSE OF THE FALSE CEILING, SO THE AIR CAN BE CARRIED OUTSIDE OF THE BUILDING. IT ALSO NEEDS TO BE EQUIPPED WITH A GRILLE.
- THE INSTALLATION UP TO THE MACHINE AS WELL AS THE SUPPLY OF ACCESSIBLE KEY ACCORDING TO THE SPECIFICATIONS INDICATED IN THE DRAWING, ARE CHARGEABLE TO THE PURCHASERS.
- IF THERE IS ANY KIND OF PROBLEM DURING INSTALLATION FOR THE VARIOUS INTAKES NOT INDICATED IN THE DRAWING, PLEASE CONTACT OUR TECHNICAL SERVICE DEPT. FOR FURTHER ASSISTANCE.
- THE MEASUREMENTS OF THIS DRAWING ARE CONSIDERING FINISHED WALLS.
- THE SPACES OF MAINTENANCE MUST BE SUFFICIENTLY ILLUMINATED.



B SECTION(1:5)

Note: All parts should comply with RoHS.

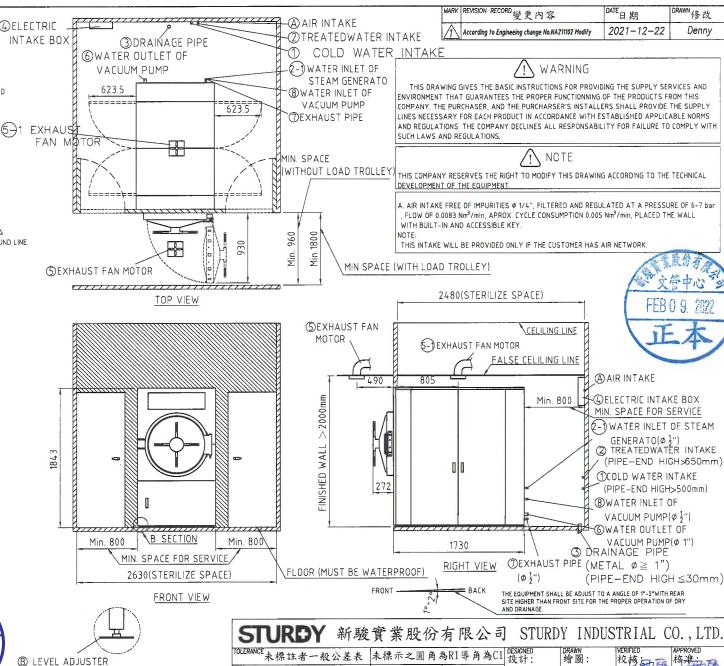

TOLERANCE 未標註者一般公差表	未標示之圓角為R1導角為C1	設計: application and applicati		校核二核准二		
0~10 ±0.2 51~100±0.6	201~500±1 ANGLE ±1°	Joe	Denny	某恶望 某恶望		
11~50 ±0.4 101~200±0.8	501~X ±2 VIEWPOINT ◆ □	20180822	20211222	P110CCOC P119CCOC		
MATERIAL 材質	SCALE UNIT 単位 mm	MAME 名 SAT-700 INSTALLATION PLAN				
SURFACE FINISHING 表面處理	MODEL NO. 代表機種	™C.NO. SAT-700-HE-001-02				