

THIS DRAWING GIVES THE BASIC INSTRUCTIONS FOR PROVIDING THE SUPPLY SERVICESAND ENVIRONMENT THAT GUARANTEES THE PROPER FUNCTIONNING OF THE PRODUCTS FROM THIS COMPANY. THE PURCHASER, AND THE PURCHARSER'S INSTALLERS SHALL PROVIDE THE SUPPLY LINES NECESSARY FOR EACH PRODUCT IN ACCORDANCE WITH ESTABLISHED APPLICABLE NORMS AND REGULATIONS. THE COMPANY DECLINES ALL RESPONSABILITY FOR FAILURE TO COMPLY WITH SUCH LAWS AND REGULATIONS.

NOTE .

THIS COMPANY RESERVES THE RIGHT TO MODIFY THIS DRAWING ACCORDING TO THE TECHNICAL DEVELOPMENT OF THE FOLIPMENT

This equipment has been designed for use in accordance with the International EMC(Electromagnetic Compatibility) Standards. In view of different environments, please follow the instructions given below to eliminate interference, if necessary.

- Move the equipment or rotate its direction;
- Enlarge the space between the equipment and other machines;
- Put the plug into other outlets;
- Please consult with the local distributor or qualified electrician

Installation:

- It will require at least two (2) or more people to carry the sterilizer to avoid dropping it off by mistake.
- While installation; please make sure that the bearing capacity of installation table is enough to carry the sterilizer. For the weight information of the sterilizer, please refer to "Specifications".
- 3. Located position the sterilizer on a stable bench or work surface.
- 4. Position the sterilizer on a stable laboratory bench or work surface, ensuring at least 10 cm clearance between the wall or other pieces of equipment and the sides of the unit for free circulation of air.
- 5. Make sure that the door can be opened freely after installation.
- 6. Do not install or operate the sterilizer in areas where flammable items or volatile substances are used or stored. An explosion could occur, causing personal injury. An installation site with good air circulation is required.
- 7. A separate (dedicated) socket is required for the sterilizer. Make sure the socket is earthed and can offer the capacity of

ENVIRONMENT CONDITIONS IN THE STERILE AREA

- Indoor use:
- Under 1,000m (altitude);
- Temperature 5°C to 40°C;
- Relative Humidity 80%RH@31°C to Relative Humidity 50%RH@40°C
- Voltage fluctuation ±10 %:
- Transient overvoltages category II):
- (Pollution degree 2)

Important Safety Instructions:

- Connect the external water supplier to the water inlet with presure greather than 2 bar.
- 2. Refer to the table for the requirements of water quality.
- Connect the drainage pipe to exhaust the used water according to the local authority's law.
- 4. Do not obstruct the drainage system.
- 5. Consult technicians for the correct connections.

ATTENTION:

- CHAMBER DIMENSIONS: (A)
- DEVICE OUTSIDE DIMENSIONS: (B)
- ALL THE OUTLETS MUST BE INSTALLED ACCORDING TO LOCAL APPLICABLE NORMS
- THE INSTALLATION UP TO THE MACHINE AS WELL AS THE SUPPLY OF ACCESSIBLE KEY ACCORDING TO THE SPECIFICATIONS INDICATED IN THE DRAWING, ARE CHARGEABLE TO THE PURCHASERS.
- THE MEASUREMENTS OF THIS DRAWING ARE CONSIDERING FINISHED WALLS.
- THE SPACES OF MAINTENANCE MUST BE SUFFICIENTLY ILLUMINATED.

	3	SA-252N	ø260x450	540	450	630	(7.9A/230V/1800W)		
	2	SA-232N	Ø230x410	501	406	537	(6.1A/230V/1400W)		
	1	SA-202N	ø200x310	501	406	537	(6.1A/230V/1400W)		
ITEM		MODEL	CHAMBER DIMENSIONS (A)	X DEVICE OUT	Y SIDE DIMENS	Z SIONS (B)	(C)		

MARK	REVISION RECORD變更內容	DATE日期	DRAWN修改
\bigwedge			

∧ NOTE

Table: Suggested maximum limits of contaminants in and specification


for water for steam sterilization

feed water


Installer Qualifications: The install personnel having proper

qualification and holding technical documentation (including
Technician Manual) and adequate information are authorized to install


the apparatus.

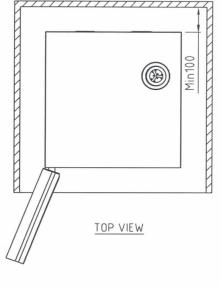

Min100

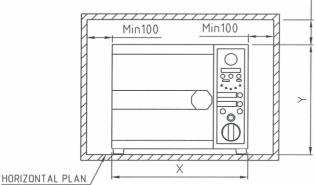

Evaporate residue $\leq 10 \text{ mg/L}$ Silicium oxide Sion ≤ 1 ma/l Iron ≤0.2 ma/l ≤0.005 mg/l Cadmium ≤0.05 mg/L Lead ≤0.1 ma/l Rest of heavy metals excluding iron. cadmium lead ≤2 mg/l Chloride Phosphate ≤0.5 mg/l ≤15 *μ* s/cm Conductivity(at20°C) 5 to 7.5 pH value colourless clean Appearance without sediment ≤0.02mmol/l Hardness NOTE The use of water for steam generation with contaminants at levels exceeding those given in this Table can greatly shorten the working life of a sterilizer and can invalidate the manufactacure's warranty of guarantee.

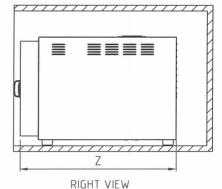



FRONT VIEW

文管中心

JUN.NR.7018

STURDY 新駿實業股份有限公司 STURDY INDUSTRIAL CO., LTD.

																_
	TOLERANCE 1 135		J.	40 1	¥ +	1 135 -	- > 107	12 3	4 D1 ##	4 4 01	DESIGNED)	DRAWN	VERIFIED	APPROVED	
	木標	未標註者一般公差表			未標示之圓角為R1導角為C1			設計・		繪圖:	校核:	核准: *				
										4 H 1754 .	101 121	120 12/21				
	0~10 ±0.1	101	51^	~100+	0.20	201~	500 + 0	30	ANGI	F +1°	Jo	oe .	Jenny	1/20101010	1/2 drs 12	L
	0 .0 =0.		· ·	.00=	0.20	20.	000=0				-			11/10/11	000	7
	11 50 10	15	101	200	1005	FO1 '	/ 1/	7.7.	VIEWPOIN'	1	0047		00474005	- 5011	1 1000	•
	11~50 ±0.	12	101	~200:	£0.25	201~	X ±(視角	W U	2017	1205	20171205	2010.6.6	do 18.6.6	
	MATERIAL			SCALE UNIT			NAME OF ALL ANDROAL DATAS					_				
	材質						mm	MAME 女 SA-N INSTALLATION PLAN								
				17 12				圖 名 Dir it TitoTitaBiriTott TBirit					_			
	SURFACE FINISHING				MODEL NO.				DWG.NO. SA-N-HE-001-01							
	表面處理				代表機種				圖 號 SA-N-HE-UUI-UI							
1、四处王					11/1/1/12/12					1-4 1/10					_	