
An embedded system is a microprocessor or microcontroller-based, software-driven, reliable, real-time control system. A system is an arrangement in which all its units work together according to a set of rules. All its sub-components depend on each other.

Components: Hardware, Software, Real-time OS (RTOS) supervising the application software.

Types of RTOS are Hard and Soft. Missing deadlines causes failure in hard, while it causes degraded performance in soft real-time OS.

Characteristics:

- Single functioned: Performs a specified and repeated operation.
- Tightly constrained: Design metrics are a measure of an implementation's features such as its cost, size, power, and performance.
- Reactive and real-time: It must continually react to changes in the system's environment and compute specific results without delay.
- Microprocessor or microcontroller based.
- Memory: It must have memory, as its software usually embeds in ROM. No need for secondary memories in the computer.
- Peripherals: They must be connected to input and output devices.
- Software and Hardware: For more features and flexibility. For performance and security.

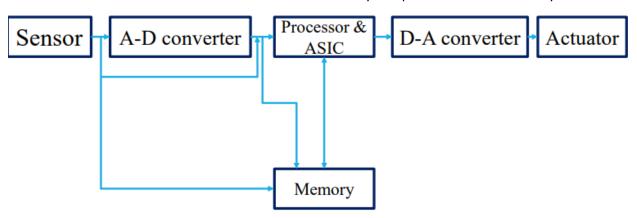

Sensor – It measures a physical quantity and converts it to an electrical signal which can be read by an A-D converter. It stores the measured quantity to the memory.

A-D Converter – Analog to Digital converter converts analog signal sent by sensor into digital signal.


Processor & ASIC (Application Specific Integrated Circuit) – Processes data to measure and store output to memory. D-A Converter – Converts digital data fed by the processor to analog data.

Actuator – Compares the output given by D-A converter to the expected output and stores it.

Auxiliary system provides additional help and support.

Hardware evolved which resulted in faster clock rate and higher degree of integration.

The fastest being System on Chip ← Application specific processors ← Digital Signal Processor ← General purpose microprocessor / microcontroller.

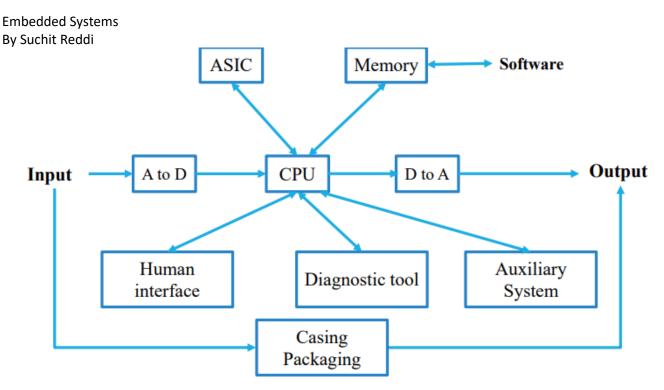

Expectations:

- Program must be logically and temporally (delay) correct.
- Must deal with inherent physical concurrency. It should be a reactive system.
- Reliability and fault-tolerance are critical issues.
- Application specific and single purpose.

Some of the challenges faced are unfixed hardware requirements, meeting deadlines, and minimizing power.

Design goals are performance, functionality and UI, manufacturing cost, power consumption, size etc.

Development lifecycle is Requirements, Specifications, Architecture, Component design, System integration.

Microprocessor

An integrated circuit (IC) that incorporates core functions of a computer's central processing unit (CPU).

It's a programmable multipurpose silicon chip, clock driven, register based, accepts binary data as input and provides output after processing it as per the instructions stored in the memory. It contains an ALU, Control Unit and a Register Array.

Common terms

Bus: A set of conductors intended to transmit data, address or control information to different elements in a microprocessor. Data bus, Control bus, and Address buses are three types of buses.

Instruction set: A group of commands (Assembly) that a microprocessor can understand.

Word length: The number of bits a processor can process simultaneously.

Cache memory: A random access memory integrated into the processor.

By Suchit Reddi

Clock speed (Hertz): The speed at which a microprocessor executes instructions. The microprocessor uses a clock signal to control the rate at which instructions are executed, synchronize other internal components, and control the data transfer between them.

Advantages

Low cost, High speed, Small size, Low power consumption, Less heat generation, Portable, Versatile (used for no.of applications), Reliable (low failure rate).

History

1st Generation. 4-bit microprocessor 4004. Range -8 to +7. Range is 2 ^ (word size - 1).

2nd Generation. 8-bit microprocessor 8080. Range -128 to +127.

3rd Generation. 16-bit microprocessor 8086. Range -32,768 to +32,767.

4th Generation. 32-bit microprocessor 80386. Range $\pm 2 \times 10^9$.

5th Generation. 64-bit microprocessor.

Different types of microprocessors

CISC - Complex Instruction Set Computer

RISC - Reduced Instruction Set Computer

Special microprocessors:

ASIC – Application Specific Integrated Circuits

Superscalar Processor

DSP - Digital Signal Processor

Coprocessors

Transputer (Transistor Computer)

Input/Output Processor

CISC

- Complex Instruction Set Computer.
- Minimizes the no. of instructions per program, ignoring the no. of cycles per instruction.
- The emphasis is on building complex instructions directly into the hardware.
- The length of the code is relatively short, so the compiler's work to translate the high-level language to assembly-level/machine code is little. So, minimal RAM is required to store instructions.
- Examples are IBM 370/168, VAX 11/780, and Intel 80486.

Characteristics:

- Large no. of short and complex instructions.
- Variable length of instruction formats.
- Several cycles may be required to execute one instruction.
- Instruction-decoding logic is complex.
- Variety of addressing modes.
- One instruction should support multiple addressing modes.

RISC

• Reduced Instruction Set Computer.

By Suchit Reddi

- Reduces execution time by simplifying the instruction set. Each instruction requires only one clock cycle to
 execute results in uniform execution time.
- There are more lines of code, so more RAM is needed to store them, reducing the efficiency.
- Compiler has to work more to convert high-level language instructions to machine code.
- Examples are Power PC: 601, 604, 615, 620; DEC Alpha; PA-RISC: HP 7100LC, MIPS: TS (R10000).

Characteristics:

- Large number of long and simple instructions.
- One cycle execution time.
- Supports various data-type formats.
- Simple addressing modes and fixed length of instructions for pipelining.
- Supports register to use in any context.
- Consists of larger no. of registers, less no. of transistors.
- "LOAD" and "STORE" instructions are used to access the memory location.

Special Processors

ASIC: An Application-specific integrated circuit, is a microchip designed for a special application.

Superscalar: A CPU that implements a form of parallelism called instruction-level parallelism within a single processor.

- Can execute more than one instruction during a clock cycle by simultaneously dispatching multiple instructions to different execution units on the processor.
- Each execution unit is not a separate processor or a core if it's a multi-core processor. It is an execution resource within a single CPU such as an ALU.

DSP: Specially designed to process analog signals to a digital form.

- Samples the voltage level at regular time intervals and converts voltage at that instant into a digital form.
- This process is performed by a circuit called an analogue to digital converter, i.e AD converter.
- Its applications are audio and video compression, graphics acceleration, video signal processing.

Coprocessor: Used to supplement the functions of th primary processor (CPU).

- By offloading main processor from intensive tasks, they accelerate system performance.
- Operations performed are arithmetic, graphics, signal processing, cryptography, I/O interfacing.
- Allows a line of computers to be customized, so that customers who don't need the extra performance don't need to pay for it.


Transputer (Transistor Computer): Has own local memory and links to have inter-processor communications between other transputers.

- First designed in 1980 by nmos and targeted to the utilization of VLSI technology.
- Can be used as a single processor system or can be connected to external links, which reduces the construction cost and increases the performance.

I/O processor: Local memory. Controls I/O devices with minimum CPU involvement. Ex: Keyboard, DMA.

8085 Microprocessor

Intel 8085 is 8-bit processor, introduced in 1976. Address bus is of 16-bit wide. Data bus and ALU are of 8-bit. Requires 5V. Has 40 pins. Has 80 instructions. Operates with 3MHz up to 5MHz.

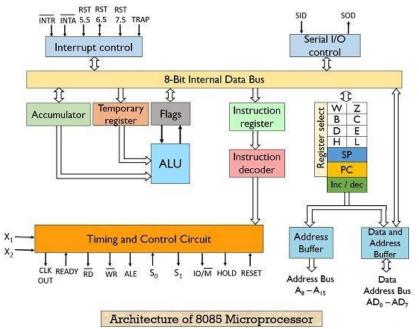

The processors ALU performs data processing.

In addition to arithmetic and logic circuits, it includes the accumulator, which is a part of every AL operation. The accumulator stores 8-bit data, result of an operation, 8-bit data during I/O transfer.

It also includes two temporary registers (ACT and TMP) used for holding data temporarily during the execution of the operation. These can't be accessed by the programmer.

Timing and control unit provides signals to the processor to perform operations. Some of them are: Control signals: READY, RD, WR, ALE; Status Signals: IO/M, S0, S1; DMA Signals: HOLD, HLDA; RESET Signals: RESET IN, RESET OUT.

- READY: Senses whether a peripheral is ready to transfer data or not. If READY is high (1) the peripheral is ready. If it's low (0) the processor waits till it goes high. Useful for interfacing low speed devices.
- RD: Controls the READ operation. When low, memory or I/O device in the selected location is read.
- WR: Controls the WRITE operation. When low, data on the data bus is written into the selected location.
- ALE: Address Latch Enable signal. If its value is 1, it goes high during the first T state of a machine cycle and enables the lower 8 bits of the address. Otherwise, data bus is activated.

IO/M'	S1	SO	Data Bus Status				
0	1	1	Opcode fetch				
0	1	0	Memory read				
0	0	1	Memory write				
1	1	0	I/O read				
1	0	1	I/O write				
1	1	1	Interrupt acknowledge				
0	0	0	Halt 5				

By Suchit Reddi

- IO/M: Determines whether the address is for I/O or memory. When 1, address bus is for I/O. When 0, it's for memory.
- S0, S1: Status signals to distinguish various types of operations such as halt, reading, instruction fetching or writing.
- HOLD: It indicates that another device is requesting the use of the address and data bus. If a HOLD request is
 received, the processor relinquishes the use of the buses as soon as the current machine cycle is completed.
 Internal processing may continue. After the signal is removed, the processor regains the bus.
- HLDA: This signal indicates that the hold request has been received. HLDA is set to low after the removal of HOLD signal.
- RESET IN: When the signal is low, the program-counter is set to zero. The buses are tristate, and the microprocessor unit is reset.
- RESET OUT: This indicates that the MPU is being reset. It is used to reset other devices.

General purpose registers

- B, C, D, E, H and L (8-bit registers) and W, Z are temporary 8-bit registers.
 - They can be used as single registers or paired as 16-bit registers (BC, DE, HL and WZ).
 - HL can be used as data pointer (holds memory address).

Special Registers

Program counter

A 16-bit register used to store the memory address location of the next instruction to be executed. Microprocessor increments the program counter whenever an instruction is being executed, so that the program counter points to the memory address of the next instruction that is going to be executed.

Stack pointer

A 16-bit register works like stack, which is incremented/decremented by 2 during push & pop operations.

Program status word (Flag register (lower byte))

Flag register: 8-bit register having five 1-bit flip-flops, that holds either 0/1 depending on result stored in accumulator. The 5 flip-flops are: Sign (S), Zero(Z), Auxiliary Carry (AC), Parity (P), and Carry (C).

Sign flag: This flag is set when MSB (Most Significant Bit) of the result is 1. Negative binary numbers are represented in the 8085 CPU in standard two's complement notation, S indicates the sign of the result.

- 1 MSB is 1 (negative)
- 0 MSB is 0 (positive)

Zero flag: This flag is set when the result of operation is zero, else it is reset.

- 1 zero result
- 0 non-zero result

Auxiliary carry flag: This flag is set whenever there has been a carry out of lower nibble into higher nibble or a borrow from higher nibble into lower nibble of an 8-bit quantity, else AC is reset. Used by decimal arithmetic instructions.

- 1 carry out from bit 3 on addition or borrow into bit 3 on subtraction
- 0 otherwise

Parity flag: This flag is set whenever the result has even parity, an even number of 1 bit. If parity is odd, P is cleared.

Carry flag: This flag is set whenever there has been a carry out of, or a borrow into, the higher order bit of the result.

Embedded Systems By Suchit Reddi

Instruction register and decoder

An 8-bit register which stores the instruction fetched from the memory. Instruction decoder decodes information present in the Instruction register.

Serial I/O control

It controls serial data communication using these two instructions: SID (Serial input data) and SOD (Serial output data).

Address bus and data bus

Data bus carries the data to be stored. Its bidirectional, whereas address bus carries the location to where it should be stored and its unidirectional. It is used to transfer the data and address I/O devices.

Interrupts in 8085

Interrupts are signals generated by the external devices to request the microprocessor to perform a task. There are 5 interrupt signals in 8085: INTR, RST 7.5, RST 6.5, RST 5.5, TRAP.

Vector interrupt: Interrupt address is known to processor. Ex: TRAP, RST 7.5, RST 6.5, RST 5.5.

Non-vector interrupt: Interrupt address is not known to processor. So, the interrupt address needs to be sent externally by the device to perform interrupt. Ex: INTR.

Maskable interrupt: Can disable this interrupt by writing some instructions into the program. Ex: RST 7.5, 6.5, 5.5; INTR.

Non-maskable interrupt: Cannot disable this interrupt. Ex: TRAP.

Hardware interrupt: There are 5 interrupt pins in 8085 used as hardware interrupts. Ex: TRAP, INTR, RST 5.5, 6.5, 7.5.

Interrupt	Type	Instructions	Trigger	Vector
TRAP	Non-maskable	Independent of EI and DI	Level & Edge sensitive	0024 H
RST7.5	Maskable	Controlled by EI and DI	Positive edge sensitive	003C H
RST6.5	Maskable	Controlled by EI and DI	Level sensitive	0034 H
RST5.5	Maskable	Controlled by EI and DI	Level sensitive	002C H
INTR	maskable	Controlled by EI and DI	Level sensetive	0038 H

Software interrupt: Programmer must add instructions to execute this interrupt. There are 8 software interrupts in 8085.

Ex: RST0, 1, 2, 3, 4, 5, 6, 7.

Software Interrupt		RST1	RST2	RST3	RST4	RST5	RST6	RST7
Vector	0000 H	0008 H	0010 H	0018 H	0020 H	0028 H	0030 H	0038 H

Interrupt Service Routine (ISR): A small program/routine, when executed, services corresponding interrupting source.

Interrupt control

As the name suggests it controls the interrupts during a process. When a processor is executing a main program and whenever an interrupt occurs, the processor shifts the control from the main program to process the incoming request. After the request is completed, the control goes back to the main program.

The signals of 8085 can be **classified** into six groups: Address bus, Data bus, Control and status signals, Power supply and frequency signals, Externally initiated signals, Serial I/O ports.

Microprocessor operations

It performs three types of functions:

1. Microprocessor-initiated operations

Embedded Systems By Suchit Reddi

- 2. Internal operations
- 3. Peripheral operations

Microprocessor-initiated operations

- Memory read
- Memory write
- I/O read
- I/O write

Internal operations

- Store 8-bit data
- Performs arithmetic and logical operations
- Tet for conditions
- Sequence the execution of instructions
- Store data temporarily during execution in the defined R/W memory locations

Peripheral operations

- Reset
- Interrupt
- Ready
- Hold

Machine Language

The number of bits that form the "word" of a microprocessor is fixed for that particular microprocessor. These bits define a maximum number of combinations. For example, an 8-bit microprocessor can have at most $2^8 = 256$ different combinations. However not all these combinations are used. Certain patterns are chosen and assigned specific meanings. Specific patterns form an instruction for the microprocessor. The complete set of patterns makes up the microprocessor's machine language.

The 8085 uses a total of 246-bit patterns to form its instruction set. These 246 patterns represent only 80 instructions. The vast difference is because of the multiple different formats of most instructions. We can't use the bit patterns correctly, so hexadecimal is used instead of binary to make things easier.

Example: 0011 1100 is 3C in hexadecimal (OPCODE), which translates to "increment the number in accumulator".

But a program written in hexadecimal is difficult to understand. So, each company defines a symbolic code called "mnemonics" for these instructions. These mnemonics are usually a group of letters suggesting the operation performed by an instruction. Ex: INR is a mnemonic assigned for Increment. Machine language and the assembly language associated with it are completely **machine dependent**.

Translating assembly language into machine language can be done in two ways. First one is called "hand assembly" where the programmer translates each assembly language instruction into its equivalent hex code (machine language), which is then entered into the memory. The second one is using a program called "assembler", which does this translation automatically.

8085 Instructions

Each instruction has two parts. The first part is the operation to be performed, which is called the "opcode" (operation code). The second part is the data to be operated on, which is called the "operand".