EXPERIMENT 10: CUSTOMIZED SWITCH WITH MODULE

AIM:

To study a modular switch and configure VLANs and access ports using the CLI in a network simulator.

PROCEDURE:

1. Open Cisco Packet Tracer and place a supported modular switch in the workspace.

2. If the selected device supports modules, power it off before inserting a compatible module, then power it on again.

3. Connect PCs to the switch ports and assign IP addresses to the PCs.

4. Use the CLI to create a VLAN and assign the required switch ports to it.

5. Verify VLAN and port membership using show commands.

6. Module availability and interface names depend on the selected Packet Tracer device model.


7. Check the switch model's supported module list before selecting a module.
8. Ensure that the selected ports and connected PCs belong to the intended VLAN.
9. Assign host IP addresses in a compatible subnet when testing communication within a VLAN.
10. Compare the VLAN membership before and after the configuration.


CODE:

```
Switch> enable
Switch# configure terminal
Switch(config)# vlan 10
Switch(config-vlan)# name STUDENTS
Switch(config-vlan)# exit
Switch(config)# interface fastEthernet 0/1
Switch(config-if)# switchport mode access
Switch(config-if)# switchport access vlan 10
```

```
Switch(config-if)# no shutdown
Switch(config-if)# exit
Switch(config)# end
Switch# show vlan brief
Switch# show interfaces status
```

OUTPUT:

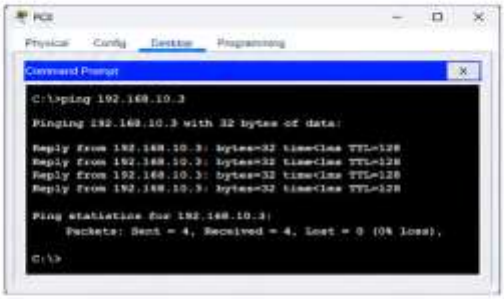

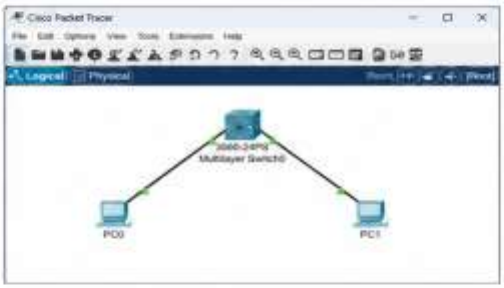

RESULT:

Thus, a supported switch module was studied and VLAN/port configuration was performed using the switch CLI.