


CSC 411

Computer Organization (Spring 2022) Lecture 7: Representing instructions

Prof. Marco Alvarez, University of Rhode Island

Disclaimer

Some of the following slides are adapted from:
Computer Organization and Design (Patterson and Hennessy)
The Hardware/Software Interface

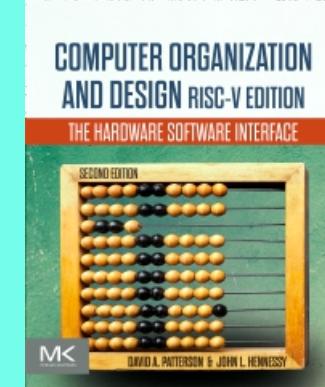

RISC-V operands				
Name	Example	Comments		
32 registers	x0-x31	Fast locations for data. In RISC-V, data must be in registers to perform arithmetic. Register x0 always equals 0.		
2 ³⁰ memory words	Memory[0], Memory[4], ..., Memory[4,294,967,292]	Accessed only by data transfer instructions. RISC-V uses byte addresses, so sequential word accesses differ by 4. Memory holds data structures, arrays, and spilled registers.		

RISC-V assembly language				
Category	Instruction	Example	Meaning	Comments
Arithmetic	Add	add x5, x6, x7	$x5 = x6 + x7$	Three register operands; add
	Subtract	sub x5, x6, x7	$x5 = x6 - x7$	Three register operands; subtract
	Add immediate	addi x5, x6, 20	$x5 = x6 + 20$	Used to add constants
Data transfer	Load word	lw x5, 40(x6)	$x5 = \text{Memory}[x6 + 40]$	Word from memory to register
	Load word, unsigned	lwu x5, 40(x6)	$x5 = \text{Memory}[x6 + 40]$	Unsigned word from memory to register
	Store word	sw x5, 40(x6)	$\text{Memory}[x6 + 40] = x5$	Word from register to memory
	Load halfword	lh x5, 40(x6)	$x5 = \text{Memory}[x6 + 40]$	Halfword from memory to register
	Load halfword, unsigned	lhu x5, 40(x6)	$x5 = \text{Memory}[x6 + 40]$	Unsigned halfword from memory to register
	Store halfword	sh x5, 40(x6)	$\text{Memory}[x6 + 40] = x5$	Halfword from register to memory
	Load byte	lb x5, 40(x6)	$x5 = \text{Memory}[x6 + 40]$	Byte from memory to register
	Load byte, unsigned	lbu x5, 40(x6)	$x5 = \text{Memory}[x6 + 40]$	Byte unsigned from memory to register
	Store byte	sb x5, 40(x6)	$\text{Memory}[x6 + 40] = x5$	Byte from register to memory
	Load reserved	lr.d x5, (x6)	$x5 = \text{Memory}[x6]$	Load; 1st half of atomic swap
	Store conditional	sc.d x7, x5, (x6)	$\text{Memory}[x6] = x5; x7 = 0/1$	Store; 2nd half of atomic swap
	Load upper immediate	lui x5, 0x12345000	$x5 = 0x12345000$	Loads 20-bit constant shifted left 12 bits
Logical	And	and x5, x6, x7	$x5 = x6 \& x7$	Three reg. operands; bit-by-bit AND
	Inclusive or	or x5, x6, x8	$x5 = x6 x8$	Three reg. operands; bit-by-bit OR
	Exclusive or	xor x5, x6, x9	$x5 = x6 \wedge x9$	Three reg. operands; bit-by-bit XOR
	And immediate	andi x5, x6, 20	$x5 = x6 \& 20$	Bit-by-bit AND reg. with constant
	Inclusive or immediate	ori x5, x6, 20	$x5 = x6 20$	Bit-by-bit OR reg. with constant
	Exclusive or immediate	xori x5, x6, 20	$x5 = x6 \wedge 20$	Bit-by-bit XOR reg. with constant
Shift	Shift left logical immediate	sll x5, x6, x7	$x5 = x6 \ll x7$	Shift left by register
	Shift right logical	srl x5, x6, x7	$x5 = x6 \gg x7$	Shift right by register
	Shift right arithmetic	sra x5, x6, x7	$x5 = x6 \gg> x7$	Arithmetic shift right by register
	Shift left logical immediate	slli x5, x6, 3	$x5 = x6 \ll 3$	Shift left by immediate
	Shift right logical immediate	srli x5, x6, 3	$x5 = x6 \gg 3$	Shift right by immediate
	Shift right arithmetic immediate	srai x5, x6, 3	$x5 = x6 \gg> 3$	Arithmetic shift right by immediate

Representing instructions

Representing instructions

- Instructions are encoded in binary
 - called machine code
- RISC-V instructions
 - encoded as 32-bit instruction words
 - small number of formats encoding operation code (opcode), register numbers, ...
 - regularity !

RISC-V R-format instructions

- Instruction fields
 - opcode: operation code
 - rd: destination register number
 - funct3: 3-bit function code (additional opcode)
 - rs1: first source register number
 - rs2: second source register number
 - funct7: 7-bit function code (additional opcode)

funct7	rs2	rs1	funct3	rd	opcode
7 bits	5 bits	5 bits	3 bits	5 bits	7 bits

Example

funct7	rs2	rs1	funct3	rd	opcode
7 bits	5 bits	5 bits	3 bits	5 bits	7 bits

add x9, x20, x21

0	21	20	0	9	51
---	----	----	---	---	----

0000000	10101	10100	000	01001	0110011
---------	-------	-------	-----	-------	---------

00000001010110100000010010110011₂ = 015A04B3₁₆

RISC-V I-format instructions

- Immediate arithmetic and load instructions
 - rs1: source or base address register number
 - immediate: constant operand, or offset added to base address
 - two's complement, sign extended
- Different formats complicate decoding, but allow 32-bit instructions uniformly
 - keep formats as similar as possible

immediate	rs1	funct3	rd	opcode
12 bits	5 bits	3 bits	5 bits	7 bits

Stored computer programs

- Instructions represented in binary, just like data
 - instructions and data stored in memory
- Binary compatibility allows compiled programs to work on different computers
 - standardized ISAs

Memory layout

▪ Stack/Heap (**stack pointer**)


- space for the run-time stack (local procedures)
- dynamically allocated data

▪ Globals (**global pointer**)

- global variables

▪ Text (**program counter**)

- instructions

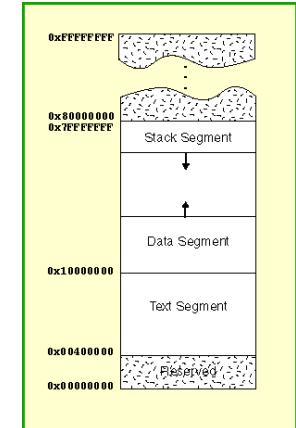

https://chortle.ccsu.edu/AssemblyTutorial/Chapter-10/ass10_3.html