

ACARS provider connection

Hopple, BeyondATC or SayIntentions as the ACARS network of the aircraft: found whenever you start it, followed when you close it, and your settings kept

Aircraft	A32NX and A380X (the shared datalink of both aircraft)
Where to find it	flyPad > Settings > ATSU / AOC : ACARS Provider
PR branch	pr/29-datalink-acars-activation
Status	Tested with BeyondATC in the sim on 2026-09-29 (started late, closed and started again).
Pictures	flyPad page in the local browser harness, running the build installed in the sim.

1. What it is for

The ATC and company datalink of the aircraft (CPDLC logon, requests, messages, ATIS and METAR) goes through an ACARS provider you choose on the flyPad: Hopple, BeyondATC or SayIntentions. The aircraft must find it, then connect your flight number to it.

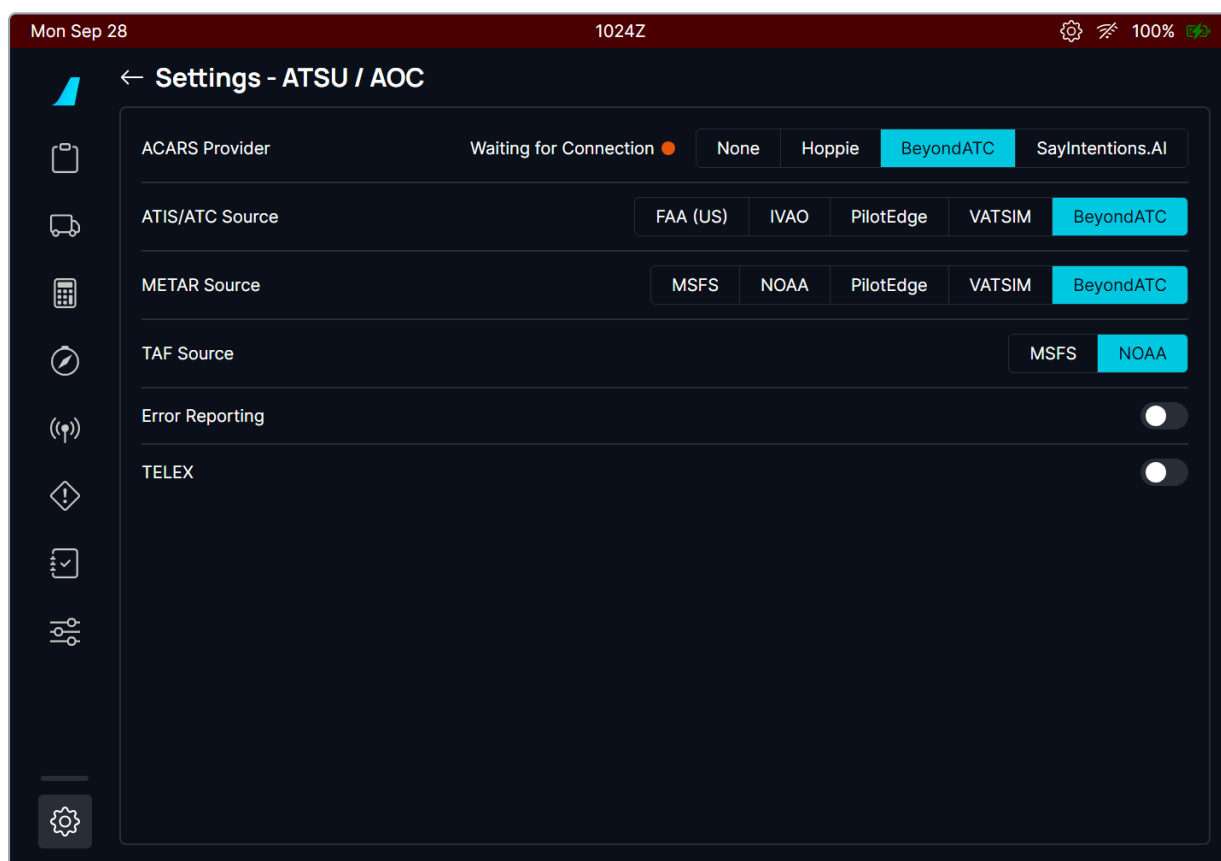


Figure 1. ACARS Provider: BeyondATC, "Waiting for Connection" until BeyondATC answers (then "Connected", green).

2. What happens now

- **Start the provider when you like.** The aircraft looks for it every 5 s for 5 minutes, then once a minute, without end. Your provider, ATIS and METAR settings are never changed.
- **Flight number.** Entered before the provider answers, it is connected as soon as it answers.
- **Provider closed.** Within about a minute the status goes back to "Waiting for Connection"; start it again and the aircraft connects your flight number again by itself. With BeyondATC, log on to the ATC center again (it forgets the logon when it closes).

- **TELEX on.** If FBW's TELEX service refuses your flight number, the ACARS provider is connected anyway (on the A380X, the FMS shows FMS DATALINK NOT AVAIL for the TELEX failure).

3. What to expect

- No extra traffic with Hoppie: once your flight number is connected, the regular polls (every 45 to 75 s) check the provider.
- Before this change, a provider started more than 5 minutes after the aircraft set the flyPad to NONE: select your provider again once if it shows NONE.