

TCAS in TA ONLY: intruders shown as TAs

While resolution advisories are inhibited, an intruder that would be an RA is shown and announced as a traffic advisory; the TA ONLY message is centred on the A32NX ND as in the FCOM

Aircraft	A32NX and A380X
Where to find it	ND traffic display; TCAS mode on the A32NX TCAS panel / A380X SURV CONTROLS
PR branch	pr/07-tcas-ta-only-intruder-level (independent)
Status	Tested in the sim (September 2026).
Pictures	Captain NDs in the local browser harness, running the builds installed in the sim; the symbol legend is a drawing (the harness has no traffic).

1. What it is for

With every RA inhibited (TA ONLY selected, or below 1000 ft radio altitude), the TCAS kept classifying an intruder that met the RA criteria as an RA. The ND drew it as a red RA square, and since it was not a TA, there was no "TRAFFIC, TRAFFIC" and no TA state. A real TCAS in TA ONLY shows it as an amber TA with the TA aural. The classification is now capped at TA while all RAs are inhibited.



Figure 1. The ND traffic symbols: other, proximate, TA, RA, with the relative altitude in hundreds of feet and the vertical trend arrow.
Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.

2. What you see



Figure 2. A32NX: TA ONLY, centred at the bottom of the ND (A320 FCOM DSC-34-SURV-60-20 figure).

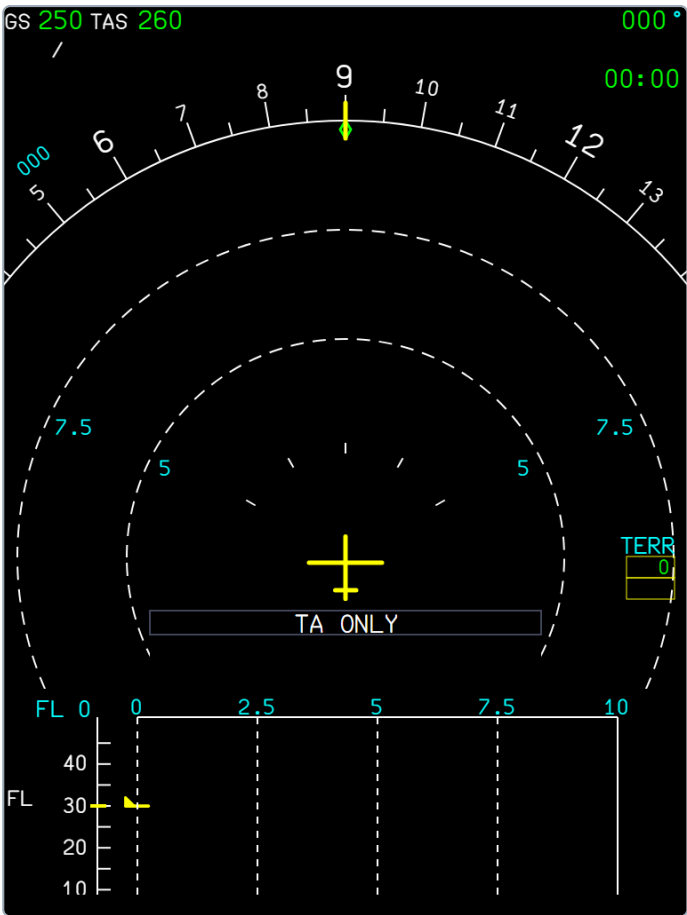


Figure 3. A380X: TA ONLY in the message box.

Situation	What you should see
TA ONLY selected, intruder meeting the RA criteria	Amber TA circle and "TRAFFIC, TRAFFIC" (before: red RA square, no aural).
Below 1000 ft radio altitude (all RAs inhibited)	Same: TAs only, TA ONLY on the ND.
Partial inhibits (no CLIMB / DESCEND / INCREASE DESCENT RA)	Unchanged: RAs are still issued.
An RA already running when the inhibit starts	It runs to its own end.

3. Limitations and why

Limitation	Why	What to do
Same change on both aircraft.	The A32NX TcasComputer and the A380X LegacyTcasComputer share the classification code.	-