



# UART TASK PROGRAM

## Oscilloscope Waveform


A= 0x41 (0100 0001)

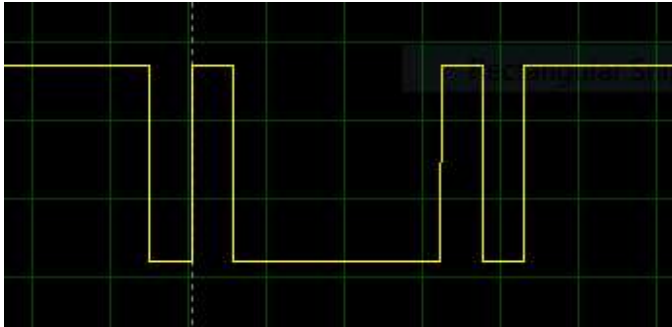


B=0x42(0100 0010)

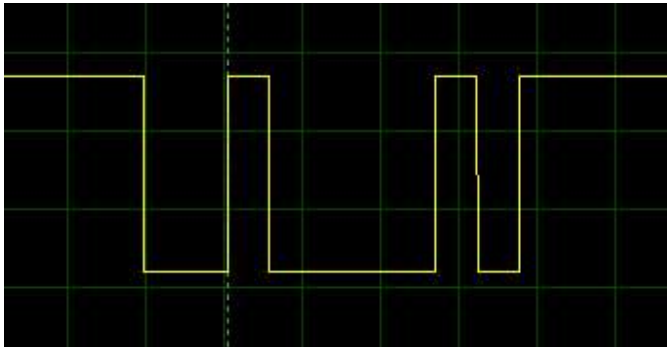


C=0x43(0100 0011)

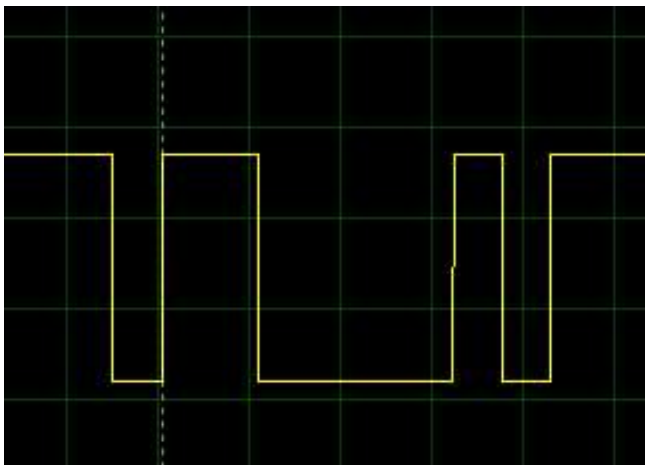


D=0x44(0100 0100)

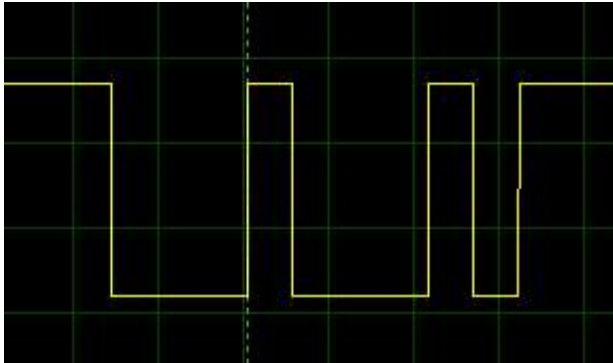


a=0x61(0110 0001)

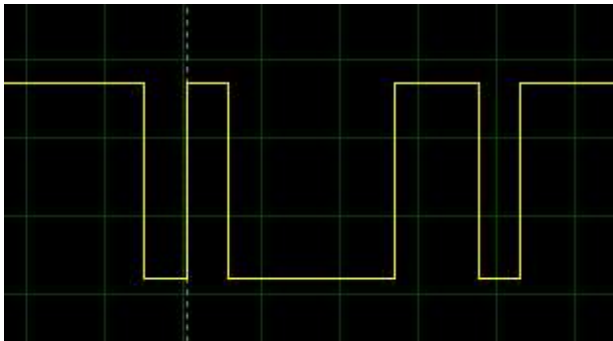

B=0x62(0110 0010)

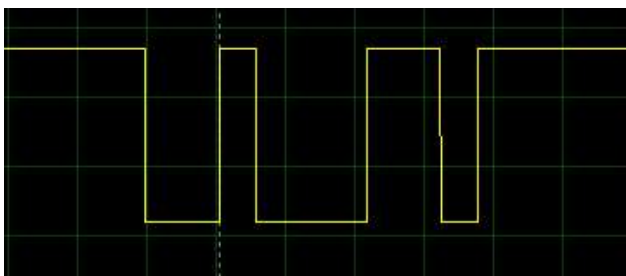

C=0x63(0110 0011)

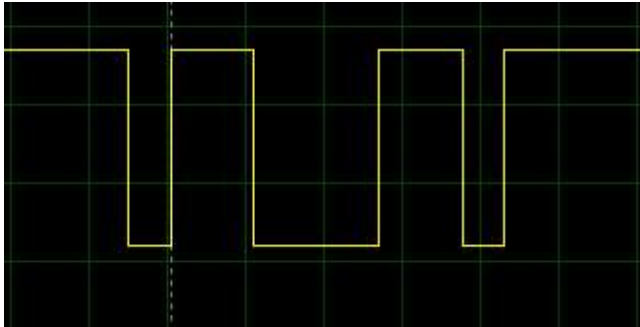

D=0x64(0110 0100)

