

Oscilloscope

- Oscilloscope คืออะไร ทำอะไรได้บ้าง
- Oscilloscope layout
- Oscilloscope
- Oscilloscope probe
- Coupling
- Probe Calibration
- Display reading
- Timebase
- Auto setup
- Auto reading
- Storage function



Oscilloscope คืออะไร

• คือเครื่องมือสำหรับวัดสัญญาณไฟฟ้าที่มีการเปลี่ยนแปลงอย่างรวดเร็ว มาก โดยทำการวาดหรือลากเส้น (plot) กราฟของสัญญาณที่สนใจ บนจอ (ซึ่งโดยปกติจะไม่สามารถมองเห็นสัญญาณไฟฟ้าเหล่านั้นได้) และรูปคลื่นหรือสัญญาณไฟฟ้าที่วัดได้จะเทียบกับเวลา โดยสัญญาณที่ ต้องการจะวัดนั้นอาจเกิดขึ้นครั้งเดียว เกิดขึ้นในลักษณะซ้ำเดิม หรือ เปลี่ยนแปลงไปอย่างไม่แน่นอน




Oscilloscope

- Oscilloscope Tutorial Part 1/3 What is an oscilloscope? http://www.youtube.com/watch?v=qIfo -d82Co
- Oscilloscope Tutorial Part 2 Basic usage
 http://www.youtube.com/watch?v=hUIgAu3QQWQ
- Oscilloscope Tutorial Part 3 Advanced functions
 http://www.youtube.com/watch?v=g KuGEhoPyA




Oscilloscope Layout

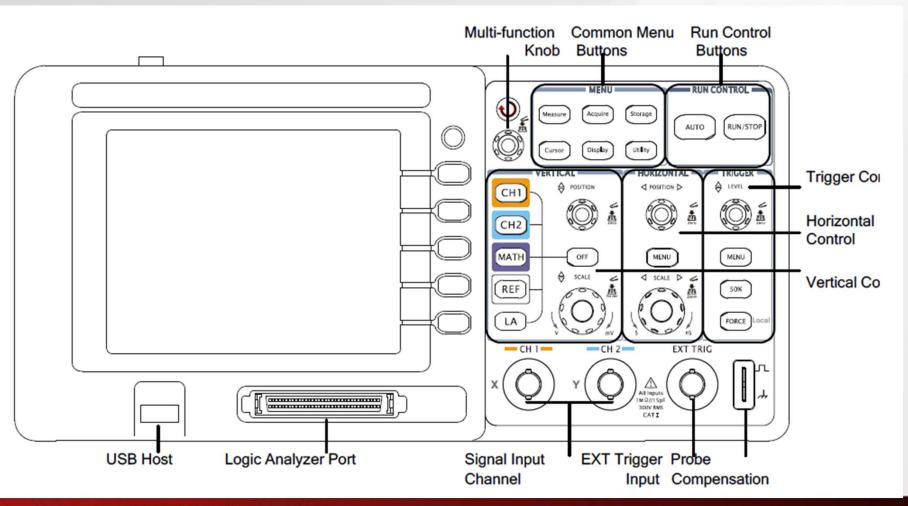





Oscilloscope Display

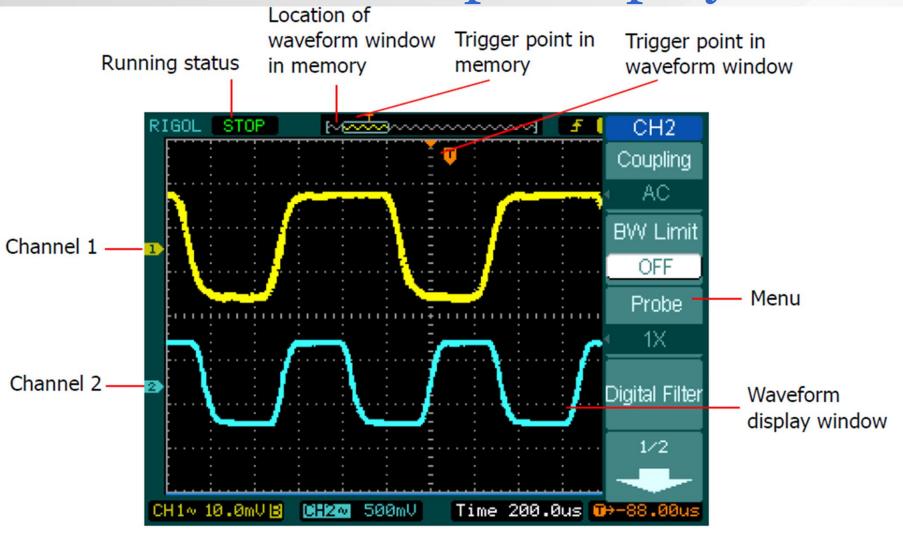





Probe setting

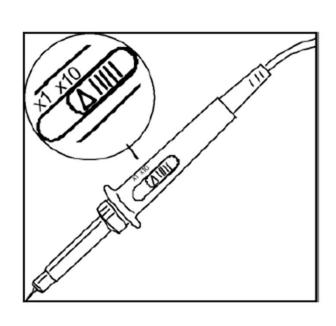

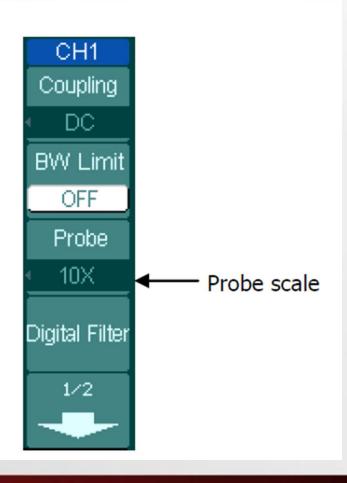


Probe Calibration

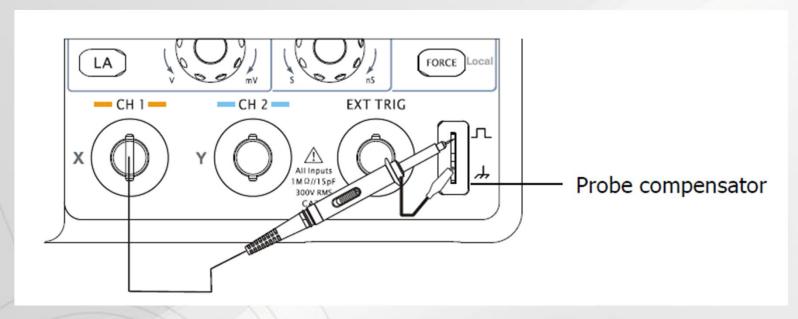

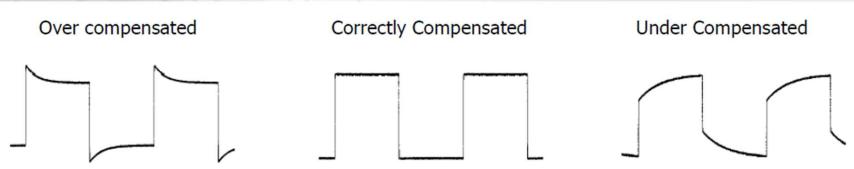




Vertical System

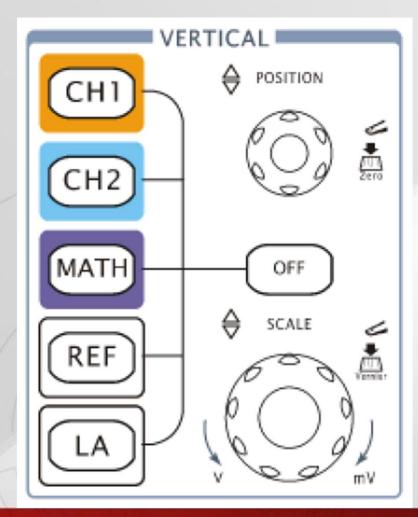


Horizontal System

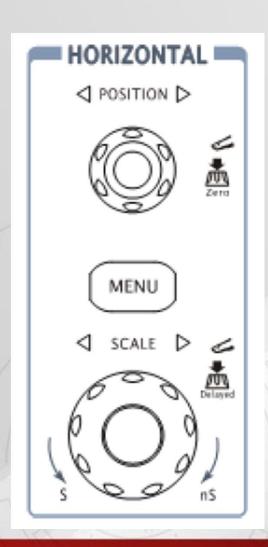



Trigger

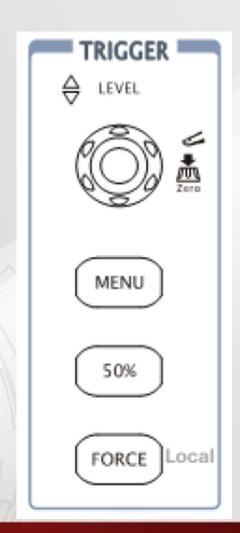





Setting up the channel



| Settings | Comments |
|----------|---|
| AC | Blocks the DC component of the |
| | input Signal |
| DC | Passes both AC and DC |
| | components of the input signal |
| GND | Disconnects the input signal |
| ON | Limits the channel bandwidth to |
| | 20MHz to reduce display noise. |
| OFF | Get full bandwidth. |
| 1X | |
| 5X | |
| 10X | Set this to match your probe |
| 50X | attenuation factor to make the |
| 100X | vertical scale readout correct |
| 500X | |
| 1000X | |
| | Setup digital filter (See table 2-4) |
| 4/0 | Go to the next menu page (The |
| 1/2 | followings are the same, no more explanation) |
| | AC DC GND ON OFF 1X 5X 10X 50X 100X 500X |




Setting up the channel



| Menu | Settings | Comments |
|-----------|----------------|---|
| - | 2/2 | Back to the previous menu page (The followings are the same, no more explanation) |
| Volts/Div | Coarse Fine | Selects the resolution of the SCALE knob Defines a 1-2-5 sequence. To change the resolution to small steps between the coarse settings. |
| Invert | ON OFF | Turn on the invert function. Restore original display of the waveform. |




AC Coupling

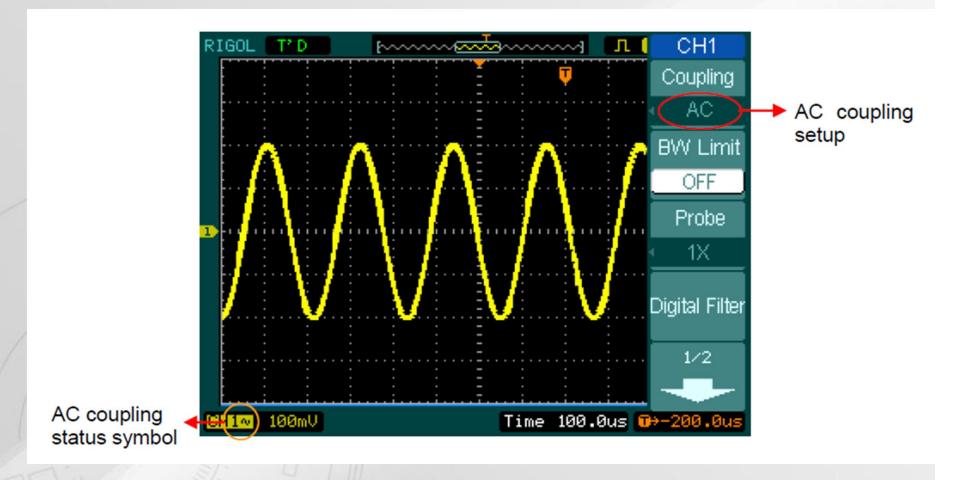




DC Coupling

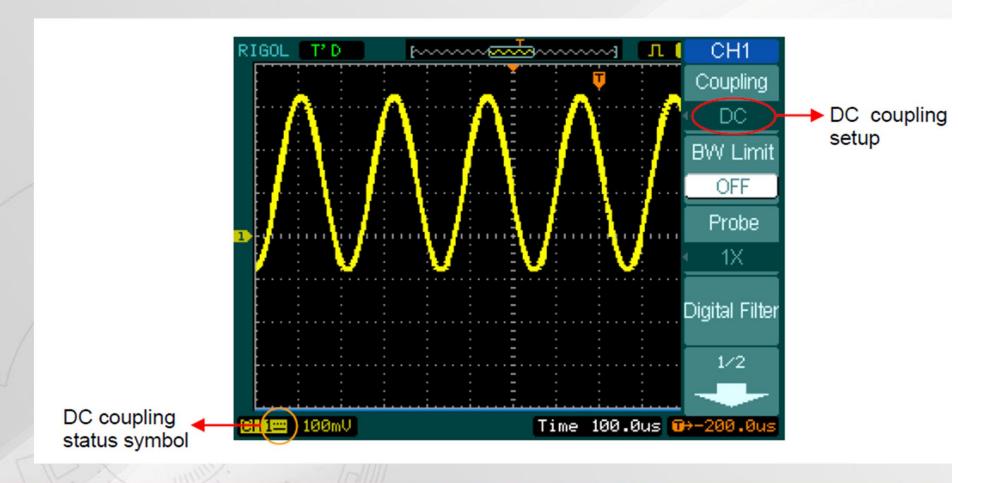




Ground Coupling

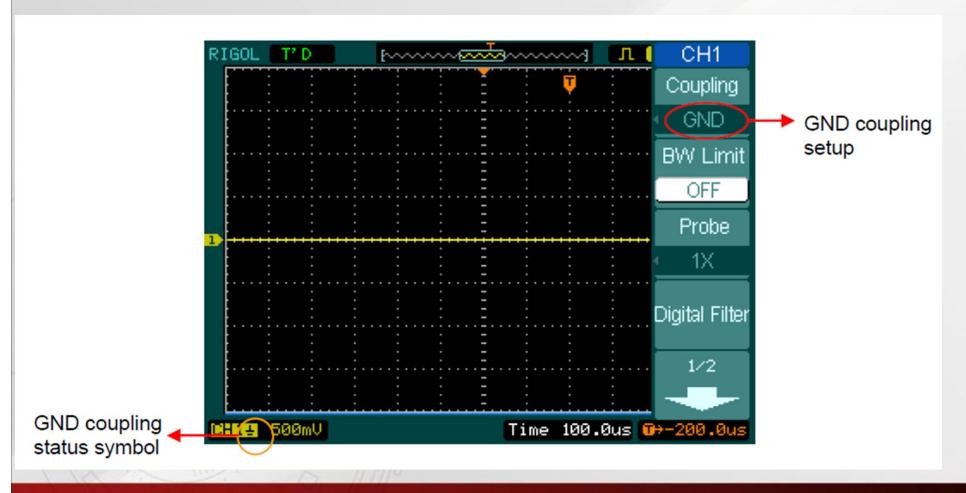




Bandwidth Limit

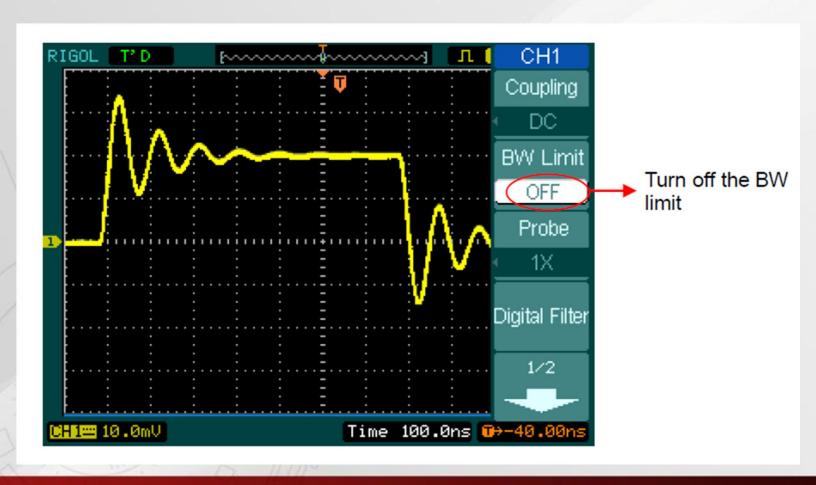




Probe Attenuation

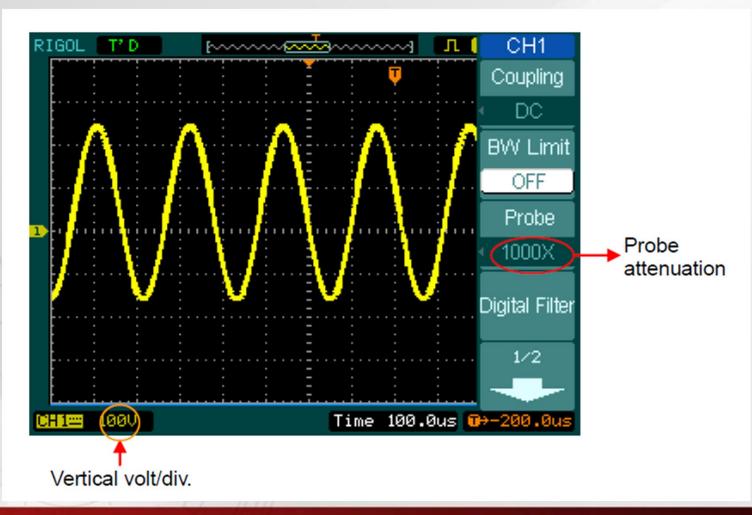




Vertical fine adjustment

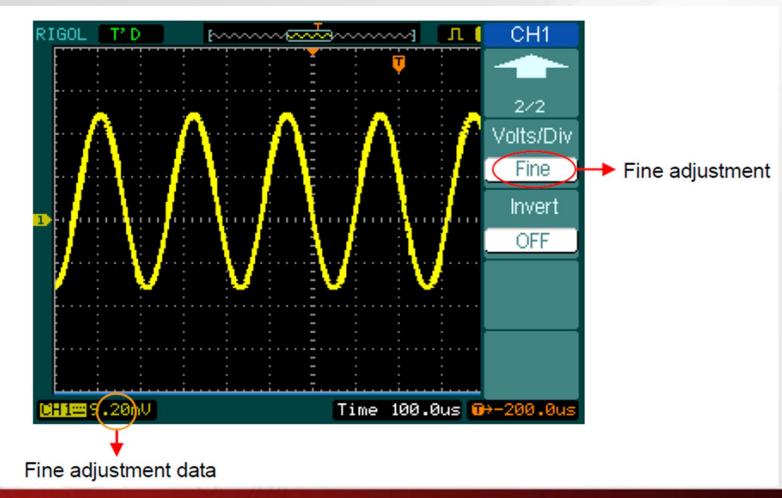




Invert function

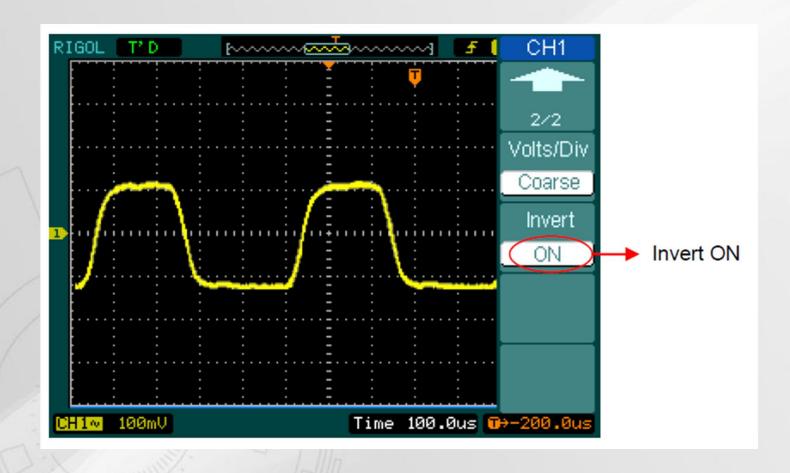



Math function

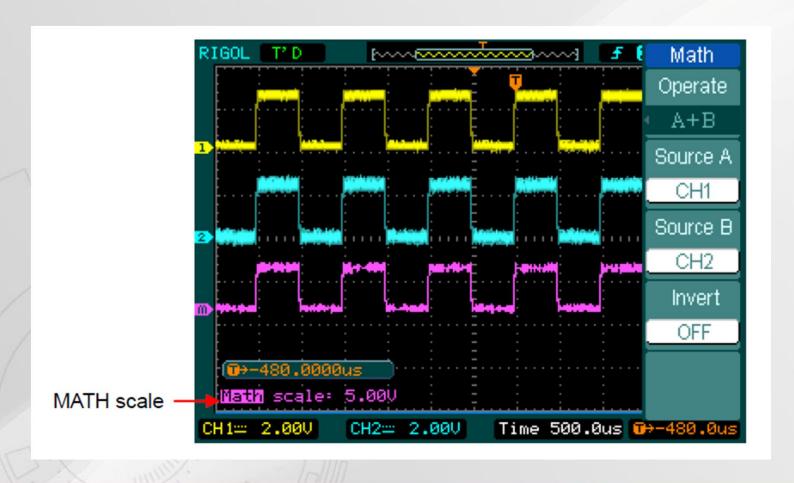




Math function




| Menu | Settings | Comments |
|-----------|----------|---------------------------------------|
| | A+B | Add source A and source B |
| Operation | A-B | Subtract source B from source A |
| Operation | A×B | Multiply source B by source A |
| | FFT | Fast Fourier Transform |
| Caa A | CH1 | Define CH1 or CH2 as source A |
| Source A | CH2 | Define Chi of Ch2 as source A |
| Source B | CH1 | Define CH1 or CH2 as source B |
| Source b | CH2 | Define Chi of Ch2 as source b |
| Invert | ON | Invert the MATH waveform. |
| Invert | OFF | Restore to original waveform display. |




Horizontal

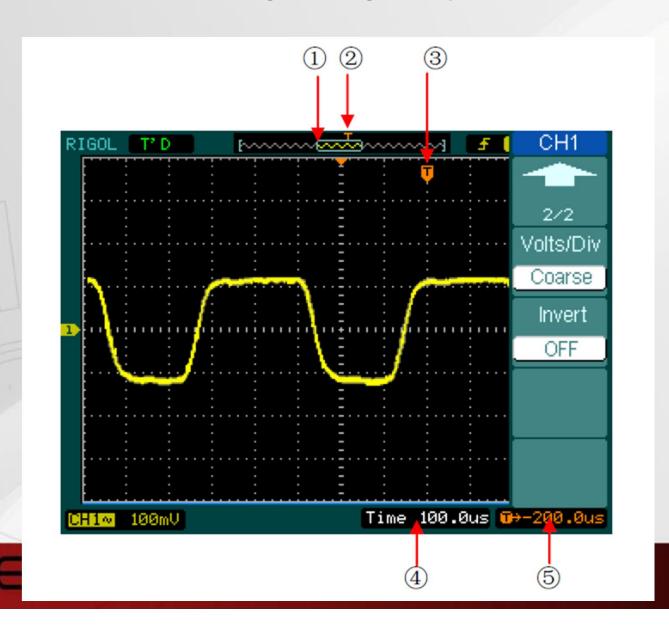

Delay scan

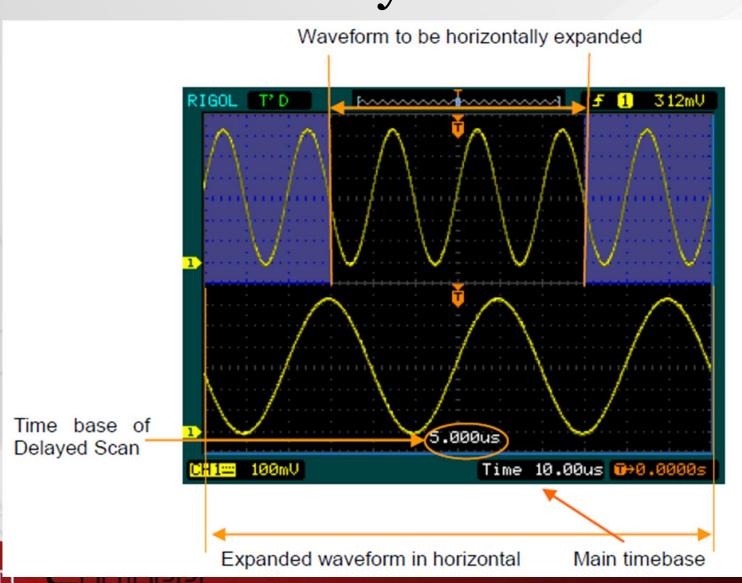

Automatic measurement

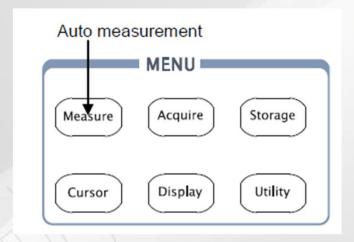

Voltage measurement

Figure 2- 111



Table 2- 73 The Voltage Measurements menu (Page 1/3)

| Menu | Settings | Comments | |
|------|----------|---|--|
| Vmax | | Measure maximum voltage of a waveform | |
| Vmin | | Measure minimum voltage of a waveform | |
| Vpp | | Measure Peak-to-Peak Voltage | |
| Vtop | | Measure a flat top voltage of a square waveform | |

Voltage measurement

Figure 2- 112

Vbase

I TUTL

Vamp

Yavg

I VV

Table 2- 74 The Voltage Measurements menu (Page 2/3)

| Menu | Settings | Comments | | |
|-------|----------|--|--|--|
| Vbase | | Measure a flat base voltage of a square waveform | | |
| Vamp | | Measure voltage between Vtop and Vbase | | |
| Vavg | | Measure average voltage of a waveform | | |
| Vrms | | Measure Root Mean Square Voltage of a waveform | | |

Voltage measurement

Figure 2- 113




Table 2- 75 The Voltage Measurements menu (Page 3/3)

| Menu | Settings | Comments |
|------------|----------|-----------------------------------|
| Overshoot | | Measure overshoot in percentage |
| Oversiloot | | of an edge |
| Preshoot | | Measure preshoot in percentage of |
| FIESHOOL | | an edge |

Time measurement

Figure 2- 114





| Menu | Settings | Comments |
|-----------|----------|-------------------------------------|
| Period | | Measure Period of a waveform |
| Freq | | Measure Frequency of a waveform |
| Rise time | | Measure Rise Time of a rising edge |
| Fall time | | Measure Fall Time of a falling edge |

Time measurement




Figure 2- 115 Table 2- 77 The Time Measurements menu (Page 2/3)

| Menu | Settings | Comments |
|--------|----------|--------------------------------------|
| +Width | | Measure +Pulse Width of a pulse wave |
| -Width | | Measure –Pulse Width of a pulse wave |
| +Duty | | Measure +Duty Cycle of a pulse wave |
| -Duty | | Measure –Duty Cycle of a pulse wave |

Time measurement


Figure 2- 116




Table 2- 78 The Time Measurements menu (Page 3/3)


| Menu | Settings | Comments |
|-----------------------|----------|-----------------------------------|
| Delay1→2 f | | Measure the signals delay between |
| | | two channels at the rising edge |
| Delay1→2₹ | | Measure the signals delay between |
| | | two channels at the falling edge |

Voltage parameters

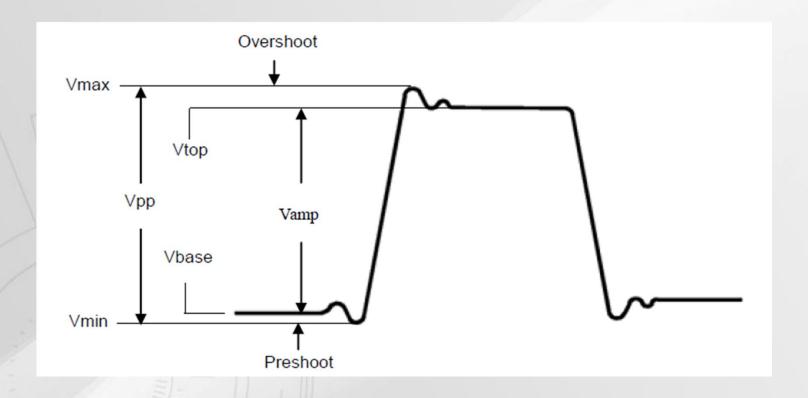

Time parameters

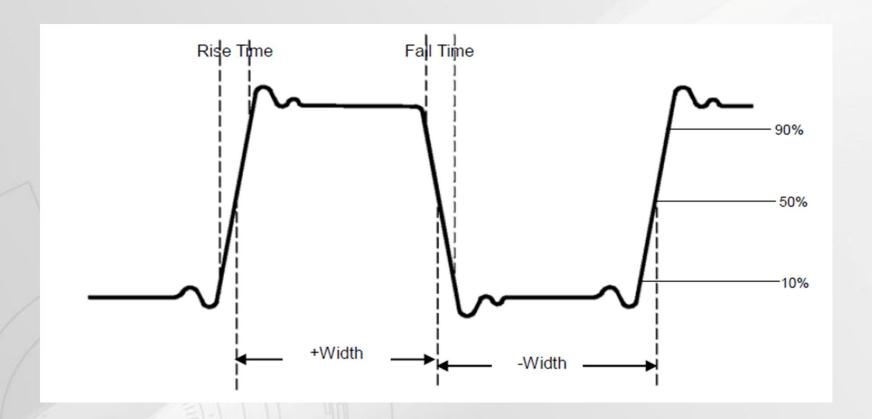

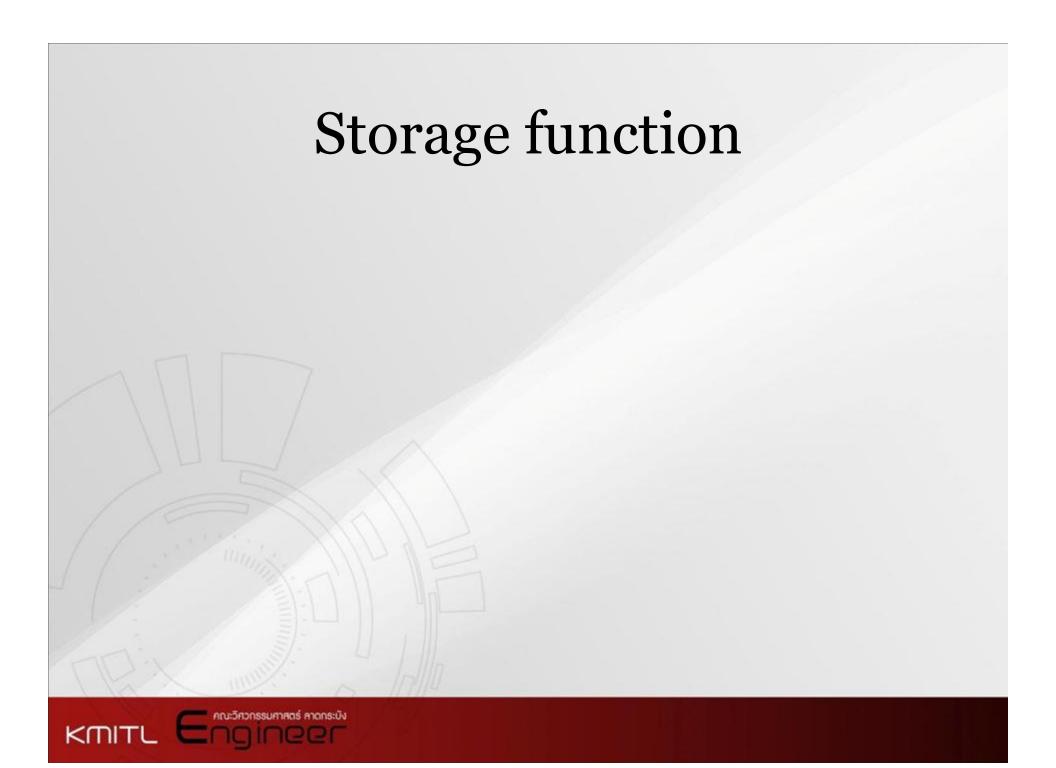











Time parameters

