

### Chapter 6


#### Digital Design and Computer Architecture, 2<sup>nd</sup> Edition

David Money Harris and Sarah L. Harris



## Chapter 6 :: Topics

- Introduction
- Assembly Language
- Machine Language
- Programming
- Addressing Modes
- Lights, Camera, Action: Compiling,
   Assembling, & Loading
- Odds and Ends

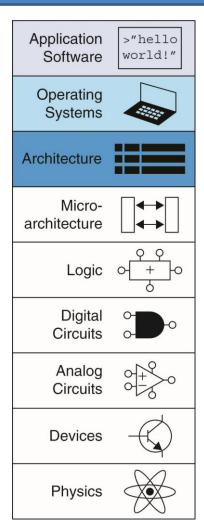



### Introduction

- Jumping up a few levels of abstraction
- Architecture: (Chapter 6)
   programmer's view of
   computer
  - Defined by instructions & operand locations
- Microarchitecture: how to implement an architecture in hardware (covered in Chapter 7)

Application Software	programs
Operating Systems	device drivers
Architecture	instructions registers
Micro- architecture	datapaths controllers
Logic	adders memories
Digital Circuits	AND gates NOT gates
Analog Circuits	amplifiers filters
Devices	transistors diodes
Physics	electrons

# Assembly Language

- Instructions: commands in a computer's language
  - Assembly language: human-readable format of instructions
  - Machine language: computer-readable format (1's and 0's)
- MIPS architecture:
  - Developed by John Hennessy and his colleagues at Stanford and in the 1980's.
  - Used in many commercial systems, including Silicon Graphics, Nintendo, and Cisco

Once you've learned one architecture, it's easy to learn others



## John Hennessy

- President of Stanford University
- Professor of Electrical Engineering and Computer Science at Stanford since 1977
- Co-invented the Reduced Instruction Set Computer (RISC) with David Patterson
- Developed the MIPS architecture at Stanford in 1984 and cofounded MIPS Computer Systems
- As of 2004, over 300 million MIPS microprocessors had been sold







## Architecture Design Principles

Underlying design principles, as articulated by Hennessy and Patterson:

- 1. Simplicity favors regularity
- 2. Make the common case fast
- 3.Smaller is faster
- 4.Good design demands good compromises



### Instructions: Addition

```
C Code a = b + c;
```

MIPS assembly code

add a, b, c

- add: mnemonic indicates the operation to perform
- b, c: source operands (on which the operation is performed)
- a: destination operand (to which the result is written)



### Instructions: Subtraction

• Similar to addition - only mnemonic changes

#### C Code

$$a = b - c;$$

MIPS assembly code

sub a, b, c

- **sub:** mnemonic
- **b**, **c**: source operands
- a: destination operand





# Design Principle 1

### Simplicity favors regularity

- Consistent instruction format
- Same number of operands (two sources and one destination)
- easier to encode and handle in hardware



## Multiple Instructions

 More complex code is handled by multiple MIPS instructions.

$$C Code$$
 $a = b + c - d;$ 

#### MIPS assembly code

```
add t, b, c \# t = b + c sub a, t, d \# a = t - d
```



# Design Principle 2

#### Make the common case fast

- MIPS includes only simple, commonly used instructions
- Hardware to decode and execute instructions can be simple, small, and fast
- More complex instructions (that are less common) are performed using multiple simple instructions
- MIPS is a reduced instruction set computer (RISC), with a small number of simple instructions
- Other architectures, such as Intel's x86, are complex instruction set computers (CISC)





### Operands

- Operand location: physical location in computer
  - Register operands
  - Memory operands
  - Immediate operands (located in the instruction itself (used for constants)





## Operands: Registers

- MIPS has 32 32-bit registers
- Registers are faster than memory
- MIPS called "32-bit architecture" because it operates on 32-bit data





## Design Principle 3

#### **Smaller is Faster**

- MIPS includes only a small number of registers
- MIPS includes only a small number of instructions (reduced instruction set)



# MIPS Register Set

Name	Register Number	Usage
\$0	0	the constant value 0
\$at	1	assembler temporary
\$v0-\$v1	2-3	Function return values
\$a0-\$a3	4-7	Function arguments
\$t0-\$t7	8-15	temporaries
\$s0-\$s7	16-23	saved variables
\$t8-\$t9	24-25	more temporaries
\$k0-\$k1	26-27	OS temporaries
\$gp	28	global pointer
\$sp	29	stack pointer
\$fp	30	frame pointer
\$ra	31	Function return address



## Operands: Registers

- Registers:
  - \$ before name
  - Example: \$0, "register zero", "dollar zero"
- Registers used for specific purposes:
  - \$0 always holds the constant value 0.
  - the *saved registers*, \$s0-\$s7, used to hold variables
  - the *temporary registers*, \$t0 \$t9, used to hold intermediate values during a larger computation
  - Discuss others later



## Instructions with Registers

Revisit add instruction

#### C Code

$$a = b + c$$

#### MIPS assembly code

$$# $s0 = a, $s1 = b, $s2 = c$$
 add \$s0, \$s1, \$s2





## Operands: Memory

- Too much data to fit in only 32 registers
- Store more data in memory
- Memory is large, but slow
- Commonly used variables kept in registers

(Example of principle #2: Make the common case fast)



# Word-Addressable Memory

Each 32-bit data word has a unique address

Word Address				Da	ta				
•				•					
•				•					
•				•					•
0000003	4	0	F	3	0	7	8	8	Word 3
0000002	0	1	Ε	Ε	2	8	4	2	Word 2
0000001	F	2	F	1	A	С	0	7	Word 1
0000000	Α	В	С	D	Ē	F	7	8	Word 0



### Reading Word-Addressable Memory

- Memory read called *load*
- **Mnemonic:** *load word* (lw)
- Format:

```
lw $s0, 5($t1)
```

- Address calculation:
  - add base address (\$t1) to the offset (5)
  - address = (\$t1 + 5)
- Result:
  - \$s0 holds the value at address (\$t1 + 5)

Any register may be used as base address



### Reading Word-Addressable Memory

- **Example:** read a word of data at memory address 1 into \$s3
  - address = (\$0 + 1) = 1
  - -\$s3 = 0xF2F1AC07 after load

#### **Assembly code**

lw \$s3, 1(\$0) # read memory word 1 into \$s3

Word Address		Data							
•					•				
•				•					
•									•
0000003	4	0	F	3	0	7	8	8	Word 3
0000002	0	1	Е	Ε	2	8	4	2	Word 2
0000001	F	2	F	1	Α	С	0	7	Word 1
00000000	Α	В	С	D	Ε	F	7	8	Word 0



## Writing Word-Addressable Memory

- Memory write are called *store*
- Mnemonic: store word (SW)



### Writing Word-Addressable Memory

**Example:** Write (store) the value in \$\pm 4\$ into memory address 7

- add the base address (\$0) to the offset (0x7)
- address: (\$0 + 0x7) = 7

Offset can be written in decimal (default) or hexadecimal

#### **Assembly code**





## Byte-Addressable Memory

Each data byte has unique address

Load/store words or single bytes: load byte (1b) and store byte (sb)

32-bit word = 4 bytes, so word address increments by 4

Word Address									
•	 			•					
•	!   			•					
•	 			•					
000000C	4	0	F	3	0	7	8	8	Word 3
8000000	0	1	Ε	Ε	2	8	4	2	Word 2
0000004	F	2	F	1	Α	С	0	7	Word 1
0000000	Α	В	С	D	Е	F	7	8	Word 0
<b>←</b>									
		Wi	dth						



## Reading Byte-Addressable Memory

- The address of a memory word must now be multiplied by 4. For example,
  - the address of memory word 2 is  $2 \times 4 = 8$
  - the address of memory word 10 is  $10 \times 4 = 40$  (0x28)
- MIPS is byte-addressed, not word-addressed





## Reading Byte-Addressable Memory

**Example:** Load a word of data at memory address 4 into \$53.

\$s3 holds the value 0xF2F1AC07 after load

#### MIPS assembly code

lw \$s3, 4(\$0) # read word at address 4 into \$s3

Word Address									
•	 			•					
•	l I			•					
•	<u> </u>			,	•				•
000000C	4	0	F	3	0	7	8	8	Word 3
8000000	0	1	Ε	Е	2	8	4	2	Word 2
0000004	F	2	F	1	Α	С	0	7	Word 1
00000000	Α	В	С	D	Е	F	7	8	Word 0
	<b>←</b>								
		Wi	dth						





### Writing Byte-Addressable Memory

• **Example:** stores the value held in \$t7 into memory address 0x2C (44)

#### MIPS assembly code

```
sw $t7, 44($0) # write $t7 into address 44
```

Word Address									
•	 			•					
•	 			•					
000000C	4	0	F	3	0	7	8	8	Word 3
8000000	0	1	Ε	Е	2	8	4	2	Word 2
0000004	F	2	F	1	Α	С	0	7	Word 1
0000000	Α	В	С	D	Ε	F	7	8	Word 0
	<b>▼</b>	wi	dth						



## Big-Endian & Little-Endian Memory

Little-Endian

How to number bytes within a word?

Big-Endian

- Little-endian: byte numbers start at the little (least significant) end
- **Big-endian:** byte numbers start at the big (most significant) end
- Word address is the same for big- or little-endian

#### 



**MSB** 


**LSB** 

**LSB** 

**MSB** 

## Big-Endian & Little-Endian Memory

- Jonathan Swift's *Gulliver's Travels*: the Little-Endians broke their eggs on the little end of the egg and the Big-Endians broke their eggs on the big end
- It doesn't really matter which addressing type used except when the two systems need to share data!

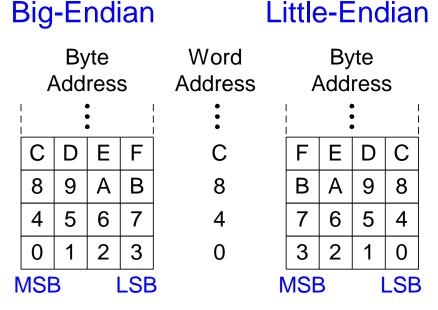



# Big-Endian & Little-Endian Example

- Suppose \$t0 initially contains 0x23456789
- After following code runs on big-endian system, what value is \$50?

```
sw $t0, 0($0)
lb $s0, 1($0)
```

• In a little-endian system, what is \$50?



## Big-Endian & Little-Endian Example

- Suppose \$t0 initially contains 0x23456789
- After following code runs on big-endian system, what value is \$s0?

```
sw $t0, 0($0)
lb $s0, 1($0)
```

- In a little-endian system, what is \$50?
- Big-endian: 0x00000045
- Little-endian: 0x0000067

Big-Endian Little-Endian

					VVord
Byte Address	0	1	2	3	Address
Data Value	23	45	67	89	0
1	VISE	3		LSB	}

	3	2	1	0	Byte Address
	23	45	67	89	Data Value
1	<b>MSE</b>	3		LSE	



# Operands: Constants/Immediates

- lw and sw use constants or *immediates* e.g. sw \$t1, 48(\$0)
- Value is *immediately* available from instruction
- Constant is a 16-bit 2's complement number
- addi: add immediate
- Is subtract immediate (subi) necessary?

#### C Code

$$a = a + 4;$$
  
 $b = a - 12;$ 

#### MIPS assembly code

$$\#$$
 \$s0 = a, \$s1 = b addi \$s0, \$s0, 4 addi \$s1, \$s0, -12



# Design Principle 4

#### Good design demands good compromises

- Number of instruction formats should be minimum
  - to adhere to Design Principles 1 and 3 (simplicity favors regularity, and smaller is faster).
- Multiple instruction formats allow flexibility
  - Constants are very frequent in code (so "make the common case fast", Design Principle #2)
  - add, sub: use 3 register operands
  - lw, sw, addi: use 2 register operands and a constant
- The compromise is to have 3 instruction formats



# Machine Language

- Binary representation of instructions
- Computers only understand 1's and 0's
- 32-bit instructions
  - Simplicity favors regularity: 32-bit data & instructions, all instructions are 32-bits
- 3 instruction formats:
  - R-Type: register operands
  - I-Type: immediate operand
  - J-Type: for jumping (discuss later)



## R-Type

- Register-type
- Uses 3 register operands:
  - rs, rt: source registers
  - rd: destination register
- Other fields:
  - op: the *operation code* or *opcode* (0 for R-type instructions)
  - funct: the *function code*. When op= 0, funct tells the processor which R-type operation to perform
  - shamt: the *shift amount* for shift instructions, otherwise it's 0

#### **R-Type**

op	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits



# R-Type Examples

#### **Assembly Code**

add \$s0, \$s1, \$s2 sub \$t0, \$t3, \$t5

#### Field Values

ор	rs	rt	rd	shamt	funct
0	17	18	16	0	32
0	11	13	8	0	34
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

#### Machine Code

ор	rs	rt	rd	shamt	funct	
000000	10001	10010	10000	00000	100000	(0x02328020)
000000	01011	01101	01000	00000	100010	(0x016D4022)
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits	

**Note** the order of registers in the assembly code:



## I-Type

- Immediate-type
- 3 operands:
  - rs, rt: register operands
  - imm: 16-bit 2's complement immediate
- Other fields:
  - op: the opcode  $(\neq 0)$
  - Simplicity favors regularity: all instructions have opcode
  - Operation is completely determined by opcode

## **I-Type**

op	rs	rt	imm
6 bits	5 bits	5 bits	16 bits

# I-Type Examples

#### **Assembly Code**

## addi \$s0, \$s1, 5 addi \$t0, \$s3, -12 lw \$t2, 32(\$0) sw \$s1, 4(\$t1)

#### Field Values

	ор	rs	rt	imm
	8	17	16	5
1	8	19	8	-12
	35	0	10	32
	43	9	17	4
	6 bits	5 bits	5 bits	16 bits

### Machine Code

machine codes:							
addi	rt,	rs,	imm				
lw	rt,	imm	(rs)				
SW	rt,	imm	(rs)				

**Note** the differing order of

registers in assembly and

ор	rs	rt	imm	
001000	10001	10000	0000 0000 0000 0101	(0x22300005)
001000	10011	01000	1111 1111 1111 0100	(0x2268FFF4)
100011	00000	01010	0000 0000 0010 0000	(0x8C0A0020)
101011	01001	10001	0000 0000 0000 0100	(0xAD310004)
6 bits	5 bits	5 bits	16 bits	

# Machine Language: J-Type

- Jump-type
- 26-bit address operand (addr)
- Used for jump instructions (j: op=2,

```
jal: op=3)
```

if opcode > 3 I type if opcode = 0 R type if opcode = 2 or = 3 J type

# **J-Type**

op	addr
6 bits	26 bits



## Review: Instruction Formats

### **R-Type**

op	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

### **I-Type**

op	rs	rt	imm
6 bits	5 bits	5 bits	16 bits

### **J-Type**

op	addr
6 bits	26 bits





# Power of the Stored Program

- 32-bit instructions & data stored in memory
- Sequence of instructions: only difference between two applications
- To run a new program:
  - No rewiring required
  - Simply store new program in memory
- Program Execution:
  - Processor fetches (reads) instructions from memory in sequence (Von Neumann architecture)
  - Processor performs the specified operation






# The Stored Program

As	ssembl	y Code	)	Machine Code
lw	\$t2,	32 (\$	)	0x8C0A0020
add	\$s0,	\$s1,	\$s2	0x02328020
addi	\$t0,	\$s3,	-12	0x2268FFF4
sub	\$t0,	\$t3,	\$t5	0x016D4022

#### **Stored Program**

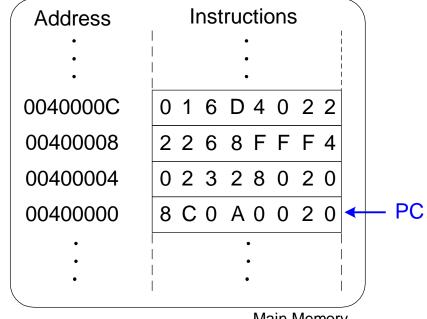


**Program Counter** (PC): keeps track of current instruction



# Interpreting Machine Code

- Start with opcode: tells how to parse rest
- If opcode all 0's
  - R-type instruction
  - Function bits tell operation
- Otherwise
  - opcode tells operation

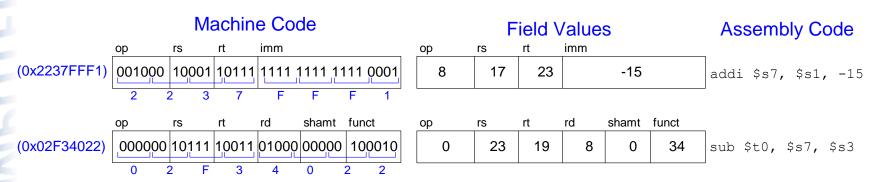





# Programming

- High-level languages:
  - e.g., C, Java, Python
  - Written at higher level of abstraction
- Common high-level software constructs:
  - if/else statements
  - for loops
  - while loops
  - arrays
  - function calls





# Ada Lovelace, 1815-1852

- Wrote the first computer program
- Her program calculated the Bernoulli numbers on Charles Babbage's Analytical Engine
- She was the daughter of the poet Lord Byron







# Logical Instructions

- and, or, xor, nor
  - and: useful for masking bits

F = 11111

- Masking all but the least significant byte of a value: 0xF234012F AND 0x000000FF = 0x0000002F
- or: useful for combining bit fields
  - Combine 0xF2340000 with 0x000012BC: 0xF2340000 OR 0x000012BC = 0xF23412BC
- nor: useful for inverting bits:
  - A NOR \$0 = NOT A
- andi, ori, xori
  - 16-bit immediate is zero-extended (*not* sign-extended)
  - nori not needed



### Source Registers

<b>\$</b> s1	1111	1111	1111	1111	0000	0000	0000	0000
<b>\$e2</b>	0100	0110	1010	0001	1111	0000	1011	<b>∩111</b>

### **Assembly Code**

and	\$s3,	\$s1,	\$s2
or	\$s4,	\$s1,	\$s2
xor	\$s5,	\$s1,	\$s2
nor	\$s6,	\$s1,	\$s2

<b>\$</b> s3				
<b>\$</b> s4				
<b>\$</b> s5				
<b>\$</b> s6				



#### Source Registers

<b>\$</b> s1	1111	1111	1111	1111	0000	0000	0000	0000
\$s2	0100	0110	1010	0001	1111	0000	1011	0111

#### **Assembly Code**

and	\$s3,	\$s1,	\$s2
or	\$s4,	\$s1,	\$s2
xor	\$s5,	\$s1,	\$s2
nor	\$s6,	\$s1,	\$s2

<b>\$</b> s3	0100	0110	1010	0001	0000	0000	0000	0000
<b>\$</b> s4	1111	1111	1111	1111	1111	0000	1011	0111
<b>\$</b> s5	1011	1001	0101	1110	1111	0000	1011	0111
<b>\$</b> s6	0000	0000	0000	0000	0000	1111	0100	1000




#### **Source Values**

<b>\$</b> s1	0000	0000	0000	0000	0000	0000	1111	1111
imm	0000	0000	0000	0000	1111	1010	0011	0100
	<b>▼</b>	zero-ex	ktended		•			

#### **Assembly Code**

andi \$s2, \$s1, 0xFA34 \$s2 ori \$s3, \$s1, 0xFA34 \$s3 xori \$s4, \$s1, 0xFA34 \$s4

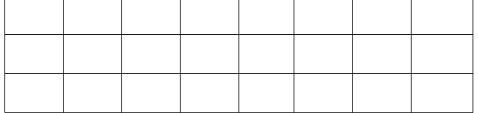



#### **Source Values**

<b>\$</b> s1	0000	0000	0000	0000	0000	0000	1111	1111
imm	0000	0000	0000	0000	1111	1010	0011	0100
	$\blacksquare$	zero-ex	ctended		•			

#### **Assembly Code**

andi	\$s2,	\$s1,	0xFA34	<b>\$</b> s2
ori	\$s3,	\$s1,	0xFA34	<b>\$</b> s3
xori	Ss4.	\$s1.	0×FA34	\$s4

2	0000	0000	0000	0000	0000	0000	0011	0100
3	0000	0000	0000	0000	1111	1010	1111	1111
ļ	0000	0000	0000	0000	1111	1010	1100	1011



## Shift Instructions

- sll: shift left logical
  - Example: sll \$t0, \$t1, 5 # \$t0 <= \$t1 << 5</pre>
- srl: shift right logical
  - Example: srl \$t0, \$t1, 5 # \$t0 <= \$t1 >> 5
- sra: shift right arithmetic
  - Example: sra \$t0, \$t1, 5 # \$t0 <= \$t1 >>> 5



## Variable Shift Instructions

- sllv: shift left logical variable
  - Example: sllv \$t0, \$t1, \$t2 # \$t0 <= \$t1 << \$t2</pre>
- srlv: shift right logical variable
  - Example: srlv \$t0, \$t1, \$t2 # \$t0 <= \$t1 >> \$t2
- srav: shift right arithmetic variable
  - Example: srav \$t0, \$t1, \$t2 # \$t0 <= \$t1 >>> \$t2



## Shift Instructions

### **Assembly Code**

### Field Values

				op	rs	rt	rd	shamt	funct
sll	\$t0,	\$s1,	2	0	0	17	8	2	0
srl	\$s2,	\$s1,	2	0	0	17	18	2	2
sra	\$s3,	\$s1,	2	0	0	17	19	2	3
				6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

### Machine Code

ор	rs	rt	rd	shamt	funct	
000000	00000	10001	01000	00010	000000	(0x00114080)
000000	00000	10001	10010	00010	000010	(0x00119082)
000000	00000	10001	10011	00010	000011	(0x00119883)
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits	



# **Generating Constants**

Make 16-bit constants using addi:

#### C Code

```
// int is a 32-bit signed word int a = 0x4f3c;
```

#### MIPS assembly code

```
# $s0 = a addi $s0, $0, 0x4f3c
```

• Make 32-bit constants using load upper immediate (lui) and ori:

#### C Code

```
int a = 0xFEDC8765;
```



# Multiplication, Division

- Special registers: 10, hi
- 32 × 32 multiplication, 64 bit result
  - mult \$s0, \$s1
  - Result in {hi, lo}
- 32-bit division, 32-bit quotient, remainder
  - div \$s0, \$s1
  - Quotient in 10
  - Remainder in hi
- Moves from lo/hi special registers
  - mflo \$s2
  - mfhi \$s3



# Branching

- Execute instructions out of sequence
- Types of branches:
  - Conditional
    - branch if equal (beq)
    - branch if not equal (bne)
  - Unconditional
    - jump (j)
    - jump register (j r)
    - jump and link (jal)






## Review: The Stored Program

AS	ssembl	•	Machine Code	
lw	\$t2,	32 (\$	)	0x8C0A0020
add	\$s0,	\$s1,	\$s2	0x02328020
addi	\$t0,	\$s3,	-12	0x2268FFF4
sub	\$t0,	\$t3,	\$t5	0x016D4022

#### **Stored Program**

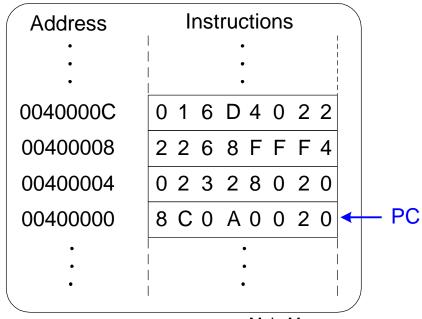



# Conditional Branching (beq)

### # MIPS assembly

Labels indicate instruction location. They can't be reserved words and must be followed by colon (:)



# The Branch Not Taken (bne)

### # MIPS assembly

addi \$\$0, \$0, 4 addi \$\$1, \$0, 1 \$\$1, \$\$1, 2 bne \$\$0, \$\$1, target addi \$\$1, \$\$1, 1 sub \$\$1, \$\$1, \$\$0 # \$s0 = 0 + 4 = 4
# \$s1 = 0 + 1 = 1
# \$s1 = 1 << 2 = 4
# branch not taken</pre>

# \$s1 = 4 + 1 = 5 # \$s1 = 5 - 4 = 1

target:

\$s1, \$s1, \$s0

$$\# \$s1 = 1 + 4 = 5$$



# Unconditional Branching (力)

### # MIPS assembly

```
addi $s0, $0, 4
addi $s1, $0, 1
         target
         $s1, $s1, 2
sra
addi
         $s1, $s1, 1
sub
```

```
\# \$s0 = 4
                  # $s1 = 1
                  # jump to target
                  # not executed
                  # not executed
$s1, $s1, $s0 # not executed
```

```
target:
```



# Unconditional Branching (jr)

### # MIPS assembly

```
0x00002000 addi $s0, $0, 0x2010
0x00002004 jr $s0
0x00002008 addi $s1, $0, 1
0x0000200C sra $s1, $s1, 2
0x00002010 lw $s3, 44($s1)
```

jr is an R-type instruction.



# High-Level Code Constructs

- if statements
- if/else statements
- while loops
- for loops



## If Statement

### C Code

```
\# $s0 = f, $s1 = g, $s2 = h
\# $s3 = i, $s4 = j
```



## If Statement

#### C Code

if 
$$(i == j)$$
  
f = g + h;

$$f = f - i;$$

#### MIPS assembly code

```
# $s0 = f, $s1 = g, $s2 = h
# $s3 = i, $s4 = j
bne $s3, $s4, L1
add $s0, $s1, $s2
```

L1: sub \$s0, \$s0, \$s3

Assembly tests opposite case (i != j) of high-level code (i == j)



# If/Else Statement

#### C Code



# If/Else Statement

#### C Code

```
# $s0 = f, $s1 = g, $s2 = h
# $s3 = i, $s4 = j
bne $s3, $s4, L1
add $s0, $s1, $s2
j done
L1: sub $s0, $s0, $s3
done:
```



# While Loops

#### C Code

### MIPS assembly code

```
// determines the power
// of x such that 2* = 128
int pow = 1;
int x = 0;

while (pow != 128) {
  pow = pow * 2;
  x = x + 1;
}
```

Assembly tests for the opposite case (pow == 128) of the C code (pow != 128).



# While Loops

#### C Code

```
// determines the power \# \$s0 = pow, \$s1 = x
// of x such that 2^{x} = 128
int pow = 1;
int x = 0;
while (pow != 128) {
pow = pow * 2;
 x = x + 1;
```

#### MIPS assembly code

```
addi $s0, $0, 1
        add $s1, $0, $0
        addi $t0, $0, 128
while: beg $s0, $t0, done
        sll $s0, $s0, 1
        addi $s1, $s1, 1
        i while
 done:
```

Assembly tests for the opposite case (pow == 128) of the C code (pow != 128).



for (initialization; condition; loop operation)
 statement

- initialization: executes before the loop begins
- condition: is tested at the beginning of each iteration
- loop operation: executes at the end of each iteration
- statement: executes each time the condition is met



#### **High-level code**

```
// add the numbers from 0 to 9
int sum = 0;
int i;

for (i=0; i!=10; i = i+1) {
   sum = sum + i;
}
```

```
\# \$s0 = i, \$s1 = sum
```



#### C Code

```
// add the numbers from 0 to 9
int sum = 0;
int i;

for (i=0; i!=10; i = i+1) {
   sum = sum + i;
}
```



#### C Code

```
// add the numbers from 0 to 9 \# $s0 = i, $s1 = sum
int sum = 0;
int i;
for (i=0; i!=10; i = i+1) {
  sum = sum + i;
```

```
addi $s1, $0, 0
       add $s0, $0, $0
       addi $t0, $0, 10
       beq $s0, $t0, done
for:
       add $s1, $s1, $s0
       addi $s0, $s0, 1
            for
done:
```

# Less Than Comparison

#### C Code

MIPS assembly code

```
// add the powers of 2 from 1
// to 100
int sum = 0;
int i;

for (i=1; i < 101; i = i*2) {
   sum = sum + i;
}</pre>
```



# Less Than Comparison

#### C Code

```
// add the powers of 2 from 1
// to 100
int sum = 0;
int i;

for (i=1; i < 101; i = i*2) {
   sum = sum + i;
}</pre>
```

#### MIPS assembly code

```
# $s0 = i, $s1 = sum
    addi $s1, $0, 0
    addi $s0, $0, 1
    addi $t0, $0, 101

loop: slt $t1, $s0, $t0
    beq $t1, $0, done
    add $s1, $s1, $s0
    sll $s0, $s0, 1
    j loop
```

done:





## Arrays

- Access large amounts of similar data
- Index: access each element
- Size: number of elements





## Arrays

- 5-element array
- Base address = 0x12348000 (address of first element, array[0])
- First step in accessing an array: load base address into a register

0x12340010	array[4]
0x1234800C	array[3]
0x12348008	array[2]
0x12348004	array[1]
0x12348000	array[0]



# **Accessing Arrays**

```
// C Code
int array[5];
array[0] = array[0] * 2;
array[1] = array[1] * 2;
```



# **Accessing Arrays**

```
// C Code
  int array[5];
  array[0] = array[0] * 2;
  array[1] = array[1] * 2;
# MIPS assembly code
# array base address = $s0
    $s0, 0x1234
                # 0x1234 in upper half of $SO
lui
    $s0, $s0, 0x8000 # 0x8000 in lower half of $s0
ori
    $t1, 0($s0)
1 w
                        # $t1 = array[0]
sll
    $t1, $t1, 1
                        # $t1 = $t1 * 2
    $t1, 0($s0)
                        \# array[0] = \$t1
SW
    $t1, 4($s0)
                        # $t1 = array[1]
1 w
    $t1, $t1, 1
                        # $t1 = $t1 * 2
sll
    $t1, 4($s0)
                        \# array[1] = \$t1
SW
```



## Arrays using For Loops

```
// C Code
int array[1000];
int i;

for (i=0; i < 1000; i = i + 1)
    array[i] = array[i] * 8;

# MIPS assembly code
# $s0 = array base address, $s1 = i</pre>
```



## **Arrays Using For Loops**

```
# MIPS assembly code
\# $s0 = array base address, $s1 = i
# initialization code
 ori $s0, $s0, 0xF000 # $s0 = 0x23B8F000
 addi $s1, $0, 0
                      # i = 0
 addi $t2, $0, 1000 # $t2 = 1000
loop:
 slt $t0, $s1, $t2
                      \# i < 1000?
 beq $t0, $0, done
                      # if not then done
 sll $t0, $s1, 2
                      # $t0 = i * 4 (byte offset)
 add $t0, $t0, $s0
                      # address of array[i]
 lw $t1, 0($t0)
                      # $t1 = array[i]
                      # $t1 = array[i] * 8
 sll $t1, $t1, 3
 sw $t1, 0($t0)
                      # array[i] = array[i] * 8
 addi $s1, $s1, 1
                      \# i = i + 1
      loop
                      # repeat
done:
```



### **ASCII Code**

- American Standard Code for Information Interchange
- Each text character has unique byte value
  - For example, S = 0x53, a = 0x61, A = 0x41
  - Lower-case and upper-case differ by 0x20 (32)



### **ASCII Characters**

#	Char	#	Char	#	Char	#	Char	#	Char	#	Char
20	space	30	0	40	æ	50	Р	60	,	70	Р
21	!	31	1	41	Α	51	Q	61	a	71	q
22		32	2	42	В	52	R	62	Ь	72	r
23	#	33	3	43	С	53	S	63	С	73	s
24	\$	34	4	44	D	54	Т	64	d	74	t
25	%	35	5	45	Ε	55	U	65	е	75	u
26	&	36	6	46	F	56	V	66	f	76	V
27	,	37	7	47	G	57	W	67	g	77	W
28	(	38	8	48	Н	58	χ	68	h	78	х
29	)	39	9	49	I	59	Υ	69	i	79	у
2A	*	3A	:	4A	J	5A	Z	6A	j	7A	z
2B	+	3B	;	4B	K	5B	]	6B	k	7 <b>B</b>	{
2C	,	3C	<	4C	L	5 C	\	6C	1	7C	
2D	-	3D	=	4D	М	5D	]	6D	m	7D	}
2E		3E	>	4E	N	5E	^	6E	n	7 <b>E</b>	~
2F	/	3F	?	4F	0	5F	_	6F	0		



# **Moving Characters**

- ASCII chars are 8-bits (used in C)
- So MIPS offers lb, lbu and sb
  - lbu \$s1, 3(\$0) # \$s1 ← Mem[3] (zero-extended byte)
  - lb \$s2, 1(\$0) # \$s2 ← Mem[1] (sign-extended byte)
  - sb \$s3, 5 (\$0) # Mem[5] ← LSByte of \$s3
- Standard UNICODE chars are 16-bit (used in Java)
- So MIPS offers lh, lhu and sh
- See www.unicode.org for much more!



# **ASCII Strings**

- •ASCII strings are arrays of chars, stored in consecutive bytes of memory
- ASCII strings have variable (i.e. unknown) length
- Must be terminated w/ NULL character (NULL's code = 0x00)
- E.g. "Hello!" is 0x48 65 6C 6C 6F 21 00 (7 bytes, not 6!)



# Manipulating ASCII strings

```
// C Code
  char chararray[10];
  int i;
  for (i=0; chararray[i] != 0; i = i + 1)
       chararray[i] = chararray[i] - 32;
 MIPS assembly code
    uses direct addressing (i.e. pointer to the string)
 $s0 = base address of chararray
 $s1 is not used: no need for index variable i !
```



# Manipulating ASCII strings

```
# MIPS assembly code
     uses direct addressing (i.e. pointer to the string)
\# $s0 = base address of chararray
  lbu $t2, 0($s0)
                           # get 1<sup>st</sup> char: $t2= Mem[&chararray]
                           #
                                              (= chararray[0])
loop:
 beq $t2, $0, done
                           # if chararray[i] == NULL, exit loop
  addi $t2, $t2, -32
                           # convert to upper case: t2=t2-32
  sb $t2, 0($s0)
                           # store new value in array:
                           # Mem[chararray[i] = $t2
                           \# address = address + 1
  addi $s0, $s0, 1
  lbu $t2, 0($s0)
                           # get next char: $t2=Mem[&chararray]
                           #
                                             (= chararrav[i])
                           # repeat
       loop
done:
```



### **Function Calls**

- Caller: calling function (in this case, main)
- Callee: called function (in this case, sum)

#### C Code

```
void main()
{
   int y;
   y = sum(42, 7);
   ...
}
int sum(int a, int b)
{
   return (a + b);
}
```



### **Function Conventions**

### Caller:

- passes arguments to callee
- jumps to callee

### Callee:

- performs the function
- returns result to caller
- returns to point of call
- must not overwrite registers or memory needed by caller



### MIPS Function Conventions

- Call Function: jump and link (jal)
- Return from function: jump register (j r)
- **Arguments**: \$a0 \$a3
- Return values: \$v0, \$v1



### **Function Calls**

#### C Code

```
int main() {
    simple();
    a = b + c;
}

void simple() {
    return;
}
```

#### MIPS assembly code

```
0x00400200 main: jal simple
0x00400204 add $s0, $s1, $s2
...
```

**0x00401020** simple: jr \$ra

void means that simple doesn't return a value



### **Function Calls**

#### C Code

```
int main() {
    simple();
    a = b + c;
}

void simple() {
    return;
}
```

#### MIPS assembly code

```
0x00400200 main: jal simple
0x00400204 add $s0, $s1, $s2
...
```

0x00401020 simple: jr \$ra

```
jal: jumps to simple: PC \leftarrow 0x00401020 stores return address: $ra \leftarrow PC + 4 = 0x00400204
```

jr \$ra: jumps to address in \$ra:  $PC \leftarrow $ra = 0x00400204$ 



### **MIPS** conventions:

Argument values: \$a0 - \$a3

• Return values: \$v0-\$v1



### C Code

```
int main()
  int y;
  y = diffofsums(2, 3, 4, 5); // 4 arguments
int diffofsums (int f, int g, int h, int i)
 int result;
  result = (f + g) - (h + i);
 return result;
                                // return value
```

### MIPS assembly code

```
# $s0 = y
main:
  addi $a0, $0, 2  # argument 0 = 2
  addi $a1, $0, 3  # argument 1 = 3
 addi $a2, $0, 4
                    \# argument 2 = 4
  addi $a3, $0, 5  # argument 3 = 5
  jal diffofsums # call Function
  add $s0, $v0, $0 # y = returned value
# $s0 = result
diffofsums:
  add $t0, $a0, $a1 # $t0 = f + q
  add $t1, $a2, $a3 # $t1 = h + i
  sub $s0, $t0, $t1 # result = (f + g) - (h + i)
 add $v0, $s0, $0 # put return value in $v0
  ir $ra
                    # return to caller
```



### MIPS assembly code

```
# $s0 = result
diffofsums:
  add $t0, $a0, $a1  # $t0 = f + g
  add $t1, $a2, $a3  # $t1 = h + i
  sub $s0, $t0, $t1  # result = (f + g) - (h + i)
  add $v0, $s0, $0  # put return value in $v0
  jr $ra  # return to caller
```

- diffofsums overwrote 3 registers: \$t0, \$t1, \$s0
- diffofsums can use stack to temporarily store registers



### The Stack

Memory used to temporarily save variables

 Like stack of dishes, last-infirst-out (LIFO) queue

• *Expands*: uses more memory when more space needed (*push*)

• *Contracts*: uses less memory when the space is no longer needed (*pop*)



### The Stack

- MIPS stack grows down (from higher to lower memory addresses)
- Stack pointer: \$sp points to "top" of the stack, in MIPS the last full location (vs. first empty)

Address	Data		Address	Data	
7FFFFFC	12345678	<b>←</b> \$sp	7FFFFFC	12345678	
7FFFFF8			7FFFFF8	AABBCCDD	
7FFFFF4			7FFFFFF4	11223344	<b>←</b> \$sp
7FFFFF0			7FFFFF0		
•	•	1	•	•	
•	•		•	•	
•	•		•	•	

### How Functions use the Stack


- Called functions must have no unintended side effects (such as overwriting other's data!)
- But diffofsums overwrites 3 registers: \$t0, \$t1,\$s0

```
# MIPS assembly
# $s0 = result
diffofsums:
   add $t0, $a0, $a1  # $t0 = f + g
   add $t1, $a2, $a3  # $t1 = h + i
   sub $s0, $t0, $t1  # result = (f + g) - (h + i)
   add $v0, $s0, $0  # put return value in $v0
   jr $ra  # return to caller
```

### Storing Register Values on the Stack

```
# $s0 = result
diffofsums:
 addi $sp, $sp, -12 # make space on stack
                     # to store 3 registers
      $s0, 8($sp)
                    # save $s0 on stack
 SW
      $t0, 4($sp) # save $t0 on stack
 SW
      $t1, 0($sp)  # save $t1 on stack
 SW
      $t0, $a0, $a1 # $t0 = f + g
 add
 add
      $t1, $a2, $a3
                    # $t1 = h + i
 sub
      $s0, $t0, $t1
                     \# result = (f + q) - (h + i)
 add
      $v0, $s0, $0
                     # put return value in $v0
      $t1, 0($sp)
                    # restore $t1 from stack
 lw
      $t0, 4($sp)
 lw
                    # restore $t0 from stack
 1w
      $s0, 8($sp)
                    # restore $s0 from stack
 addi $sp, $sp, 12
                    # deallocate stack space
 jr
      $ra
                     # return to caller
```

# The stack during diffofsums Call

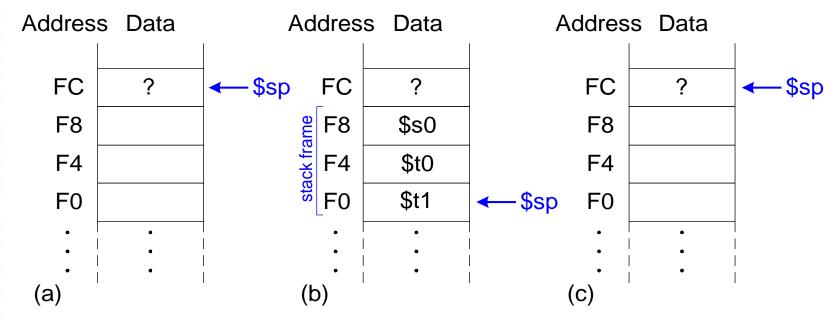



# Register saving

To share the burden of saving on the stack, the registers are divided into two groups:

Preserved  Callee-Saved	Non-preserved  Caller-Saved
\$s0-\$s7	\$t0-\$t9
\$ra	\$a0-\$a3
\$sp, \$fp, \$gp	\$v0-\$v1
stack above \$sp	stack below \$sp

## Register saving

### Callee:

- must save \$s-regs and \$ra,\$sp,\$fp,\$gp and stack above \$sp
- Save means either don't use, or push to stack and restore after use
- Free to change \$t, \$a & \$v-regs, stack below \$sp

#### Caller:

• needs to save things that may be changed by callee (\$t, \$a & \$v-regs, stack below \$sp) only if caller will need them after the call and return



### **Nested Function Calls**

```
proc1:
  addi $sp, $sp, -4  # make space on stack
  sw $ra, 0($sp)  # save $ra on stack
  jal proc2  # $ra changes due to jal
  ...
  lw $ra, 0($sp)  # restore $ra from stack
  addi $sp, $sp, 4  # deallocate stack space
  jr $ra  # return to caller
```

save \$ra if a function calls another function



## Storing Saved Registers on the Stack

```
# $s0 = result
diffofsums:
  addi $sp, $sp, -4 # make space on stack to
                     # store one register
  sw $s0, 0($sp)
                    # save $s0 on stack
                    # no need to save $t0 or $t1
                    # $t0 = f + q
  add $t0, $a0, $a1
                    # $t1 = h + i
  add $t1, $a2, $a3
  sub $s0, $t0, $t1
                     \# result = (f + g) - (h + i)
 add $v0, $s0, $0
                     # put return value in $v0
  lw $s0, 0($sp)
                    # restore $s0 from stack
  addi $sp, $sp, 4
                    # deallocate stack space
  jr $ra
                     # return to caller
```



### **Recursive Function Call**

### **High-level code**

```
int factorial(int n) {
  if (n <= 1)
    return 1;
  else
    return (n * factorial(n-1));
}</pre>
```




### Recursive Function Call

### MIPS assembly code

```
0x90 factorial: addi $sp, $sp, -8 # make room for 2 items
0x94
                    $a0, 4($sp) # push $a0
               SW
0x98
               sw $ra, 0($sp) # push $ra
0x9C
               addi $t0, $0, 2
0xA0
               slt $t0, $a0, $t0 # a <= 1 ?
0xA4
                    $t0, $0, else # no: go to else
               beq
               addi $v0, $0, 1  # yes: return 1
8Ax0
0xAC
               addi $sp, $sp, 8 # restore $sp
0xB0
               jr $ra
                                # return
         else: addi $a0, $a0, -1 # n = n - 1
0xB4
0xB8
               jal factorial # recursive call:
                                 # factorial(n-1)
0xBC
               1w $a0, 4($sp) # pop $a0 (= saved n)
0xC0
               mul
                    $v0, $a0, $v0 # n * factorial(n-1)
0xC4
               lw
                    ra, 0 (sp) # pop $ra
0xC8
               addi $sp, $sp, 8 # restore $sp
0xCC
               jr
                    $ra
                                 # return
```

# Stack During Recursive Call

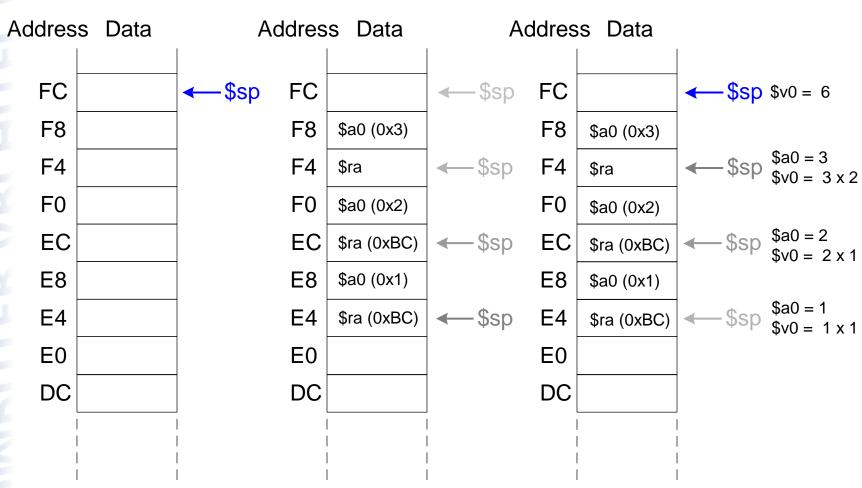



# **Function Call Summary**

### Caller

- Put arguments in \$a0-\$a3
- Save any needed registers (\$ra, maybe \$t0-\$t9)
- jal callee
- Restore registers
- Look for result in \$v0

### Callee

- Save registers that would be changed (\$s0-\$s7, etc)
- Perform function (using arguments in a0-a3)
- Put result in \$v0
- Restore registers that were saved
- jr \$ra



#### How do we address the operands?

- Register Only
- Immediate
- Base Addressing

#### How do we address the next instruction?

- (Default: PC <= PC + 4)</li>
- PC-Relative
- Pseudo-Direct



#### **Register Only**

- Operands found in registers
  - **Example:** add \$s0, \$t2, \$t3
  - Example: sub \$t8, \$s1, \$0

#### **Immediate**

- 16-bit immediate (extended to 32-bits) used as an operand
  - Example: addi \$s4, \$t5, -73 # sign-extend
  - Example: ori \$t3, \$t7, 0xFF # zero-extend



#### **Base Addressing**

Address of operand is:

```
base address + sign-extended immediate
```

- Example: lw \$s4, 72(\$0)
  - address = \$0 + 72
- **Example:** sw \$t2, -25(\$t1)
  - address = \$t1 25



#### PC-Relative Addressing (used in beq and bne)

```
0x10
                    beq $t0, $0, else
                                            count from the next instruction
0x14
                    addi
                          $v0, $0, 1
0x18
                          $sp, $sp, i
                    addi
0x1C
                           $ra
                    jr
0x20
                          $a0, $a0, -1
           else: addi
0x24
                    jal
                           factorial
```

#### **Assembly Code**

# beq \$t0, \$0, else (beq \$t0, \$0, 3)

#### Field Values

ор	rs	rt	imm		
4	8	0		3	
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

Note: BTA (address of else: ) =  $PC + 4 + (imm \times 4)$ 



#### Pseudo-direct Addressing (used in J-types)

0x0040005C jal sum

. . .

**0x004000A0** sum: add \$v0, \$a0, \$a1

JTA 0000 0000 0100 0000 0000 0000 1010 0000 (0x004000A0)


26-bit addr 0000 0000 0100 0000 0000 0000 1010 0000 (0x0100028)

) 1 0 0 0 2 8

#### Field Values

op	imm
3	0x0100028
6 bits	26 bits


#### **Machine Code**

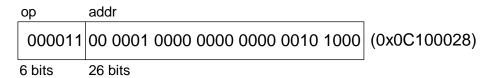

Note: JTA = { PC+4[upper 4 bits], addr, 00 }



# How to Compile & Run a Program

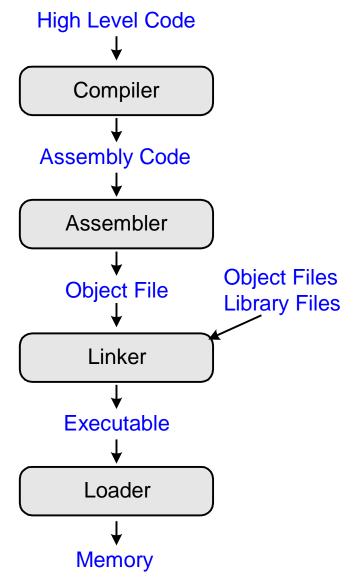



# Grace Hopper, 1906-1992

- Graduated from Yale
   University with a Ph.D. in mathematics
- Developed first compiler
- Helped develop the COBOL programming language
- Highly awarded naval officer
- Received World War II
   Victory Medal and National
   Defense Service Medal,
   among others








## What is Stored in Memory?

- Instructions (in the .text segment)
- Data
  - Global/static: allocated before program begins (in the .data segment)
  - Dynamic: allocated within program (heap and stack)
- How big is memory?
  - At most  $2^{32} = 4$  gigabytes (4 GB) in MIPS
  - From address 0x00000000 to 0xFFFFFFFF



## MIPS Memory Map

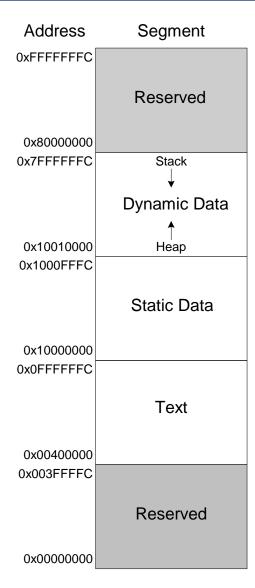



# Example Program: C Code

```
int f, g, y; // global variables
int main(void)
 f = 2;
 a = 3;
 y = sum(f, g);
  return y;
int sum(int a, int b) {
  return (a + b);
```



# Example Program: MIPS Assembly

```
.data
  int f, g, y; // global
                            f:
                            q:
                            у:
int main(void)
                                 .text
                         main:
                                                   # push 1 item
                                 addi $sp, $sp, -4
                                     $ra, 0($sp)
                                                   # store $ra
                                 SW
                                 addi $a0, $0, 2
                                                    \# $a0 = 2
    f = 2;
                                     $a0, f
                                                    # f = 2
                                 SW
    a = 3;
                                 addi $a1, $0, 3
                                                    # $a1 = 3
                                     $a1, q
                                                    \# q = 3
                                 SW
    y = sum(f, q);
                                                    # call sum
                                 jal
                                     sum
    return y;
                                     $v0, y
                                                    \# y = sum()
                                 SW
                                     $ra, 0($sp)
                                                   # restore $ra
                                 lw
                                 addi $sp, $sp, 4
                                                    # pop 1 item
  int sum(int a, int b) {
                                                    # return to OS
                                     $ra
                                 jr
    return (a + b);
                                     $v0, $a0, $a1
                                                    # $v0 = a + b
                                 add
                         sum:
                                 jr
                                      $ra
                                                    # return
```



# Example Program: Symbol Table

Symbol	Address





# Example Program: Symbol Table

Symbol	Address
f	0x10000000
g	0x10000004
У	0x10000008
main	0x00400000
sum	0x0040002C

text segment start at 0x0040000




### Example Program: Executable

Executable file header	Text Size	Data Size
	0x34 (52 bytes)	0xC (12 bytes)
Text segment	Address	Instruction
	0x00400000	0x23BDFFFC
	0x00400004	0xAFBF0000
	0x00400008	0x20040002
	0x0040000C	0xAF848000
	0x00400010	0x20050003
	0x00400014	0xAF858004
	0x00400018	0x0C10000B
	0x0040001C	0xAF828008
	0x00400020	0x8FBF0000
	0x00400024	0x23BD0004
	0x00400028	0x03E00008
	0x0040002C	0x00851020
	0x00400030	0x03E00008
Data segment	Address	Data
	0x10000000	f
	0x10000004	g
	0x10000008	у

addi \$sp, \$sp, -4
sw \$ra, 0 (\$sp)
addi \$a0, \$0, 2
sw \$a0, 0x8000 (\$gp)
addi \$a1, \$0, 3
sw \$a1, 0x8004 (\$gp)
jal 0x0040002C
sw \$v0, 0x8008 (\$gp)
lw \$ra, 0 (\$sp)
addi \$sp, \$sp, -4
jr \$ra
add \$v0, \$a0, \$a1
jr \$ra



# Example Program: In Memory

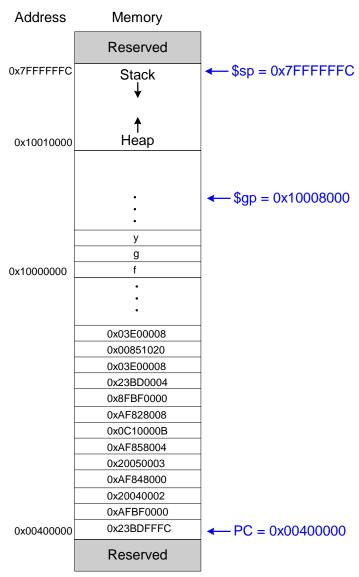





### Odds & Ends

- Pseudo-instructions
- Exceptions
- Signed and unsigned instructions
- Floating-point instructions



### Pseudo-instructions

Pseudo-instruction	MIPS Instructions
li \$s0, 0x1234AA77	lui \$s0, 0x1234
	ori \$s0, 0xAA77
clear \$t0	add \$t0, \$0, \$0
move \$s1, \$s2	add \$s2, \$s1, \$0
nop	sll \$0, \$0, 0

The assembler implements a virtual machine, by adding pseudo-instruction capability to the actual MIPS architecture. There are many possible pseudo-instructions (e.g. beq \$s1, 22, Branch\_target)

BUT: the pseudo-instructions vary between assemblers, so using them could mean your code is no longer "portable", it is assembler specific!



### Exceptions

- Unscheduled function call to exception handler (part of the OS)
- Caused by:
  - Hardware, also called an *interrupt*, e.g., keyboard
  - Software, also called *traps*, e.g., undefined instruction
- When exception occurs, the processor:
  - Records the cause of the exception
  - Jumps to exception handler (at instruction address 0x80000180 in MIPS)
  - Deals with the problem causing the exception
  - Returns to program



### **Exception Registers**

- Not part of processor's register file
  - Cause: Records cause of exception
  - EPC (Exception PC): Records PC where exception occurred
- EPC and Cause: part of Coprocessor 0
- Move from Coprocessor 0
  - -mfc0 \$t0, EPC
  - Moves contents of EPC into \$t0



# **Exception Causes**

Exception	Cause
Hardware Interrupt	0x0000000
System Call	0x0000020
Breakpoint / Divide by 0	0x00000024
Undefined Instruction	0x00000028
Arithmetic Overflow	0x00000030
(lots more—see Green Card)	

# **Exception Flow**

- Processor saves: Cause ← code for exception type
   and EPC←PC value that caused the exception
- Processor jumps to exception handler (0x80000180)
- Exception handler:
  - Saves registers on stack
  - Reads Cause register

    mfc0 \$t0, Cause
  - Handles exception
  - Restores registers
  - Returns to program

```
mfc0 $k0, EPC
jr $k0
```





# Signed & Unsigned Instructions

- Addition and subtraction
- Multiplication and division
- Set less than



### Addition & Subtraction

- Signed: add, addi, sub
  - Same operation as unsigned versions
  - But processor causes exception on overflow
- Unsigned: addu, addiu, subu
  - Doesn't cause exception on overflow

**Note:** C language ignores exceptions; FORTRAN and others require the program be notified.

Beware: addiu sign-extends the immediate, before treating it as an unsigned number!

## Multiplication & Division

- Signed: mult, div
- Unsigned: multu, divu

So

- = 0x0000000000000001 w/mult (signed)
- = 0xFFFFFFE00000001 w/multu(unsigned)



### Set Less Than

- Signed: slt, slti

  treats operands as signed
- Unsigned: sltu, sltiu treats operands as unsigned

Beware: sltiu sign-extends the immediate, before comparing it to the register, treating both as unsigned



### Loads

#### • Signed:

- Sign-extends to create 32-bit value to load into register
- Load halfword: 1h
- Load byte: 1b

#### • Unsigned:

- Zero-extends to create 32-bit value
- Load halfword unsigned: lhu
- Load byte unsigned: lbu



## Floating-Point Instructions

- Floating-point coprocessor (Coprocessor 1)
- 32 32-bit floating-point registers (\$f0-\$f31)
- Double-precision values held in two floating point registers
  - e.g., \$f0 and \$f1, \$f2 and \$f3, etc.
  - Double-precision floating point registers: \$f0, \$f2, \$f4, etc.



# Floating-Point Registers

Name	Register Number	Usage
\$fv0 - \$fv1	0, 2	return values
\$ft0 - \$ft3	4, 6, 8, 10	temporary variables
\$fa0 - \$fa1	12, 14	Function arguments
\$ft4 - \$ft8	16, 18	temporary variables
\$fs0 - \$fs5	20, 22, 24, 26, 28, 30	saved variables



### F-Type Instruction Format

- opcode =  $17 (010001_2)$
- Single-precision:
  - $cop = 16 (010000_2)$
  - add.s, sub.s, div.s, neq.s, abs.s, etc.
- Double-precision:
  - $cop = 17 (010001_2)$
  - add.d, sub.d, div.d, neg.d, abs.d, etc.
- 3 register operands:
  - fs, ft: source operands
  - fd: destination operands

F-Type

op	cop	ft	fs	fd	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

# Floating-Point Branches

- Set/clear condition flag: fpcond
  - Equality: c.seq.s, c.seq.d
  - Less than: c.lt.s, c.lt.d
  - L.T. or equal: c.le.s, c.le.d
- Conditional branch
  - bclf: branches if fpcond is FALSE
  - bclt: branches if fpcond is TRUE
- Loads and stores
  - -lwc1:lwc1 \$ft1, 40(\$s1)
  - swc1: swc1 \$fs2, 24(\$sp)

