# Signals and Systems: Lecture Notes 1

## zqy1018

## 2020. 4. 19

## Contents

1	Bas	sic Definitions of Signals	2
	1.1	Definition of Signals	2
	1.2	Two Kinds of Signals	4
<b>2</b>	Bas	sic Transformation on Signals	3
	2.1	Time Shift	
	2.2	Time Reversal	4
	2.3	Time Scaling	4
	2.4	Affine Transformation	Ę
	2.5	Useful Identities	6
3	Sign	nal Energy and Power	6
	3.1	Formulas	(
	3.2	Classify the Signals by $E$ and $P$	(
4	Per	iodicity	7
	4.1	Definitions	7
	4.2	Common Periods and Sinusoids	7
		4.2.1 CT Case	7
		4.2.2 DT Case	8
5	Eve	en-odd Decomposition	ę
6	Rev	view	10

## 1 Basic Definitions of Signals

### 1.1 Definition of Signals

Both in electronics and computer science, a signal is something whose variations represent coded information.

Examples in real life: voltages, currents, images, etc.

**Definition.** The mathematical representation of a **signal** is a function of one or more independent variables. Usually we use  $x: I \to X$  to represent a signal, where I can be seen as the index set.

In this course, we will focus on 1-D signals of one independent variable.  $I \subset \mathbb{R}$ , and usually  $X \subset \mathbb{R}$  or  $\mathbb{C}$ . The independent variable is often referred to as "time".

### 1.2 Two Kinds of Signals

There are two kinds of signals.

- Continuous-time (CT) signals:  $I \subset \mathbb{R}$ , often  $I = \mathbb{R}$ . Called analog signal if X is also continuum. Notation: x(t).
- Discrete-time (DT) signals:  $I \subset \mathbb{Z}$ , often  $I = \mathbb{Z}$ . Called digital signal if X is also discrete. Notation: x[n].

x(t) can be either explained as a signal or a function value. It depends on the context. We can transform a CT signal to a DT signal by **sampling**.

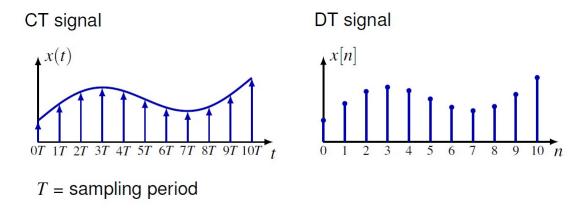


Figure 1: Here T is the **sampling period**. Obviously the sampled data contains no information about T.

We can also reconstruct a CT signal from a DT signal.

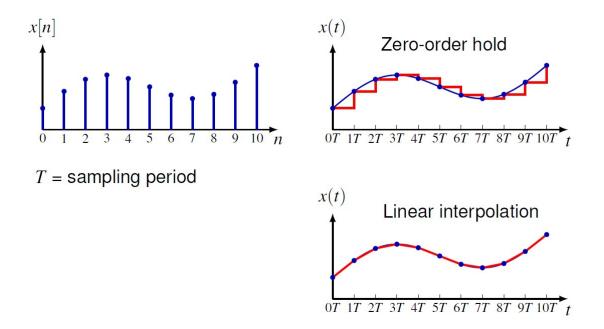


Figure 2: Two ways of reconstruction. Different T yields different reconstructed signals.

## 2 Basic Transformation on Signals

It is common to perform some transformations on the time axis. Here we use operators (functions manipulating functions) to describe them.


We will discuss two views of these transformations: signal view (how the graph changes) and time view (how a time changes).

### 2.1 Time Shift

Time shift (Translation) operator  $\tau_b: x \mapsto \tau_b x$ .

- CT signal:  $(\tau_b x)(t) = x(t-b), b \in \mathbb{R}$ .
- DT signal:  $(\tau_b x)[n] = x[n-b], b \in \mathbb{Z}$ .

For example:

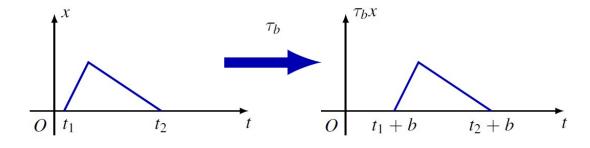

The two views:

- Signal view: The y-axis moves left by b (or the signal delays by b). If b < 0, then it moves right by -b (or the signal advances by -b).

- Time view:  $t \mapsto t + b$ .


### 2.2 Time Reversal

Time reversal (Reflection) operator  $R: x \mapsto Rx$ .

- CT signal: (Rx)(t) = x(-t).

- DT signal: (Rx)[n] = x[-n].

For example:

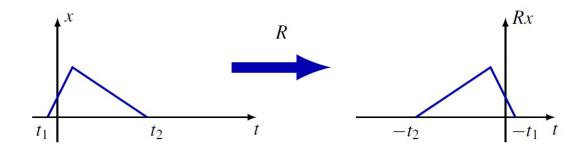

4

The two views:

- Signal view: The graph reverses by the y-axis.

- Time view:  $t \mapsto -t$ .


### 2.3 Time Scaling

Time scaling operator  $S_a: x \mapsto S_a x$ .

- CT signal:  $(S_a x)(t) = x(at), a \in \mathbb{R}^+$ .

- DT signal:  $(S_a x)[n] = x[an], a \in \mathbb{Z}^+$ .

For example:

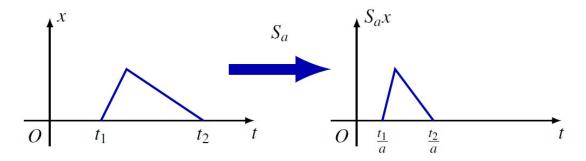

The two views:

- Signal view: If  $\frac{1}{a} > 1$ , the graph is stretched. If  $\frac{1}{a} < 1$ , the graph is compressed.

- Time view:  $t \mapsto \frac{t}{a}$ .

Note that for CT signals,  $S_a$  can be undo by  $S_{\frac{1}{a}}$ , if  $a \neq 0$ . But for DT signals, if a > 1, then the scaling can be seen as **down sampling**, which is irreversible.


### 2.4 Affine Transformation

Affine transformation  $A_{a,b}: x \mapsto A_{a,b}x$ .

- CT signal:  $(A_{a,b}x)(t) = x(at+b), a \in \mathbb{R} \setminus \{0\}, b \in \mathbb{R}$ .

- DT signal:  $(A_{a,b}x)[n] = x[an+b], a \in \mathbb{Z} \setminus \{0\}, b \in \mathbb{Z}$ .

For example:

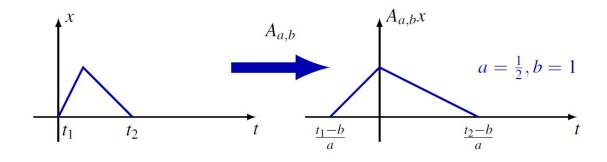

It can be decomposed as product of shift, reversal and scaling. For example:

$$a > 0: A_{a,b} = S_a \circ \tau_{-b}$$

$$a < 0: A_{a,b} = S_{|a|} \circ R \circ \tau_{-b}$$

where  $(f \circ g)(x) = f(g(x))$ .

The approaches are not unique, but *doing time shift first* will be easier. And in [OWN], "first shift, then scale, finally reverse" is recommended.

Here we just show the time view (the graph view is complicated):  $t \mapsto \frac{t-b}{a}$ .

#### 2.5 Useful Identities

Here we show some useful identities about the operators. It is easy to prove them, so we skip the proof.

Theorem 1.  $\forall a \neq 0, b \in \mathbb{R}, S_a \circ \tau_{-b} = \tau_{-\frac{b}{a}} \circ S_a$ .

Theorem 2.  $\forall b \in \mathbb{R}, R \circ \tau_{-b} = \tau_b \circ R$ .

Theorem 3.  $\forall a \neq 0, S_a \circ R = R \circ S_a$ .

## 3 Signal Energy and Power

#### 3.1 Formulas

We can define the **energy** and **power** of a signal as those of a  $1\Omega$  resistor. That is, regard x(t) as the voltage and do calculation.

## Total energy

$$E(x) = \int_{-\infty}^{\infty} |x(t)|^2 dt \qquad E(x) = \sum_{n=-\infty}^{\infty} |x[n]|^2$$

### Average power

$$P(x) = \lim_{T \to \infty} \frac{1}{2T} \int_{-T}^{T} |x(t)|^2 dt \qquad P(x) = \lim_{N \to \infty} \frac{1}{2N+1} \sum_{n=-N}^{N} |x[n]|^2$$

Figure 3: Basic definitions of signal energy and power.

## 3.2 Classify the Signals by E and P

We can divide all the signals into three classes.

- 1. Finite-energy signal:  $E(x) < +\infty$ . These signals are all in  $L_2$  space.
- 2. Finite-power signal:  $E(x) = +\infty, P(x) < +\infty$ , like  $x(t) = \sin t$ .
- 3. Infinite-power signal:  $P(x) = +\infty$ , like x(t) = t.

**Note.**  $E(x) < +\infty \implies P(x) = 0$ , and the contrapositive:  $P(x) > 0 \implies E(x) = +\infty$ . But the converse may not hold. For example,  $x(t) = t^{-\frac{1}{2}}(t > 1)$ . P(x) = 0 but  $E(x) = +\infty$ .

## 4 Periodicity

#### 4.1 Definitions

**Definition.** For CT signals,  $T \in \mathbb{R}$  is a **period** iff  $x(t+T) = x(t), \forall t \in \mathbb{R}$ .  $T_0 = \min\{T > 0, T \text{ is a period}\}$  is the **fundamental period** of x(t).  $N \in \mathbb{Z}$  and  $N_0 \in \mathbb{Z}^+$  can be similarly defined for DT signals.

**Note.** If T is a period, then mT is also a period for  $m \in \mathbb{Z}$ .

There are some differences between the CT case and DT case.

- A constant CT signal x(t) = c has no well-defined fundamental period. But all constant DT signals have  $N_0 = 1$ , since  $\mathbb{Z}^+$  is well-ordered.
- For the same function, the fundamental period in CT may be different from that in DT. For example:  $\sin(\frac{4\pi}{3}t)(T_0 = \frac{3}{2})$  and  $\sin(\frac{4\pi}{3}n)(N_0 = 2)$ .

#### 4.2 Common Periods and Sinusoids

What is the period of a signal if it consists of some periodic signals?

#### 4.2.1 CT Case

**Theorem 4.** (Sufficient Condition)  $x_1(t)$  has the period  $T_1 > 0$ , and  $x_2(t)$  has the period  $T_2 > 0$ . If  $\frac{T_1}{T_2} \in \mathbb{Q}$  then  $x(t) = x_1(t) + x_2(t)$  is periodic.

*Proof.* Let 
$$\frac{T_1}{T_2} = \frac{m_2}{m_1}$$
,  $m_i \in \mathbb{Z}^+$ . Then  $T = m_1 T_1 = m_2 T_2$  is the period of  $x(t)$ .

In some special cases, we can apply it on  $x(t) = x_1(t)x_2(t)$ . For example,  $x_1(t)$  and  $x_2(t)$  are sinusoids.

**Theorem 5.** For  $A_i \neq 0$ ,  $\omega_i > 0$ ,  $x(t) = A_1 \sin(\omega_1 t + \phi_1) + A_2 \sin(\omega_2 t + \phi_2)$  is periodic **iff**  $\frac{\omega_1}{\omega_2} \in \mathbb{Q}$ . If we let  $\frac{\omega_1}{\omega_2} = \frac{m_1}{m_2}$ ,  $m_i \in \mathbb{Z}^+$ ,  $\gcd(m_1, m_2) = 1$ , then

$$T_0 = \frac{2\pi m_1}{\omega_1} = \frac{2\pi m_2}{\omega_2}$$

is the fundamental period of x(t).

*Proof.* We prove the necessity by contradiction. Suppose  $\frac{\omega_1}{\omega_2} \notin \mathbb{Q}$  and x(t) has a period T. Then by definition, x(t+T) = x(t), i.e.

$$A_1 \sin \left[\omega_1(t+T) + \phi_1\right] - A_1 \sin \left(\omega_1 t + \phi_1\right) = A_2 \sin \left(\omega_2 t + \phi_2\right) - A_2 \sin \left[\omega_2(t+T) + \phi_2\right]$$

which implies

$$2A_1 \sin\left(\frac{\omega_1 T}{2}\right) \cos\left(\omega_1 t + \phi_1 + \frac{\omega_1 T}{2}\right) = -2A_2 \sin\left(\frac{\omega_2 T}{2}\right) \cos\left(\omega_2 t + \phi_2 + \frac{\omega_2 T}{2}\right)$$

Then there are two cases.

- 1. If LHS and RHS are identically 0, then  $\sin\left(\frac{\omega_1 T}{2}\right) = \sin\left(\frac{\omega_2 T}{2}\right) = 0 \implies T \in \left(\frac{2\pi}{\omega_1} \mathbb{Z}\right) \cap \left(\frac{2\pi}{\omega_2} \mathbb{Z}\right)$ , which will not happen since  $\frac{\omega_1}{\omega_2} \notin \mathbb{Q}$ .
- 2. If LHS and RHS are not identically 0, then LHS and RHS share the same period, which implies  $\omega_1 = \omega_2$ , and this is contradicted with  $\frac{\omega_1}{\omega_2} \notin \mathbb{Q}$ .

Hence the proof is finished.

#### 4.2.2 DT Case

**Theorem 6.**  $x[n] = \sin(\omega n + \phi)$  is periodic **iff**  $\exists \frac{k}{N} \in \mathbb{Q}, w = \frac{2\pi k}{N}$ , or simply  $\omega \in 2\pi\mathbb{Q}$ .

*Proof.* We only prove the " $\Longrightarrow$ " part. Suppose N is a period of x[n]. Then

$$\forall n, x[n+N] = x[n] \implies \cos(\omega n + \phi + \frac{\omega N}{2})\sin(\frac{\omega N}{2}) = 0$$

which implies  $\cos(\omega n + \phi + \frac{\omega N}{2}) \equiv 0$  or  $\sin(\frac{\omega N}{2}) \equiv 0$ .

- 1.  $\sin(\frac{\omega N}{2}) = 0 \implies \exists k \in \mathbb{Z}, \frac{\omega N}{2} = k\pi \implies w = \frac{2\pi k}{N}$ .
- 2.  $\cos(\omega n + \phi + \frac{\omega N}{2}) = 0 \implies \forall n \in \mathbb{Z}, \exists k \in \mathbb{Z}, \omega n + \phi + \frac{\omega N}{2} = \frac{\pi}{2} + k\pi$ . By choosing n = 0 and n = 1, we have  $\omega = (k_{(n=1)} k_{(n=0)})\pi \in \pi\mathbb{Z} \subset 2\pi\mathbb{Q}$ .

So 
$$\exists \frac{k}{N} \in \mathbb{Q}, w = \frac{2\pi k}{N}$$
.

Corollary. For  $x[n] = \sin(2\pi \frac{k}{N}n + \phi), k \in \mathbb{Z}, N \in \mathbb{Z}^+, N \geq 3, \gcd(N, k) = 1$ , the fundamental period  $N_0 = N$ .

*Proof.* By Theorem 6,  $\frac{2\pi k}{N} \notin \pi \mathbb{Z} \implies \frac{2\pi k}{N} \in \frac{2\pi}{N_0} \mathbb{Z} \implies \frac{kN_0}{N} \in \mathbb{Z}$ . Since  $\gcd(N, k) = 1$ ,  $N|N_0$ . Again by Theorem 6, N is a period  $\implies N_0|N$ . So  $N_0 = N$ .

Note. If N=2 and  $\sin \phi=0$ , then  $N_0=1$ . Or equivalently,  $N=N_0$  unless  $x[n]\equiv 0$ .

This corollary is very helpful in determining the fundamental period of a DT sinusoid.


## 5 Even-odd Decomposition

We know that any function can be represented as the sum of an even function and an odd function.

**Definition.** The **even part** of x is  $x_e = \mathcal{E}v(x) = \frac{x+Rx}{2}$ . The **odd part** of x is  $x_o = \mathcal{O}d(x) = \frac{x-Rx}{2}$ .

**Theorem 7.**  $\forall x, x = \mathcal{E}v(x) + \mathcal{O}d(x)$ . If x is even, then  $x = \mathcal{E}v(x)$ . If x is odd, then  $x = \mathcal{O}d(x)$ .

## 6 Review

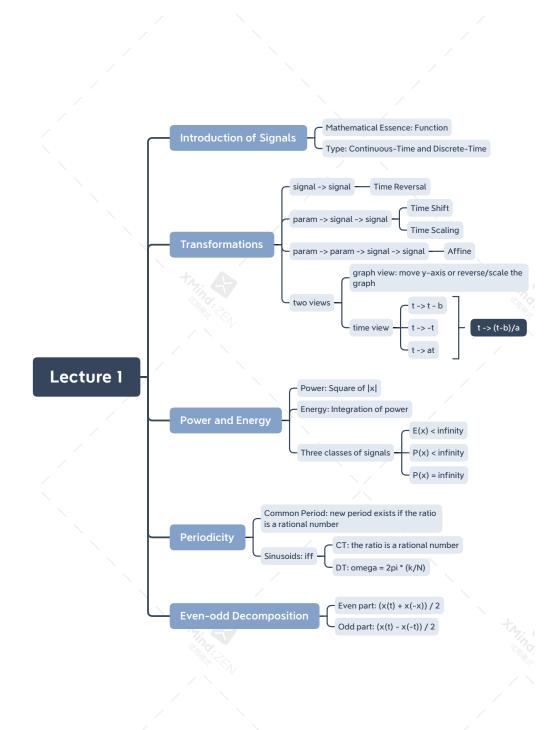

XMind:ZEN | 试用模式

## Acknowledgment

The contents are mainly based on the course materials of EI331, Shanghai Jiao Tong University and Signals and Systems second edition by Alan V. Oppenheim, Alan S. Willsky and S. Hamid Nawab.