
Assignment 10


Switching & VLANs

1. **Draw a simple network diagram showing three devices (like your laptop, a friend's phone, and a smart TV) connected to a switch, and label which device is in which VLAN (e.g., VLAN 10 for streaming, VLAN 20 for personal devices).**

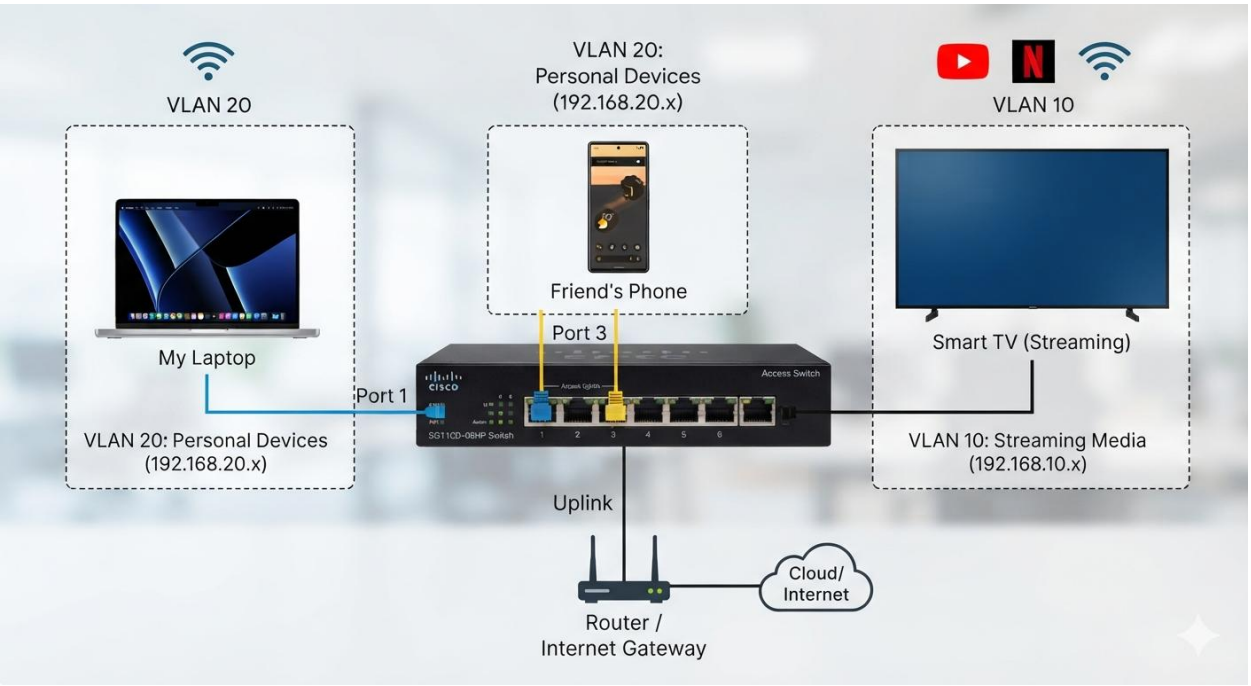


2. **Configure a simulated switch using Cisco Packet Tracer or NetSim: create two VLANs (VLAN 10 and VLAN 20), assign three PCs to VLAN 10 and two PCs to VLAN 20, and verify that PCs in different VLANs cannot ping each other.**

❖ **Created VLAN 10 and VLAN 20 on the switch.**

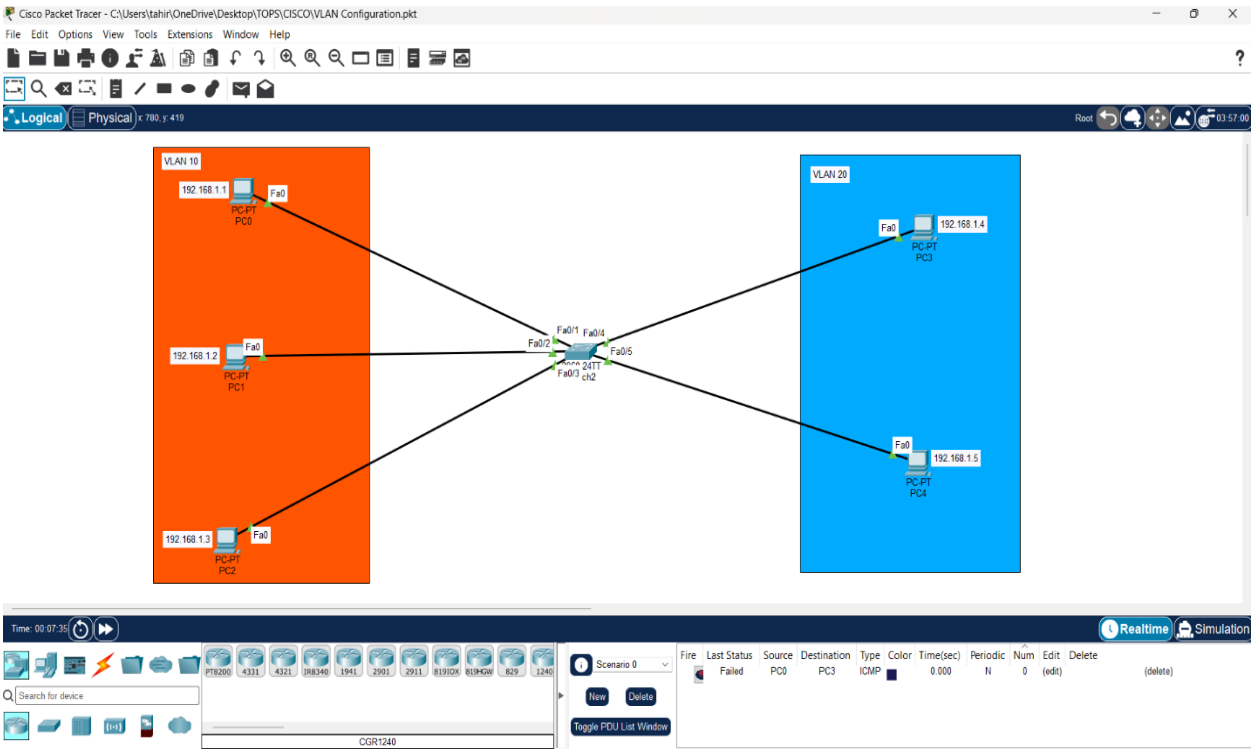


❖ Used the ping command to test connectivity.

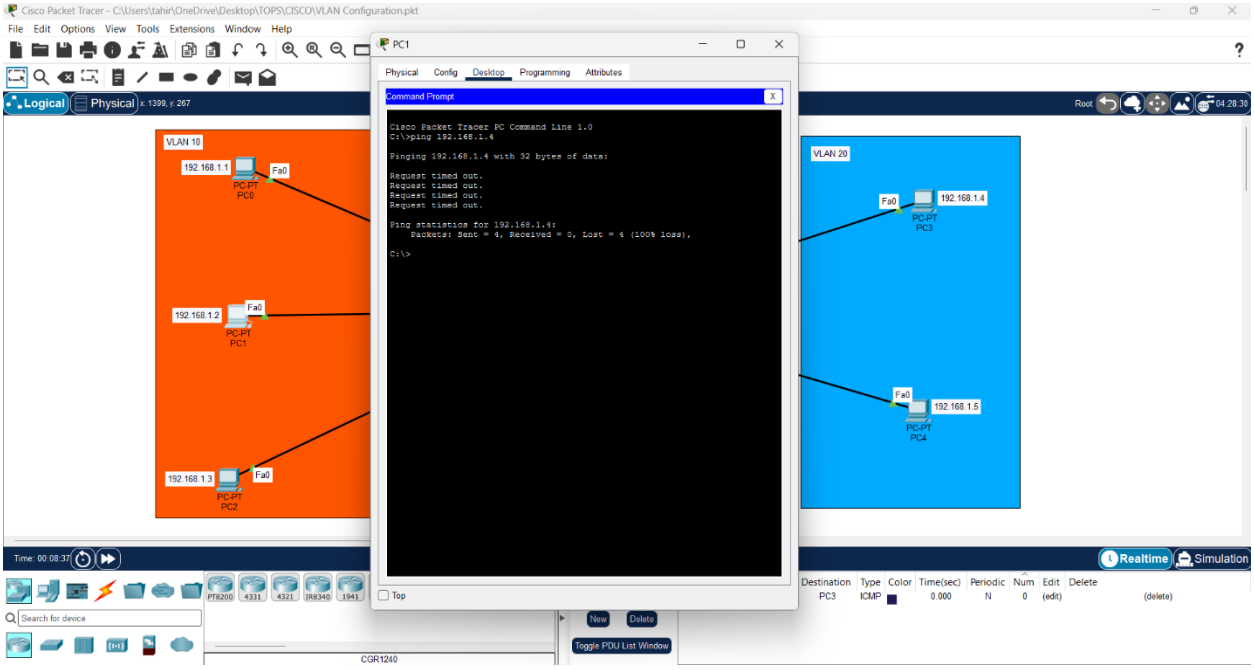

- First, created two VLANs, **VLAN 10** and **VLAN 20**, on the switch using the **vlan 10** and **vlan 20 commands**. Then assigned **three PCs to VLAN 10** and **two PCs to VLAN 20** using the **switchport access vlan** command. After that, configured IP addresses for all PCs and checked the connection using the **ping command**. PCs in the **same VLAN were able to ping each** other, but PCs in **different VLANs could not ping each other.**

3. **In any network simulator, set up a scenario where you move a PC from VLAN 10 to VLAN 20. Show the before and after configuration commands and test connectivity to confirm the change.**

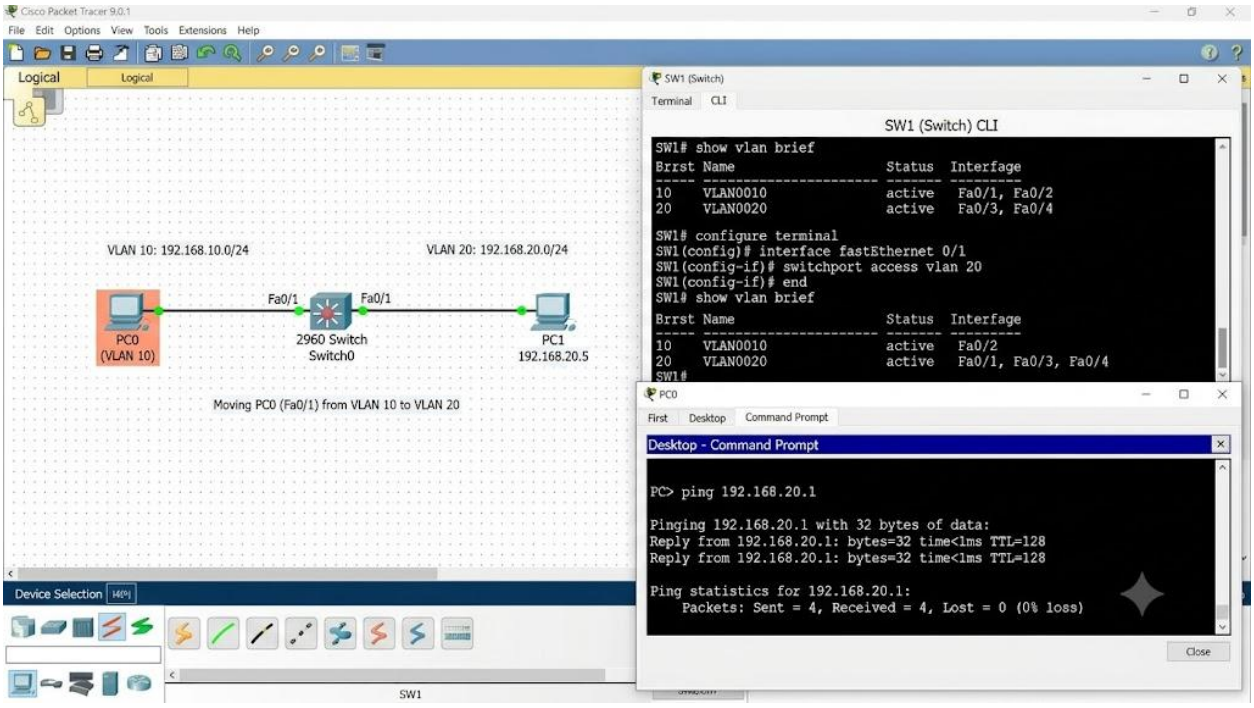

4. **Write a short script or command list that would automate assigning 10 ports on a switch to VLAN 30, using the syntax of your chosen simulator (Packet Tracer, NetSim, or GNS3). Constraint: Use a loop or range command if supported by the tool to avoid repeating the same command 10 times.**

1. **Open Cisco Packet Tracer and select the switch.**
2. **Open CLI.**
3. **Enter these commands:**
   Switch> enable Switch# configure terminal
   Switch(config)# vlan 30 Switch(config-vlan)# exit
   Switch(config)# interface range FastEthernet 0/1 - 10
   Switch(config-if-range)# switchport mode access
   Switch(config-if-range)# switchport access vlan 30
   Switch(config-if-range)# exit Switch(config)# end
   Switch# show vlan brief

What happened:

- I created **VLAN 30** and used interface range to select **FastEthernet 0/1 to 0/10** at once. Then I assigned all 10 ports to VLAN 30 without typing the commands separately for every port.