


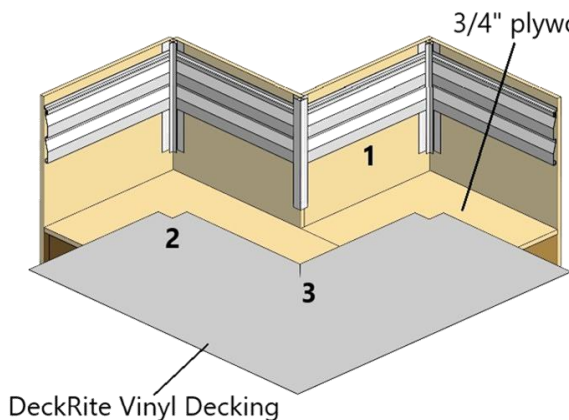


1) Expose 12" - 24" of the house wall's plywood sheathing above the deck surface. Lay out the vinyl membrane and cut to match the wall contour, allowing a minimum 4" vertical turn-up. For siding, extend the membrane at least 2" above the bottom of lowest panel.

2) When addressing an *Inside Corner* detail, cut a square off the corner of the vinyl membrane to allow the membrane to be turned up the wall.

3) When addressing an *Outside Corner* detail, cut a 45° degree slit from the corner into the vinyl to allow the membrane to be turned up the wall.

4) Fully adhered vinyl membrane

5) Adhere vertical vinyl fold to wall using solvent-based adhesive. Due to the vertical application, ensure the membrane is properly supported until adhesive has fully cured.

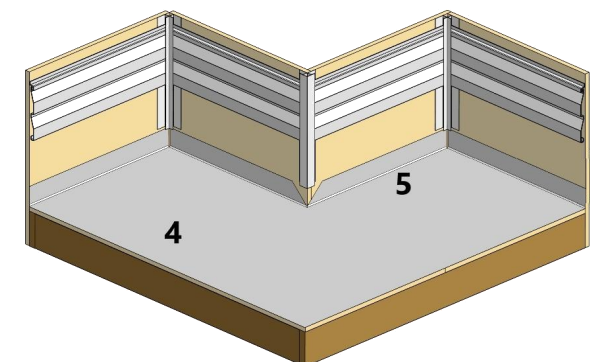



6) When installing an *Inside Corner*, adhere the top portion of the corner to the vertical surface. Trim corners to the height of vertical membrane fold. Ensure the membrane is properly supported until adhesive has fully cured.

7) Remove excess material from corners, leaving only ~1.5" overlap for hot air weld.

8) When installing an *Outside Corner*, adhere the top portion of the corner to the vertical surface. Ensure the membrane is properly supported until adhesive has fully cured.

9) Hot air weld corners fully to deck membrane.

10) Secure vertical membrane to wall with termination bar. Apply continuous bead of caulk along the top edge of the bar.

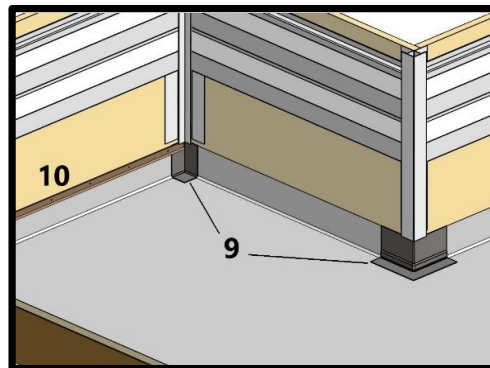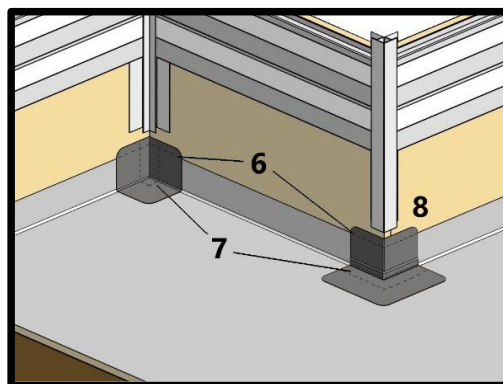

3912 E. Progress St, North Little Rock, AR. 72114 Phone: (888) 450-3325 (DECK)

DETAIL #:

DR-114

DRAWING TITLE:

**INSIDE / OUTSIDE
CORNER DETAIL**

UPDATED:

3/26/2026

SYSTEM:

FULLY ADHERED