

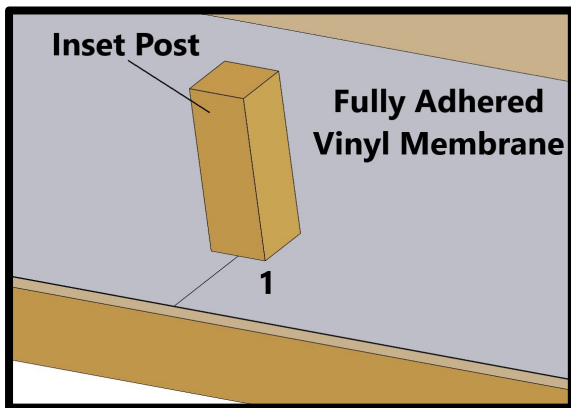


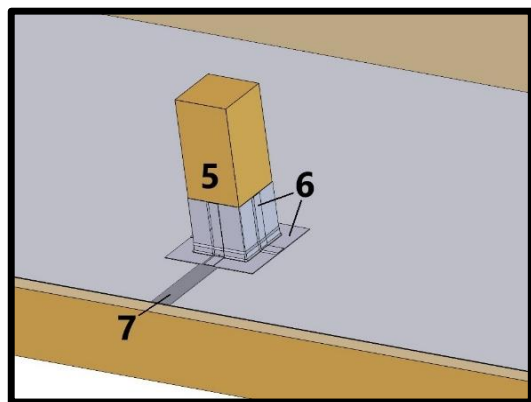


- 1) Measure and cut hole for post. Slit vinyl membrane from center of post to nearest membrane edge to allow vinyl to wrap around. Fully adhere the membrane once in position.

- 2) Measure inward from the outside edge of each side of the corner and trim off the excess material. For a 4x4 post, trim off approx 2.75". For a 6x6, trim off approx. 1.75".
- 3) Trim the flat portion of the corner so that it overlaps the membrane by 1.5" to 2".
- 4) Vinyl should wrap the post 4" to 6" up from the deck.

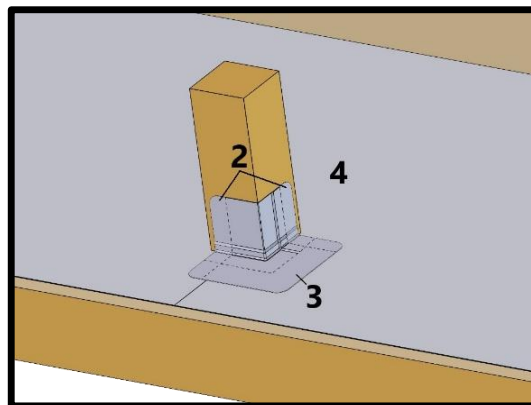

- 5) Use solvent-based adhesive to adhere the vertical portion of each corner to each side of the post.
- 6) Hot air weld each corner together with a minimum 1" overlap. Fully weld the horizontal part of each corner to the deck membrane.
- 7) Weld a 2" wide vinyl patch over the slit in the membrane.

- 8) Add a small bead of caulk to the edges of the corners around the perimeter of the post before finishing with a post sleeve.

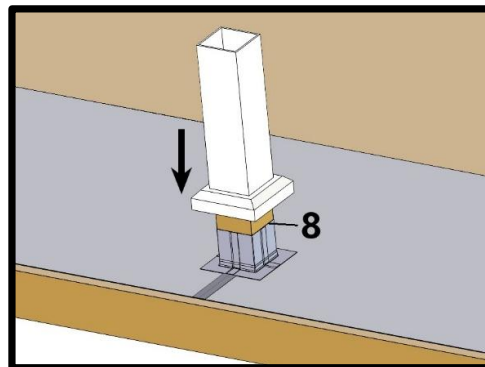

3912 E. Progress St, North Little Rock, AR. 72114 Phone: (888) 450-3325 (DECK)

DETAIL #:

DR-115

DRAWING TITLE:

**INSET POST WRAP
DETAIL**

UPDATED:

3/26/2026

SYSTEM:

FULLY ADHERED