

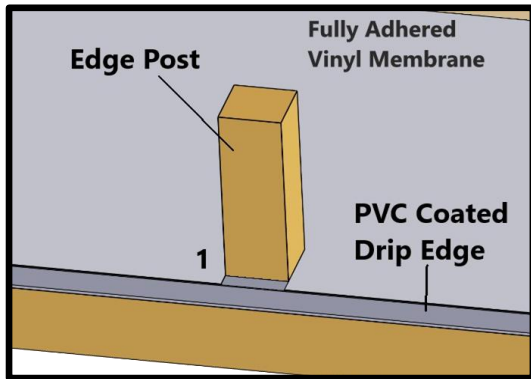


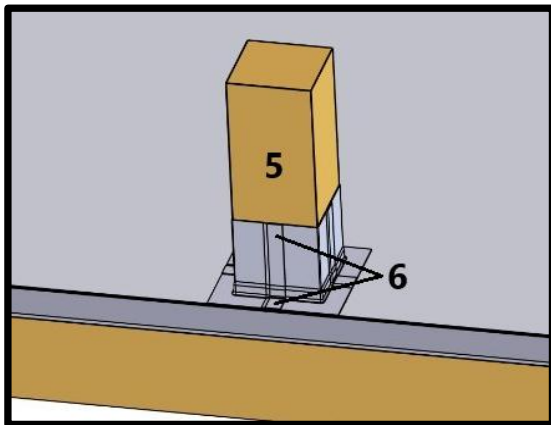


- 1) Measure and cut hole for post. Fabricated corners will cover the exposed gap in the vinyl membrane between the post and the edge of the deck. Fully adhere the membrane once in position.

- 2) Measure inward from the outside edge of each side of the corner and trim off the excess material. For a 4x4 post, trim off approx. 2.75". For a 6x6 post, trim off approx. 1.75".
- 3) Trim the flat portion of the corner even with the PVC coated drip edge.
- 4) Vinyl should wrap the post 4" to 6" up from the deck.

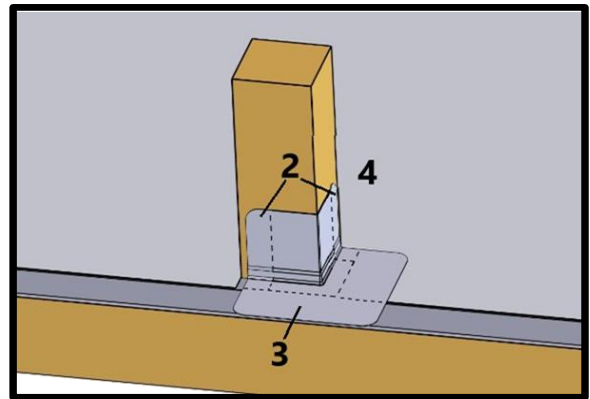

- 5) Use solvent-based adhesive to adhere the vertical portion of each corner to each side of the post.
- 6) Hot air weld each corner together with a minimum 1" overlap. Fully weld the horizontal part of each corner to the deck membrane and drip edge.

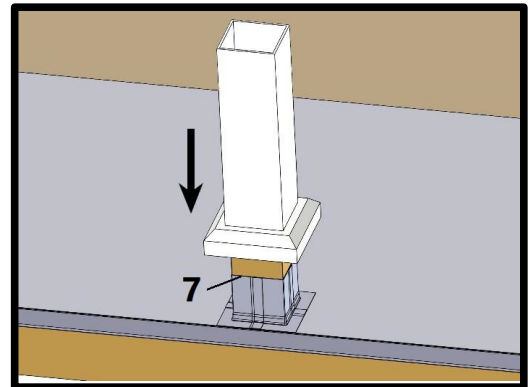

- 7) Add a small bead of caulk to the edges of the corners around the perimeter of the post before finishing with a post sleeve.



3912 E. Progress St, North Little Rock, AR. 72114 Phone: (888) 450-3325 (DECK)

DETAIL #:

DR-116

DRAWING TITLE:

**EDGE POST WRAP
DETAIL**

UPDATED:

3/26/2026

SYSTEM:

FULLY ADHERED