



CUMMINS

ISX15 CM2350


(2013-2017)

Electrical Wiring Diagrams



How to Read This Document

NAVIGATION

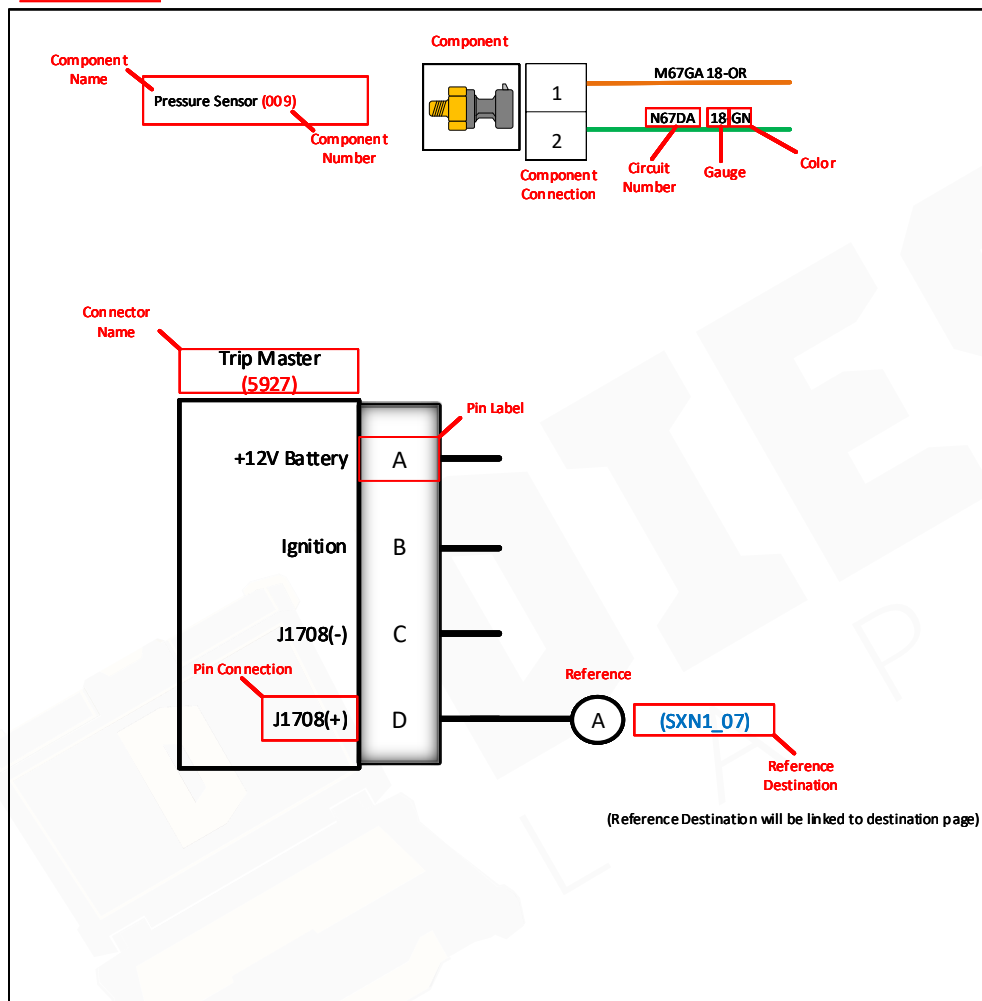

SYMBOLS

	Splice
	Circuit Breaker
	Fuse
	Diode
	Twisted Pair
	Passthrough Connector
	Ground
	Power

ABBREVIATION	COLOR
RD	 RED
WH	 WHITE
OR	 ORANGE
YL/YE	 YELLOW
PK	 PINK
BK	 BLACK
GY	 GRAY
PU/VT	 PURPLE
BR/BN	 BROWN
GN	 GREEN
BU/BL	 BLUE


Capital Abbreviation's Represent Wire Main Color
Lower Case Abbreviation's Represent Secondary Color












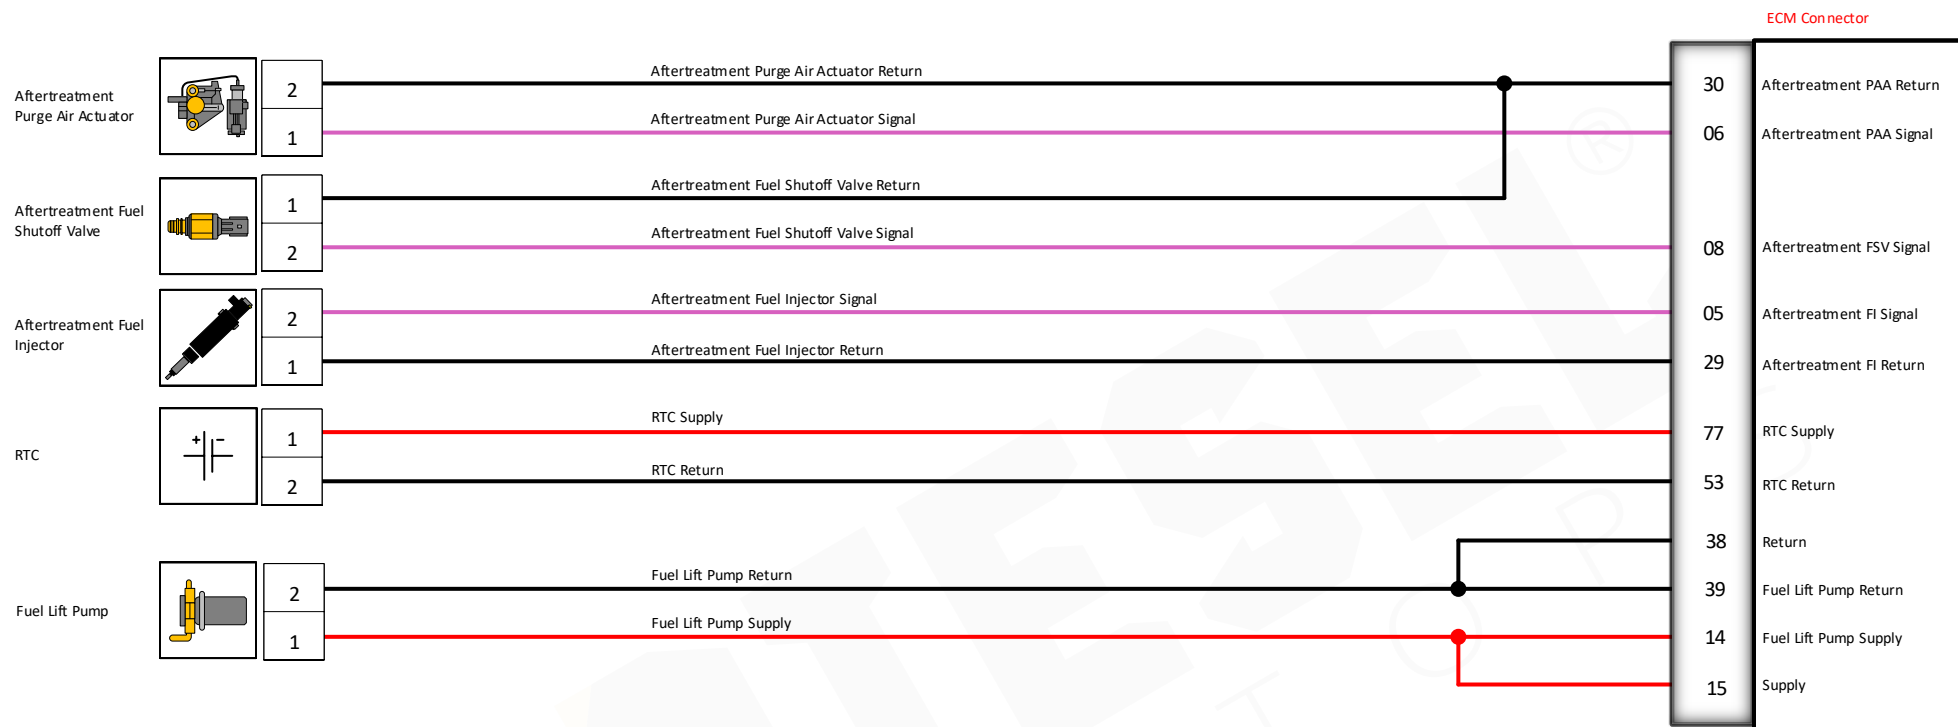

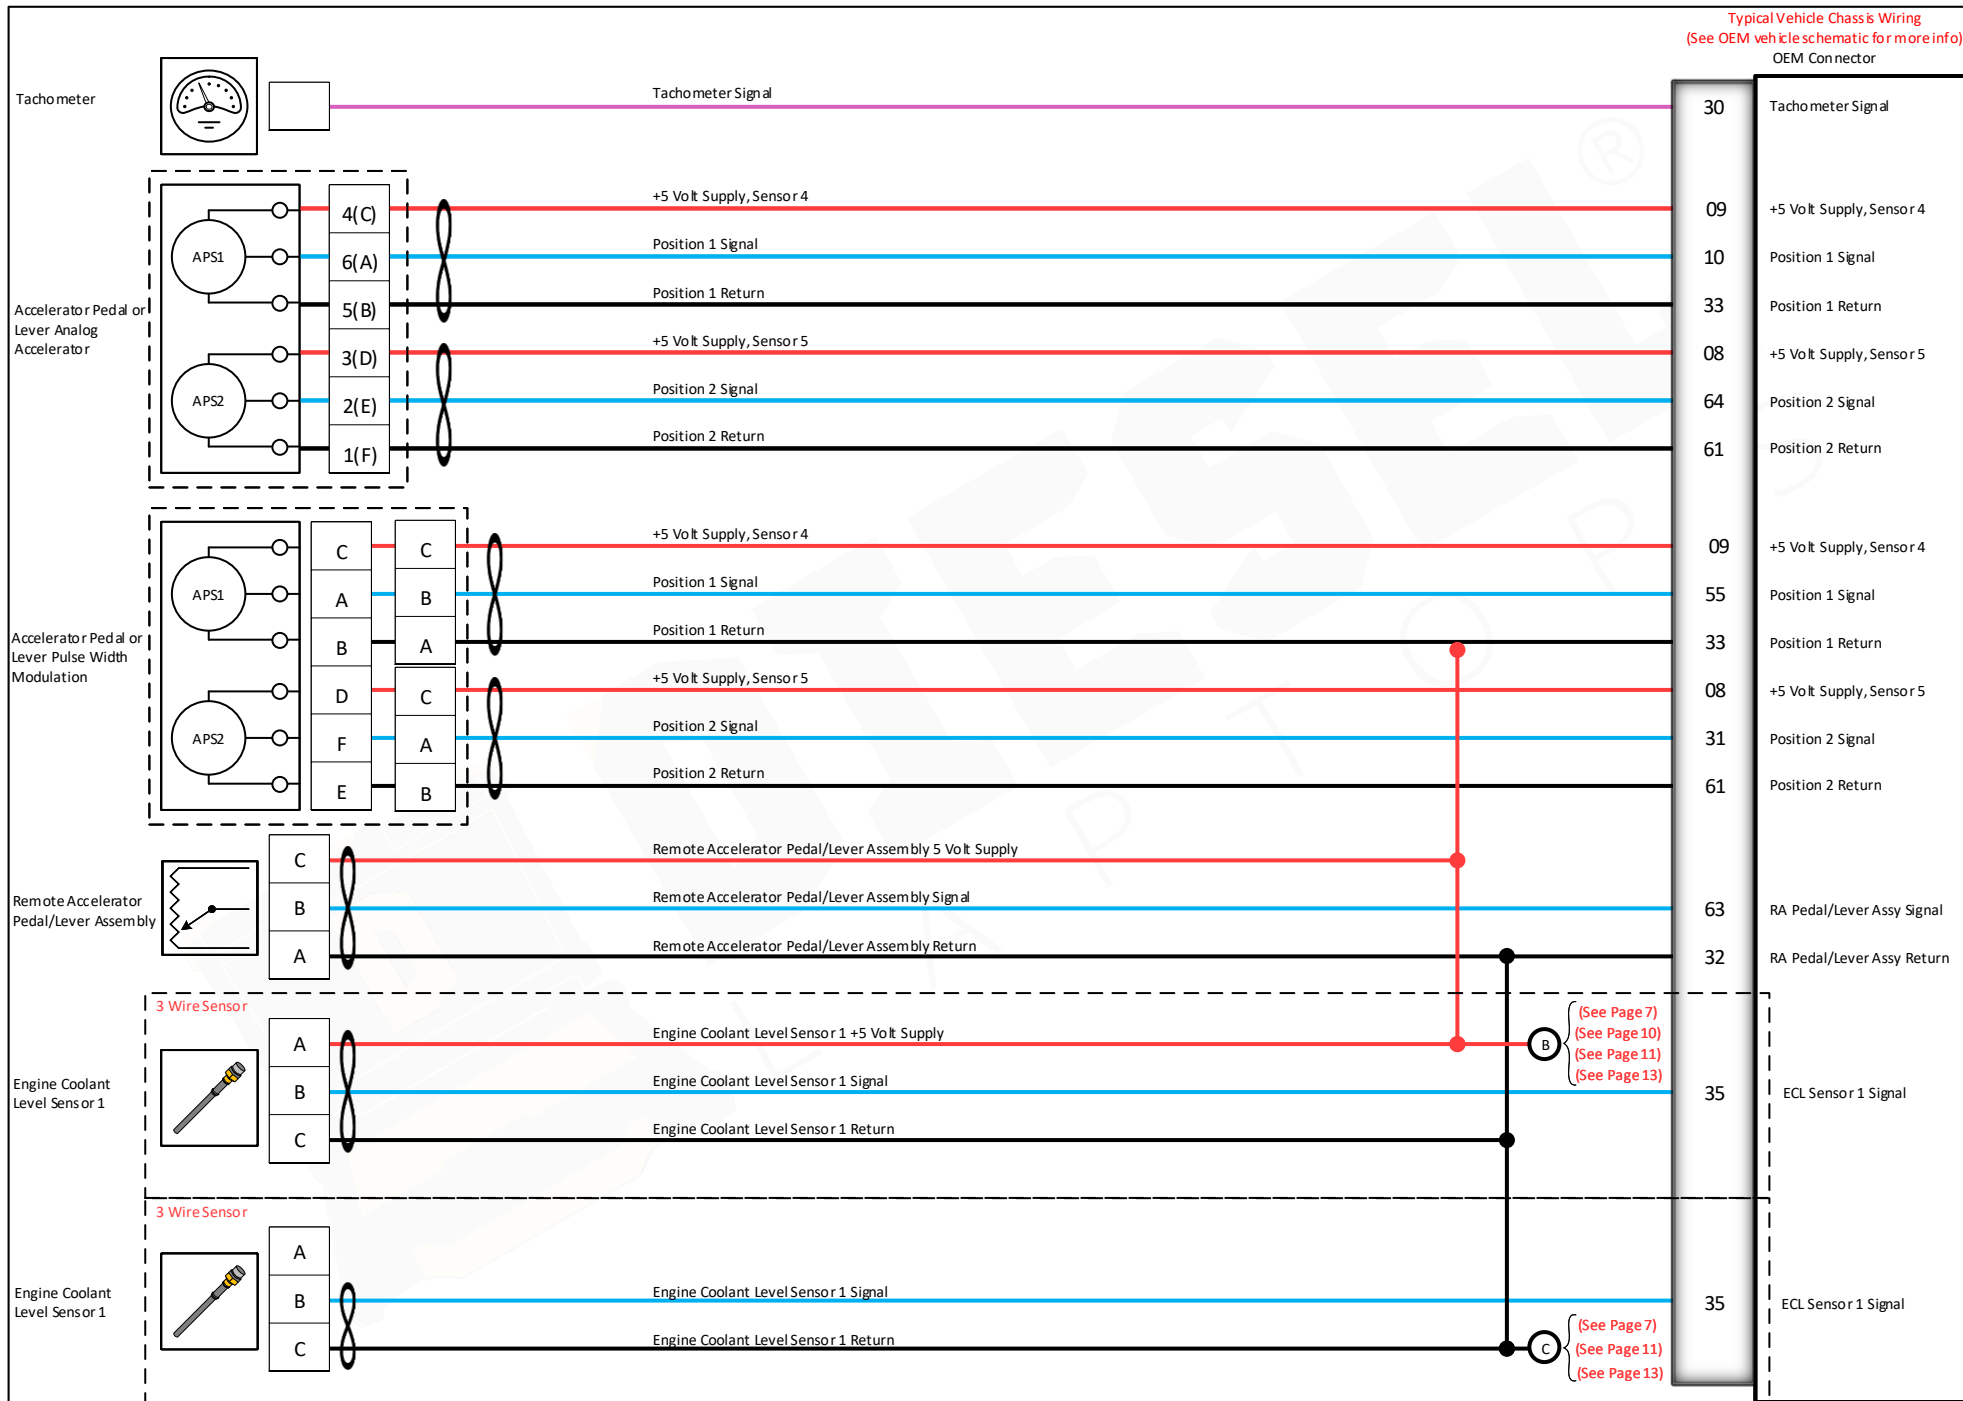

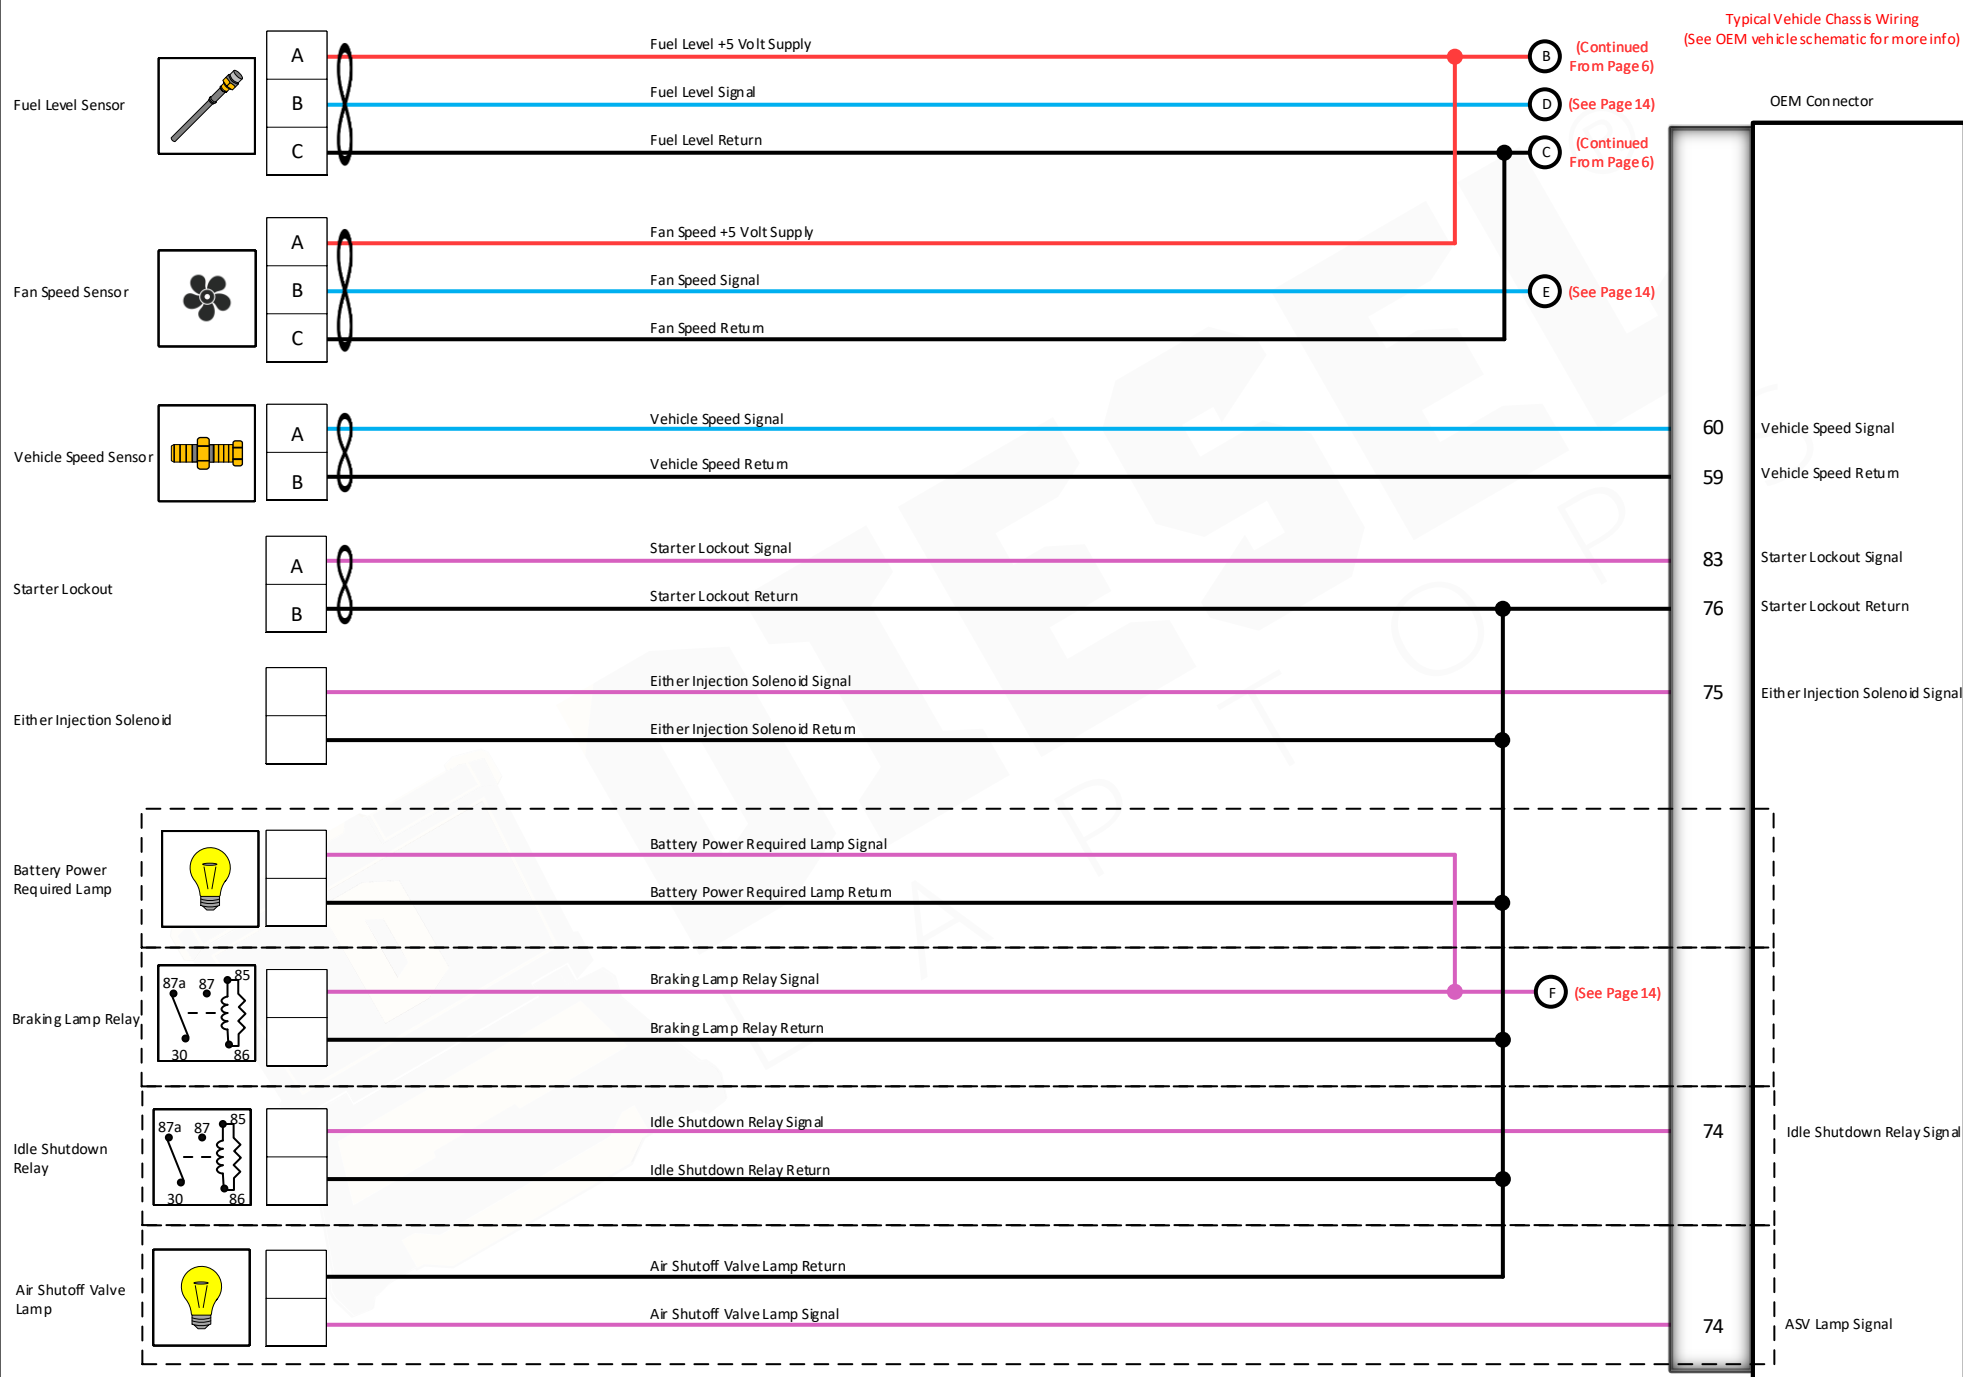


Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)

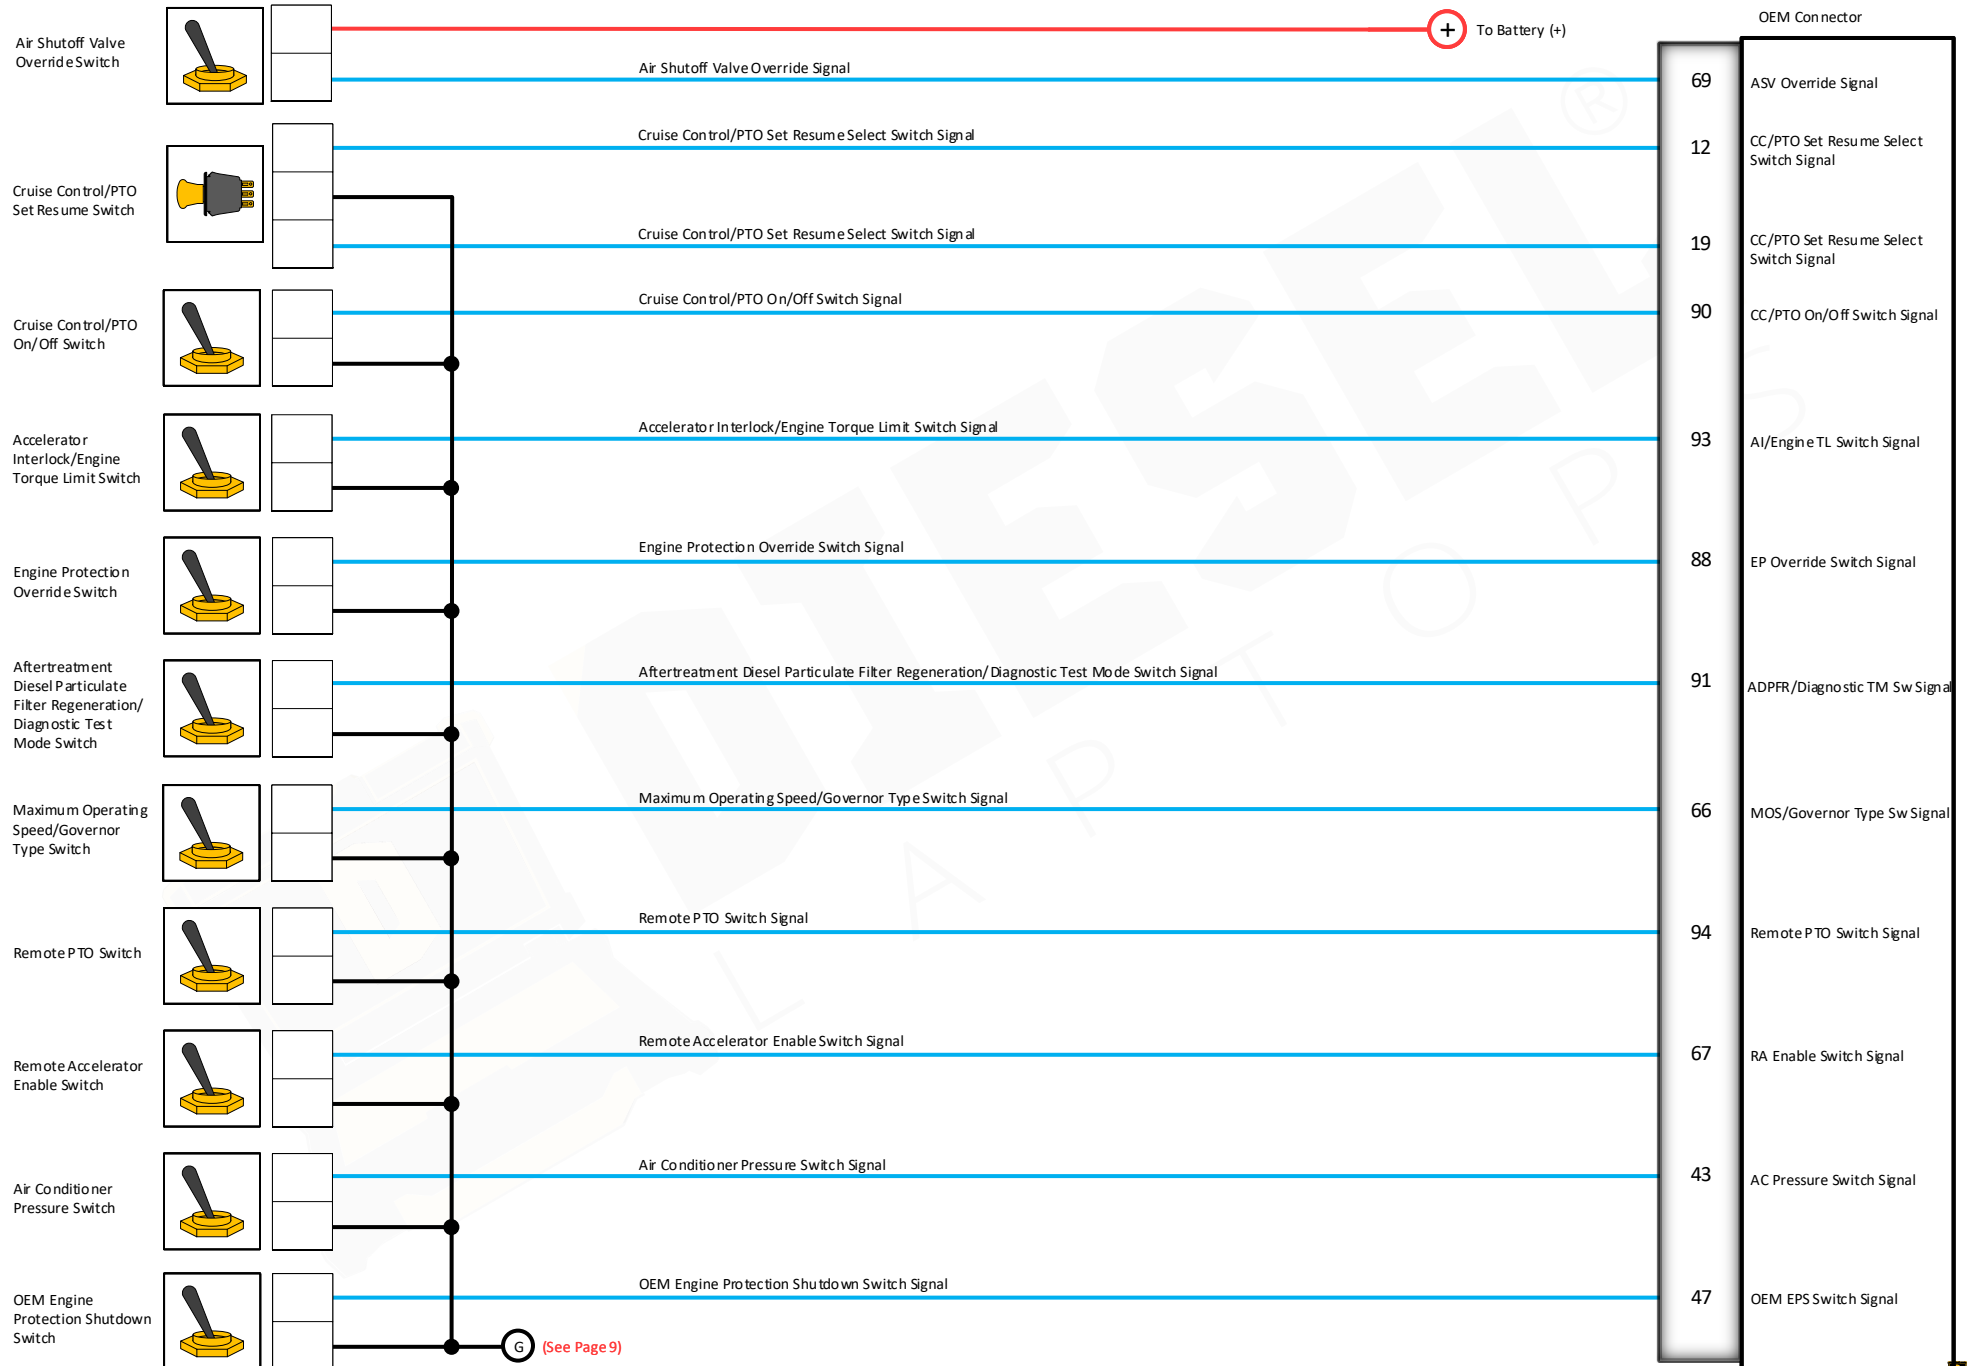


Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)


OEM Connector

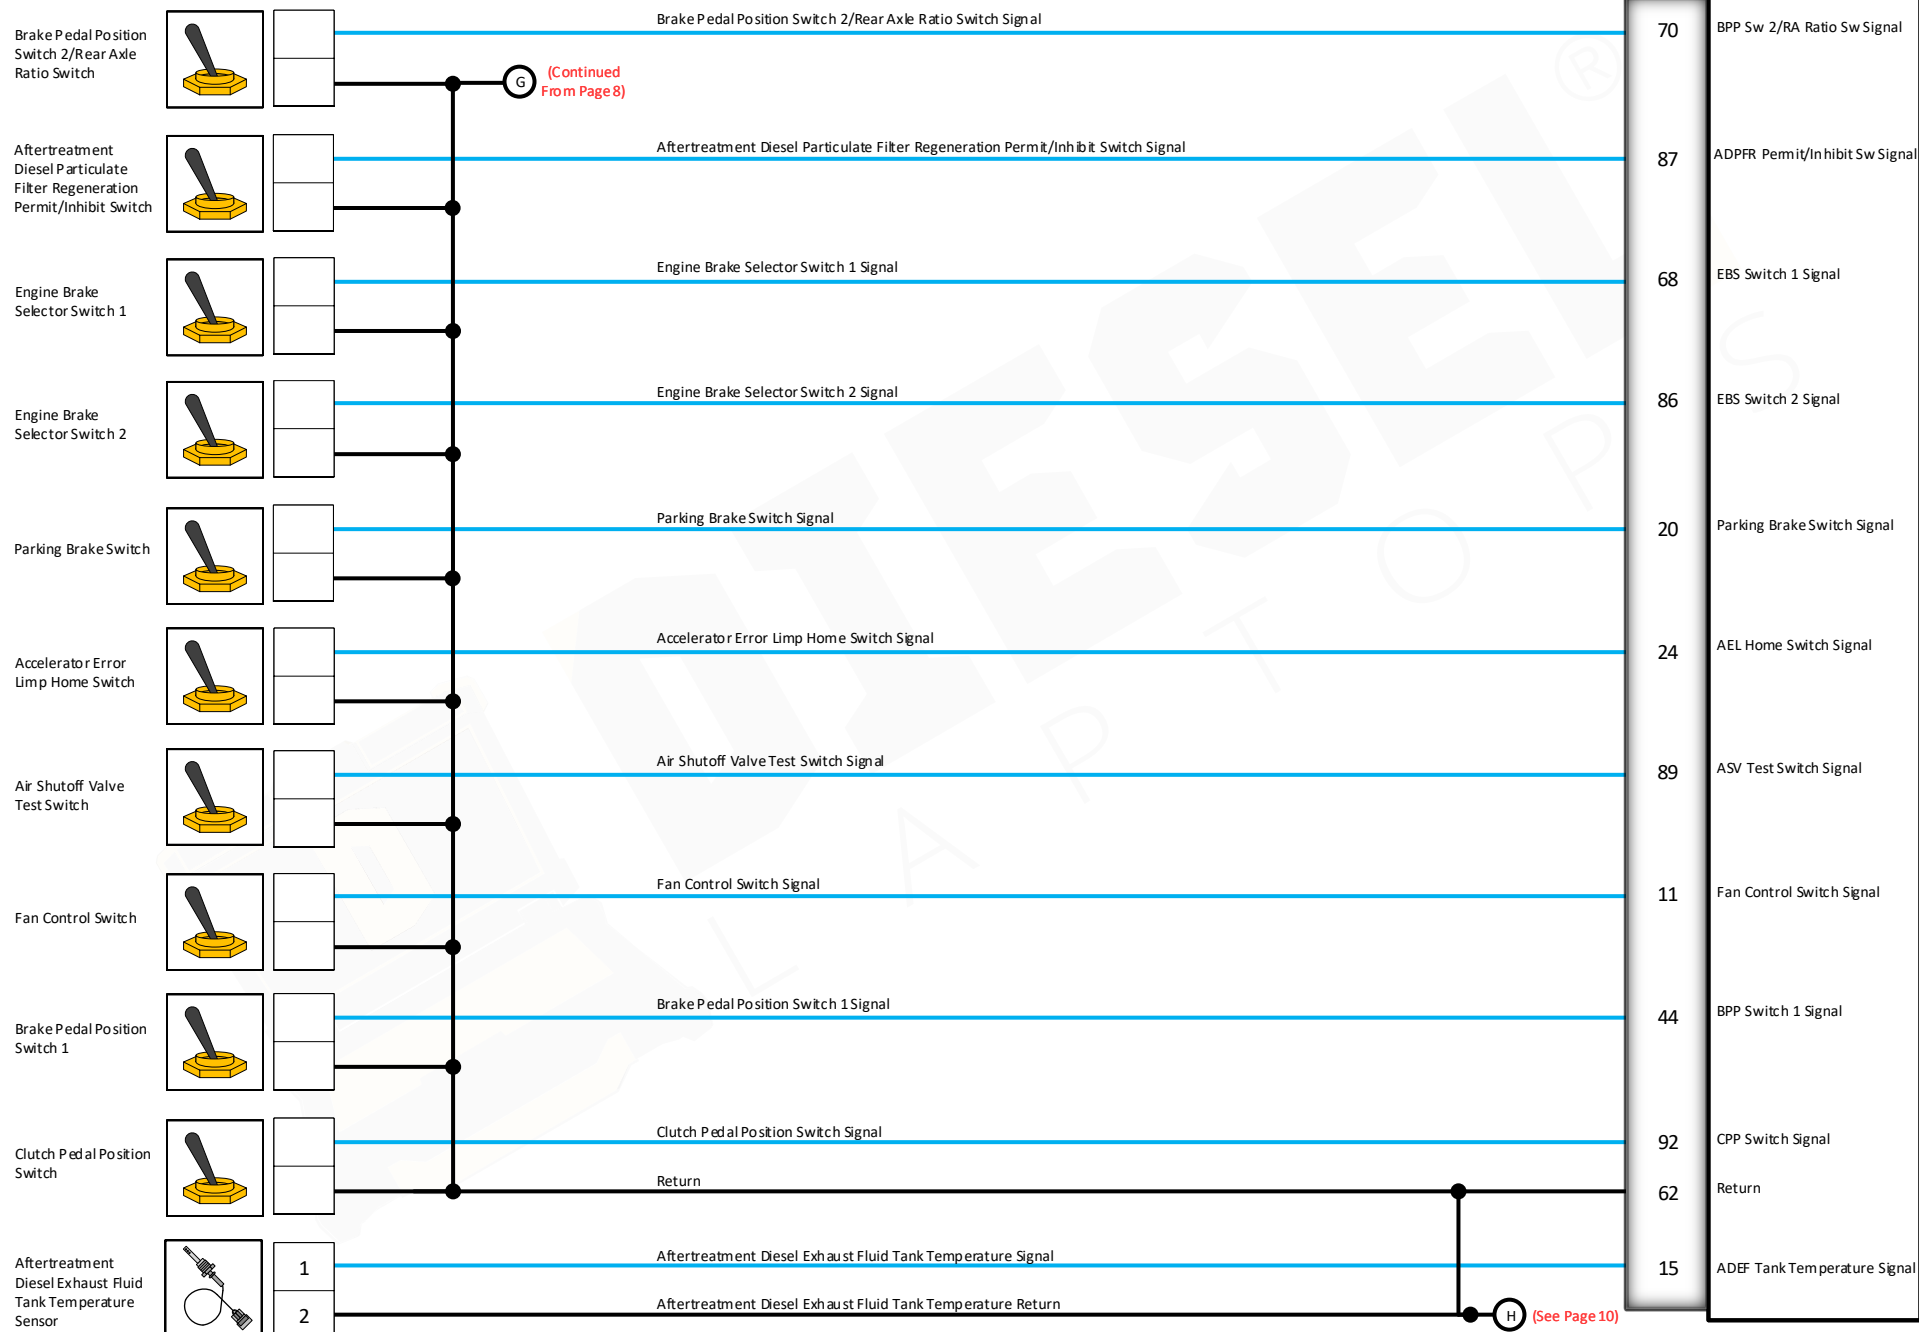


Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)

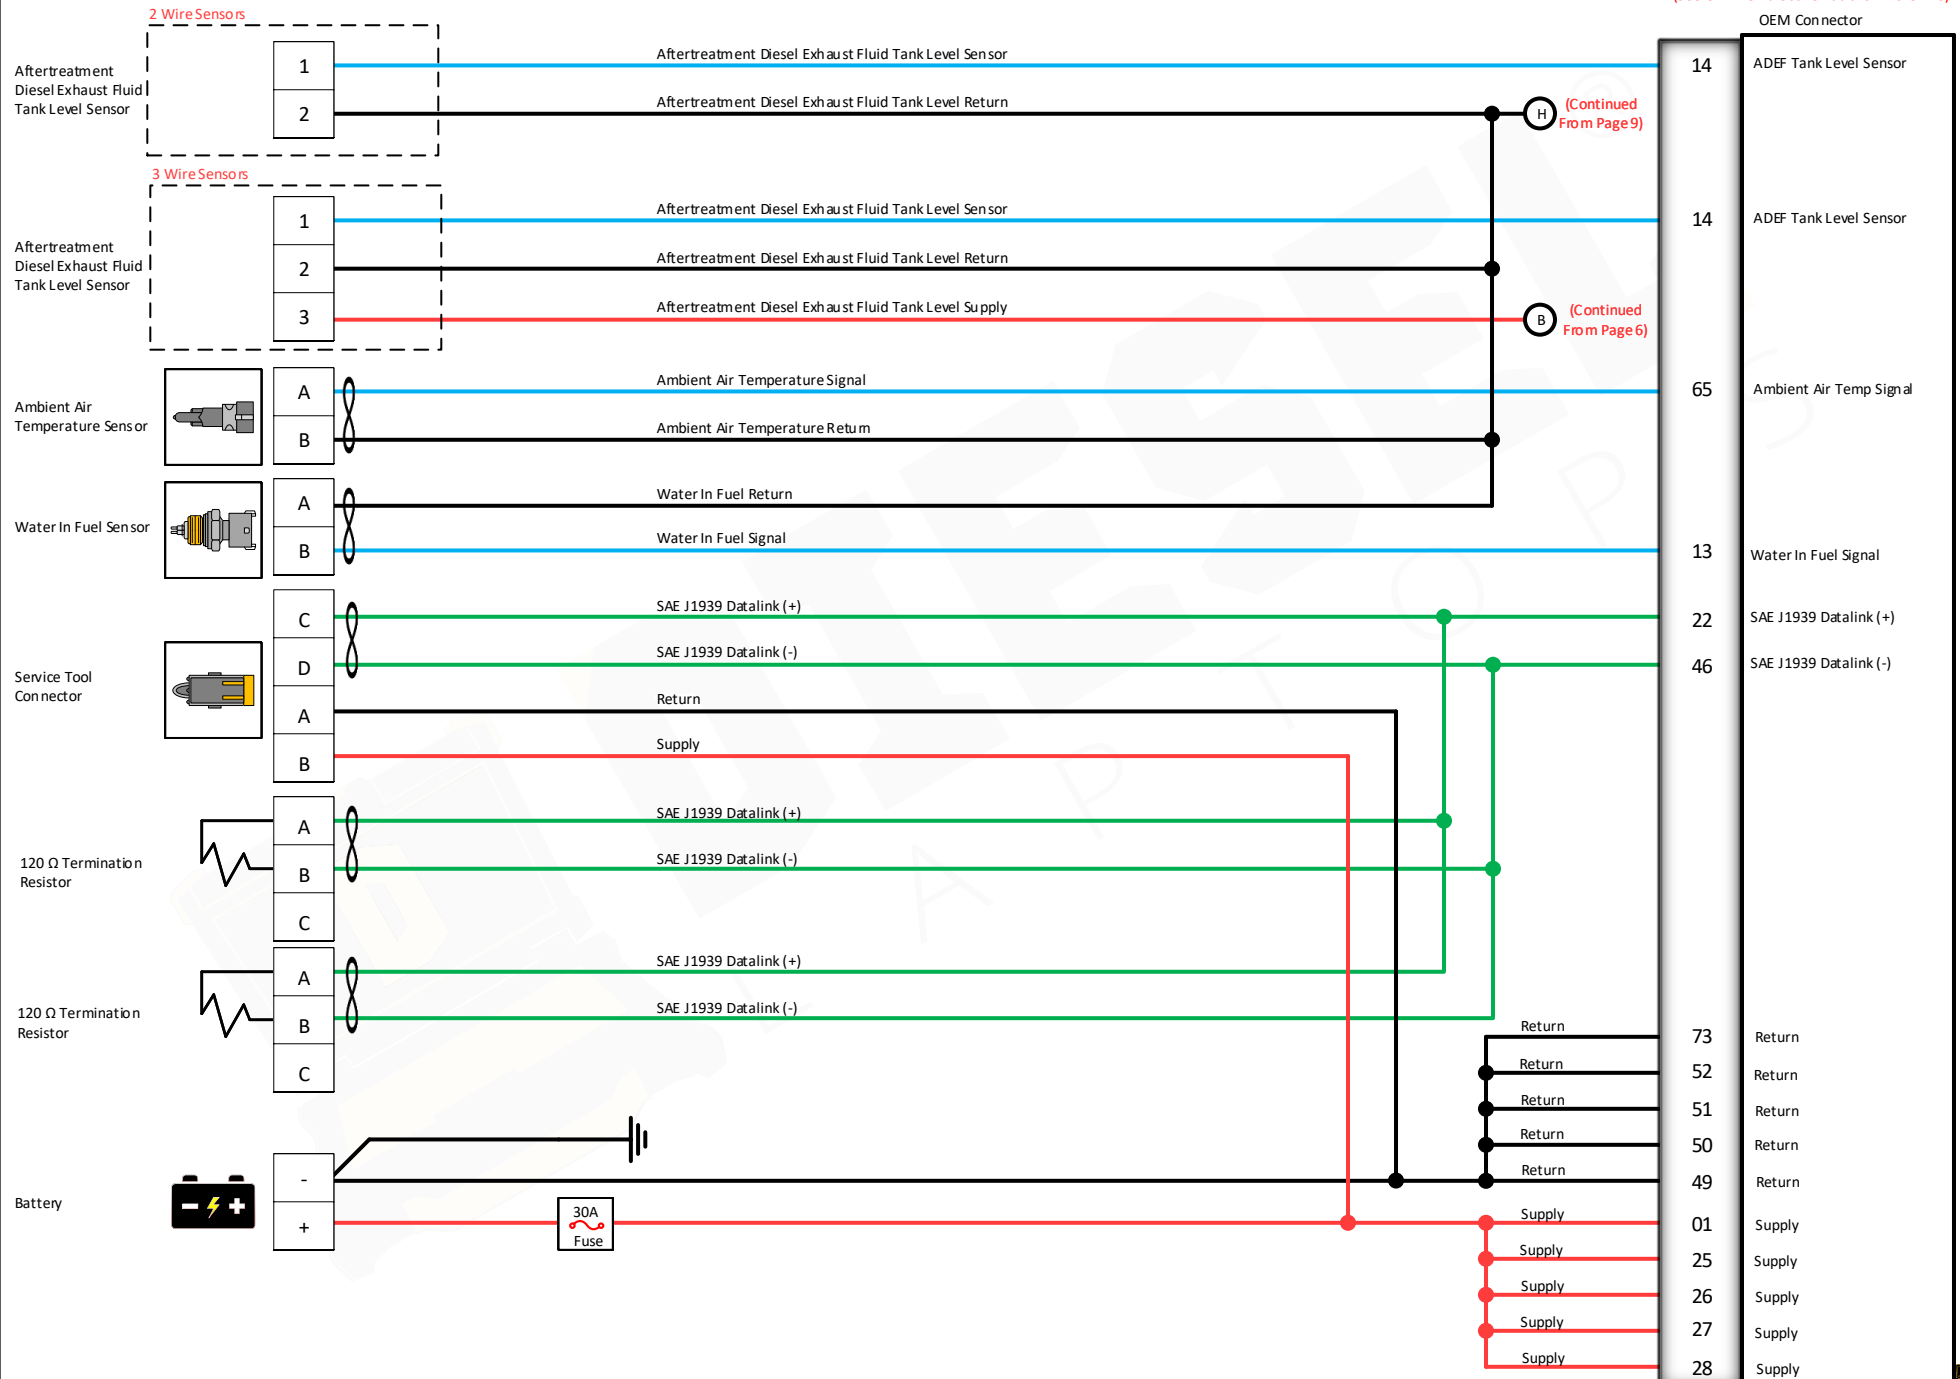

Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)

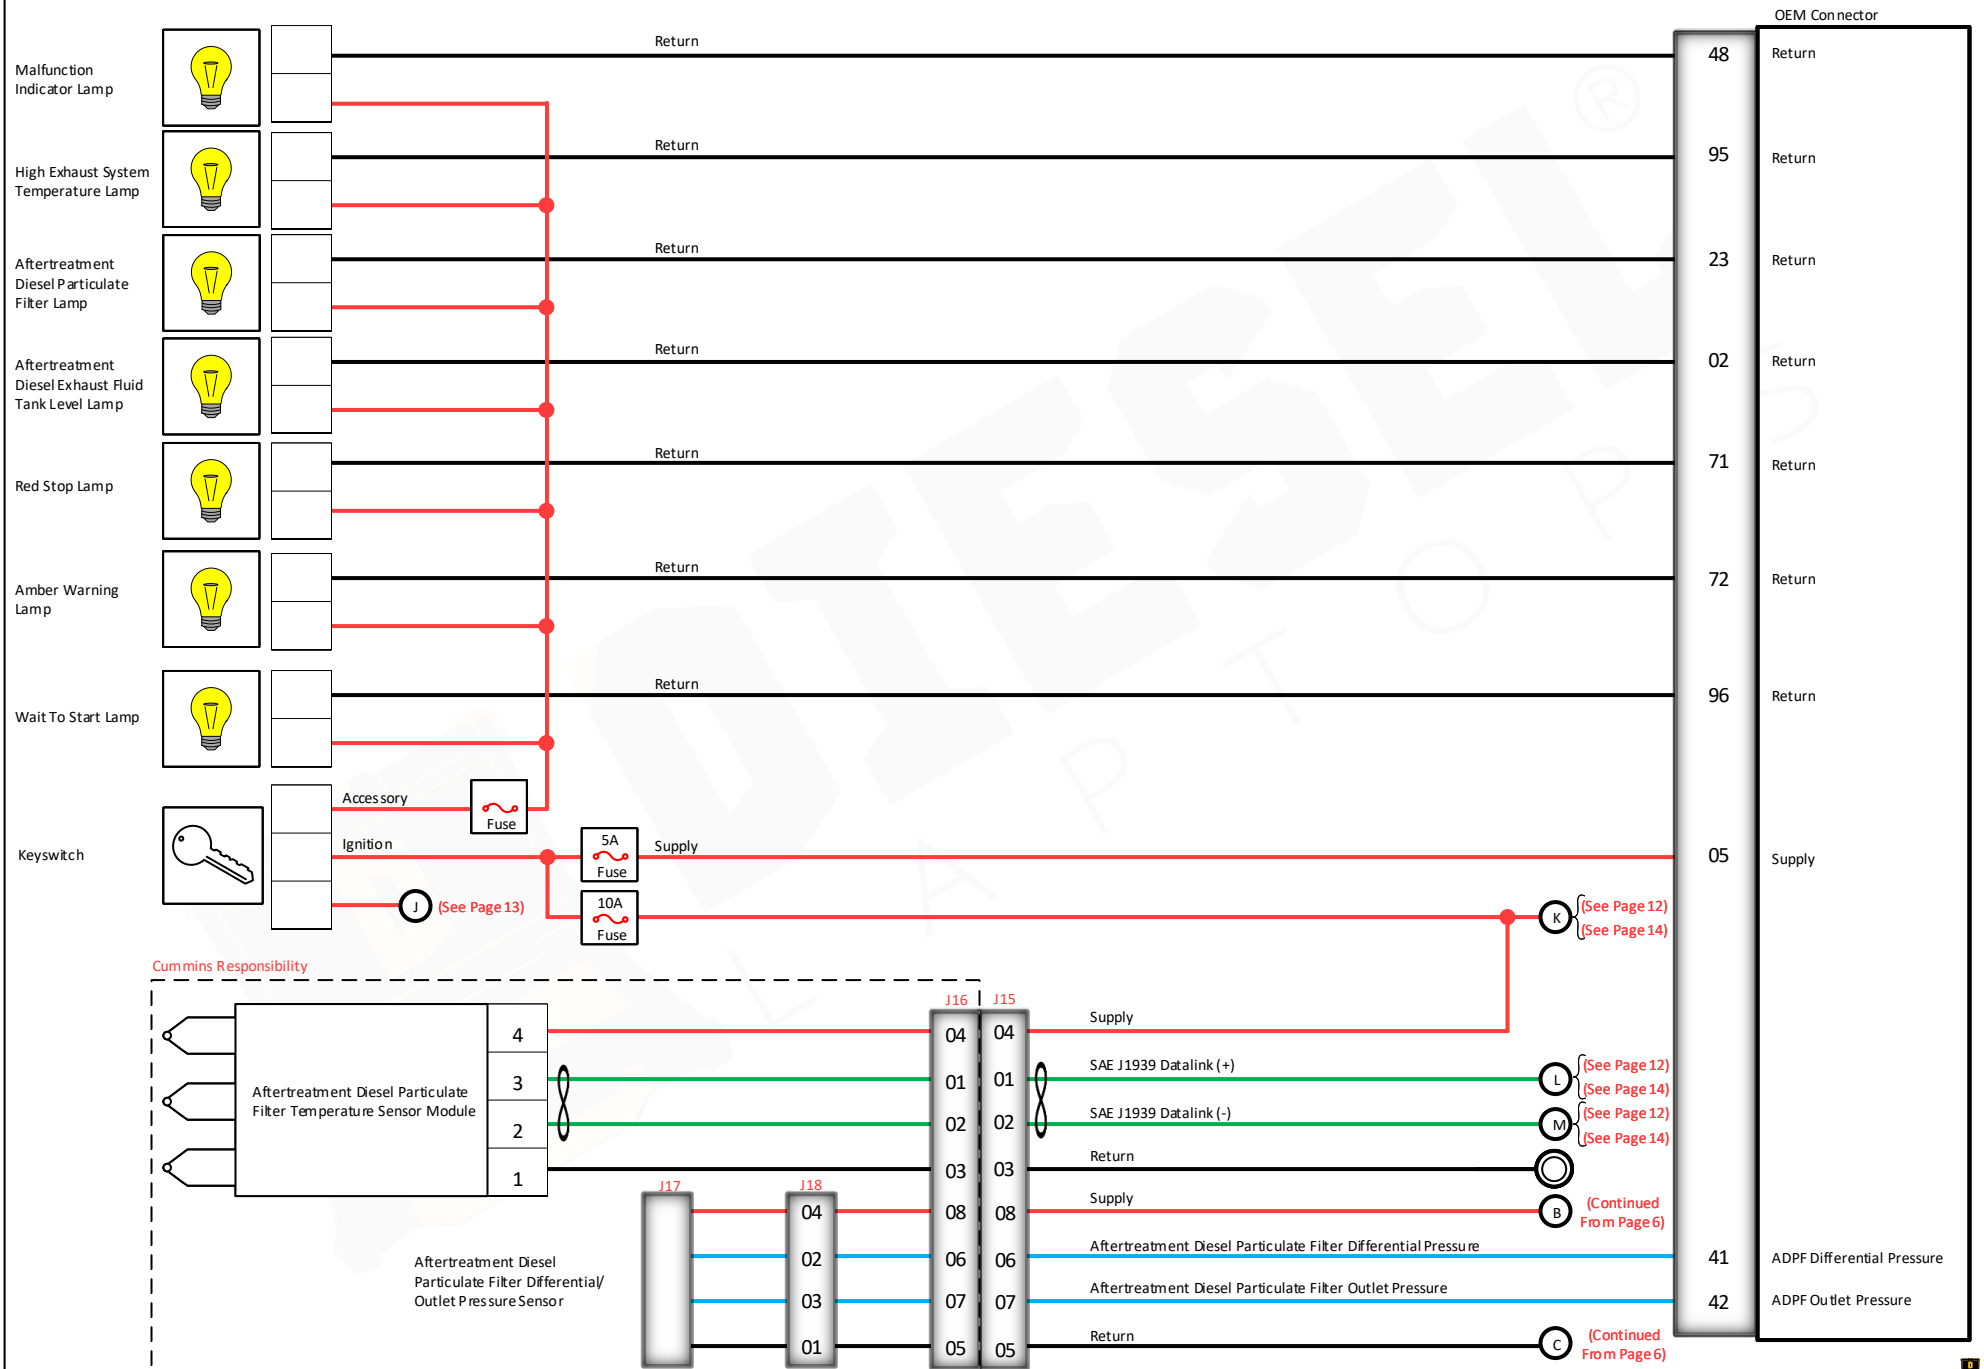


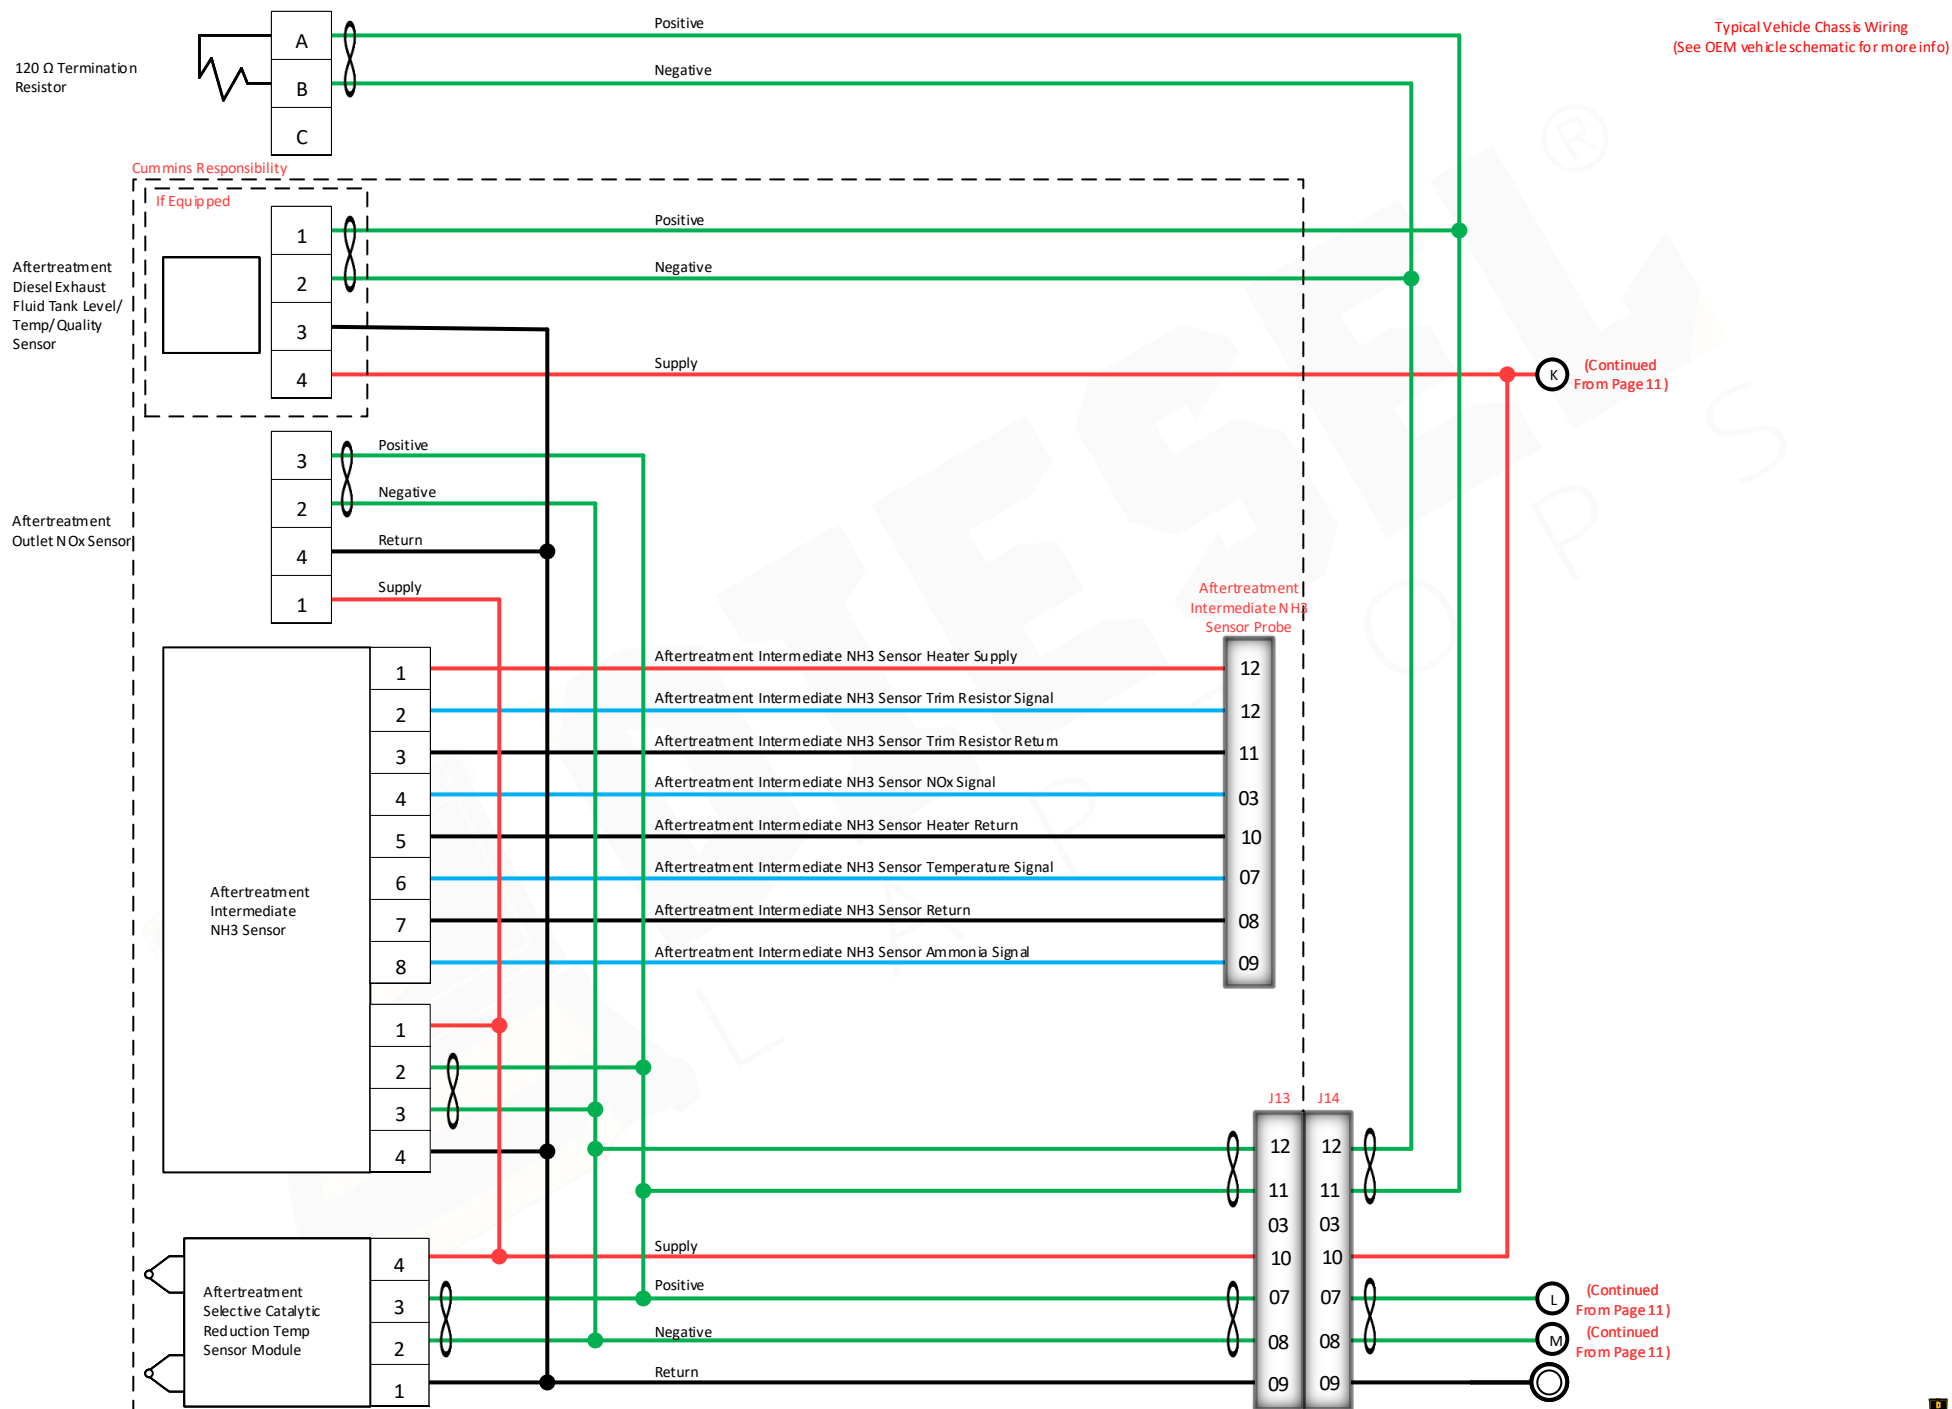



Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)

OEM Connector

Cummins Responsibility

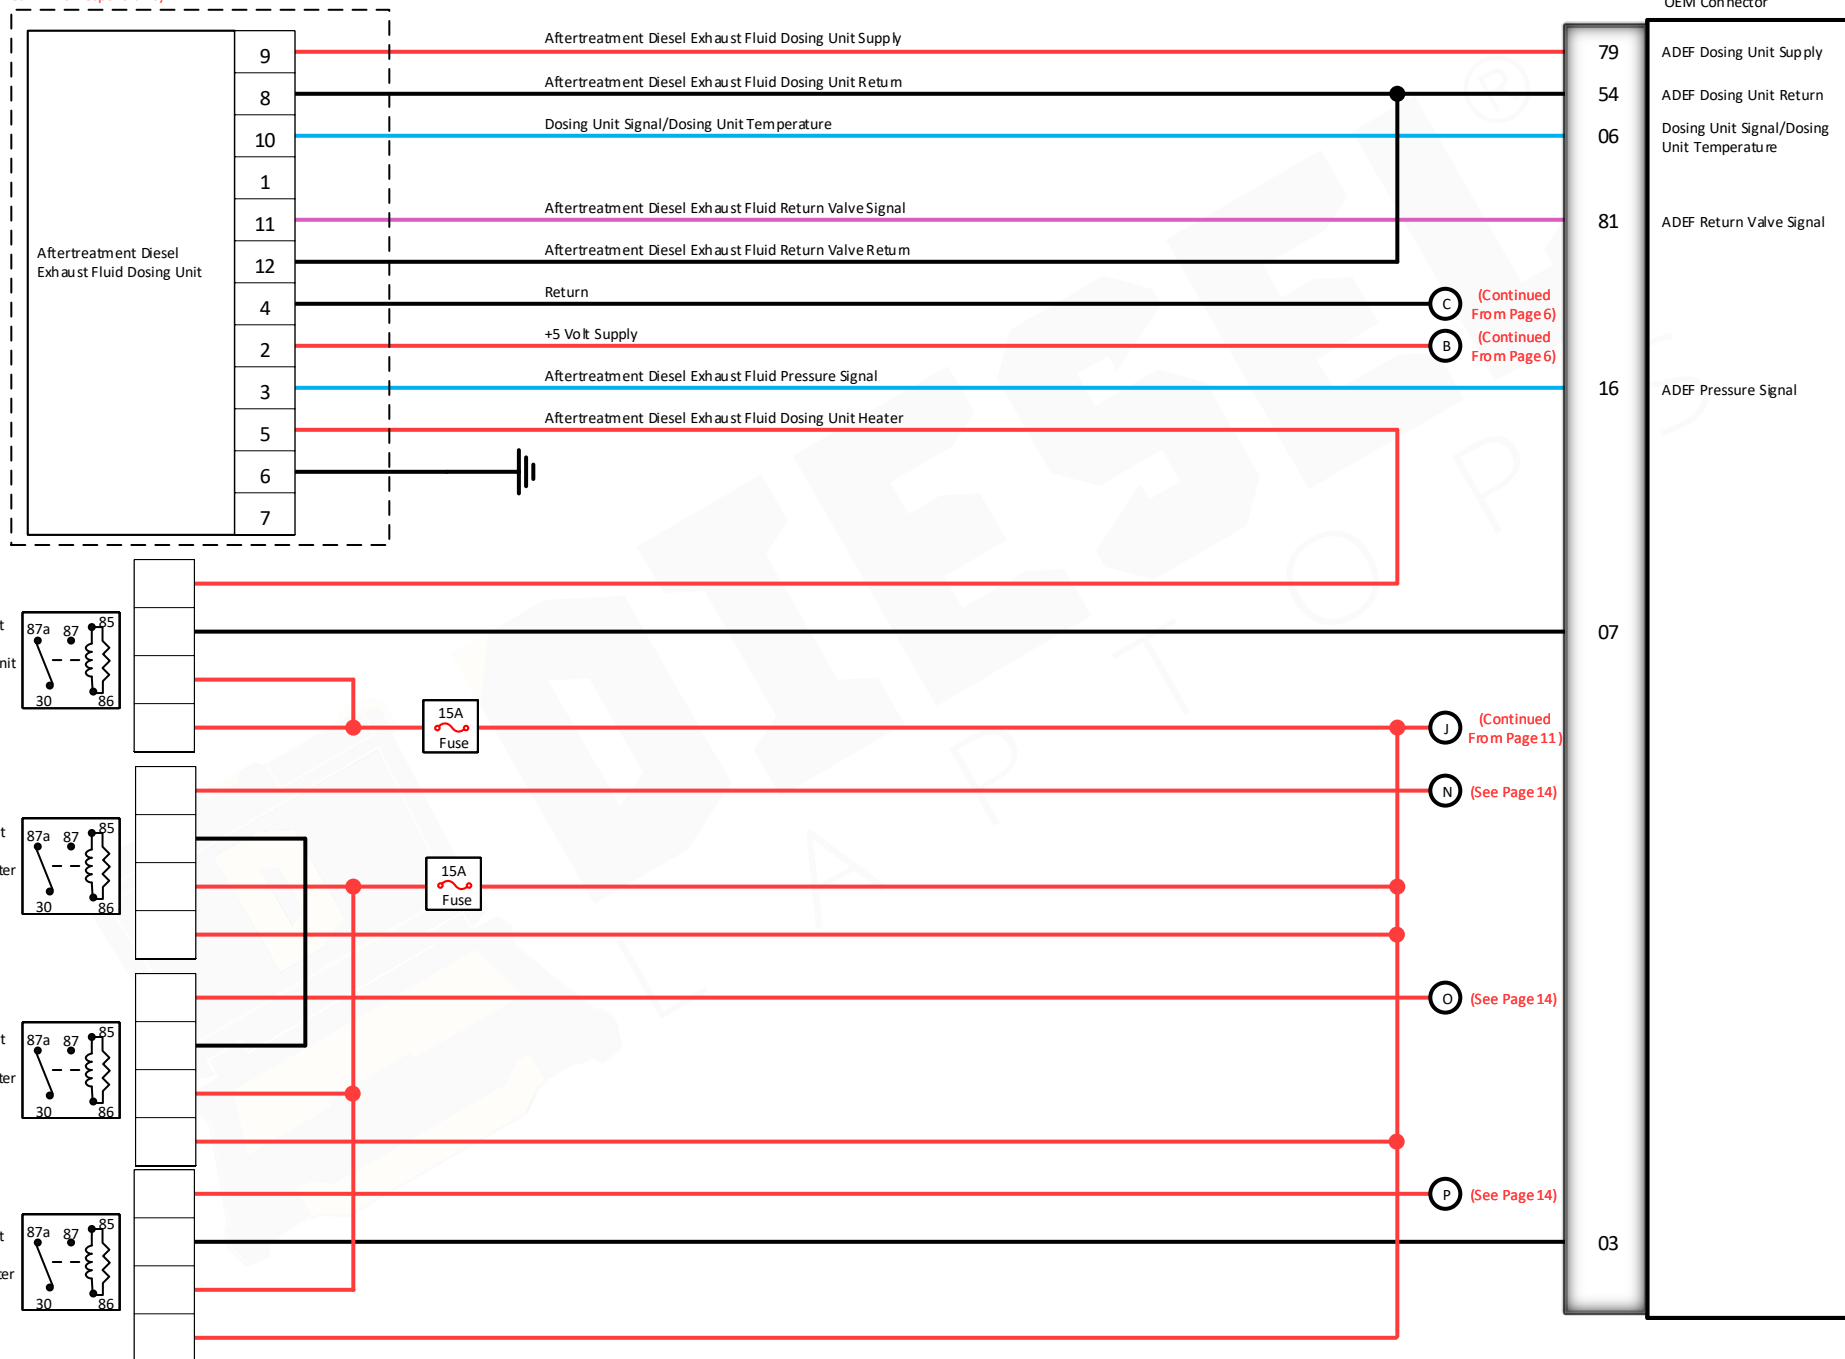


Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)

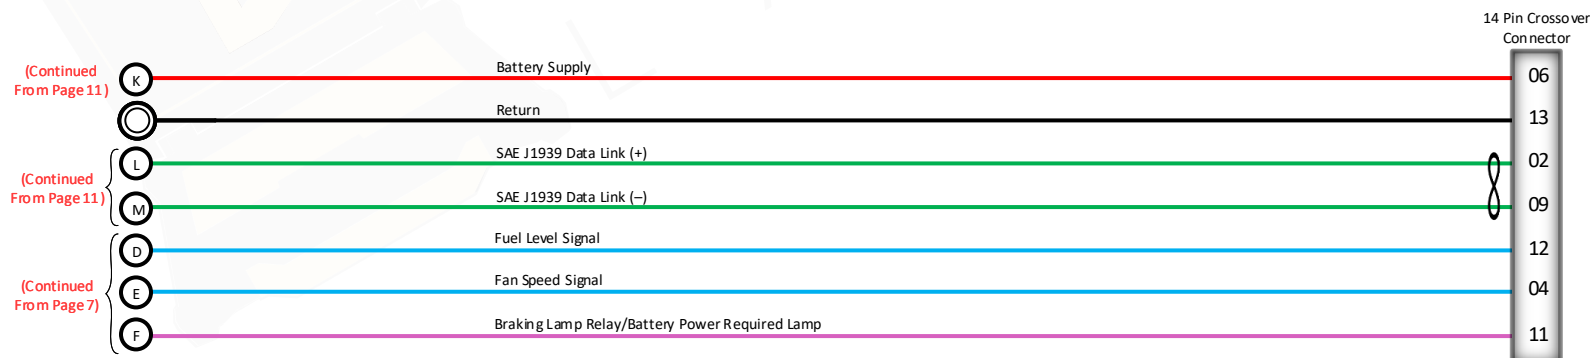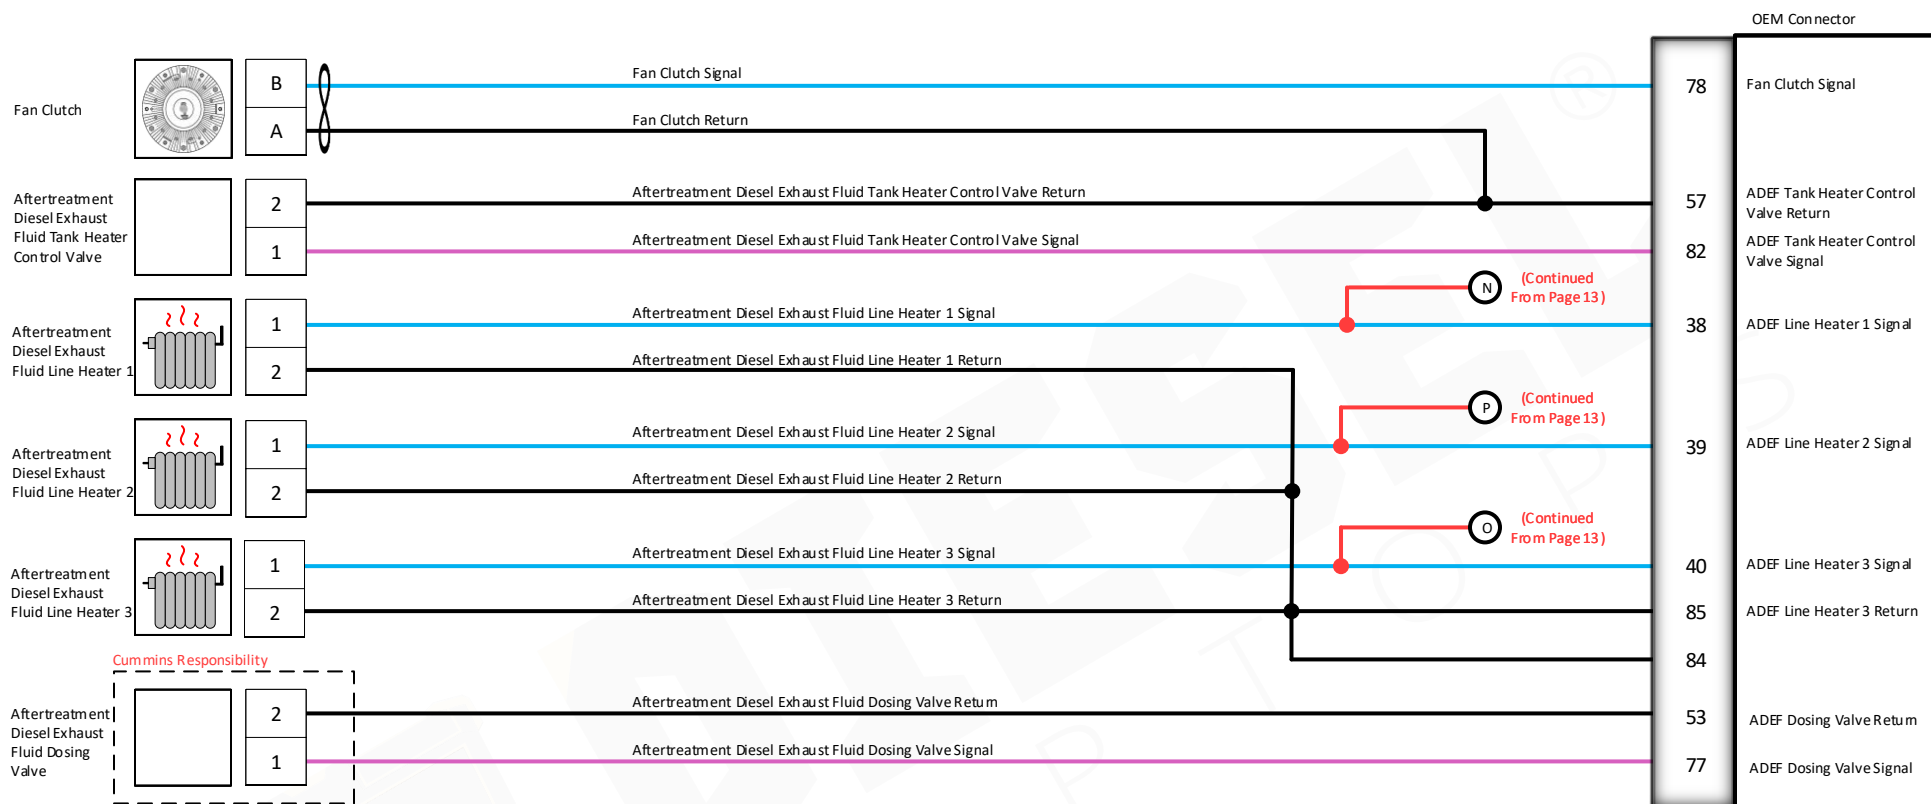


CONNECTORS

ECM CONNECTOR


OEM CONNECTOR

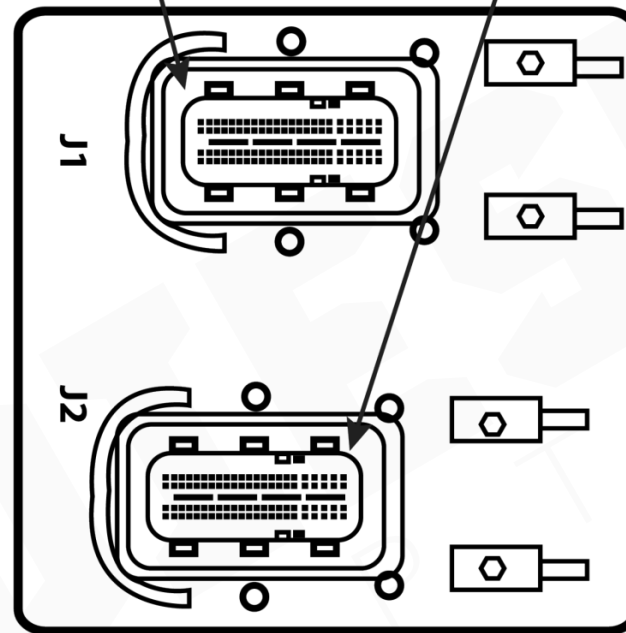

J1

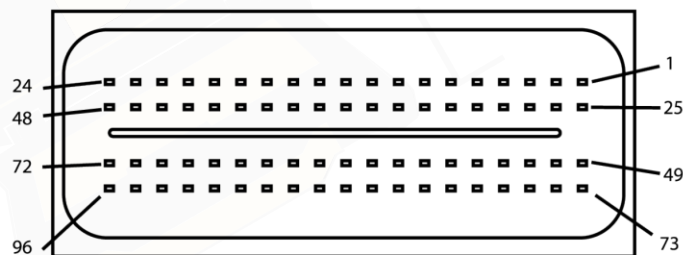

J2

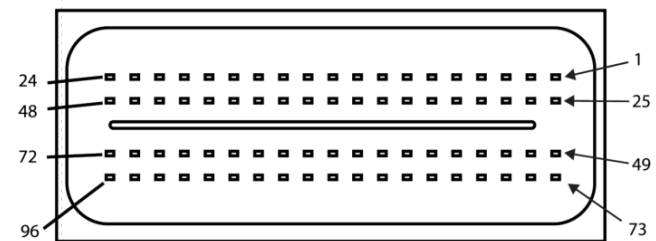



www.DieselLaptops.com

In the interest of continuing product development, Diesel Laptops reserves the right to change specifications within this document at any time without prior notice.
If you require additional reference materials or information, please contact Diesel Laptops.

WARNING: Diesel Laptops will not be held liable for any consequential or incidental damages including, but not limited to: Engine/vehicle downtime; loss of income or profits; damage potentially caused to other engines, vehicles, or property and any attorney fees. Diesel Laptops will not be responsible for any liability you may have in respect to yourself, another person, or entity. Diesel Laptops urges users to carefully follow all proper safety procedures before and during the application of this manual as a reference. Improper safety precautions can result in severe injury or death.

Diesel Laptops will not be held accountable for any inappropriate safety measures or faults made by the user while performing diagnostics.

