


VersaTables.com

Innovative Computer Furniture

Down View Classroom Desk

DV 36", 48", 60" & 72"

Assembly Instructions

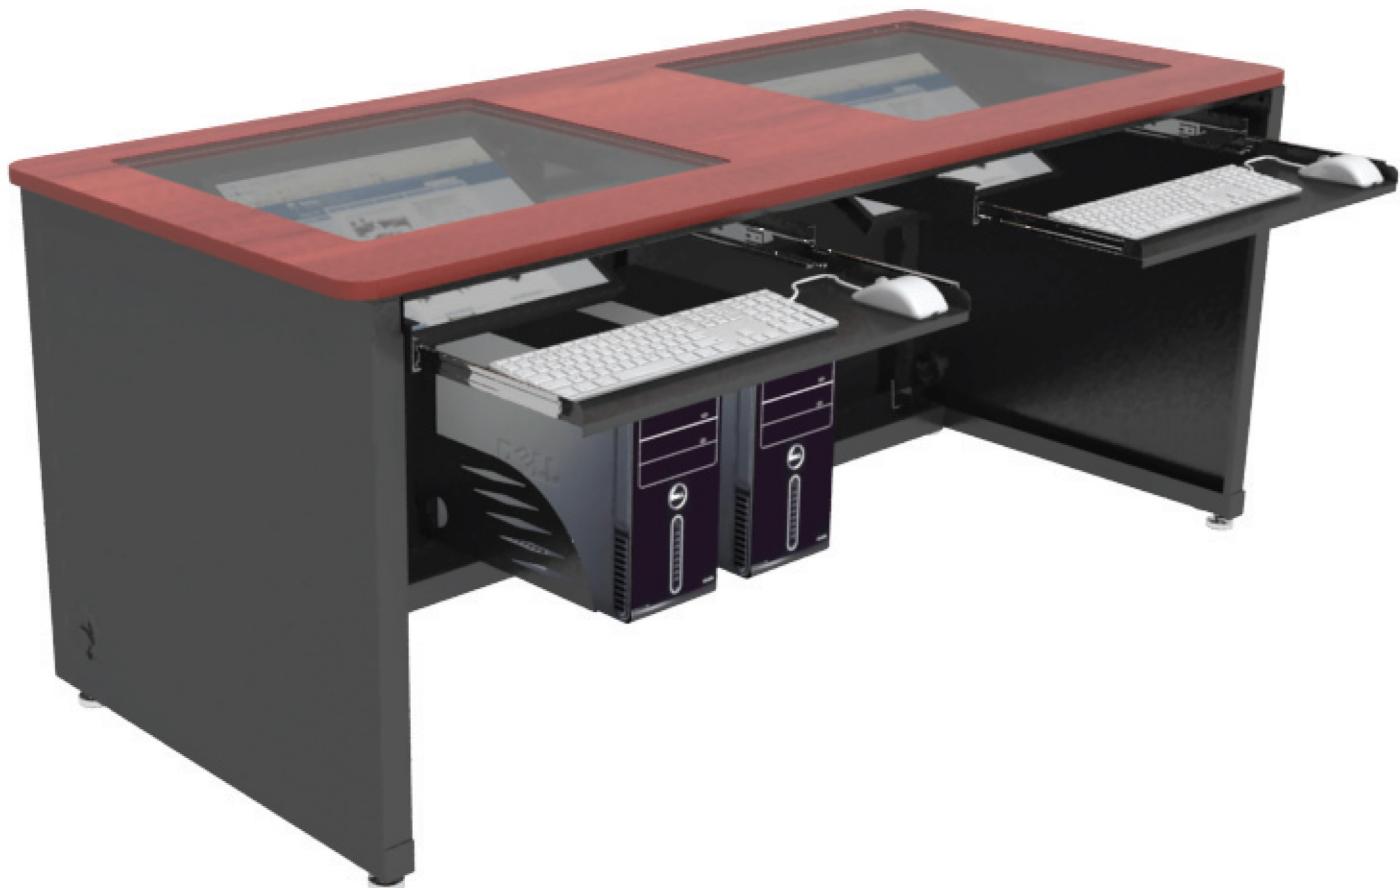

How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: service@versaproducts.com.

Revised: 03-14-14




VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061

Sales:
Call: 800-416-3961
Call: 310-353-7100
Fax: 310-353-7109

Customer Service:
Call: 888 416-3961
Call: 424-244-2155
service@versaproducts.com

Hardware & Parts List

Down View Classroom Desk

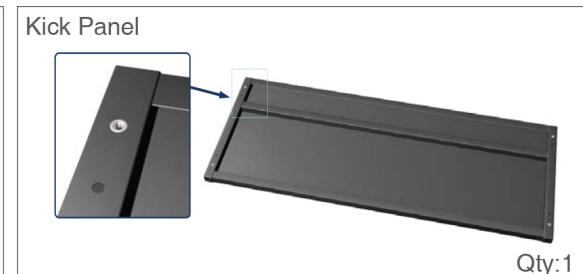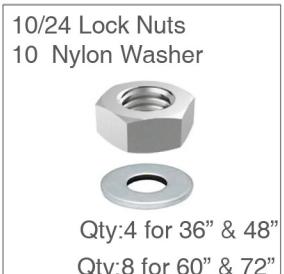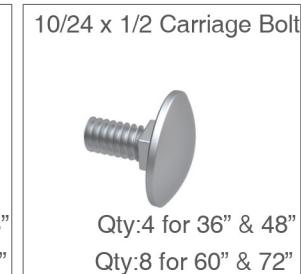

CPU-STAND IS INCLUDED JUST for Down View Classroom Desk 36" & 60"



Qty:4 for 36"
Qty:8 for 60"




Qty:4 for 36"
Qty:8 for 60"



Exploded View

Down View Classroom Desk

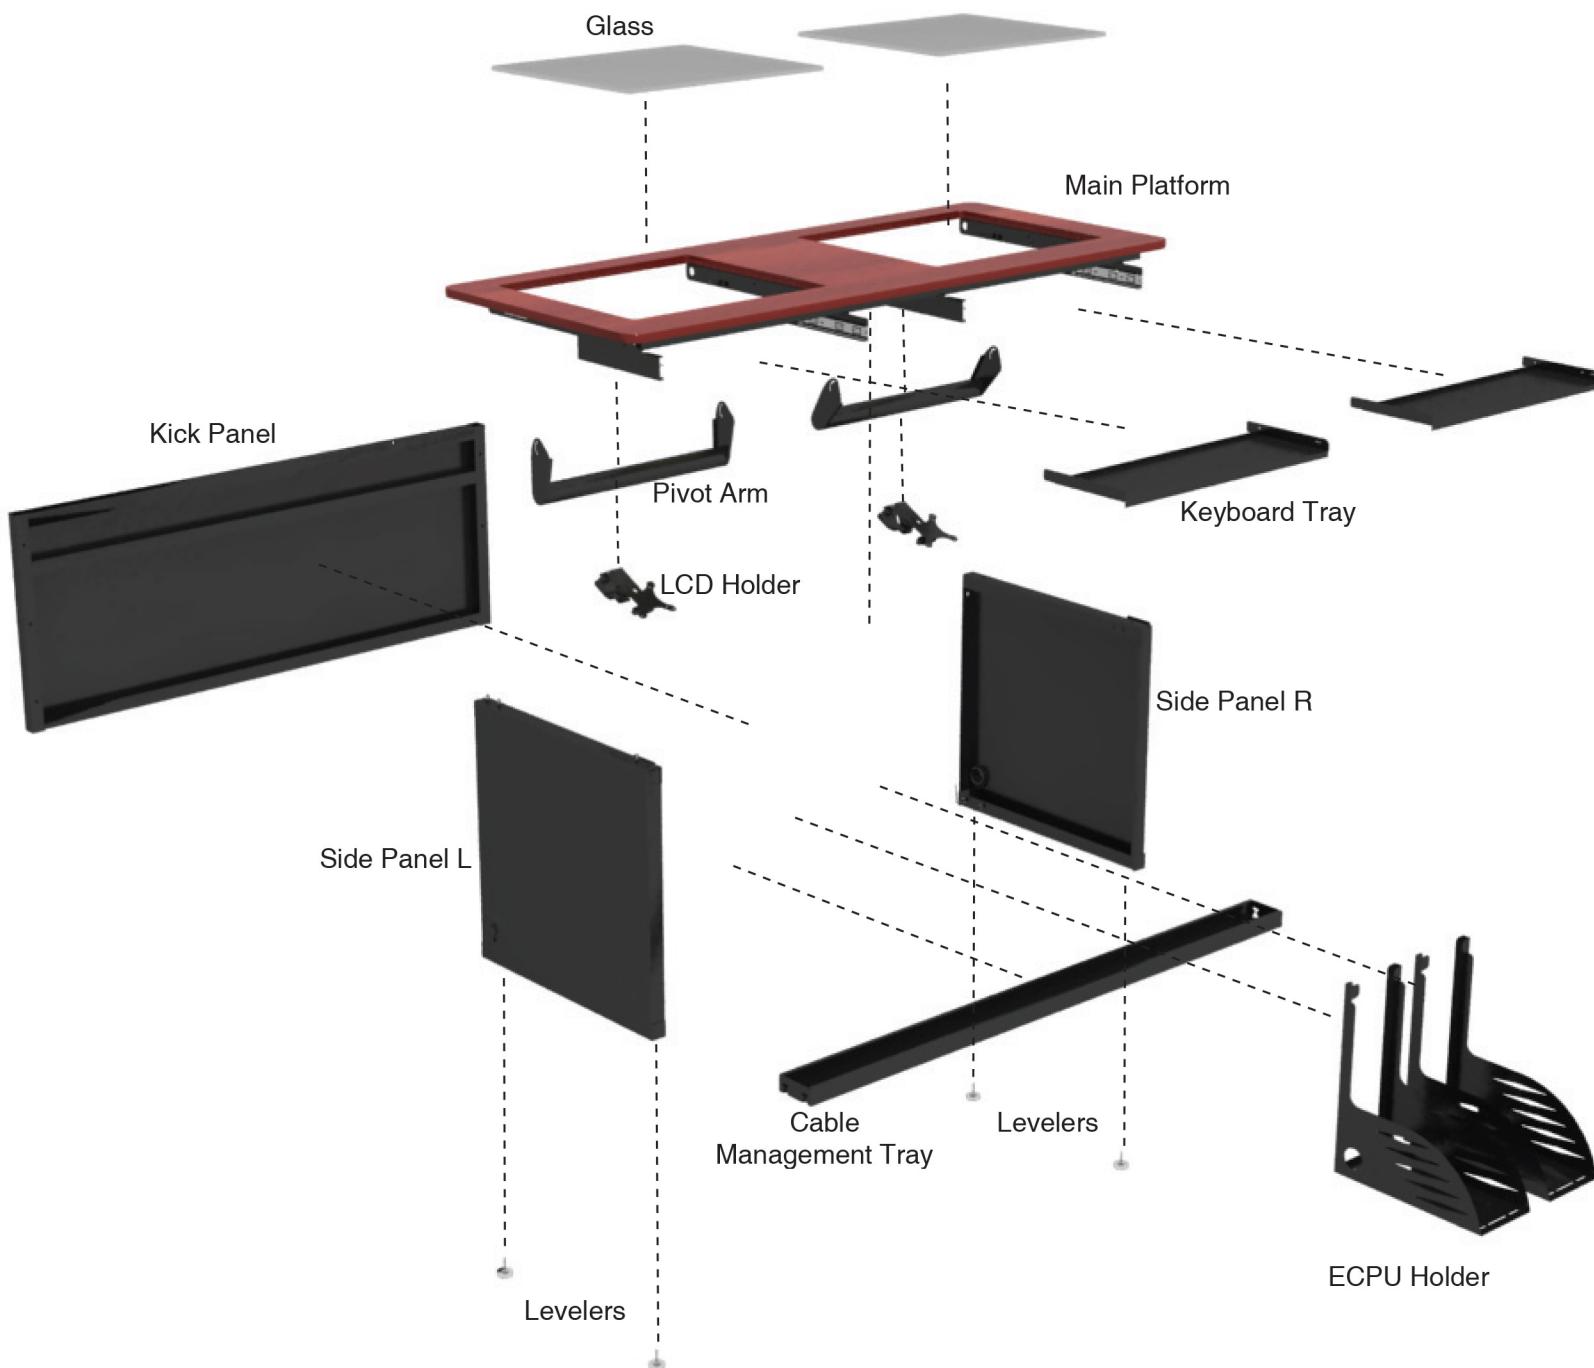

Assembly Step-by-Step

Down View Classroom Desk


Step 1 Attach Kick Panel

20mm Furniture Bolt



Qty:4

Place Kick Panel down on the ground and line the Side Frames up with the top of the Kick Panel (the sides and back should all be leveled). Secure using (4) 20mm Furniture Bolts.

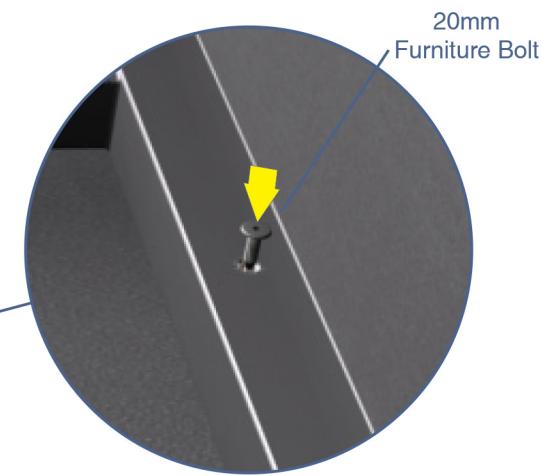


Step 2 Insert Levelers

Leveling Glide



Qty:4

Insert Levelers into Side Panels.

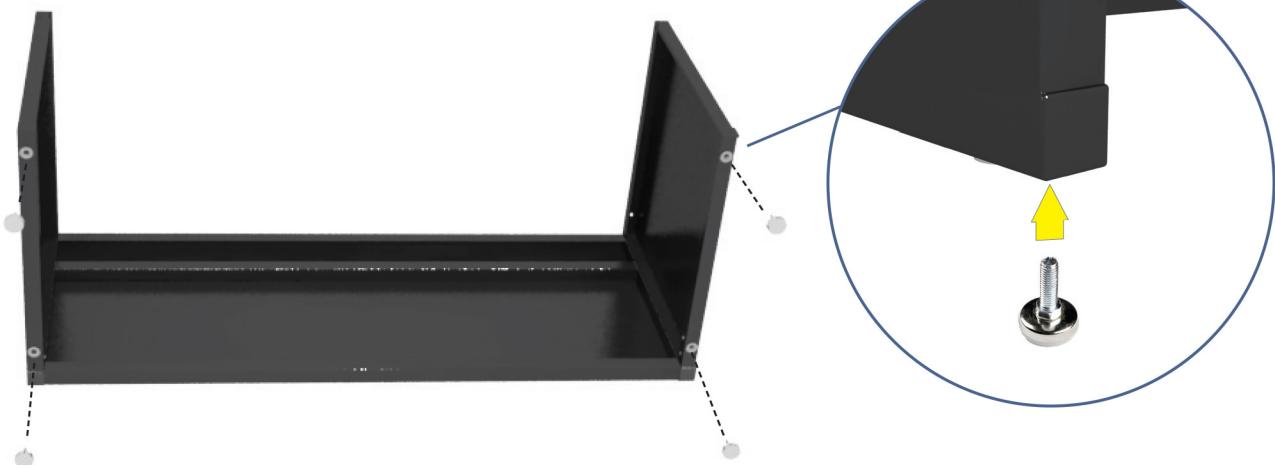

Assembly Step-by-Step

Down View Classroom Desk

Step 3


Attach Cable Management Tray

20mm Furniture Bolt



Qty:4

Attach Cable Management Tray using (2) 20mm Furniture Bolts on each side. Insert Bolts half way through the Side frames then drop the Cable Management Tray.

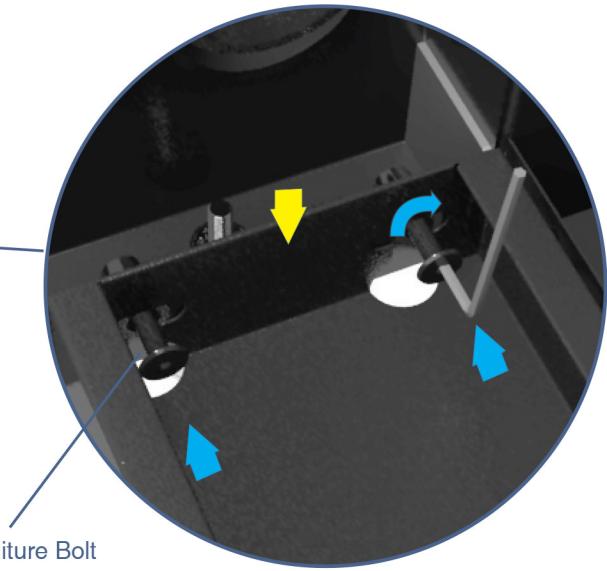

20mm Furniture Bolt

Step 4

Attach Pivot Arm

10/24 x 1/2 Carriage Bolt



Qty:4 for 36" & 48"
Qty:8 for 60" & 72"

10/24 Lock Nut



Qty:4 for 36" & 48"
Qty:8 for 60" & 72"

10 Nylon Washer





Qty:4 for 36" & 48"
Qty:8 for 60" & 72"

Attach Pivot Arm using (8) 10/24 x 1/2 Carriage Bolts, (8) 10/24 Lock Nuts and (8) 10 Nylon Washers. Do not fully tighten until monitor is installed and placed in desired location.

10 Nylon Washer

Wrench


10/24 Lock Nut

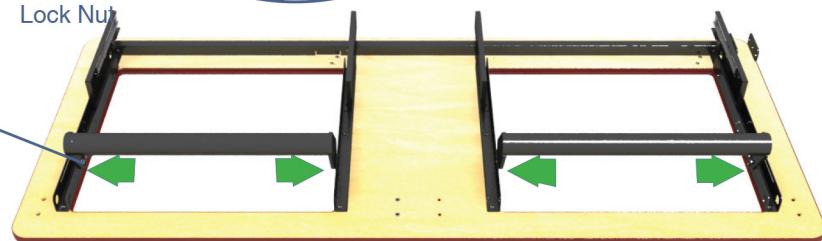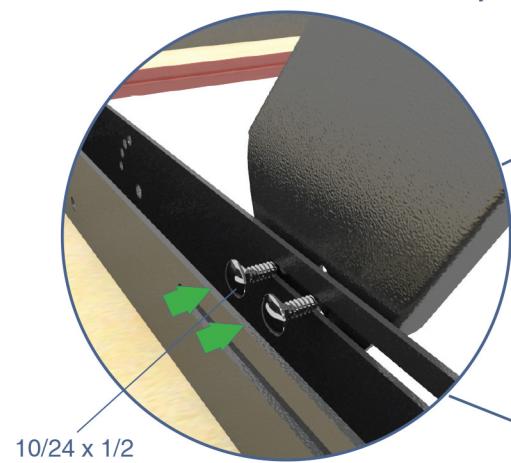

Assembly Step-by-Step


Down View Classroom Desk

Step 5 Attach LCD Holder

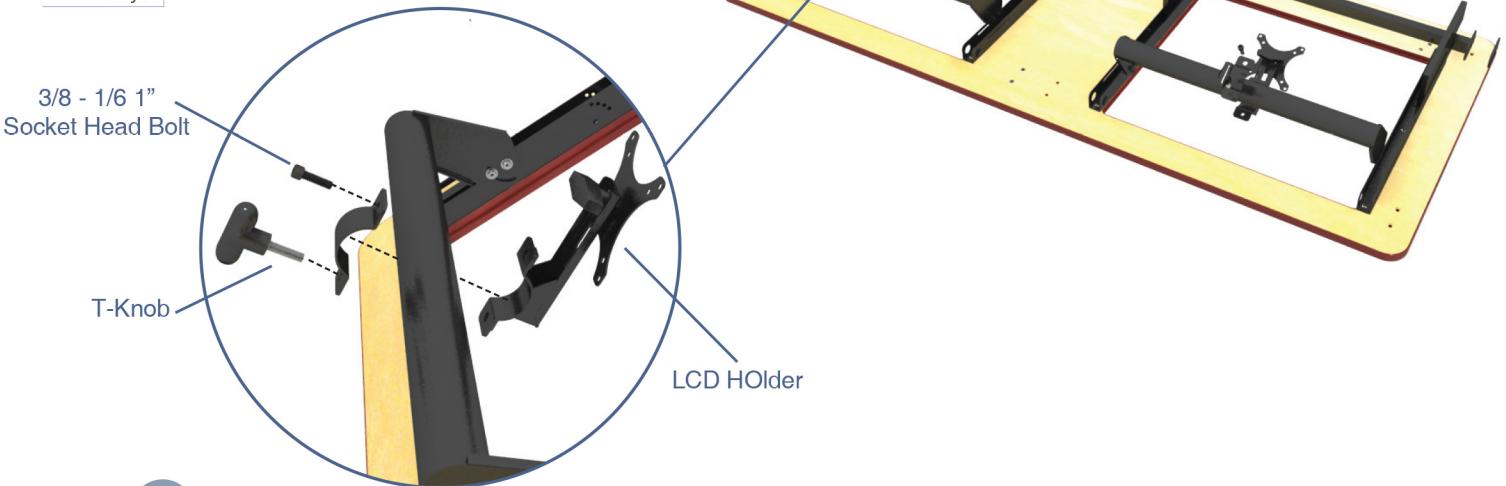

Step 6 Flip over Main Surface

Flip over Main Surface and place it on the Frame.

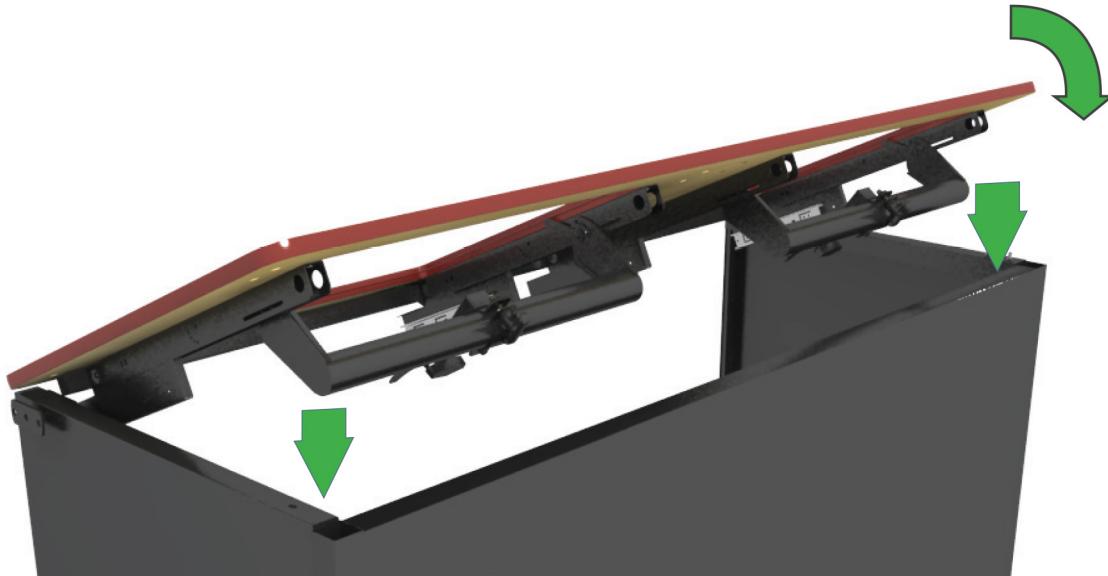

Assembly Step-by-Step

Down View Classroom Desk


Step 7

Attach Cross Beam and Main Platform

Attach Cross Beam to Frame using (2) 20mm Furniture Bolts on each side. Attach Main Platform to Frame using (2) 1/4-20 Phillips Head Bolts on each side.



20mm Furniture Bolt

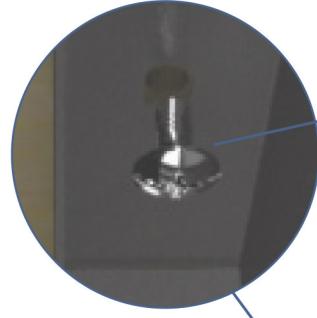

1/4-20 Phillips Head Bolt

1/4-20 Phillips Head Bolt




Qty:4

20mm Furniture Bolt




Qty:4

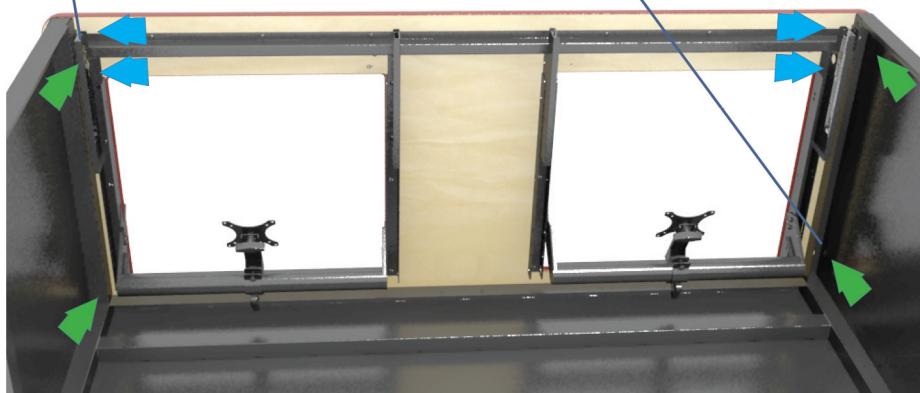

Step 8

Slide in Keyboard Trays

Slide in Keyboard Trays.

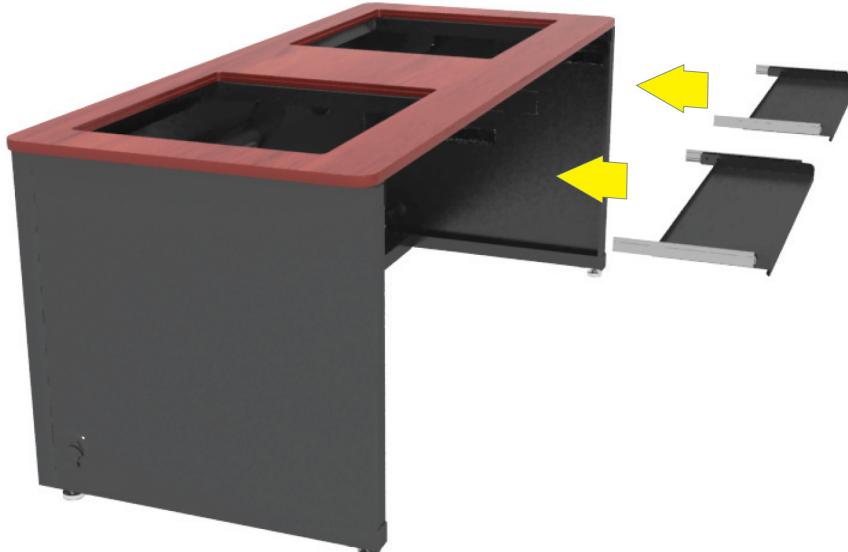

Assembly Step-by-Step

Down View Classroom Desk



Step 9

Attach LCD Monitor


8mm Phillips
Machine Screw




Qty:4

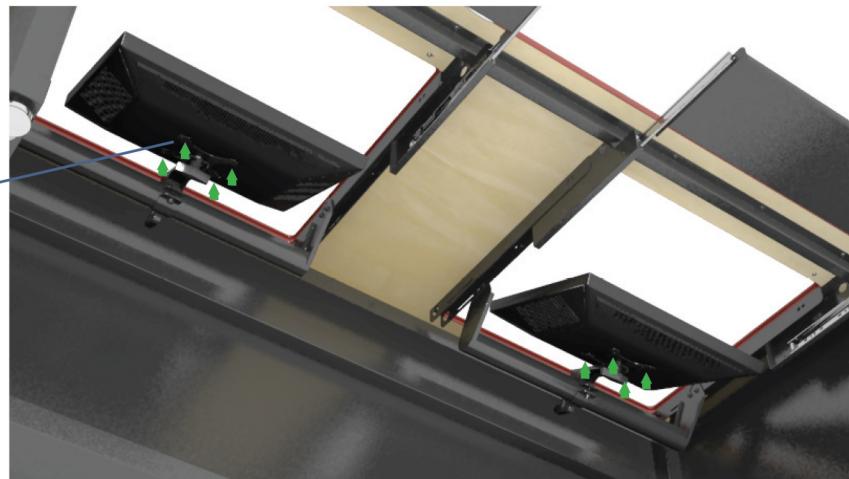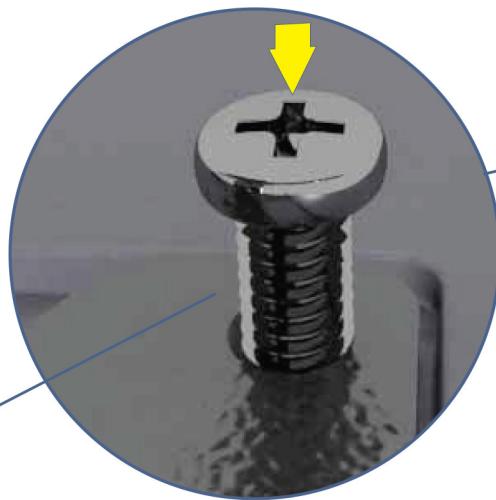

8mm Phillips
Machine Screw

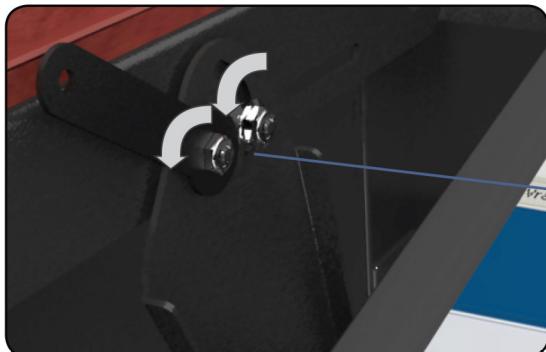

Loose 10/24 Lock Nuts to adjust the desired monitor angle. Then tighten back once the monitor position is set.

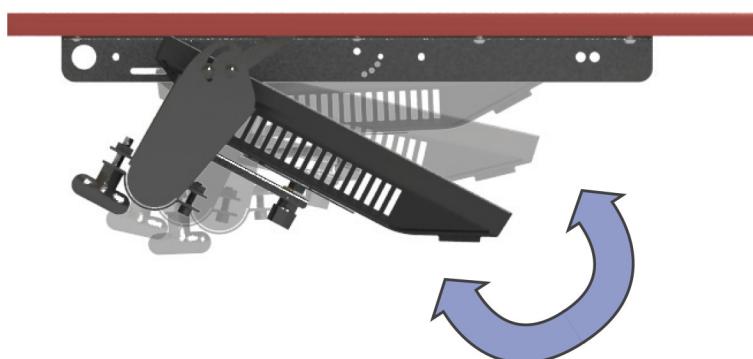

Assembly Step-by-Step


Down View Classroom Desk

Step 10

Wire Management Clips

Cable
Management
Clip

Qty:3 for 36" & 48"
Qty:6 for 60" & 72"

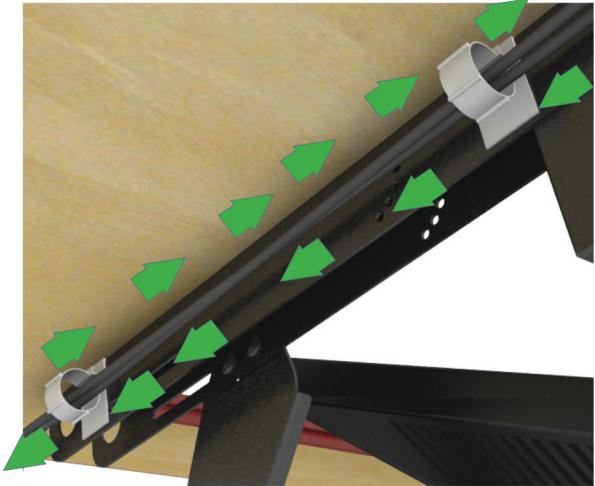

Step 11

Place Glasses

Glass

Qty:1 for 36" & 48"
Qty:2 for 60" & 72"



Step 12

Slide in Keyboard Trays

Place ECPU Holder. Tack into top channel and lay on Cable Management tray.



NOTE : Steps 13 to 17 belong to the CPU-STAND Assembly



CPU Stand/Cart Configurations

There are three possible configurations.

NOTE: Extender is shown in a bluish color to help you see when it is used.



Short Side Setup:
CPU width is 3.5" to 6"



Longest Side Setup:
CPU width is 6" to 12"



Extender (To be used for CPU
towers over 6" Wide)

Step 13

Secure First and second L Panel

10/32 x 3/8
Carriage Bolt



Qty:4

10/32 Thumb Nut



Qty:4

12
Nylon Washer



Qty:4



Step 14

Casters

Caster



Qty:4



Assembly Step-by-Step

Down View Classroom Desk

Step 15

Secure Second L Panel Assembly

Use (2)10-32 x 3/8 Carriage Bolts, (2) 10/32 Thumb Nuts and (2) 12 Nylon Washers.

10/32 x 3/8
Carriage Bolt


Qty:2

10/32 Thumb Nut

Qty:2

12 Nylon Washer

Qty:2

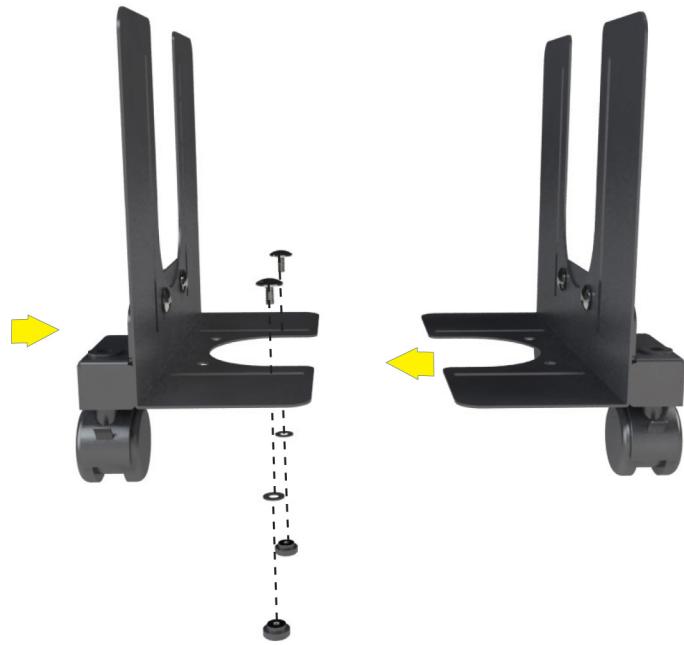

Step 15b

Secure Second L Panel Assembly

Performed when CPU towers over 6" Wide.

Use (2)10-32 x 3/8 Carriage Bolts, (2) 10/32 Thumb Nuts and (2) 12 Nylon Washers.

10/32 x 3/8
Carriage Bolt

Qty:4


Extender (To be used for CPU
towers over 6" Wide)

10/32 Thumb Nut

Qty:4

12 Nylon Washer

Qty:4

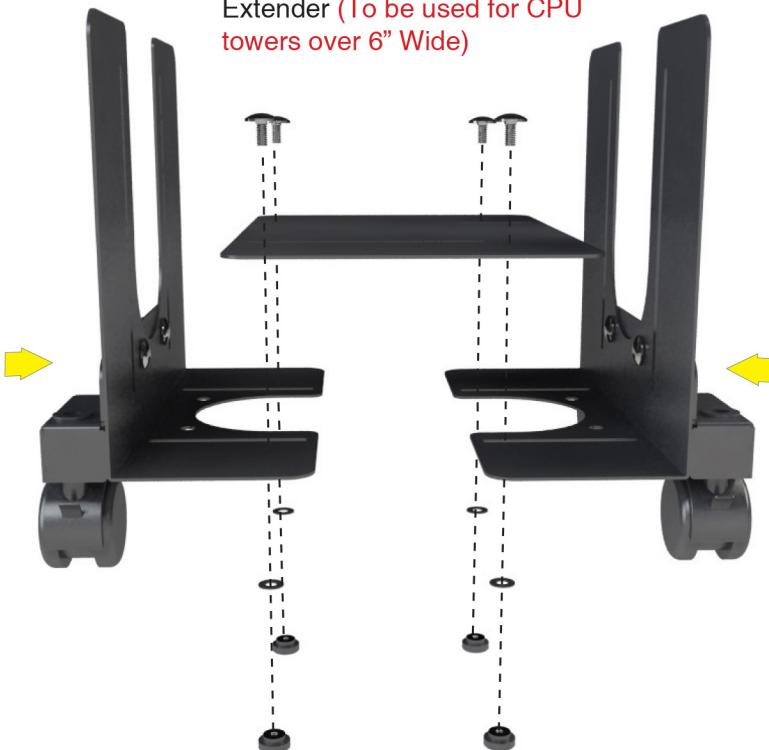

Assembly Step-by-Step

Down View Classroom Desk

Step 16

Velcro Pads

Velcro Pads

Attach Velcro Pads to both your CPU Tower and CPU Stand, then slide in CPU Tower.



Qty:4



Step 17

CPU-STAND

CPU-STAND

Slide CPU-STAND and place it where needed.



Qty:1 for 36"

Qty:2 for 60"



How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: service@versaproducts.com.