FMC-IMAGEON HDMI Pass-Through Tutorial



Revision History

Version	Description	Date
1.0	HDMI Pass-Through Tutorial	Mar 20, 2014
	Vivado 2013.3 version	



Table of Contents

Revision History	1
Table of Contents	2
Table of Figures	3
Table of Tables	4
About this Guide	1 -
Additional Documentation	2 -
Additional Support Resources	3 -
Introduction	4 -
Requirements	6 -
Software	6 -
Hardware	6 -
Zynq embedded design tools	6 -
Xilinx Video IP	6 -
Setup	8 -
Extract the tutorial archive on your computer	8 -
Test your DVI-D or HDMI equipment	8 -
Tutorial Overview	9 -
Reusable Components	9 -
HDMI Pass-Through Overview	9 -
Embedded Design with Processor	10 -
FMC-IMAGEON - I2C Controller	11 -
FMC-IMAGEON – Video Interfaces	11 -
AXI4-Stream Bridges	11 -
Implement an HDMI Pass-Through	13 -
Licensing the Video and Image Processing Pack IP Cores	13 -
Create a new Vivado project	13 -
Create the Embedded Hardware Design with IP Integrator	14 -
Add the I2C Controller	16 -
Add the Video Pipeline	19 -
Build the hardware with Vivado Design Suite	23 -
Create the Embedded Software Application with SDK	26 -
Set up your ZC702 Hardware	- 32 -



Set up your ZedBoard Hardware	33 -
Execute the HDMI Pass-Through Design on Hardware using SDK	
References	
Known Issues and Limitations	
Hello World Template – error: conflicting types for 'print'	
Troubleshooting	
Table of Figures	
Figure 1 – ON Semiconductor Image Sensor with HDMI Input/Output FMC Bundle	4 -
Figure 2 – FMC-IMAGEON Hardware – Connectivity Diagram	5 -
Figure 3 – FMC-IMAGEON Hardware – Block Diagram	5 -
Figure 4 –HDMI Pass-Through – 16 bits YUV 4:2:2	10 -
Figure 5 –HDMI Pass-Through – 24 bits RGB	10 -
Figure 6 – Create Block Design	15 -
Figure 7 – Designer Assistance – Add IP	15 -
Figure 8 – Designer Assistance – Run Block Automation	15 -
Figure 9 –Run Block Automation	16 -
Figure 10 – AXI IIC - Block Properties	16 -
Figure 11 – Run Connection Automation – /fmc_imageon_iic_0/S_AXI	17 -
Figure 12 – Run Connection Automation – /fmc_imageon_iic_0/IIC	17 -
Figure 13 – External Interface Properties – fmc_imageon_iic	18 -
Figure 14 – External Interface Properties – fmc_imageon_iic_rst_n	18 -
Figure 15 – Validate Design	19 -
Figure 16 – IP Repository Manager	20 -
Figure 17 – HDMI input/output sub-modules	21 -
Figure 18 – Validate Design	23 -
Figure 19 – Create HDL Wrapper	24 -
Figure 20 – Let Vivado manage wrapper and auto-update	24 -
Figure 21 – HDMI Pass-Through – Resource Utilization	25 -
Figure 22 – Address Map in SDK system.xml Tab	26 -
Figure 23 – Board Support Package Settings	27 -



Figure 24 – Generate a Linker Script- 28 -

FMC-IMAGEON – HDMI Pass-Through Tutorial

Figure 25 – Import from File System – Dialog 1	30 -
Figure 26 – Import into Folder	31 -
Figure 27 – Import from File System – Dialog 2	31 -
Table of Tables	
Table 1 – Supported Video Resolutions	8 -
Table 2 – New Project Settings	- 14 -



About this Guide

This tutorial describes how to create a Vivado IP Integrator video design from scratch.

This manual contains the following chapters:

- Chapter "Introduction" provides an overview and features of the FMC-IMAGEON FMC module, as well as the hardware and software required for this tutorial.
- Chapter "Tutorial Overview" provides a general overview of this tutorial.
- Chapter "Implement an HDMI Pass-Through" describes the steps required to implement an Embedded System that implements an HDMI pass-through.
- Appendix "References" provides a list of references to documentation related to the FMC module.
- Appendix "Known Issues and Limitations" provides a list of known issues and limitations with the tools and/or IP used in this tutorial.
- Appendix "Troubleshooting" provides a list of troubleshooting suggestions for this tutorial.



Additional Documentation

For more information on the VITA-2000 image sensor, please visit the following resources.



- VITA2000: 2.3 Megapixel, 92 FPS, Global Shutter CMOS Image Sensor
 - VITA-2000 Product Information
 http://www.onsemi.com/PowerSolutions/product.do?id=VITA2000

For more information on the Analog Devices HDMI devices, please visit the following resources.



- ADV7511 HDMI Transmitter
 - ADV7511 Product Information http://www.analog.com/adv7511
 - ADV7511 Technical Resources on EngineerZone
 http://ez.analog.com/docs/DOC-1740
- ADV7611 HDMI Receiver
 - ADV7611 Product Information http://www.analog.com/adv7611
 - ADV7611 Technical Resources on EngineerZone http://ez.analog.com/docs/DOC-1745



Additional Support Resources

To access the most current collateral for the FMC-IMAGEON FMC module, please visit the product website at:

http://www.em.avnet.com/fmc-imageon

To access the most current collateral for the On Semi Image Sensor FMC bundle, which includes this FMC module, please visit the product website at:

http://www.em.avnet.com/fmc-imageon-v2000-c

Once on the product website:

To access the latest documentation and designs, click on the following link:

Support Files & Downloads

To access the commiunity forums, visit the following web link:

http://community.em.avnet.com/

To search the database of silicon and software questions and answers or to create a technical support case in WebCase, see the Xilinx website at:

http://www.xilinx.com/support



Introduction

The ON Semiconductor Image Sensor FMC bundle provides several high-definition video interfaces for Xilinx® FMC-enabled baseboards. The FMC module has on-board HDMI input/output interfaces. The ON Semiconductor VITA-2000-color image sensor module provides a high definition camera supporting high frame rates and featuring a global shutter.

This FMC bundle is ideal for developing application for machine vision, motion monitoring, and high-end security and surveillance.



Figure 1 - ON Semiconductor Image Sensor with HDMI Input/Output FMC Bundle

As illustrated in Figure 2 and Figure 3, the FMC module connects to an FMC carrier, and provides the following interfaces:

- HDMI Input
- HDMI Output
- LCEDI Interface for VITA Image Sensor modules

The following block diagram illustrates how the connectivity of the FMC module.



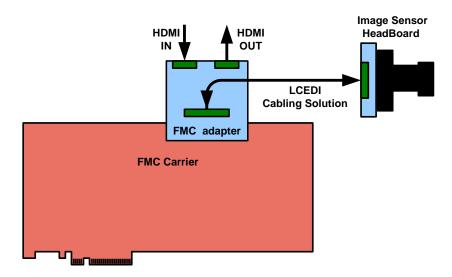


Figure 2 – FMC-IMAGEON Hardware – Connectivity Diagram

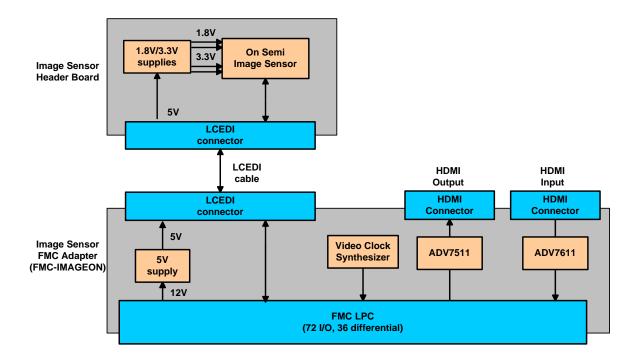


Figure 3 - FMC-IMAGEON Hardware - Block Diagram



Requirements

The software and hardware requirements for this tutorial are described in the following sections.

Software

The software required to build, and run the demonstrations is:

- Xilinx Vivado 2013.3
- Terminal Emulator (HyperTerminal or TeraTerm)

Hardware

The bare minimum required to run this reference design is:

- Computer with a minimum of 4 GB to complete a design¹
- One of the following Zyng carriers
 - o ZC702 (including power supply and cables)
 - ZedBoard (including power supply and cables)
- The Avnet HDMI Input/Output FMC Module (FMC-IMAGEON)
- HDMI (or DVI-D) monitor, including HDMI cable
- HDMI source (non-encrypted content) or DVI-D source, including HDMI cable

Zyng embedded design tools

This tutorial assumes that you have experience creating Zynq embedded designs. More specifically, it assumes a working knowledge of Vivado tools, including IPI (Vivado IP Integrator) and SDK.

If you do not have this experience, it is HIGHLY recommended that you follow the **Introduction to Zynq** on-line training course, available on zedboard.org.

http://www.zedboard.org/course/introduction-zynq

Xilinx Video IP

This tutorial will make use of several of Xilinx's Video IP cores.

¹ Refer to http://www.xilinx.com/design-tools/vivado/memory.htm



_

Although it is possible to complete this tutorial without consulting the datasheets for these Video IP cores, it is strongly recommended to consult the datasheets for each Video IP core to fully understand and appreciate their potential.

Video Timing Controller

http://www.xilinx.com/products/intellectual-property/EF-DI-VID-TIMING.htm

Video Input to AXI4-Stream

http://www.xilinx.com/products/intellectual-property/video_in_to_axi4_stream.htm

AXI4-Stream to Video Output

http://www.xilinx.com/products/intellectual-property/axi4_stream_to_video_out.htm

AXI Video DMA

http://www.xilinx.com/products/intellectual-property/axi_video_dma.htm In particular interest is the "Triple Frame Buffer Example" chapter

For the full list of Xilinx Video IP Cores, refer to the following web page: http://www.xilinx.com/ipcenter/video/video_core_listing.htm



Setup

Before you begin this tutorial, carefully read the following sections which will describe how to extract the tutorial archive and how to test your video equipment.

Extract the tutorial archive on your computer

Extract the tutorial archive in the root of your C:\ drive. It will contain the following directories

C:\FMC_IMAGEON\2013_3\avnet_fmc_imageon_cores

C:\FMC_IMAGEON\2013_3\constraints

C:\FMC_IMAGEON\2013_3\code

C:\FMC_IMAGEON\2013_3\scritps

Test your DVI-D or HDMI equipment

Before going through this tutorial, test your DVI-D and/or HDMI equipment:

- 1. Connect your DVI-D or HDMI source to your DVI-D or HDMI monitor
- 2. Verify that you can see the video source on your monitor
- 3. Using the menu settings on your DVI-D or HDMI monitor to validate the video resolution of your DVI-D or HDMI source. Make sure that it is generating one of the following supported video resolutions

Resolution	Pixel Rate (MHz)	Frame Dimensions	Frame Rate
1080P60	148.5 MHz	1920 x 1080	60 Hz
SXGA	110 MHz	1280 x 1024	60 Hz
720P60	74.25 MHz	1280 x 720	60 Hz
XGA	65 MHz	1024 x 768	60 Hz
SVGA	40 MHz	800 x 600	60 Hz
576P50	27 MHz	720 x 576	50 Hz
480P60	27 MHz	720 x 480	60 Hz
VGA	25.175 MHz	640 x 480	60 Hz

Table 1 - Supported Video Resolutions



Tutorial Overview

This tutorial will guide you in creating a video design that implements an HDMI pass-through for the Avnet HDMI Input/Output FMC module.

Reusable Components

The tutorial will make use of reuseable components for the video input and video output interfaces:

- IP Cores, for each of the video interfaces on the FMC-IMAGEON module
 - FMC-IMAGEON HDMI Input
 - FMC-IMAGEON HDMI Output
 - FMC-IMAGEON VITA Receiver
- TCL scripts, which automatically create IP Integrator sub-modules
 For a 16 bits YUV 4:2:2 pass-through design:
 - o fmc_imageon_hdmii_yuv422.tcl : video input path, 16 bits YUV 4:2:2 format
 - fmc_imageon_hdmio_yuv422.tcl : video output path, 16 bits YUV 4:2:2 format
 For a 24 bits RGB pass-through design:
 - o fmc_imageon_hdmii_rgb.tcl : video input path, 24 bits RGB format
 - o **fmc_imageon_hdmio_rgb.tcl** : video output path, 24 bits RGB format
- XDC constraints, which define pinout and constraints for various carriers
 - o **zc702_fmc_imageon_hdmi_pasthrough.xdc** : constraints for ZC702
 - zedboad fmc imageon hdmi pasthrough.xdc : constraints for ZedBoard
- C source code, which provides example initialization code
 - o **fmc_imageon_hdmi_passthrough.c/.h** : initi code for HDMI pass-through

For more information on these reusable components, refer to the **FMC-IMAGEON - IP CORES** for Vivado document.

HDMI Pass-Through Overview

The user may choose to implement a video pass-through for two video formats.



One pass-through will make the 16 bits YUV 4:4:2 video format available for the user, which corresponds to the video format of the external HDMI input (ADI ADV7611) and HDMI output (ADI ADV7511) devices

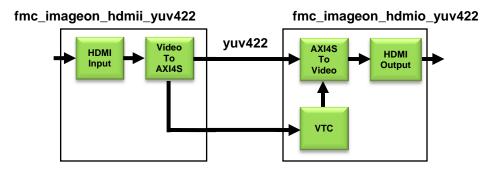


Figure 4 –HDMI Pass-Through – 16 bits YUV 4:2:2

An alternate pass-through makes us of the Chroma Resample (422 To 444 / 444 To 422) and Color Space Conversion (YUV to RGB / RGB to YUV) cores to make the 24 bits RGB video format available to the user.

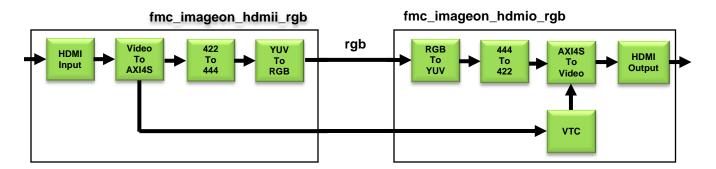


Figure 5 - HDMI Pass-Through - 24 bits RGB

Embedded Design with Processor

This design requires an embedded design that contains a processor, as well as the following peripherals:

- external memory
- serial port (UART or USB-UART)



This tutorial will create a Zynq based embedded design.

Alternatively, for non-Zynq based carriers, a MicroBlaze based embedded design can also be created. However, this is not described in this tutorial, and left as an exercise to the user.

FMC-IMAGEON - I2C Controller

Once the embedded processor design is created, an I2C controller is implemented with the following Xilinx IP core:

- AXI I2C Controller
 - not shown in the previous block diagram, this core will allow the processor to configure the FMC-IMAGEON hardware peripherals, including:
 - ADV7611 : HDMI input device
 - ADV7511 : HDMI output device
 - CDCE913 : video clock synthesizer

FMC-IMAGEON - Video Interfaces

The following cores, provided with the tutorial, will be used to interface to the ADV7611 and ADV7511 devices on the FMC-IMAGEON module. It is important to note that, on the FMC-IMAGEON module, these devices are used in 16 bits YCbCr 4:2:2 with "embedded sync" mode.

- FMC-IMAGEON HDMI Input
 - this core contains logic that will extract the embedded synchronization signals from the 16 bit video data received from the ADV7611 HDMI input device.
- FMC-IMAGEON HDMI Output
 - this core contains logic that will embed the synchronization signals in the 16 bit video data sent to the ADV7511 HDMI output device.

The HDMI Input and HDMI Output IP cores make a generic parallel video interface available to the design.

AXI4-Stream Bridges

The following cores, are used to bridge between the HDMI interfaces and the AXI4-Stream protocol.

- Video Timing Controller
 - o this core is capable of:
 - detecting the video timing on a video input interface
 - (re)generating video timing for a video output interface
 - a single VTC core will be used:
 - the video timing of the video input will be detected by the detector portion of the VTC core
 - the generator portion of the VTC core will be synchronized to the detector, thus re-generating the same video timing on the output
- Video Input to AXI4-Stream
 - this core converts a generic parallel video interface (ie. DVI/HDMI) to the AXI4-Stream for Video protocol
 - the core includes a FIFO allowing the AXI4-Stream for Video interface to run on a different clock



- AXI4-Stream to Video Output
 - this core generates a generic parallel video interface (ie. DVI/HDMI) from a AXI4-Stream for Video interface
 - the core includes a FIFO allowing the AXI4-Stream for Video interface to run on a different clock

To illustrate the back-pressure capability of the AXI4-Stream interface, this video pipeline will be implemented with two separate clock domains. The input and output interfaces will be running on the HDMI input interface's video clock. The AXI4-Stream interface will be running on a separate clock.



Implement an HDMI Pass-Through

In this section, a new Vivado project will be created, implementing the HDMI pass-through design for the Avnet FMC-IMAGEON module.

Licensing the Video and Image Processing Pack IP Cores

This design uses several of the Xilinx Video and Image Processing Pack IP cores that must be licensed prior to use. Follow these steps to request an evaluation license:

- Go to: www.xilinx.com/products/intellectual-property/EF-DI-VID-IMG-IP-PACK
- Click the Evaluate link located on the upper-left of the web page, and follow the online instructions

Video and Image Processing Pack



3. The generated license file is sent by email. Follow the enclosed instructions to add the evaluation license features for the Video and Image Processing Pack.

Create a new Vivado project

To create a new project, start the Vivado™ design and analysis software and create a project with an embedded processor system as the top level.

- 1. Start the Vivado 2013.3 software.
- 2. Select Create New Project to open the New Project wizard
- 3. Use the information in the table below to make your selections in the wizard screen

Wizard Screen	System Property	Setting or Command to Use
Project Name	Project name	Specify the project name, such as: tutorial



	Project location	Specify the directory in which to store the project files: C:\FMC_IMAGEON\2013_3
	Create Project Subdirectory	Leave this checked.
Project Type	Specify the type of project to	Use the default selection, specify RTL Project.
	create	
Add Sources		Do not make any changes on this screen.
Add Existing IP		Do not make any changes on this screen.
Add Constraints		Do not make any changes on this screen.
Default Part	Specify	Select Boards.
	Filter	In the Family list, select Zynq-7000
	Board list	Select one of the following board:
		Zynq-7 ZC702 Evaluation Board
		or
		ZedBoard Zynq Evaluation and Development Kit
New Project Summary	Project summary	Review the project summary before clicking Finish to
		create the project.

Table 2 - New Project Settings

When you click **Finish**, the New Project wizard closes and the project you just created opens in Vivado.

Create the Embedded Hardware Design with IP Integrator

This section will guide you on how to create a basic embedded hardware design. This section may differ slightly for different carriers.

Create a new Vivado IP Integrator block diagram.

- 1. Click **Create Block Design** in the **IP Integrator** flow navigator. The Create Block Design dialog opens.
- 2. Specify a design name for the block diagram and click **OK**.
- 3. Click Next.

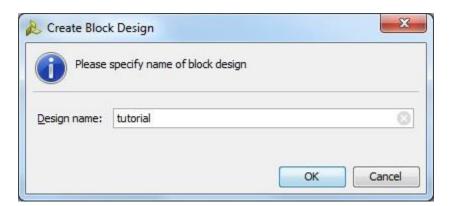




Figure 6 – Create Block Design

Notice that Vivado IP Integrator provides design assistance:

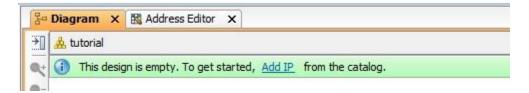


Figure 7 - Designer Assistance - Add IP

Add the ZYNQ7 Processing System core to the block design.

- 4. Click **Add IP** in the design assistance or
- **Right-click** in the block design, then select **Add IP**.
- 5. Select the **ZYNQ7 Processing System** core, then click **ENTER** (or double-click selection)

Notice that Vivado IP Integrator provides additional design assistance:



Figure 8 – Designer Assistance – Run Block Automation

Configure the ZYNQ7 Processing System core using the designer assistance:

- 6. Click **Run Block Automation** in the design assistance
- 7. Select /processing_system7_0
- 8. Make sure the **Apply Board Preset** option is selected.
- 9. Click OK.



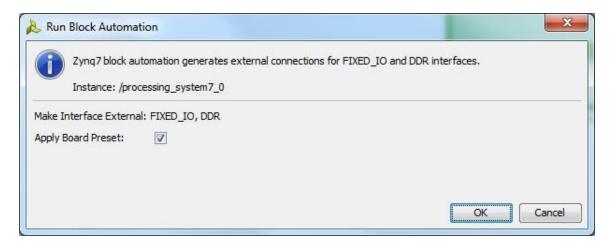


Figure 9 -Run Block Automation

Add the I2C Controller

Add the **AXI IIC** IP core to the design, which will be used to configure the I2C peripherals on the FMC module.

- 1. Right-click in a blank portion of the block design, then select Add IP.
- Select the AXI IIC core, then click ENTER (or double-click selection)

Rename the IIC controller to fmc_imageon_iic_0.

- 3. Select the **AXI IIC** core in the block diagram.
- In the Block Properties dialog, modify the Name of the block to fmc_imageon_iic_0

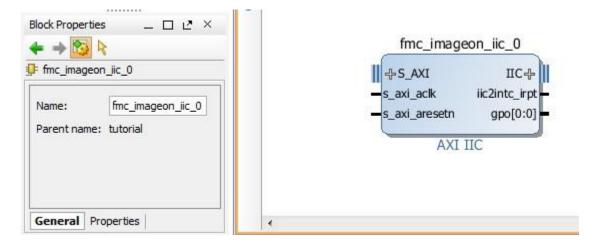


Figure 10 - AXI IIC - Block Properties



Use the designer assistance to connect the AXI IIC core to the ZYNQ7 Processing System's GP0 port.

- 5. Click Run Connection Automation in the design assistance
- 6. Select /fmc_imageon_iic_0/S_AXI
- 7. Click OK.

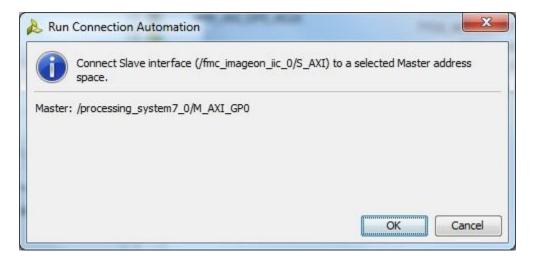


Figure 11 - Run Connection Automation - /fmc_imageon_iic_0/S_AXI

Use the designer assistance to connect the AXI IIC core's external I/O

- 8. Click Run Connection Automation in the design assistance
- 9. Select /fmc_imageon_iic_0/IIC
- 10. [If the **Select Board Interface** drop down list appears, specify **Custom**]
- 11. Click **OK**.

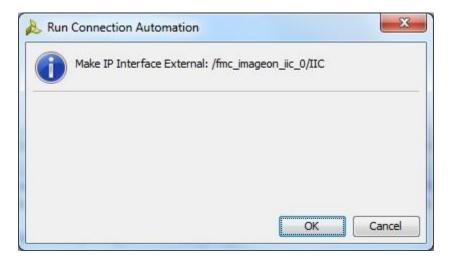


Figure 12 - Run Connection Automation - /fmc_imageon_iic_0/IIC



Rename the external iic_rtl port to fmc_imageon_iic

- 12. Select the **iic_rtl** external port in the block diagram.
- In the External Interface Properties dialog, modify the Name of the block to fmc_imageon_iic

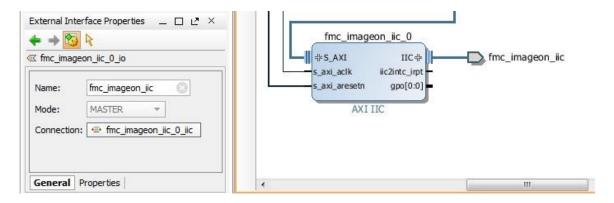


Figure 13 - External Interface Properties - fmc_imageon_iic

Connect the AXI IIC core's gpo[0:0] port to an external port

- 14. Select the **gpo[0:0]** port on the AXI IIC core
- 15. Right-click, then select Make External

Rename the external gpo[0:0] port to fmc_imageon_iic_rst_n

- 16. Select the **gpo[0:0]** external port in the block diagram.
- 17. In the External Interface Properties dialog, modify the Name of the block to fmc imageon iic rst n

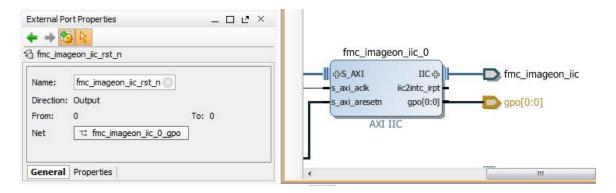


Figure 14 - External Interface Properties - fmc_imageon_iic_rst_n

At this point, validate that you have a correct design.

18. Right-click in a blank portion of the block design, then select Validate Design



19. If successful, Click **OK** and proceed with the next section. Otherwise, fix any errors in the design before proceeding.



Figure 15 – Validate Design

Add the Video Pipeline

The video pipeline will make use of Avnet provided IP cores. In order for Vivado Design Suite to recognize these cores, we need to add the location of the Avnet FMC-IMAGEON cores to the repository path.

- In the Vivado menu, select Tools => Project Settings.
 The Project Settings dialog opens.
- 2. Click on the IP icon on the left.
- 3. In the Repository Manager tab, click the Add Repository button.
- Specify the "C:\FMC_IMAGEON\2013_3\avnet_fmc_imageon_cores" directory, then click the Select button.

The following three IP cores should be detected and appear in the IP in Selected Repository window:

- FMC-IMAGEON HDMI Input
- FMC-IMAGEON HDMI Output
- FMC-IMAGEON VITA Receiver



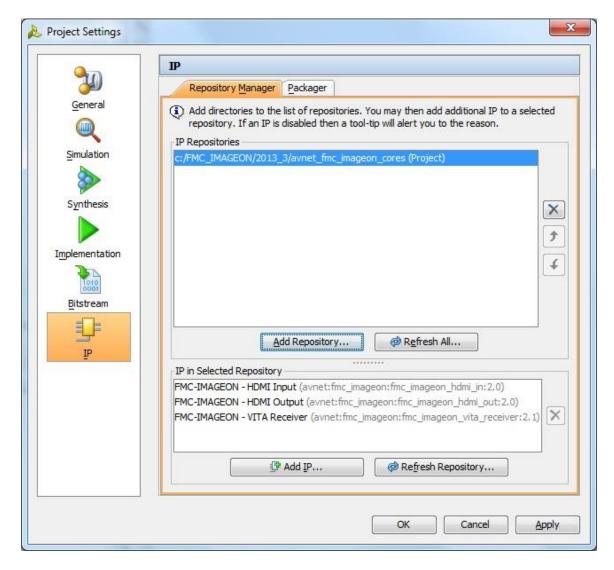


Figure 16 - IP Repository Manager

5. Click OK.



The HDMI input and output interfaces will be created with TCL scripts.

If you want the 16 bits YUV 4:2:2 video format to be made available in your design, run the following two TCL scripts:

- fmc_imageon_hdmii_yuv422.tcl : video input path, 16 bits YUV 4:2:2 format
- fmc_imageon_hdmio_yuv422.tcl : video output path, 16 bits YUV 4:2:2 format

If you want the 24 bits RGB video format to be made available in your design, run the following two TCL scripts:

- fmc_imageon_hdmii_rgb.tcl : video input path, 24 bits RGB format
- fmc_imageon_hdmio_rgb.tcl : video output path, 24 bits RGB format

Use the TCL console to run the two TCL scripts you have chosen. This tutorial will make use of the 16 bits YUV 4:2:2 video format, but the tutorial instructions can also be applied when making use of the 24 bits RGB 4:4:4 video format.

- 6. In the **Tcl Console**, type the following command to generate the video input path **source C:/FMC_IMAGEON/2013_3/scripts/fmc_imageon_hdmii_yuv422.tcl** then press {ENTER}
- In the Tcl Console, press {UP ARROW} to repeat the previous command, edit the command to generate the video output path. source C:/FMC_IMAGEON/2013_3/scripts/fmc_imageon_hdmio_yuv422.tcl then press {ENTER}

This will create two new video sub-modules in your block diagram.





Figure 17 – HDMI input/output sub-modules

Connect the AXI4-Lite clock to the ZYNQ7 Processing System's FCLK CLK0 port.

- 1. Select the fmc_imageon_hdmio_yuv422 sub-module's axi4lite_clk port
- 2. Click and hold the left mouse button, then drag to the ZYNQ7's FCLK_CLK0 port.
- 3. Release the mouse button to make the connection



Connect the AXI4-Lite resets to the proc sys reset core's peripheral aresetn port.

- 4. Select the fmc_imageon_hdmio_yuv422 sub-module's axi4lite_aresetn port
- 5. Click and hold the left mouse button, then drag to the proc_sys_reset core's **peripheral aresetn[0:0]** port.
- 6. Release the mouse button to make the connection

Use the designer assistance to connect the VTC core's control port (vtc_ctrl) to the ZYNQ7 Processing System's GP0 port.

- 7. Click Run Connection Automation in the design assistance
- 8. Select /fmc_imageon_hdmio_yuv422/vtc_ctrl
- 9. Click OK.

Configure the ZYNQ7 Processing System to generate a 150MHz clock on its FCLK_CLK1 port, which will be used for the AXI4-Stream based interconnect and cores.

- 10. Double-click on the ZYNQ7 Processing System core.
- 11. Click on the **Clock Generation** block
- 12. Expand the PL Fabric Clocks section
- 13. Select the FCLK CLK1 clock
- 14. Specify a Requested Frequency of 150MHz.
- 15. Click **OK**.

Connect the AXI4-Stream clocks to the ZYNQ7 Processing System's FCLK_CLK1 port.

- 16. Select the fmc imageon hdmii yuv422 sub-module's axi4s clk port
- 17. Click and hold the left mouse button, then drag to the ZYNQ7's FCLK_CLK1 port.
- 18. Release the mouse button to make the connection.
- 19. Select the fmc_imageon_hdmio_yuv422 sub-module's **axi4s_clk** port
- 20. Click and hold the left mouse button, , then drag to the ZYNQ7's FCLK CLK1 port.
- 21. Release the mouse button to make the connection.

Create an external port for the HDMI input clock in the block diagram.

- 22. Select the fmc_imageon_hdmii_yuv422 sub-module's hdmii_clk port
- 23. Right-click, then select Make External

Connect the HDMI output clock to the HDMI input clock.

- 24. Select the fmc_imageon_hdmio_yuv422 sub-module's hdmio_clk port
- 25. Click and hold the left mouse button, then drag to the hdmii_clk net.
- 26. Release the mouse button to make the connection.

Connect the HDMI I/O ports (hdmii_io & hdmio_io) to external ports

- 27. **Select** the fmc_imageon_hdmii_yuv422 sub-module's **hdmii_io** port
- 28. Right-click, then select Make External
- 29. Select the fmc_imageon_hdmio_yuv422 sub-module's hdmio_io port
- 30. Right-click, then select Make External



Connect the HDMI input and HDMI output sub-modules together, implementing a video pass-through.

- 31. Select the fmc_imageon_hdmii_yuv422 sub-module's hdmii_axi4s_video port
- 32. Click and hold the left mouse button, then drag to the fmc_imageon_hdmio_yuv422 sub-module's hdmio_axi4s_video
- 33. Release the mouse button to make the connection.
- 34. **Select** the fmc_imageon_hdmii_yuv422 sub-module's **hdmii_audio_spdif** port
- 35. Click and hold the left mouse button, then drag to the fmc_imageon_hdmio_yuv422 sub-module's hdmio_audio_spdif
- 36. Release the mouse button to make the connection.
- 37. Select the fmc_imageon_hdmii_yuv422 sub-module's hdmii_vtiming port
- 38. Click and hold the left mouse button, then drag to the fmc_imageon_hdmio_yuv422 sub-module's **video_vtiming**
- 39. Release the mouse button to make the connection.

At this point, validate that you have a correct design.

- 40. Right-click in a blank portion of the block design, then select Validate Design
- 41. If successful, Click **OK** and proceed with the next section. Otherwise, fix any errors in the design before proceeding.



Figure 18 - Validate Design

Save the block diagram

42. In the menu, select **File** => **Save Block Design**

Build the hardware with Vivado Design Suite

Create the top level HDL file.

- 1. In the **Sources** tab, select the block diagram
- 2. Right-click, then select Create HDL Wrapper



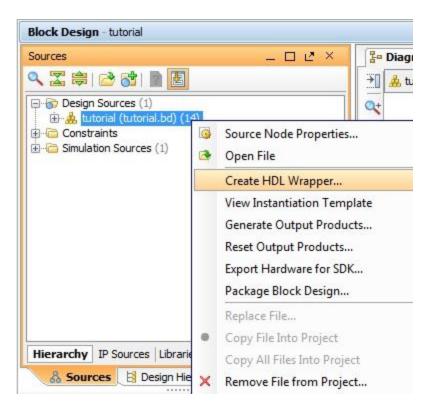


Figure 19 - Create HDL Wrapper

3. When asked whether to add or copy the HDL wrapper, select **Let Vivado manage wrapper and auto-update**.

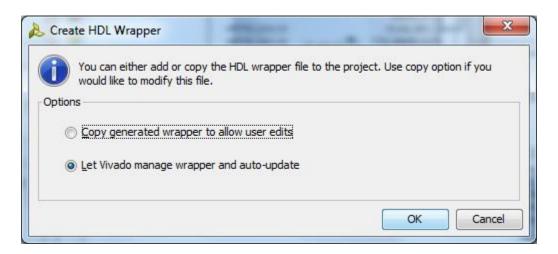


Figure 20 - Let Vivado manage wrapper and auto-update

Add the XDC constraints file.



- 4. In the Flow Navigator, under the Project Manager section, click Add Sources.
- 5. Select the Add or Create Constraints option
- 6. Click Next
- 7. In the dialog box that opens, click the Add Files ... button to add an existing XDC file
- 8. Select one of the following XDC files, depending on your hardware:
 - a. For the ZC702:
 - ..\constraints\zc702_fmc_imageon_hdmi_passthrough.xdc
 - b. For the ZedBoard:
 - ..\constraints\zedboard_fmc_imageon_hdmi_passthrough.xdc

Once selected, click **OK**

9. Click Finish.

Build the bitstream.

- 10. In the Flow Navigator, under the Program and Debug section, click Generate Bitstream. A dialog box appears asking whether all the processes starting for synthesis should be done.
- 11. Click Yes.

The "Bitstream Generation Completed" dialog box will open, asking what to do Next.

- 12. Select Open Implemented Design
- 13. Click **OK**.

The resource utilization and power estimation for this design can be seen in the Project Summary. Note that results may be different depending on the video format chosen, and for different carriers.

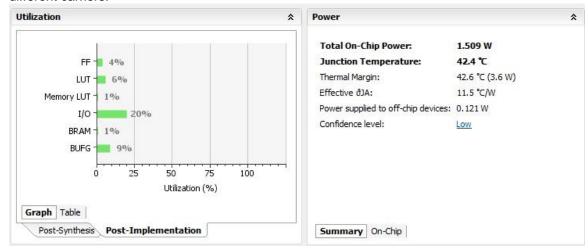


Figure 21 - HDMI Pass-Through - Resource Utilization

You have successfully created the hardware design!



Create the Embedded Software Application with SDK

Launch SDK from Vivado Design Suite.

- In the Vivado menu, Select File > Export > Export Hardware for SDK.
 The "Export Hardware for SDK" dialog box opens.
 By default, the "Include Bitstream" and "Export Hardware" check boxes are checked.
- 2. Check the Launch SDK check box.
- 3. Click OK. SDK opens.

Notice that when SDK launched, the hardware description file was automatically read in. The system.xml tab shows the address map for the entire Processing System.

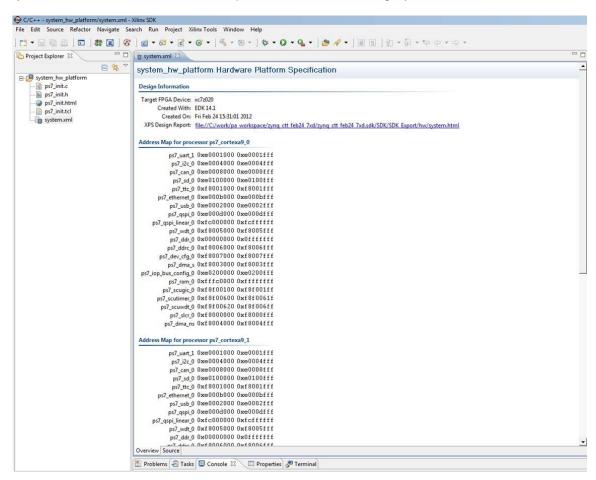


Figure 22 - Address Map in SDK system.xml Tab

The **avnet_fmc_imageon_cores** directory contains some software drivers that we will use in this design. In order for the project to recognize the contents of this directory, the path must be added to the project repositories, as described below.

In the SDK menu, select Xilinx Tools => Repositories
 The Preferences dialog box opens.



- 5. In the Local Repositories section, click on the **New** ... button.
- Select the C:\FMC_IMAGEON\2013_3\avnet_fmc_imageon_cores directory, then click OK
- 7. Click **OK** in the Preferences dialog box.

Create a standalone BSP (board support package).

- 8. In the SDK menu, select **File** => **New** => **Board Support Package**. The New Board Support Package Project dialog box opens.
- 9. In the Project name field, type "hdmi_passthrough_bsp".
- Keep the default settings, and click Finish.
 The Board Support Package Settings dialog box opens.
- 11. In the Supported Libraries, select the fmc iic sw and fmc imageon sw libraries.

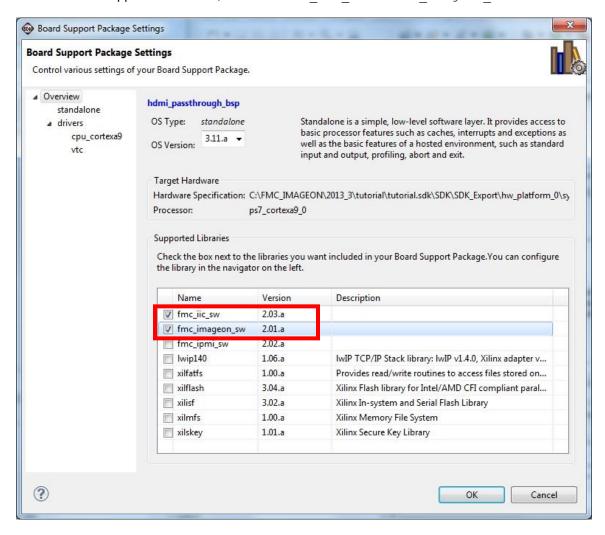


Figure 23 - Board Support Package Settings



12. Click **OK**.

If the Build Automatically setting is enabled, SDK will automatically build the standalone BSP.

Create a new C project.

- 13. In the SDK menu, select **File** => **New** => **Application Project**. The Application Project dialog box opens.
- 14. In the Project Name field, type "hdmi_passthrough_app".
- 15. For the **Board Support Package**, select **Use Existing**, then select the BSP that was created previously.
- 16. Click Next.
 - The Templates dialog box opens.
- 17. Select the **Hello World** template.
- 18. Click Finish.

Configure the application's memory map to execute from external memory.

- 19. Right-click on the hdmi_passthrough_app application
- 20. Select **Generate Linker Script**This opens the Generate a linker script dialog box.
- 21. Select the **ps7_ddr_0** memory for each of the Code, Data, Heap and Stack sections.

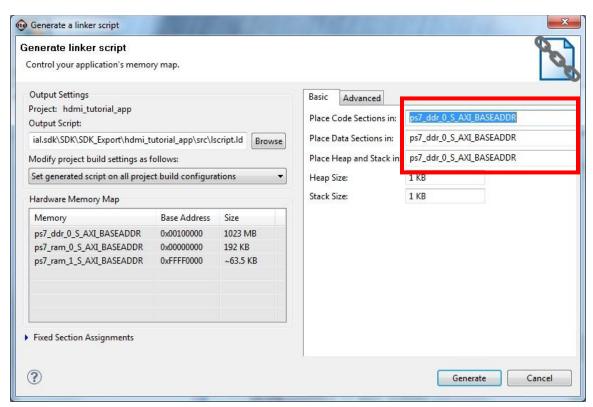


Figure 24 - Generate a Linker Script



22. Click Generate.

A dialog box appears asking whether it is OK to overwrite the existing linker script file.

23. Click Yes

Copy the provided example C files to the new application.

Note that the source for the new application is placed in the following directory:

C:\FMC_IMAGEON_Tutorial\tutorial\tutorial.sdk\SDK\SDK_Export\hdmi_tutorial_app\src

24. From the following directory:

C:\FMC IMAGEON\2013 3\code\fmc imageon hdmi passthrough\

Copy the following files to the src directory of the new application.

fmc_imageon_hdmi_passthrough.c

fmc_imageon_hdmi_passthrough.h

video_resolution.c

video_resolution.h

- 25. In the Project Explorer window, select the https://doi.org/10.25/. In the Project Explorer window, select the https://doi.org/10.25/.
- 26. Right-click, then select **Refresh** from the pop-up menu.

SDK will recognize the new source files.

If the Build Automatically setting is enabled, SDK will automatically build the application.

Import the provided example source files for the hdmi passthrough

- 27. In the Project Explorer window, select the hdmi_passthrough_app application
- 28. Right-click, then select **Import** from the pop-up menu. The Import wizard appears.
- 29. Expand the **General** section
- 30. Select File System, then click Next.



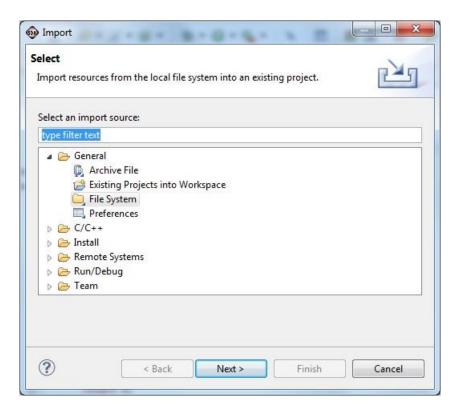


Figure 25 - Import from File System - Dialog 1

The next dialog of the Import wizard appears.

- 31. Next to the **From directory** field, click the **Browse** button
- 32. Specify the following directory:

C:\FMC_IMAGEON\2013_3\code\fmc_imageon_hdmi_passthrough

- 33. Click OK
- 34. Select the following source files:

fmc_imageon_hdmi_passthrough.c fmc_imageon_hdmi_passthrough.h video_resolution.c video_resolution.h

- 35. Next to the **Into directory** field, click the **Browse** button
- 36. Specify the following directory: hdmi_passthrough_app\src, then click OK



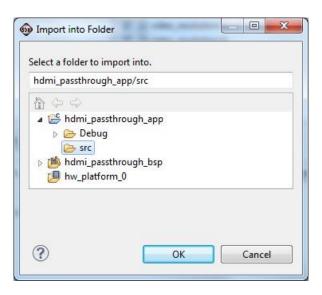


Figure 26 - Import into Folder

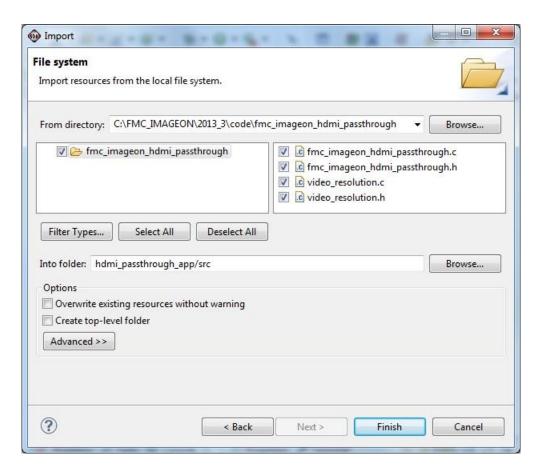


Figure 27 – Import from File System – Dialog 2



37. Click Finish.

Modify the hello world application

38. Open the helloworld.c file and edit the source code as follows:

```
* helloworld.c: simple test application
#include <stdio.h>
#include "platform.h"
#include "fmc imageon hdmi passthrough.h"
fmc_imageon_hdmi_passthrough_t demo;
//void print(char *str);
                                   strange bug:
void print( const char *str);
                                   when vtc driver is active, need to modify print
int main()
                                   declaration to match the one in xil_printf.h
    init platform();
    print("Hello World\n\r");
    demo.uBaseAddr_IIC_FmcImageon = XPAR_FMC_IMAGEON_IIC_0_BASEADDR;
demo.uBaseAddr_VTC_Axi4sTiming= XPAR_FMC_IMAGEON_HDMIO_YUV422_V_TC_0_BASEADDR;
    fmc imageon hdmi passthrough init( &demo );
    cleanup platform();
    return 0;
```

39. If the Build Automatically setting is enabled, SDK will automatically build the application. If not, right-click on the application and select **Build Project** to build the application.


You have successfully created the software application!

Set up your ZC702 Hardware

Setup your ZC7020-based hardware, as described below.

- 1. Set the ZC702 board's boot mode to cascaded JTAG using jumpers
 - a. J21,J20,J22,J25,J26 should all be set to '0'
 - b. J27,J28 should be set to '1'



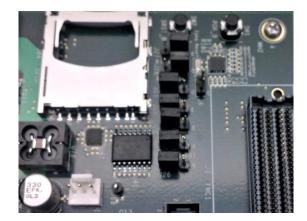


- 2. Connect a mini USB cable to the ZC702's USB-UART connector (J17)
- 3. Connect one of the following JTAG connections:
 - a. Connect platform USB pod to the ZC702's JTAG header (J2) and set SW10 to '10'
 - b. Connect a micro USB cable to the ZC702's on-board Digilent JTAG module and set SW10 to '01'
- 4. Populate the FMC-IMAGEON board on FMC Slot #2.
- 5. Connect a DVI or HDMI source to the FMC module's HDMI IN connector
- 6. Connect a DVI or HDMI monitor to the FMC module's HDMI OUT connector
- 7. Power on the ZC702 board
- 8. Open a serial communication utility for the COM port assigned on your system. **Note:** The standard configuration for Zynq Processing System is baud rate 115200, 8 bit, parity

Set up your ZedBoard Hardware

Setup your ZedBoard hardware, as described below.

- 1. Set the ZedBoard's boot mode to cascaded JTAG using jumpers
 - a. JP7, JP8, JP9, JP10, JP11 should all be set to '0'

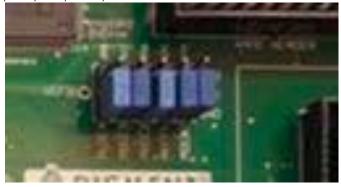

- 2. Connect a micro USB cable to the ZedBoard's USB-UART connector (J14)
- 3. Connect one of the following JTAG connections:
 - a. Connect platform USB pod to the ZedBoard's JTAG header (J15)
 - b. Connect a micro USB cable to the ZedBoard's on-board Digilent JTAG connector (J17)



- 4. Populate the FMC-IMAGEON board on FMC Slot #1.
- 5. Connect a DVI or HDMI source to the FMC module's HDMI IN connector
- Connect a DVI or HDMI monitor to the fMC module's HDMI OUT connector.
- 7. Power on the ZedBoard board
- Open a serial communication utility for the COM port assigned on your system.
 Note: The standard configuration for Zynq Processing System is baud rate 115200, 8 bit, parity

Execute the HDMI Pass-Through Design on Hardware using SDK

From SDK, configure the FPGA bitstream and launch the application.

- In the SDK menu, select Xilinx Tools => Program FPGA
 The "Program FPGA" dialog opens.
- 2. Make sure the path to the bitstream is valid (HINT: If you moved the project, you will need to update the path to the bitstream file)
- 3. Click Program.
 - It will take approximately 10 seconds to program the bitstream to hardware
- Right-click hdmi_passthrough_app and select Run as > Run Configurations
- 5. Click Xilinx C/C++ ELF and click New launch configurations.
- The new run configuration is created named hdmi_passthrough_app Debug.
 The configurations associated with application are pre-populated in the main tab of these launch configurations.
- Click the **Device Initialization** tab in the launch configurations and check the settings here.
 - Notice that there is a configuration path to the initialization TCL file. The path of ps7_init.tcl is mentioned here. This is file that was exported when you exported your design to SDK; it contains the initialization information for the processing system. (HINT: If you moved the project, you should delete the previous run configuration and create a new one)
- 8. The STDIO Connection tab is available in the launch configurations settings. You can use this to have your STDIO connected to the console. We will not use this now because we have already launched a serial communication utility. There are more options in launch configurations but we will focus on them later.
- 9. Click Apply and then Run.
- 10. If you get a Reset Status dialog box indicating that the current launch will reset the entire system, click **OK**.
- 11. You should see something similar to the following on your serial console:

```
Hello World

-- FMC-IMAGEON HDMI Pass-Through
---

FMC-IMAGEON Initialization ...

HDMI Input Initialization ...

Waiting for ADV7611 to locked on incoming video ...

ADV7611 Video Input LOCKED

ADV7611 Video Input Information

Video Input = HDMI, Progressive
Color Depth = 8 bits per channel
```



```
HSYNC Timing = hav=1920, hfp=88, hsw=44(hsp=1), hbp=148
VSYNC Timing = vav=1080, vfp=04, vsw=05(vsp=1), vbp=036
Video Dimensions = 1920 x 1080

ADV7511 Video Output Information
Video Output = DVI, Progressive
Color Depth = 8 bits per channel
HSYNC Timing = hav=1920, hfp=88, hsw=44(hsp=1), hbp=148
VSYNC Timing = vav=1080, vfp=04, vsw=05(vsp=1), vbp=036
Video Dimensions = 1920 x 1080

HDMI Output Initialization ...
Video Timing Controller Initialization ...

Done

Press ENTER to re-start ...
```

To re-start the detection of the HDMI input source, press ENTER.

You have successfully executed the HDMI pass-through on hardware!



References

All documentation supporting the ON Semiconductor Image Sensor with HDMI Input/Output FMC Bundle is available on the Avnet Design Resource Center (DRC):

http://www.em.avnet.com/fmc-imageon-v2000c

- Getting Started with the HDMI Input/Output FMC Module
 http://www.em.avnet.com/fmc-imageon → Support Files & Downloads
- Avnet FMC-IMAGEON Hardware User Guide http://www.em.avnet.com/fmc-imageon → Support Files & Downloads
- Getting Started with the ON Semiconductor Image Sensor with HDMI Input/output FMC Bundle
 http://www.em.avnet.com/fmc-imageon-v2000c
 → Support Files & Downloads

The following reference provides links to documentation for video intellectual property (IP).

- Video and Image Processing IP
 http://www.xilinx.com/ipcenter/video/video_core_listing.htm
- Video Timing Controller http://www.xilinx.com/products/intellectual-property/EF-DI-VID-TIMING.htm
- 6. Video Input to AXI4-Stream http://www.xilinx.com/products/intellectual-property/video_in_to_axi4_stream.htm
- AXI4-Stream to Video Output http://www.xilinx.com/products/intellectual-property/axi4_stream_to_video_out.htm
- AXI Video DMA
 http://www.xilinx.com/products/intellectual-property/axi video dma.htm

The following reference provides links to documentation for AXI interconnect.

- 9. UG761 AXI Reference Guide
- 10. PG065 AXI4-Stream Infrastructure



Known Issues and Limitations

The following issues are known to exist. When applicable, the workaround used is described.

Hello World Template – error: conflicting types for 'print'

The "Hello World" C project template has an issue that may manifest itself depending on which drivers are included in the design.

The "print(....)" declaration does not match the declaration in the xil_printf.h file and will result in the following error:

```
helloworld.c:29:6: error: conflicting types for 'print' xil_printf.h:39:6: note: previous declaration of 'print' was here
```

The solution is to simply fix the "print(...)" declaration as shown below.

```
//void print(char *str);
void print( const char *ptr);
```



Troubleshooting

