


BadgeBot Kit Parts list

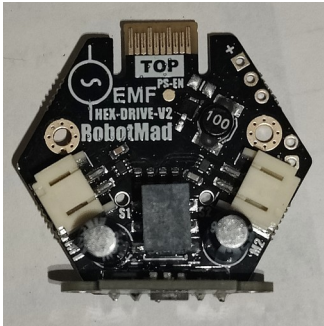


HexDrive-V2
1x



LED Shroud
1x




Short Screw m2-5mm
8x
Long Screw m2-8mm
2x

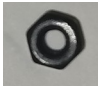

Nut m2
2x



Motor top bracket
2x

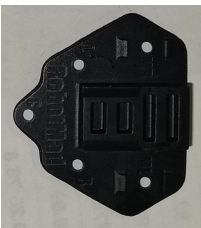

Mounting plate
2x





Motor
2x
Left – Yellow & Orange
Right – Blue & Green




Cable Clip
1x

Free Gift, Badge
Battery holder - 1x

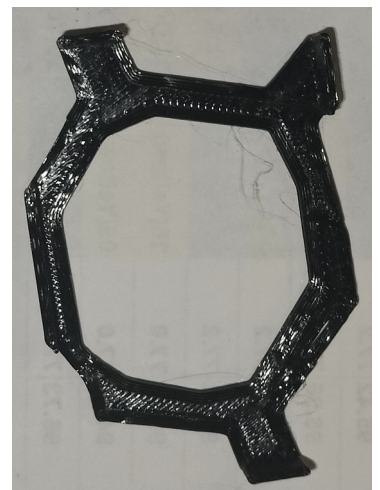


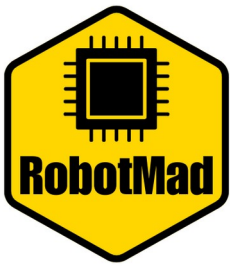


BadgeBot build instructions.

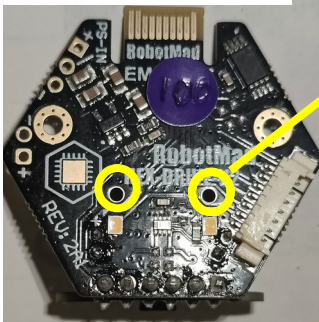


1. Insert the small 'LED shroud' piece into the 2 small holes in the HexDrive-V2, facing the front. Line up the pins to the holes and push carefully but it might require more force.

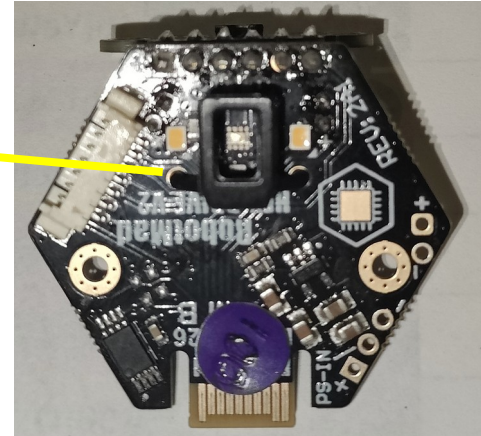

2. Remove the front Panel of your badge by unscrewing the large screws by the B, D, and F buttons. Be careful as the front board is still attached via flex cable. Remove the brown circles covering the threaded holes of the lower board if they are still there.

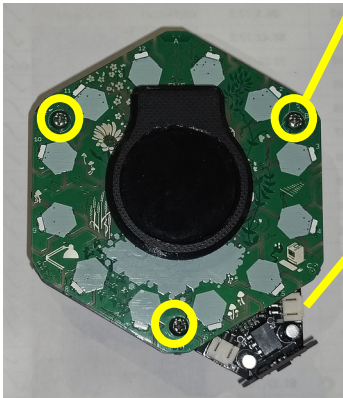

3. Insert your 'HexDrive-V2' into the hexexpansion slot 3, between the C and D buttons. Make sure the side marked TOP by the connector is facing up. Try using a higher angle as you insert into the slot.

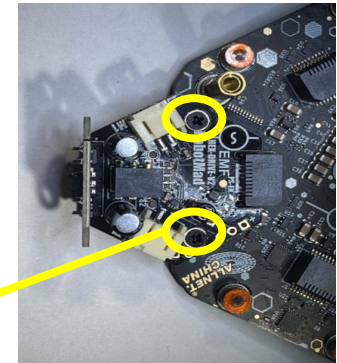

4. Use 2 of the 'short screws' to secure the 'HexDrive-V2' into the slot.

5. Put your badge front panel back on using its original screws, careful of the flex cable.

6. Turn your badge over, careful of the screen.






7. Line up one of the 'mounting plates' to the badge over the slot to the left of the 'Hex-Drive-V2'. Use a 'short screw' in the hole labelled L into the hole closer to the 'HexDrive-V2'.


8. Place the 'motor' with the orange and yellow wires, inside the 'motor top bracket' with the gearbox up against but inside the small wall at one end.

9. Place the 'motor top bracket' with the 'motor'. Over the raised platform of the 'mounting plate' Matching and lining up with the ML and MR holes.


10. Screw a 'long screw' though the hole marked ML, though the 'motor top bracket', 'mounting plate' and into the badge's other mounting hole for this hexexpansion slot.

11. Use a 'short screw' in the hole marked MR while holding a 'nut' on the other side of the 'mounting plate.'

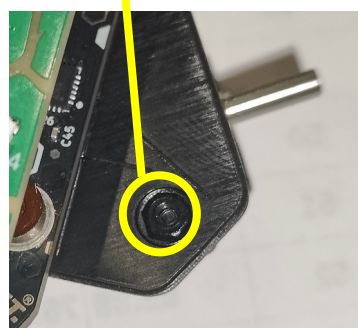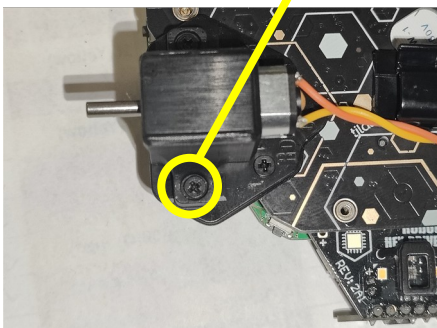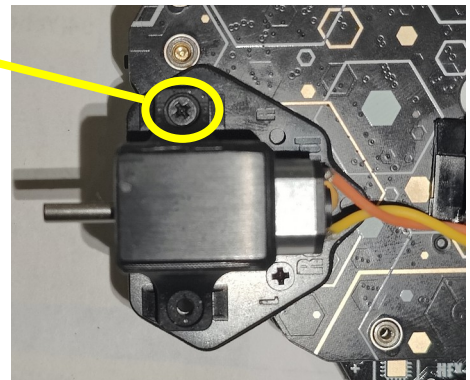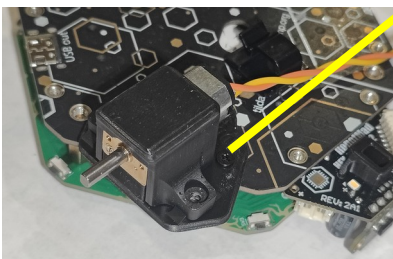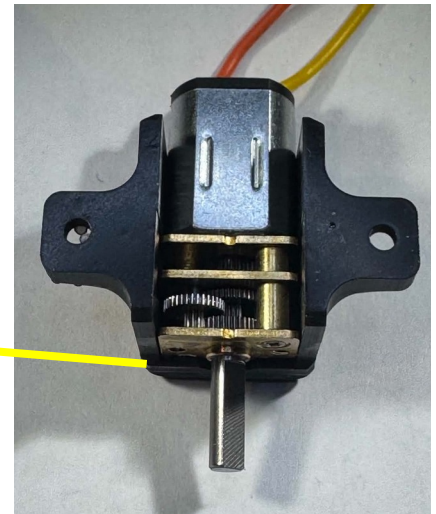

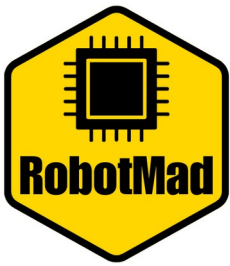

BadgeBot build instructions.

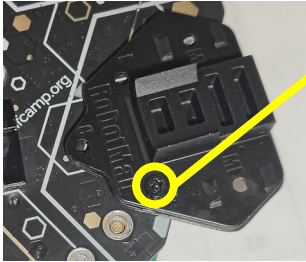

12. Line up the other 'mounting plate' to the badge over the slot to the right of the 'Hex-Drive-V2'. Use a 'short screw' in the hole labelled R into the hole closer to the 'HexDrive-V2'

8. Place the 'motor' with the green and blue wires, inside the other 'motor top bracket' with the gearbox up against but inside the small wall at one end.

9. Place the 'motor top bracket' with the 'motor'. Over the raised platform of the 'mounting plate' Matching and lining up with the ML and MR holes.

15. Screw a 'long screw' through the hole marked MR, through the 'motor Top bracket', 'mounting plate' and into the badge's other mounting hole for this hexpansion slot.

16. Use a 'short screw' in the hole marked ML while holding a 'nut' on the other side of the 'mounting plate'.

17. Plug in the 'motors' to the 'HexDrive-V2' crossing the wires over for the neatest connection. The connectors are rather tight and polarised with a notch at the top. Orange and yellow into 'M1'. Blue and green into 'M2'.

18. Take off the backing and place the 'cable clip' just above the hole in the badge main board, in line between the 2 motors. Then insert the wires from the motors to keep them tidy.

19. Use 2 'small screws' in the holes on the 'ball mount' marked S, lined up to the holes of the hexpansion slot between buttons F and A. Under the USB in port.

20. Push the 'wheels' onto the motor shafts, flat side out, by lining up the flat side of the shaft with the flat in the wheels hole.

Your BadgeBot is complete! You can now install the BadgeBot app from the Badge's app store.

