


IFLIGHT SUCCX-E Mini F7 V1.4 Wiring Diagram













DJI Digital VTX + Radio

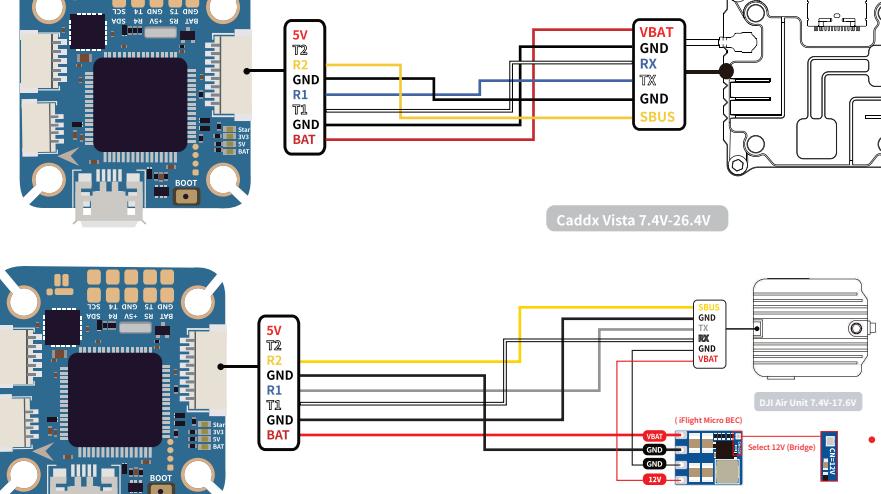







Please check your protocols, otherwise your DJI Radio won't input signals!
DJI Google protocol and Betaflight protocol has to match!
For lower signal latency use the SBUS_BAUD_FAST protocol option on both ends.
For Betaflight: Copy/Paste "set sbus_baud_fast=on" into your Betaflight Configurator CLI then hit enter.
Use "save" and enter to save the changes.
Default: sbus_baud_fast=off, Google protocol set to NORMAL





Various Receivers

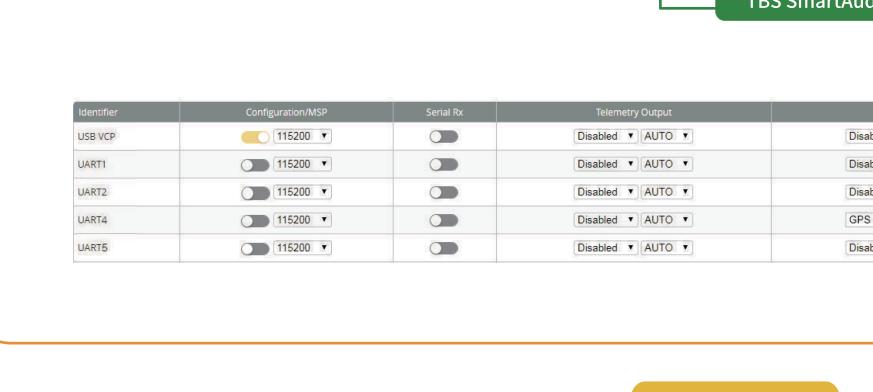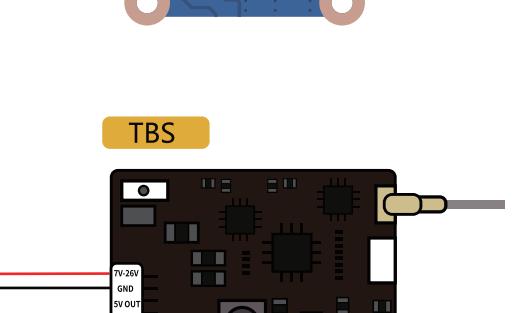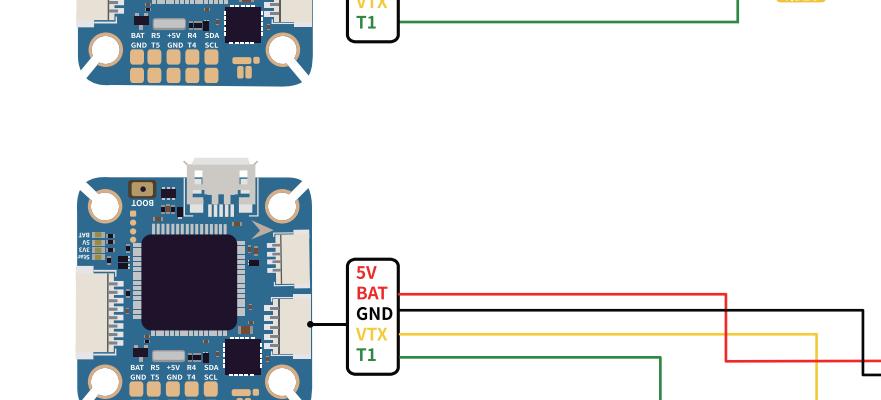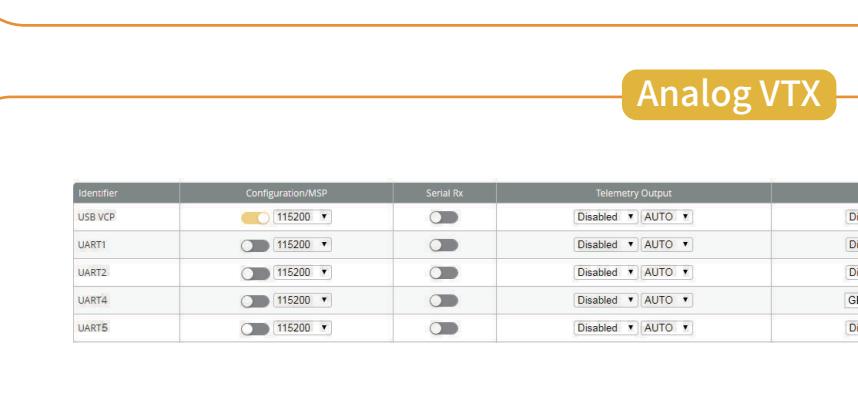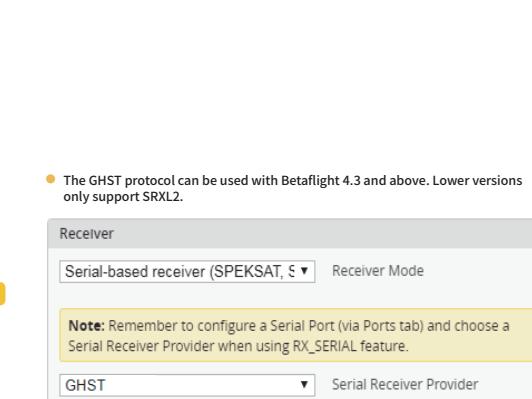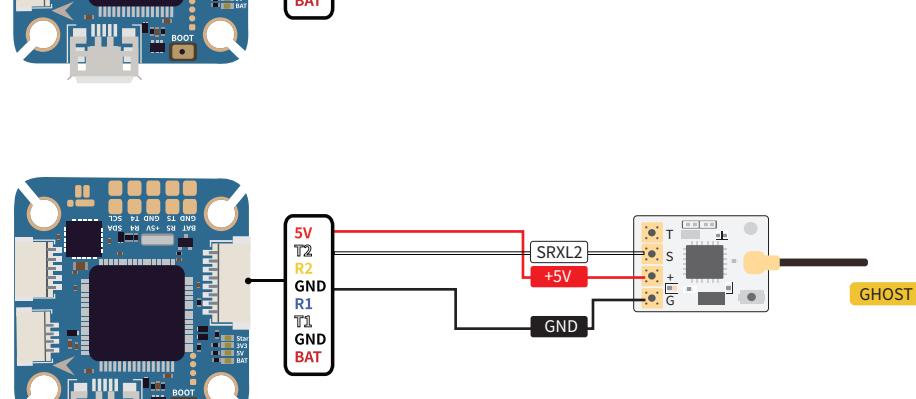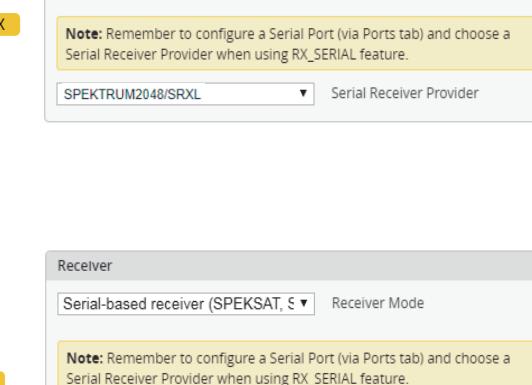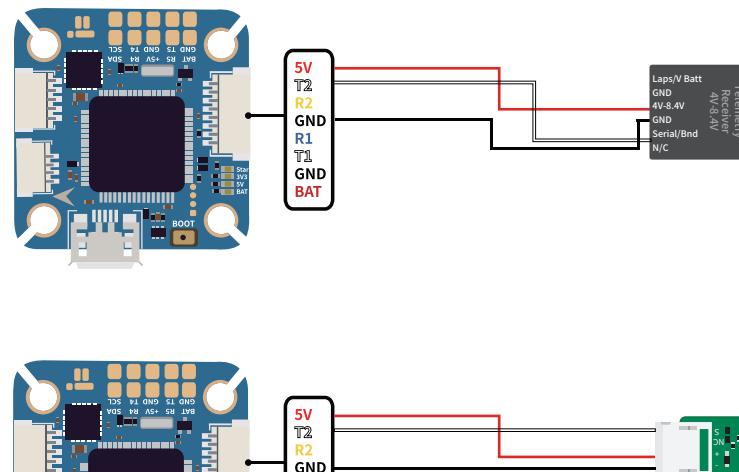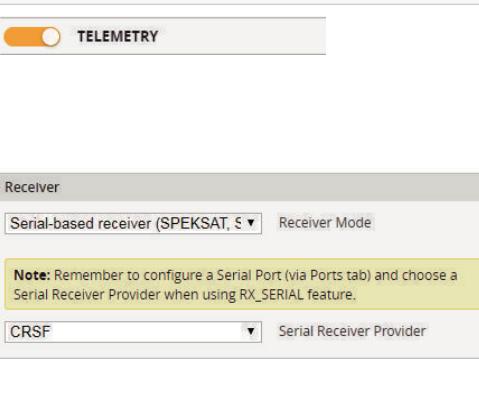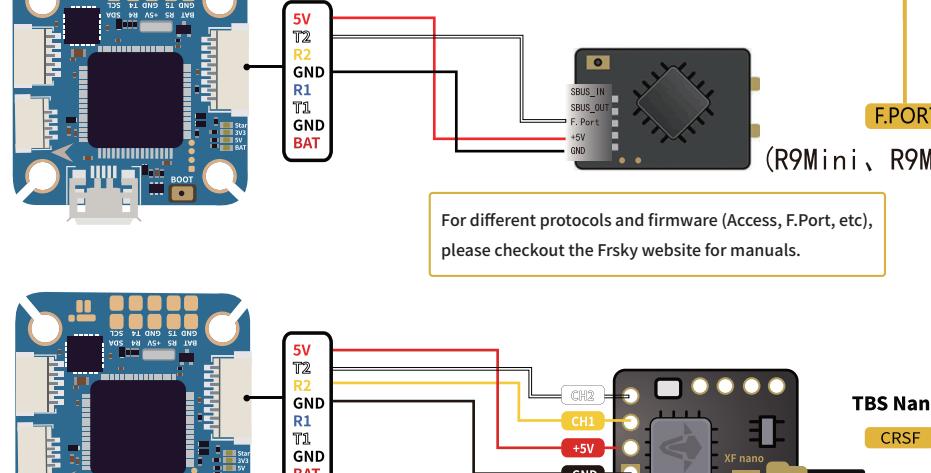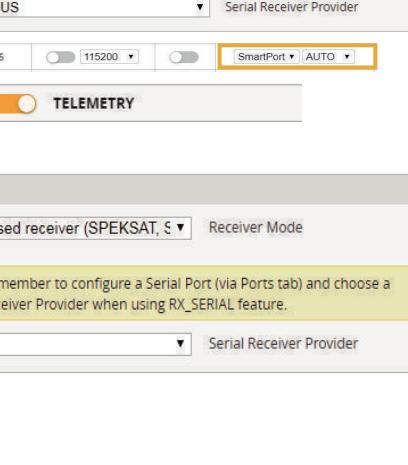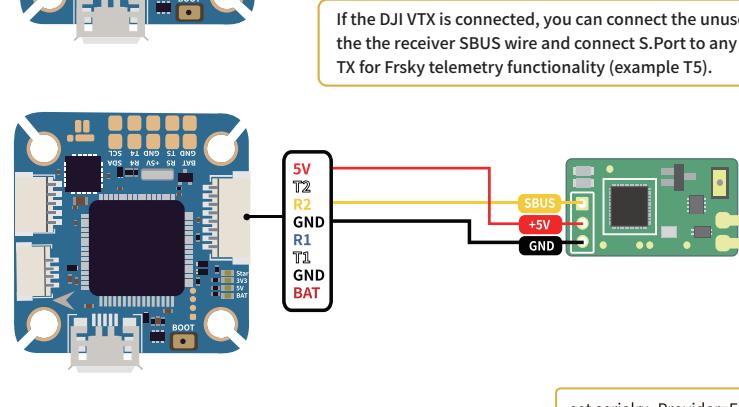

Analog VTX

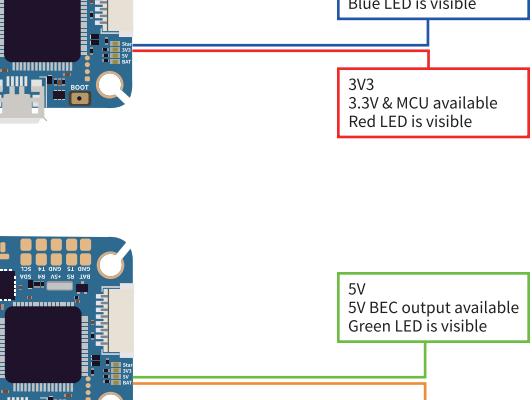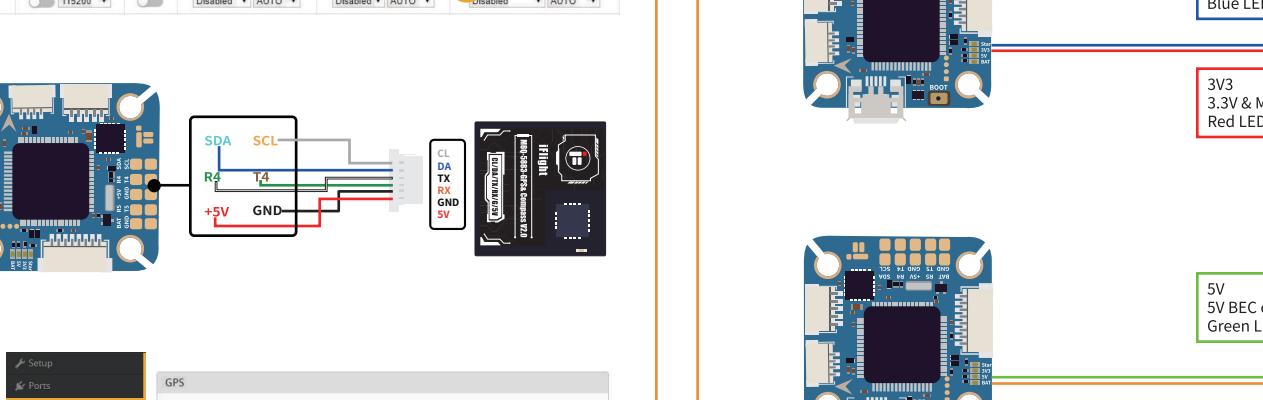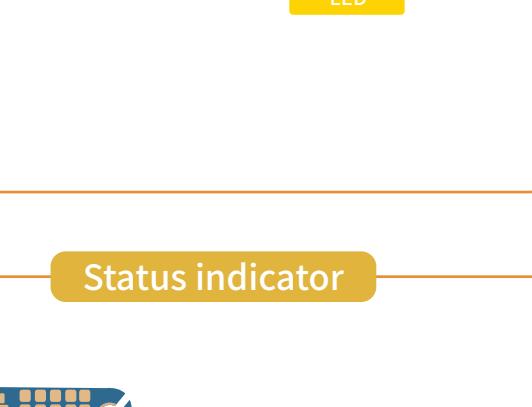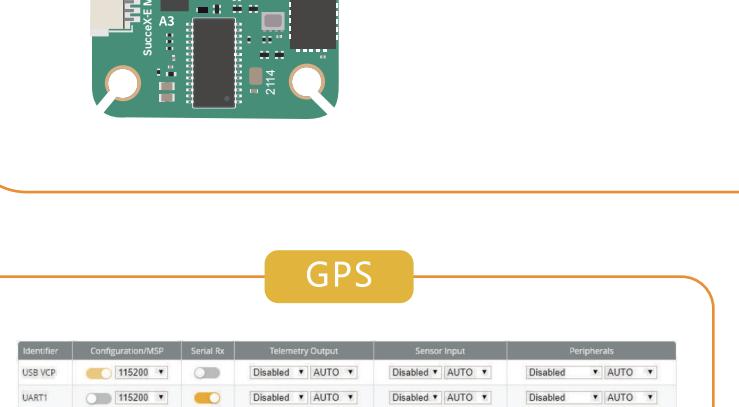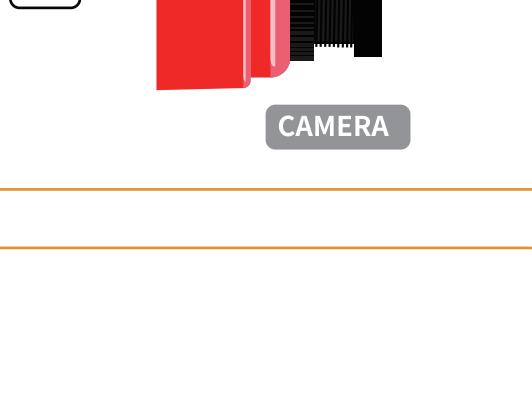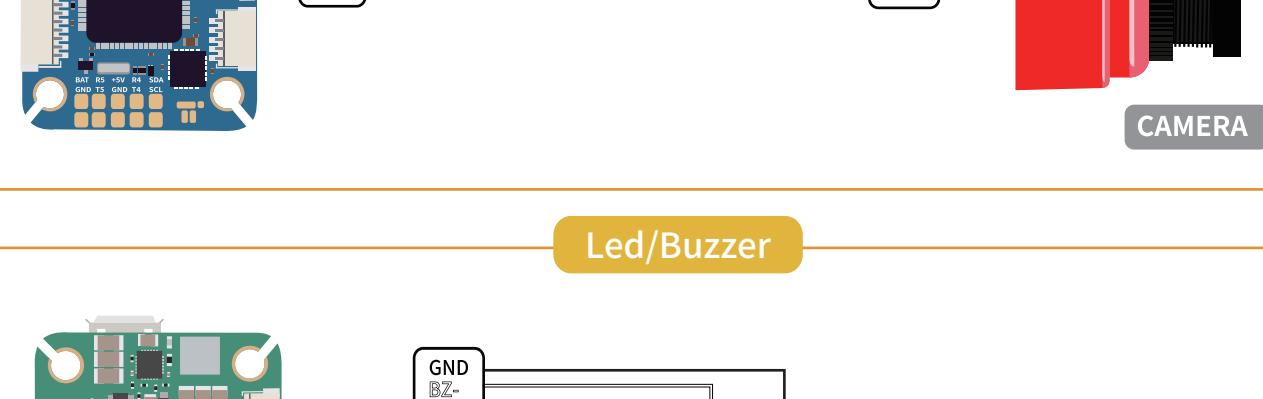

Led/Buzzer

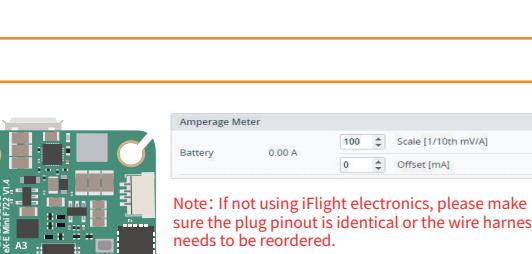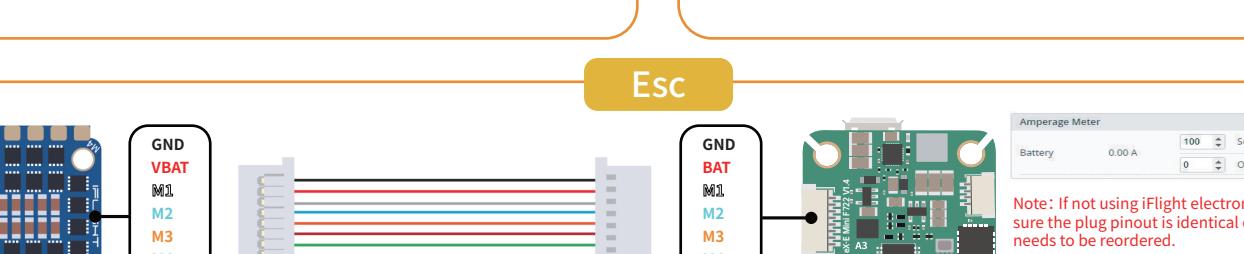

GPS

