


iFlight BLITZ Wing H743 Instructions


Parameters:





MCU: STM32G745
Cyclo: DMS26889
Burn: DPS0130
OSD: AT7756E
IO: Output 9V 2.5A continuous output current, 3A peak current 15 seconds (for VCC)
FXTX: Output 5VmA 7.4VmA 8.4VmA continuous output current (for Servo)
(adjust up and down)
Block: MicroSD card
I/O:
UART1: UART1, UART2, UART3, UART4, UART6, UART7, UART8
2+IC, POAN
12PWM outputs
UART1 for VTx HD/Analog
UART1 for Receiver
UART4 for GPS
UART2, UART6, UART7 for free
8-Band PWM outputs
2+IC
1xHd10 Spin connector for Hd VTX/Analog VTX&CAM (R11T15/F9VT10)
1xHd10 spin connector for ESC (B6AC/PNMAIM3GMZMBTA/BATIG)
1xHd10 spin connector for Fly Receiver or DJI (SV30SD2/GJRJ212)
1xHd10 spin connector GPS (14RA61S)
1xHd10 spin connector LED/BEeper (ESV01VCN)
4+IC LEDs for FC STATUS (LED BATT1 (PWR) (IN) / (5.0V) / Start)
Smartwatch/BLE/Comp. VTX protocol supported
Smartwatch/BLE: Yes
Beeper: Yes
Switchable dual camera inputs
Switchable 5V/7.4V/8V 4V outputs
7-30V DC IN (2-65)
Dimensions: 36.9x29mm
Mounting holes: 30.5x50mm x 4
Weight: 35g

Firmware support:
INAV: FLIGHT_Webbing/H475
Ardubot: BLE_VTXwing/V43

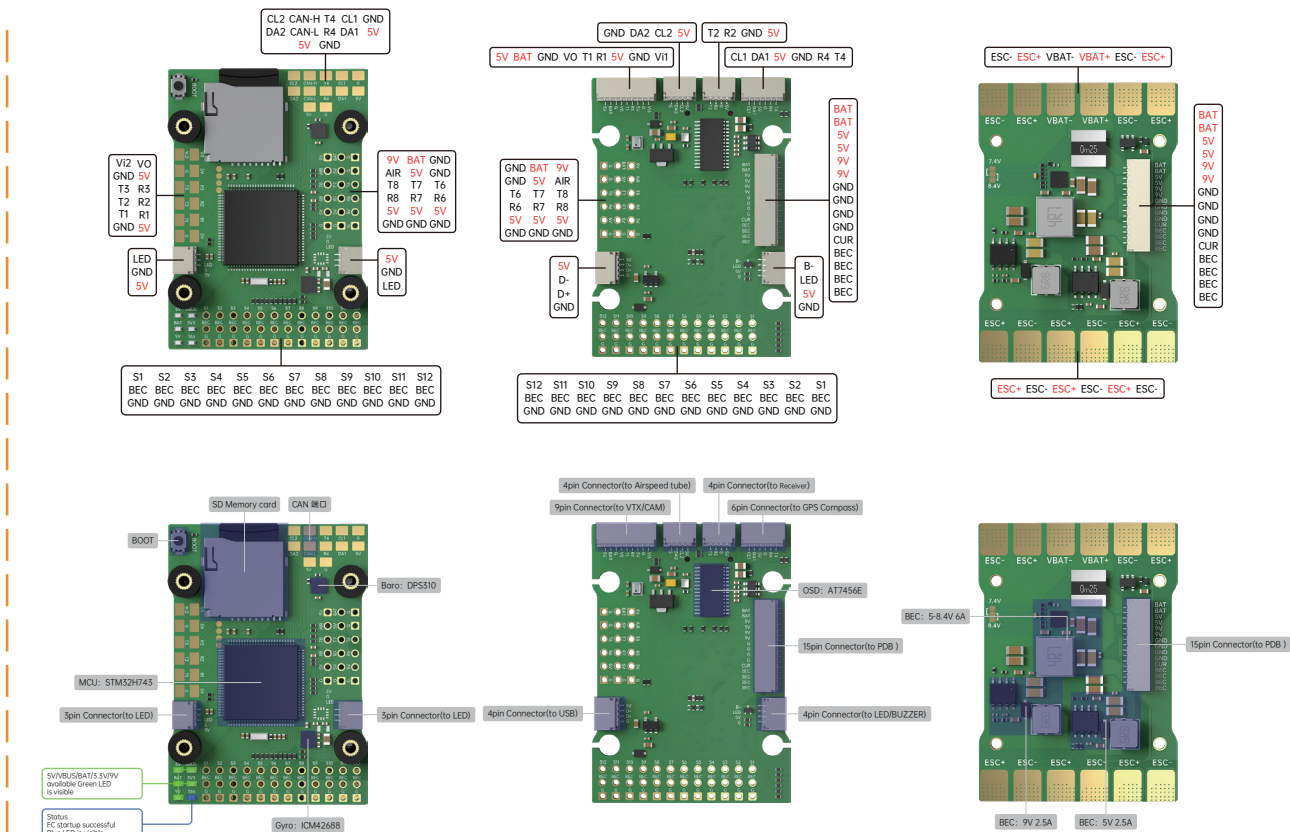



LED/COB/BOZZERS

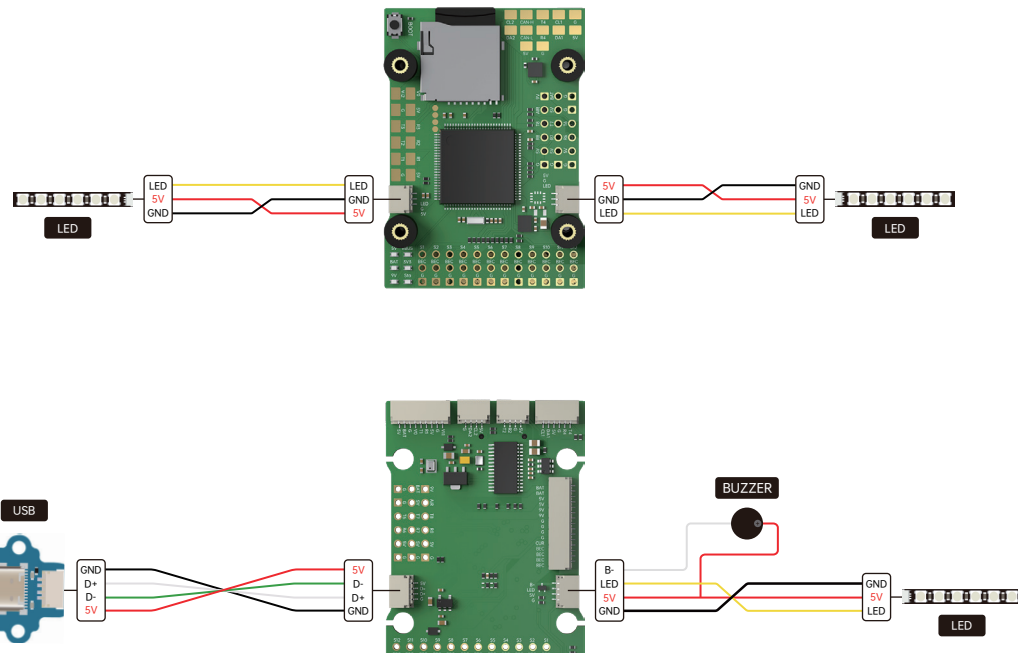


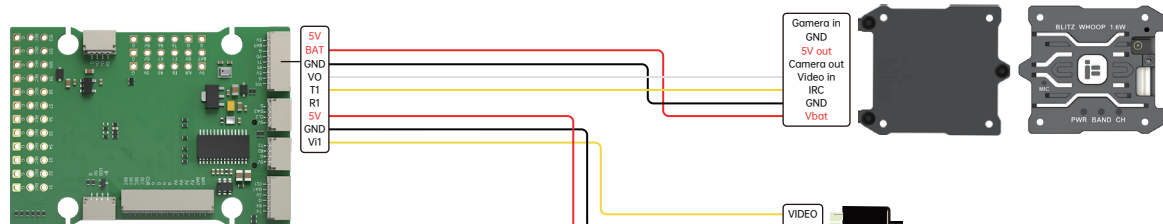
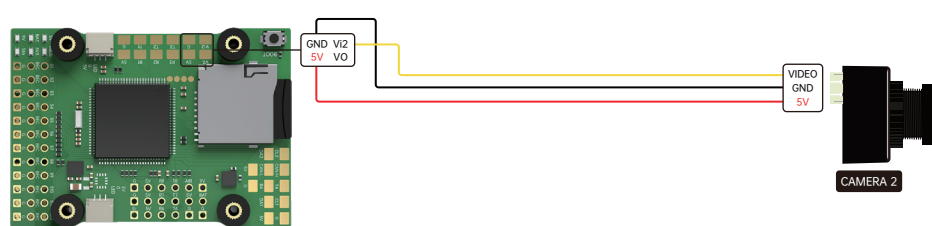
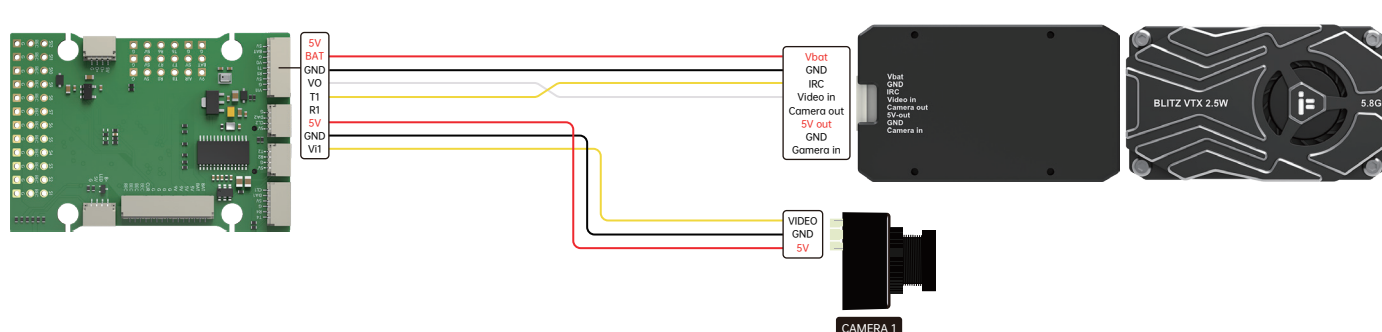
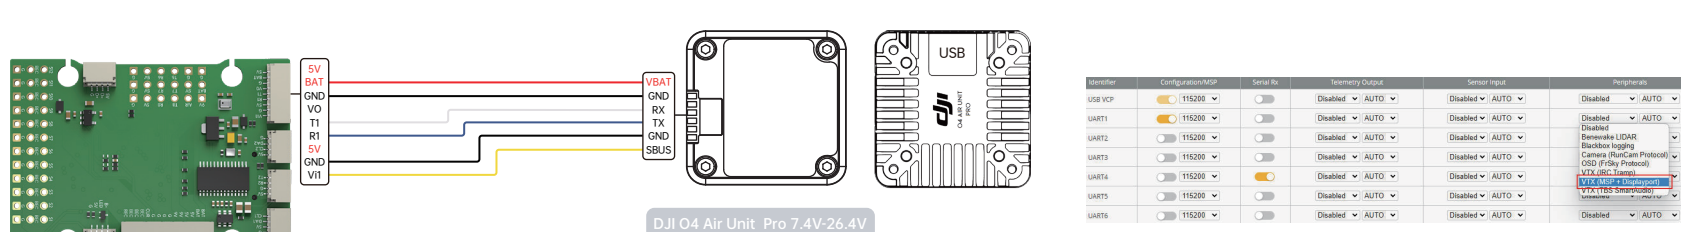


Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	 115200 v		Disabled v AUTO v	Disabled v AUTO v	Disabled v AUTO v
UART1	 115200 v		Disabled v AUTO v	Disabled v AUTO v	VTX (IRC Trans) v AUTO v
UART2	 115200 v		Disabled v AUTO v	Disabled v AUTO v	Disabled v AUTO v
UART3	 115200 v		Disabled v AUTO v	Disabled v AUTO v	VTX (IRC Trans) v AUTO v
UART4	 115200 v		Disabled v AUTO v	Disabled v AUTO v	VTX (IRC Trans) v AUTO v
UART5	115200 v		Disabled v AUTO v	Disabled v AUTO v	VTX (IRC Trans) v AUTO v
UART6	 115200 v		Disabled v AUTO v	Disabled v AUTO v	Disabled v AUTO v

DIGITAL AIRSPEED SENSOR/CPS

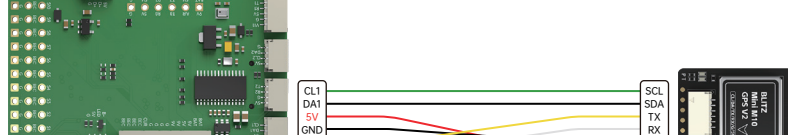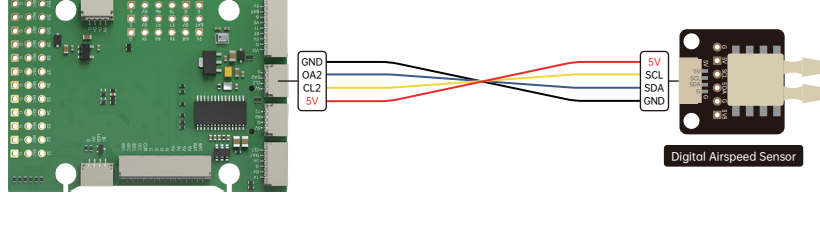
[illegible]

Setup

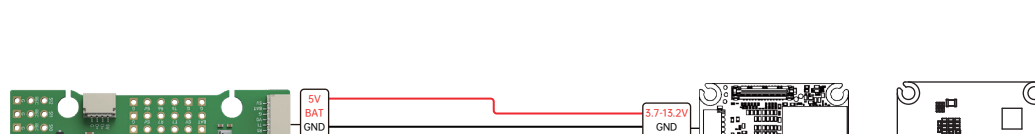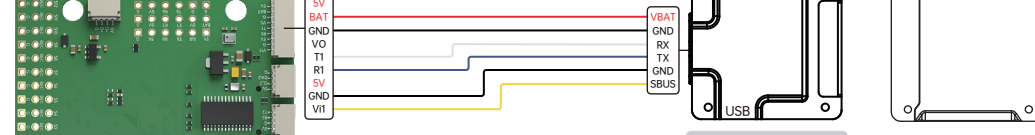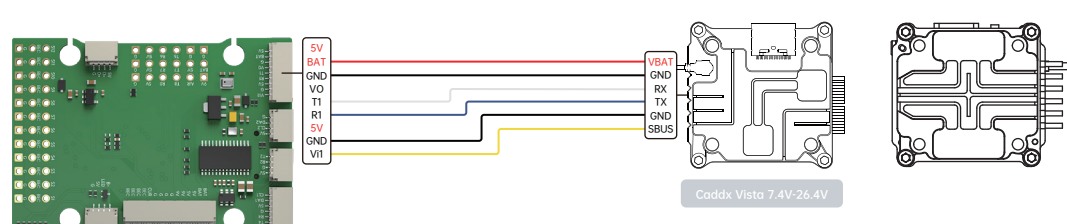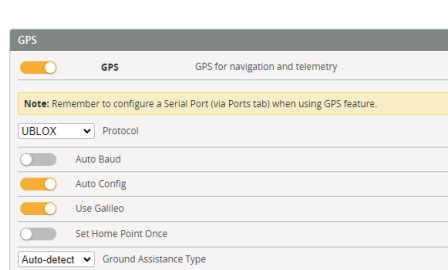
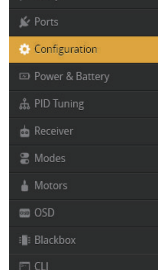


Identifier	Configurable MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
UART1P	115200	Disabled	AUTO	Disabled	Disabled
UART2	 115200	 Disabled	 AUTO	 Disabled	 VTX (MSP + C) AUTO
UART3	115200	Disabled	AUTO	Disabled	Disabled
UART4	115200	Disabled	AUTO	Disabled	Disabled

UNIT5	☐	115200	☐	Disabled	AUTO	Disabled	AUTO	Disabled	AUTO	Disabled	AUTO
UNIT6	☐	115200	☐	Disabled	AUTO	Disabled	AUTO	Disabled	AUTO	Disabled	AUTO





- To enable the air unit OSD under Betaflight 4.4 version, you need to select VTX (MSP+Displayport) in the peripheral port where the air unit signal is connected to the port interface.
- Please check your protocols, otherwise your DJI Radio won't enter signals!
DJI Google protocol and Betaflight protocol has to match!
For lower signal latency use the SBUS BAUD_FAST protocol option on both ends.
- For Betaflight Config Paste* set sbus,baud=fast* into your Betaflight Configurator CLI then hit enter.
Use *save* and hit enter to save the changes.
Default: sbus,baud=fast*off, Google protocol set to NORMAL

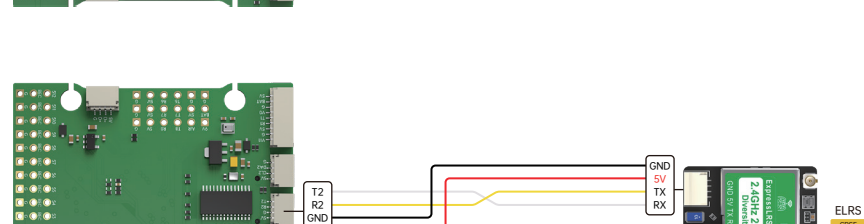
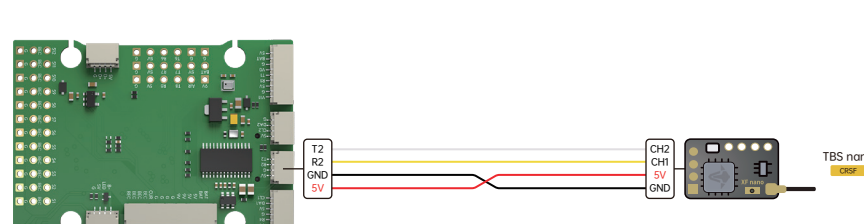


Identifier	Configuration/MSF	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	115200		Disabled AUTO	Disabled AUTO	Disabled AUTO
UART1	 115200		Disabled AUTO	Disabled AUTO	VTX (MSP + D AUTO)
UART2	115200		Disabled AUTO	Disabled AUTO	Disabled
UART3	 115200		Disabled AUTO	Disabled AUTO	BenevaLIDAR

UART4	☐	115200	☐	Disabled	AUTO	Disabled	AUTO	☒ VTX (RC Transp) ☒ VTX (MSP) + Displayport ☐ VTX (RC Smart Audio) ☐ Disabled
UART5	☐	115200	☐	Disabled	AUTO	Disabled	AUTO	☐ Disabled ☐ VTX (RC Smart Audio)

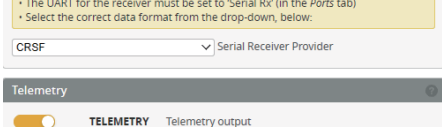

© 2004 Blackwell Publishing Ltd, *Journal of Internal Medicine* 255: 105–112

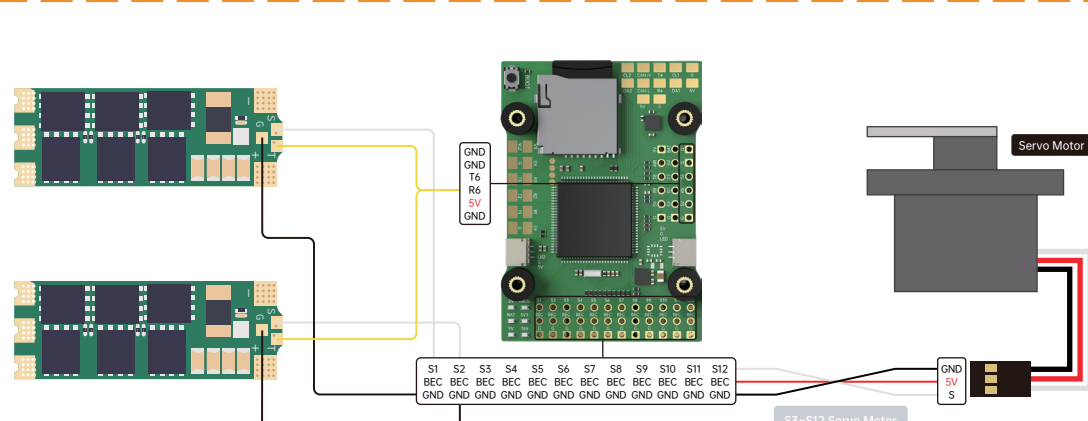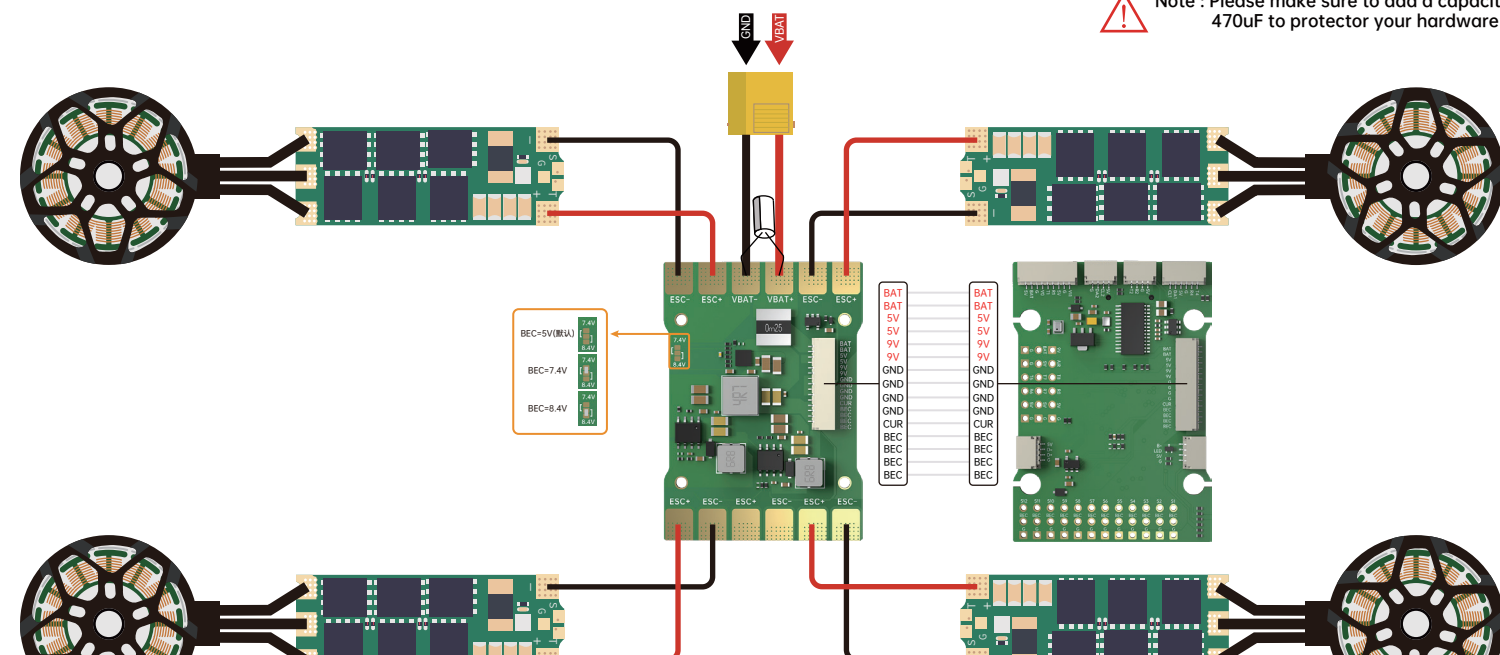

Discussion / Methodological Issues

