


GLASS BOTTLE

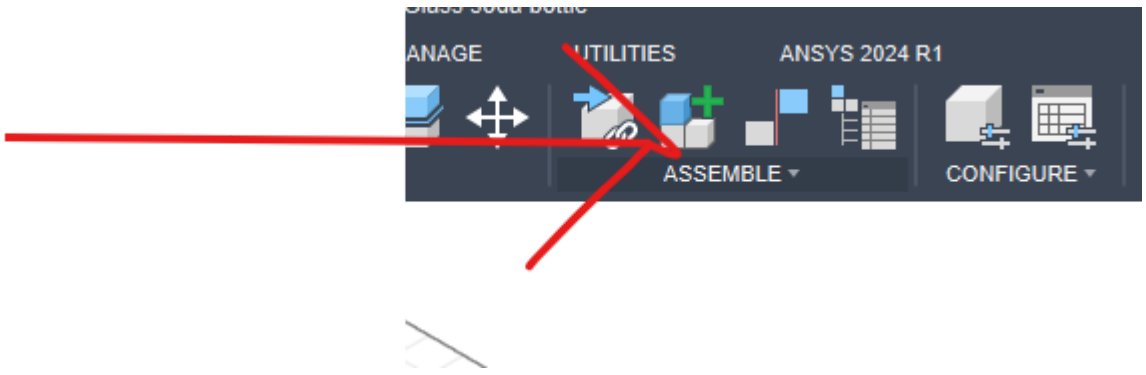


Make a habit of creating a New Component

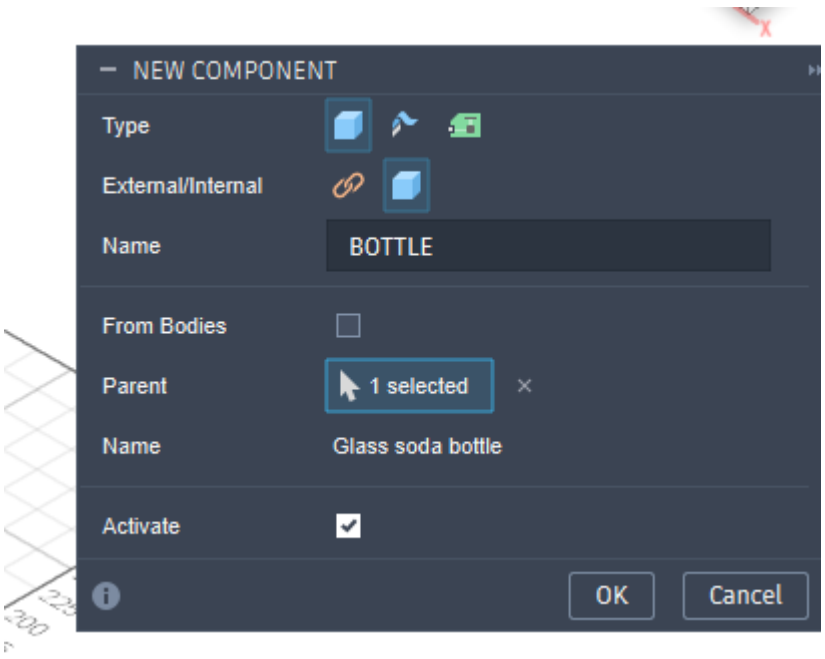

OK

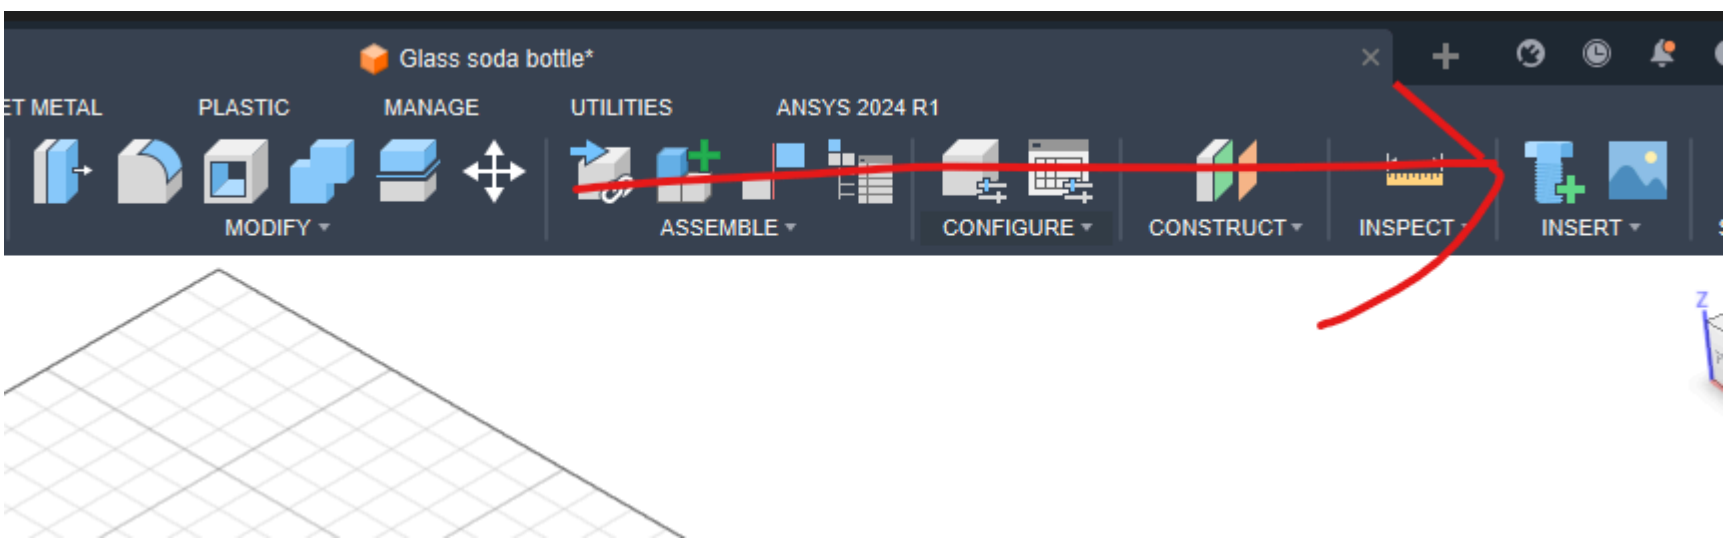


Go to Canvas to upload the bottle and reverse-engineer it

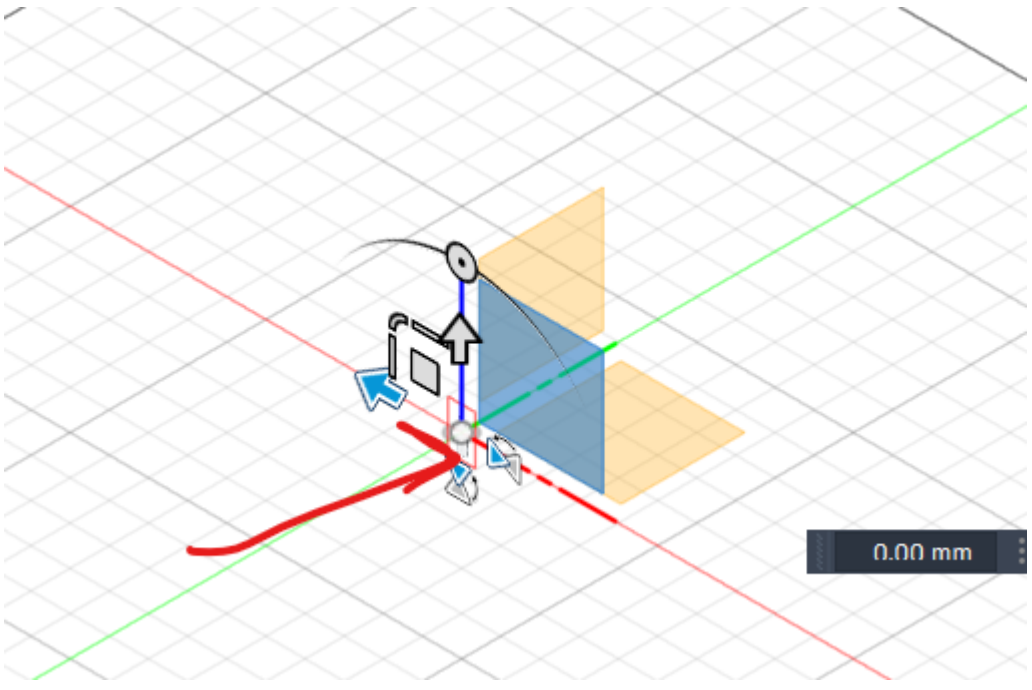


We will choose this plane, but we will adjust the image later

---

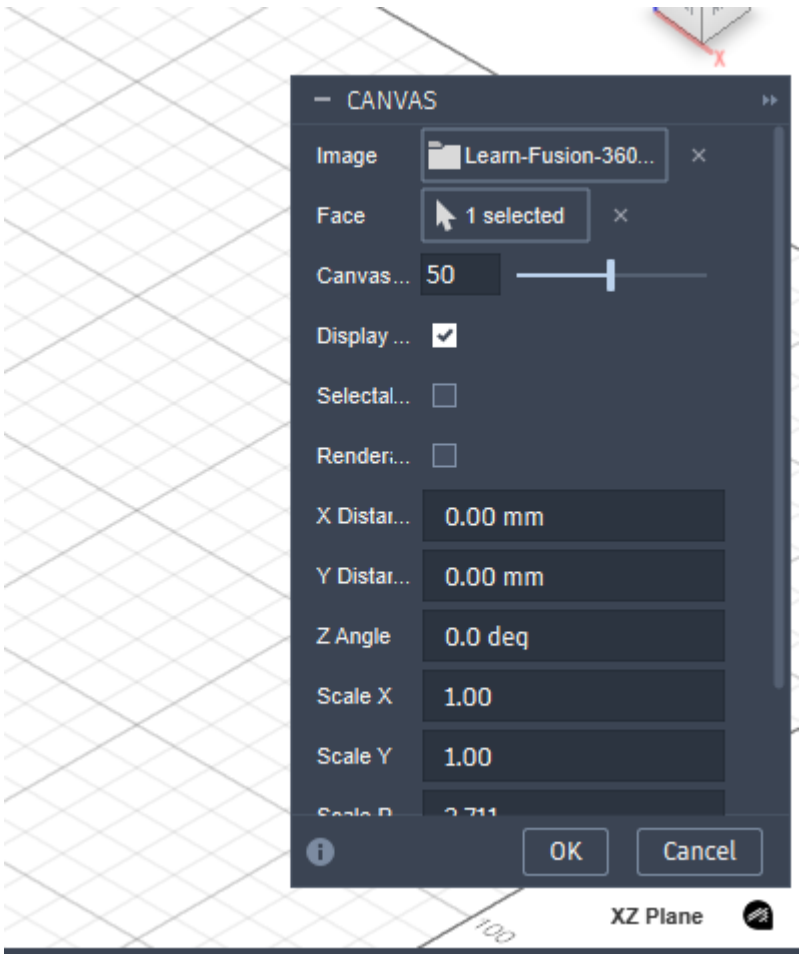

Just click OK for now

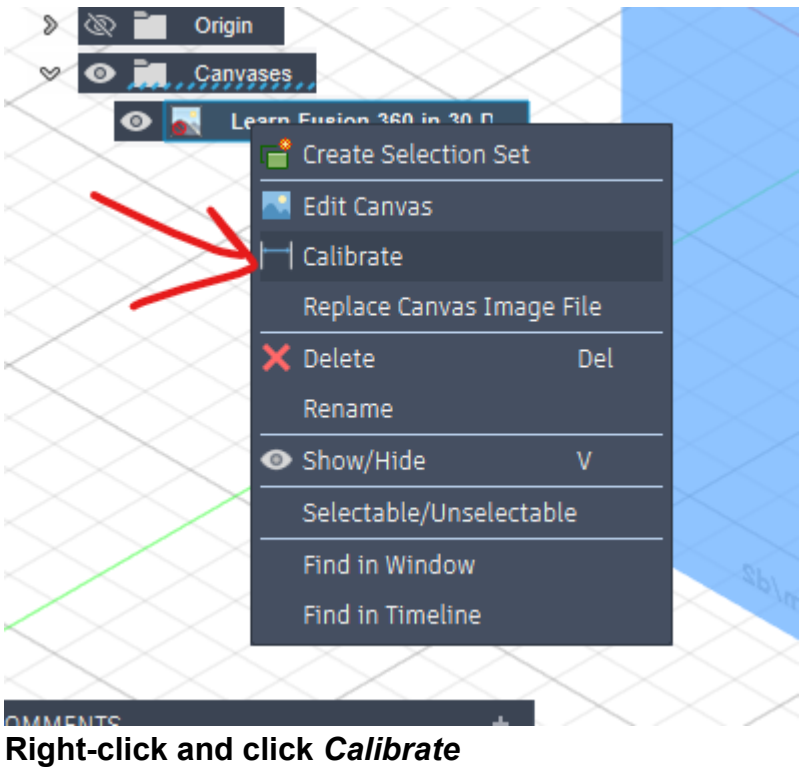


Right-click and click *Calibrate*




Select the lower point and the upper point
Then set the size to 240 mm




Click on Origin to show the Origin point

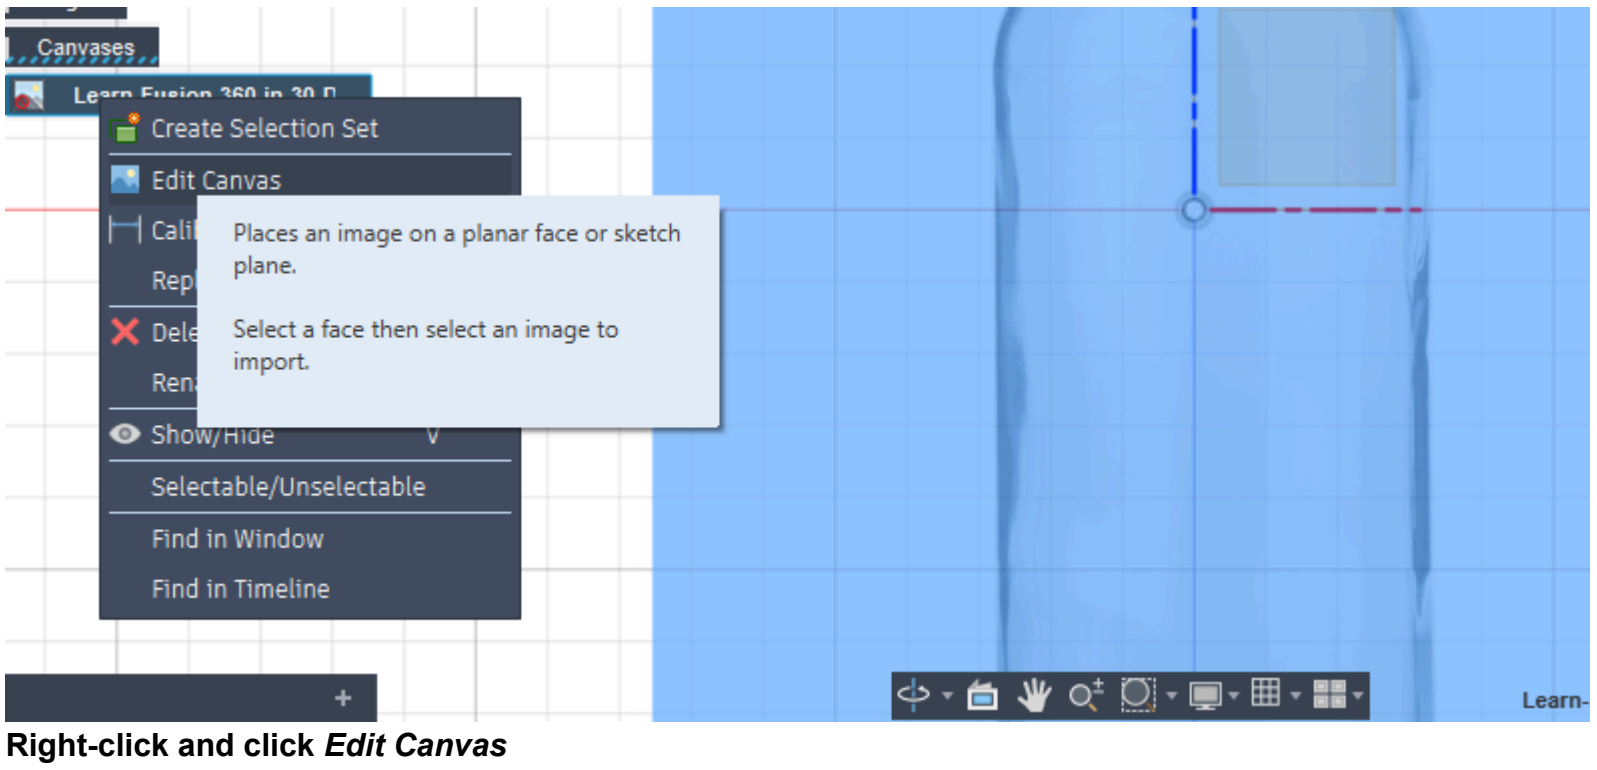


Right-click and click *Edit Canvas*

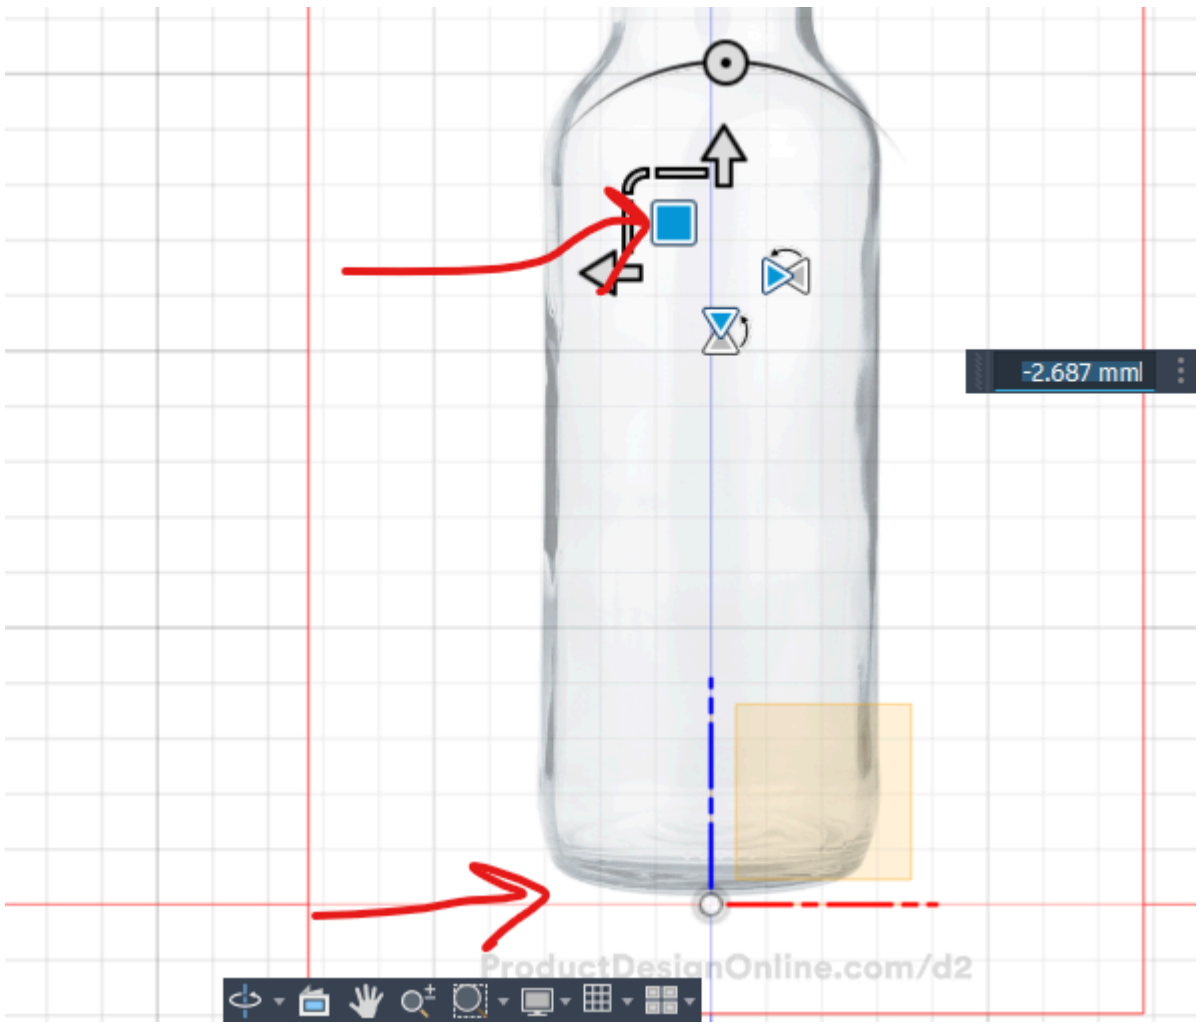

Use the center square to move the bottle
Align the bottom center of the bottle with the Origin

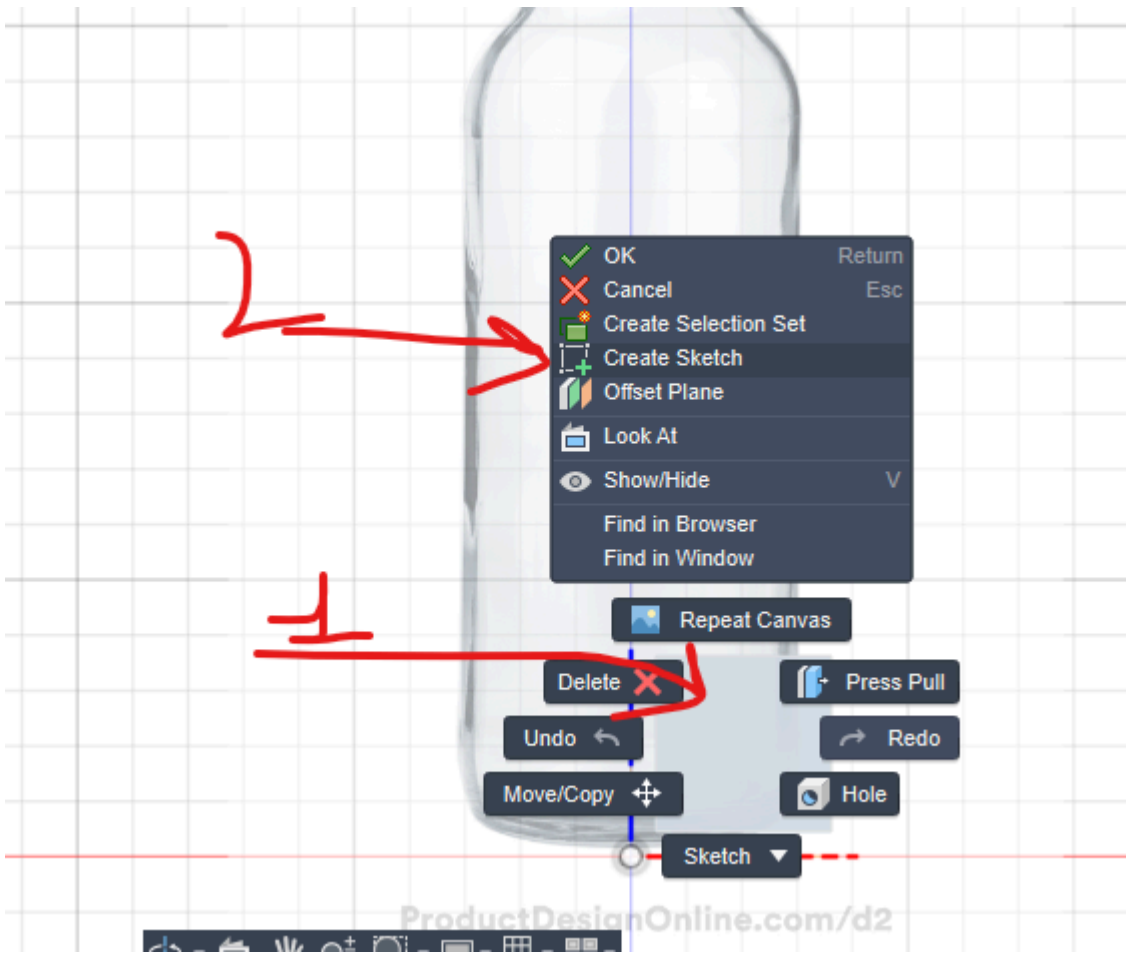


1. Right-click
2. Create Sketch**

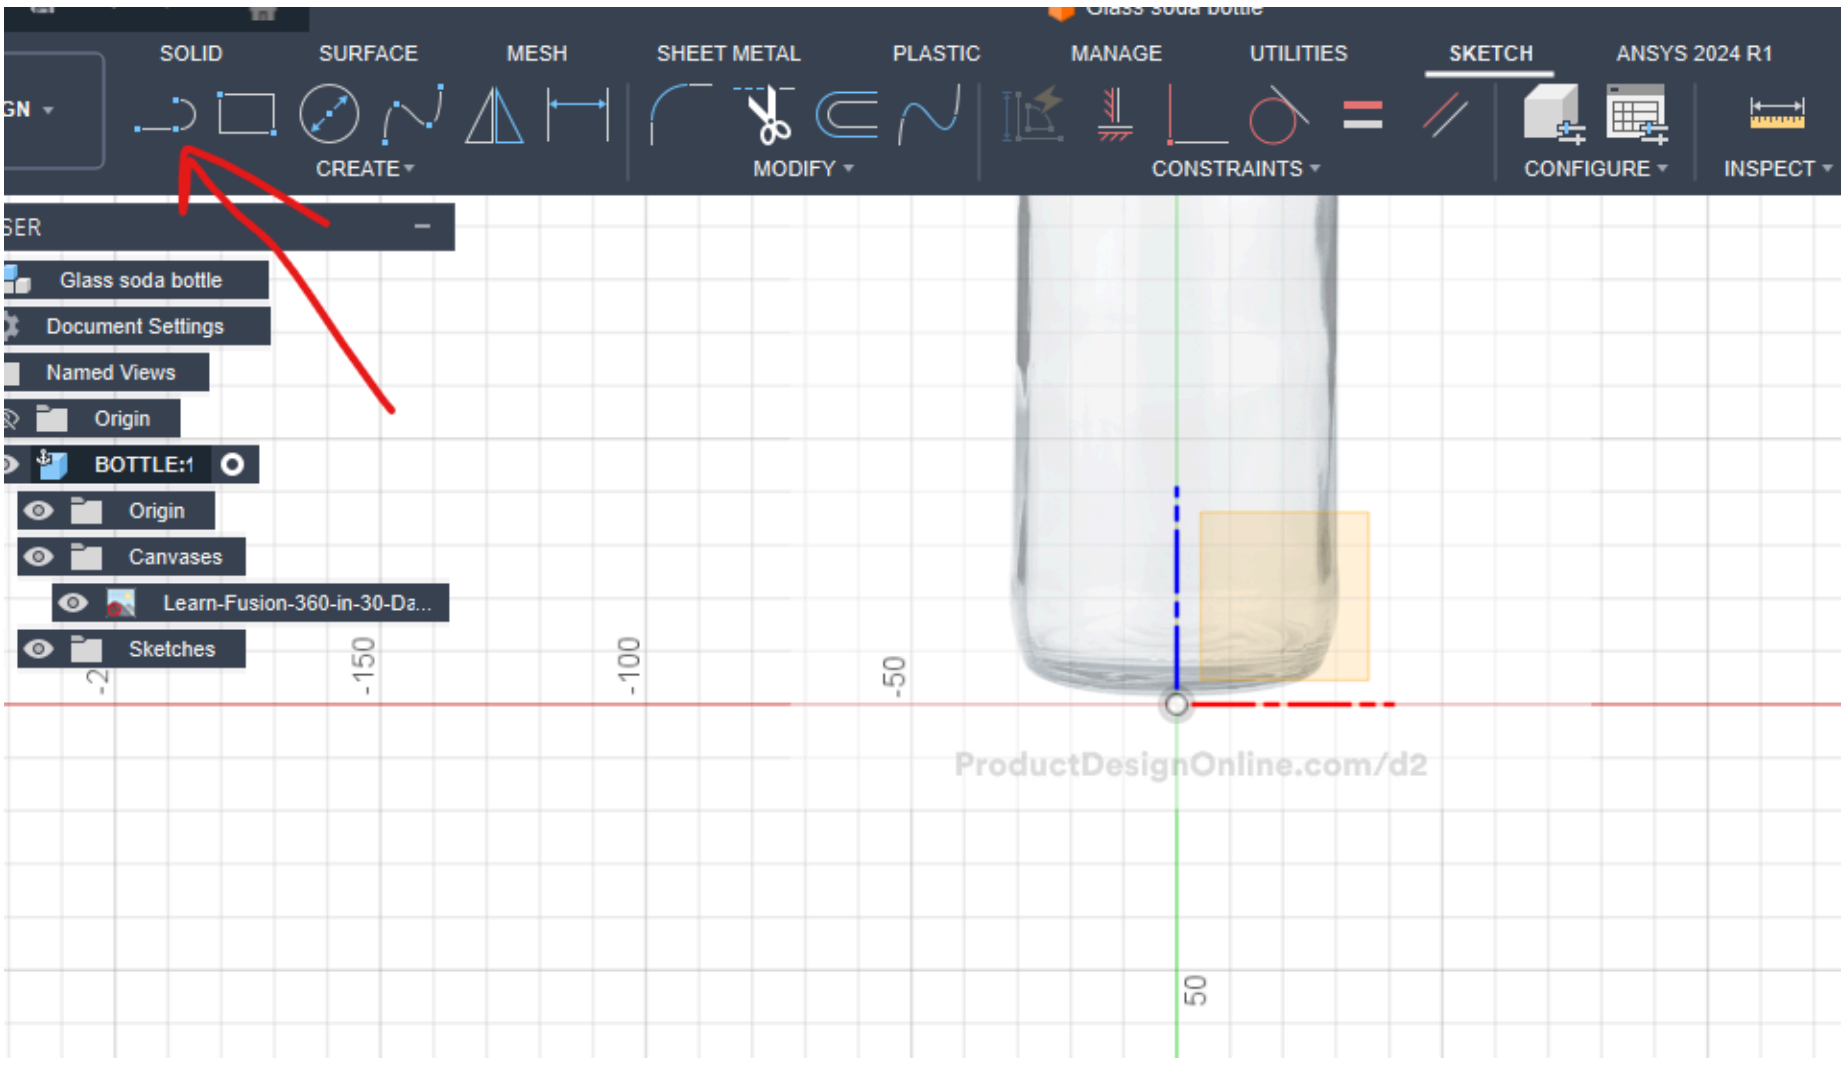


Click on the Line tool




Click on the Origin

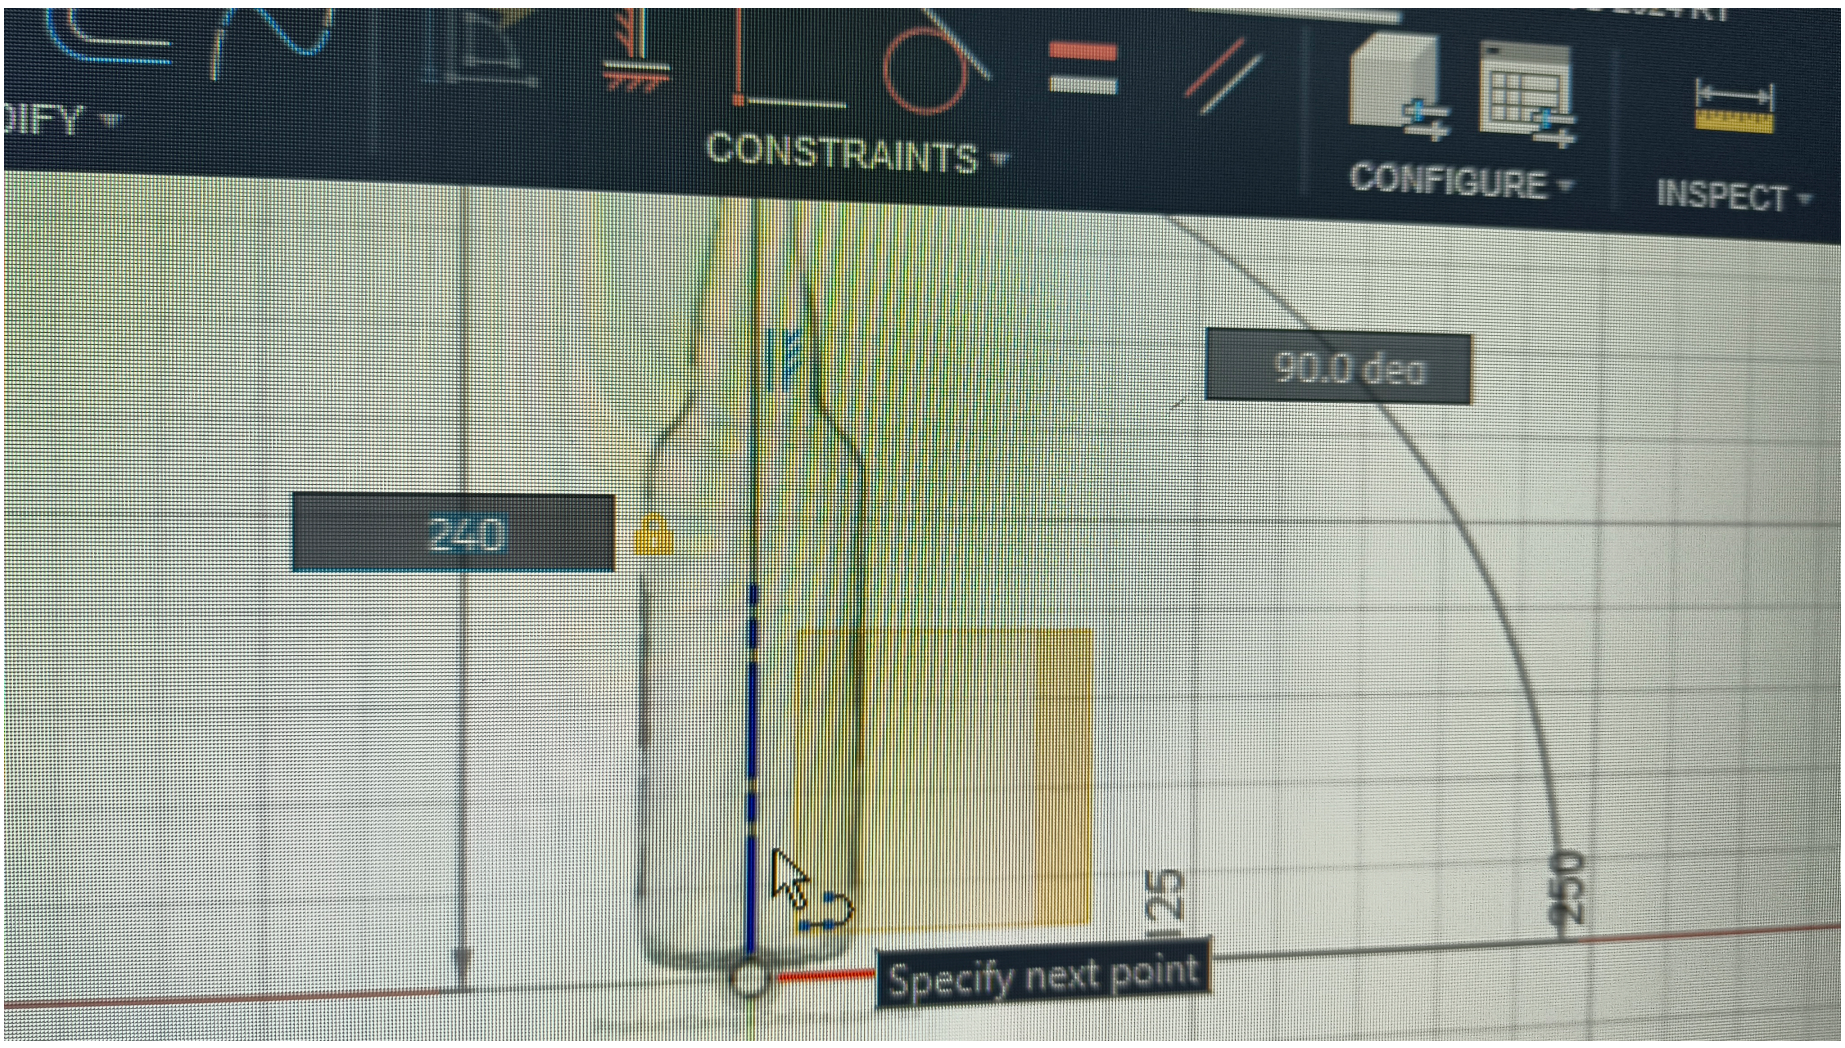


Set the height to 240 mm (same as calibration)

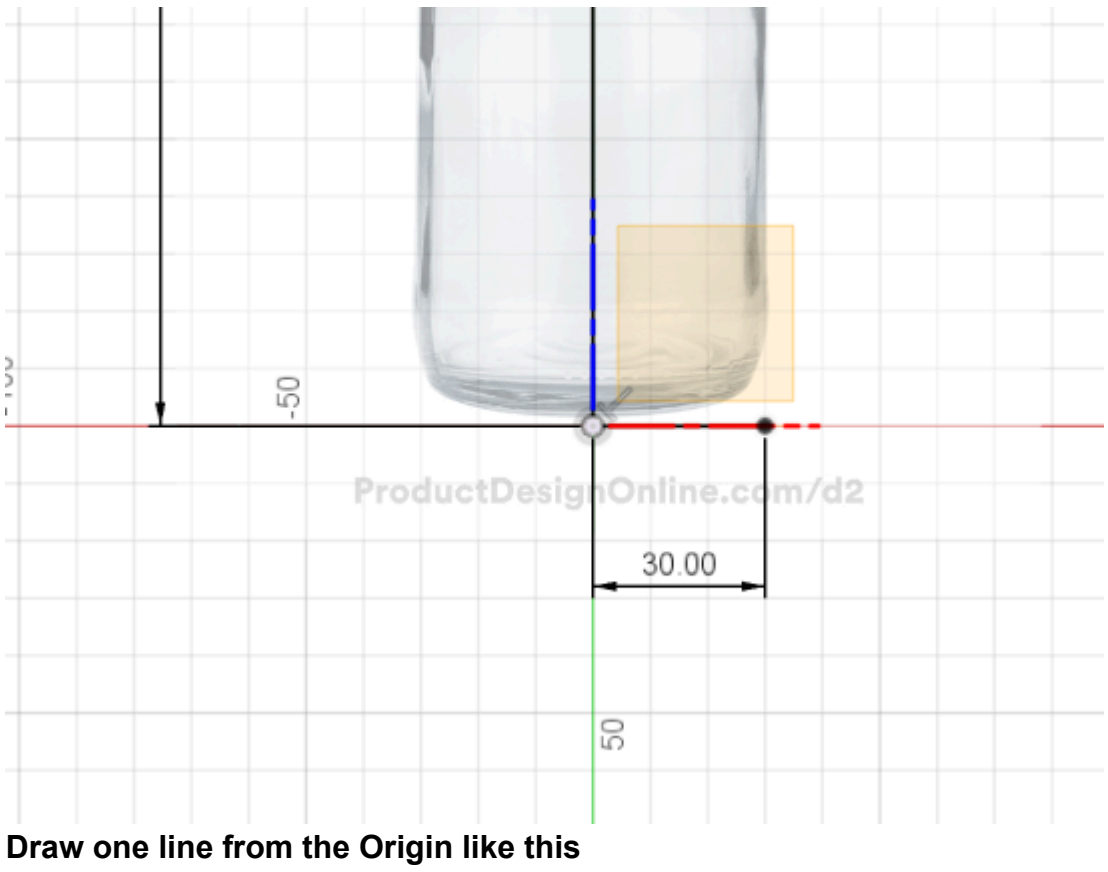


Draw one line from the Origin like this

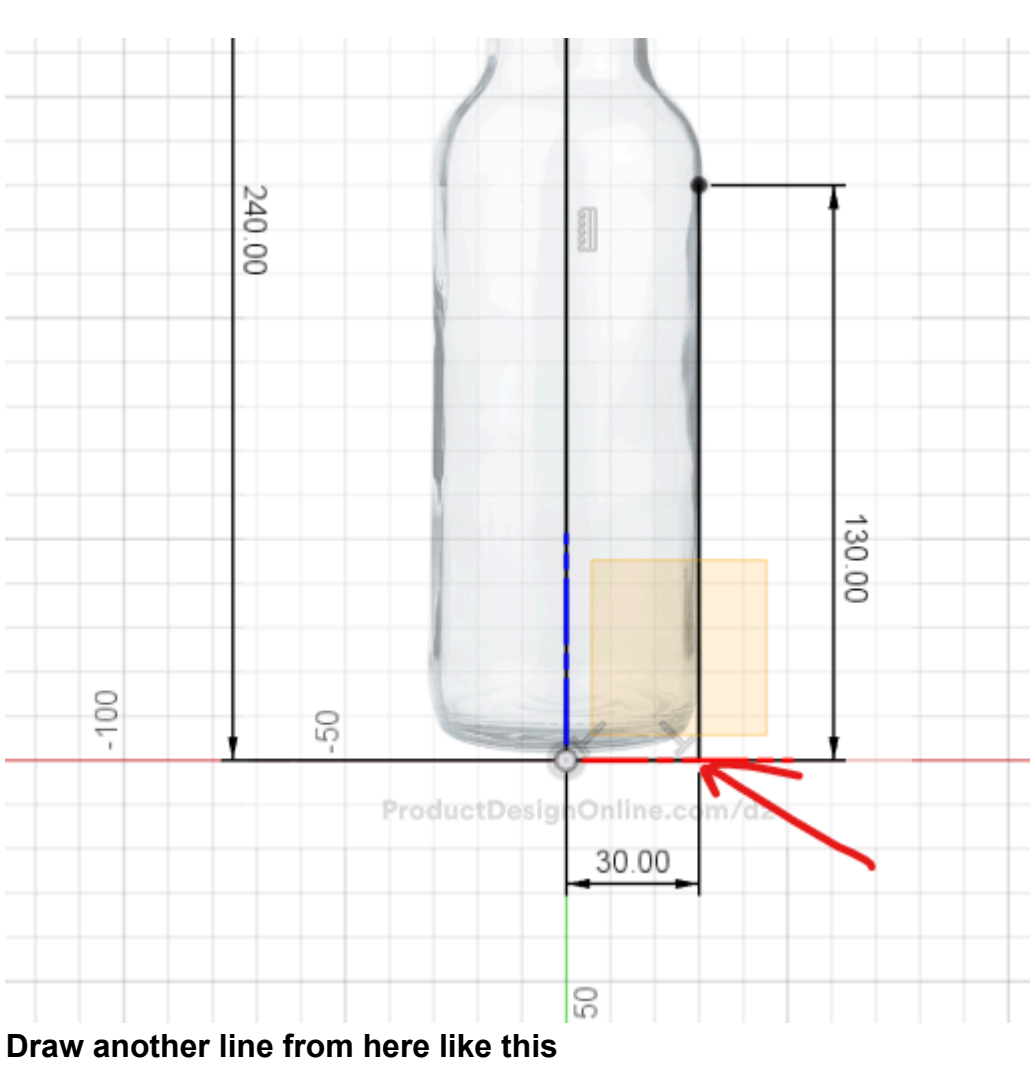


Draw another line from here like this

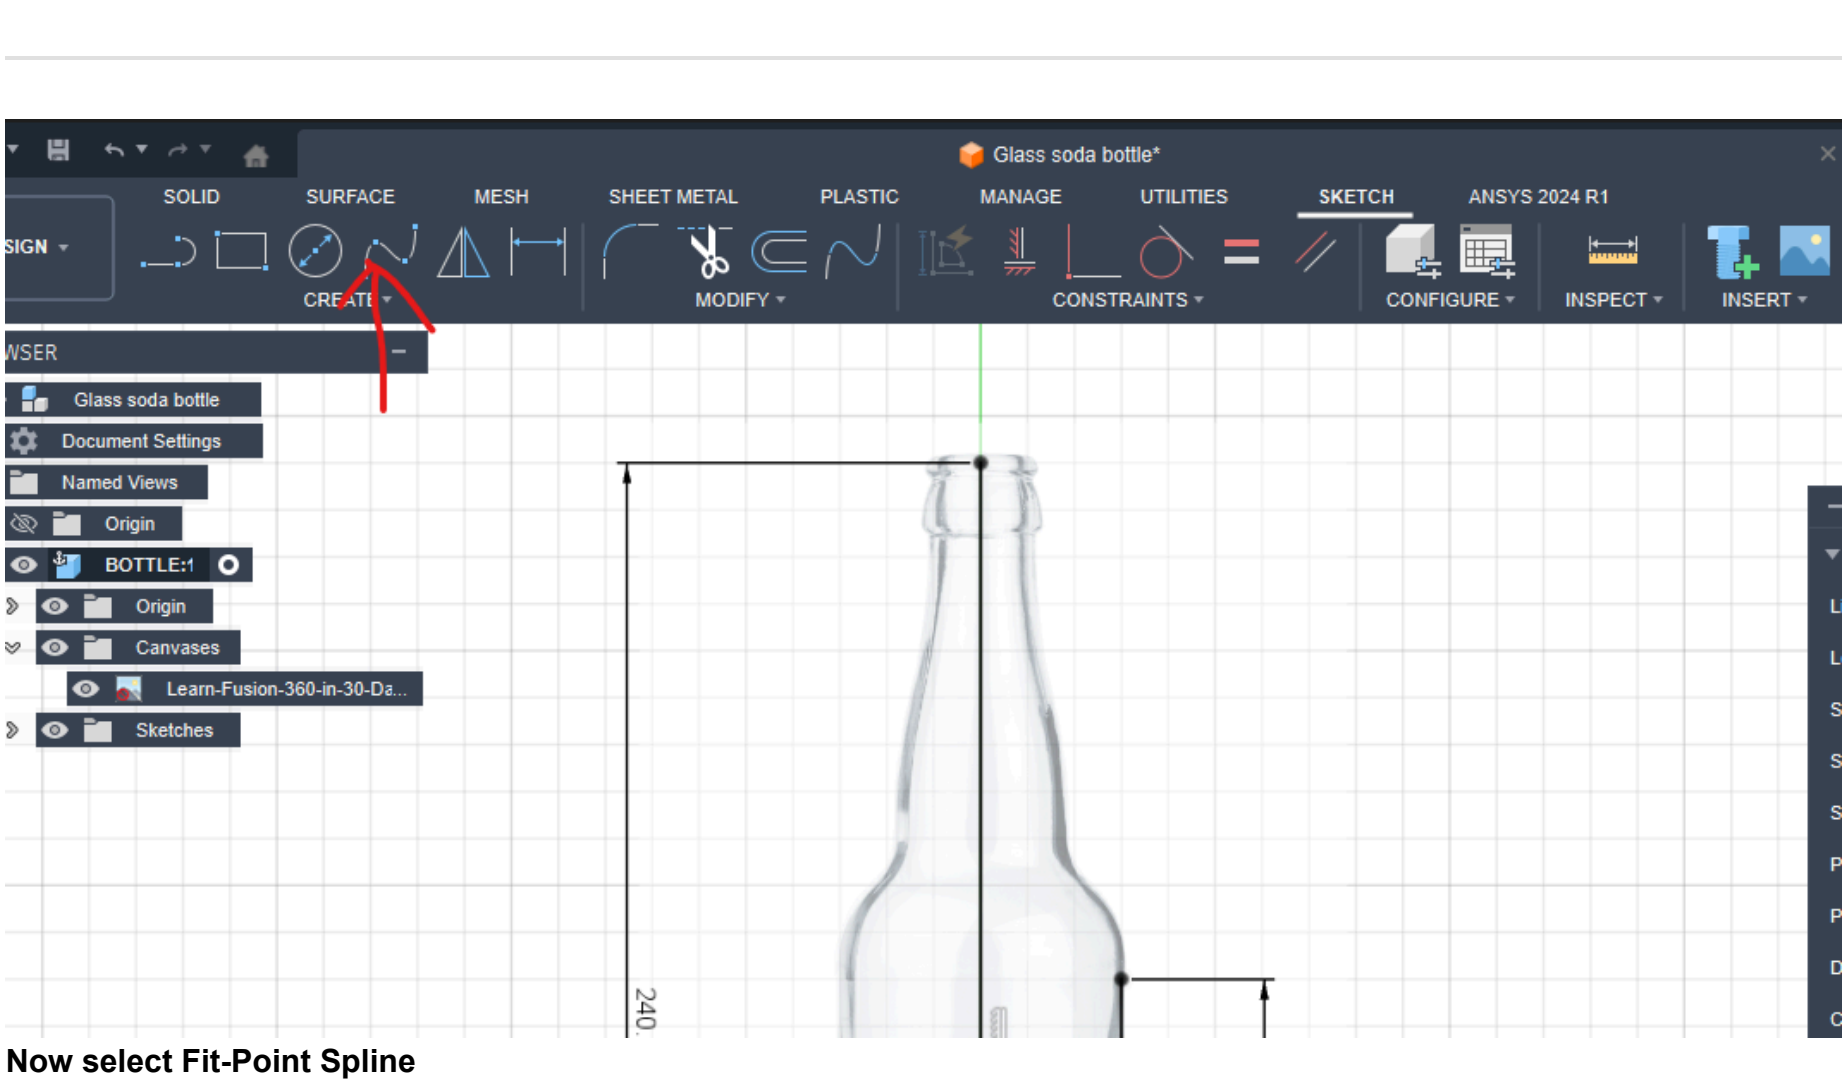

Now select Fit-Point Spline

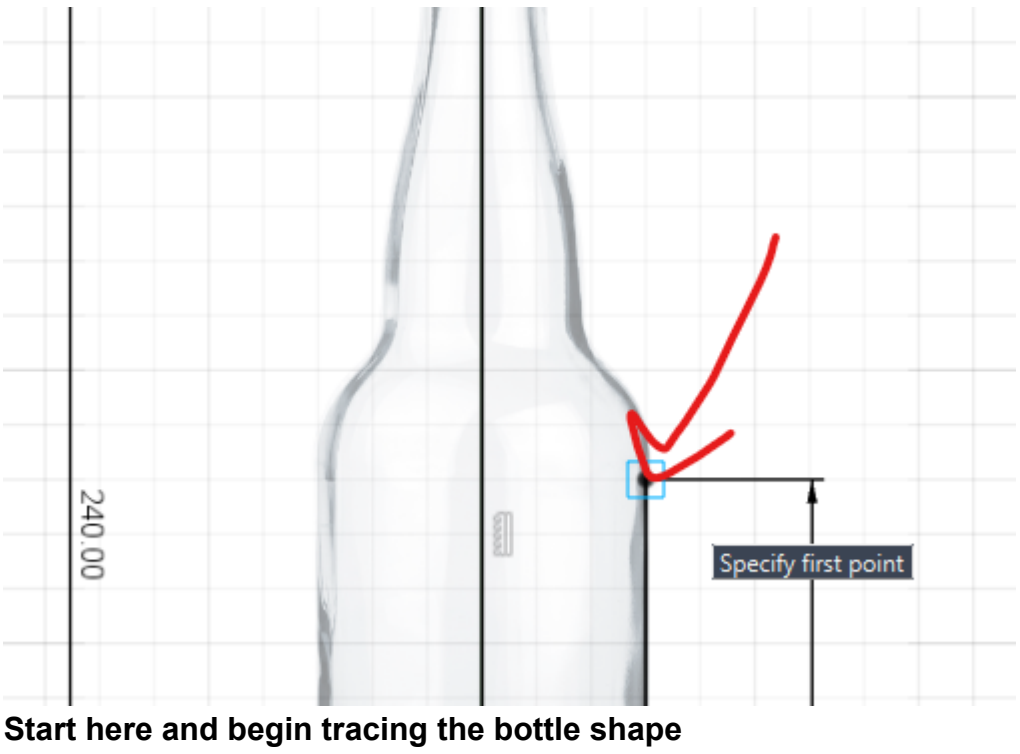


Start here and begin tracing the bottle shape

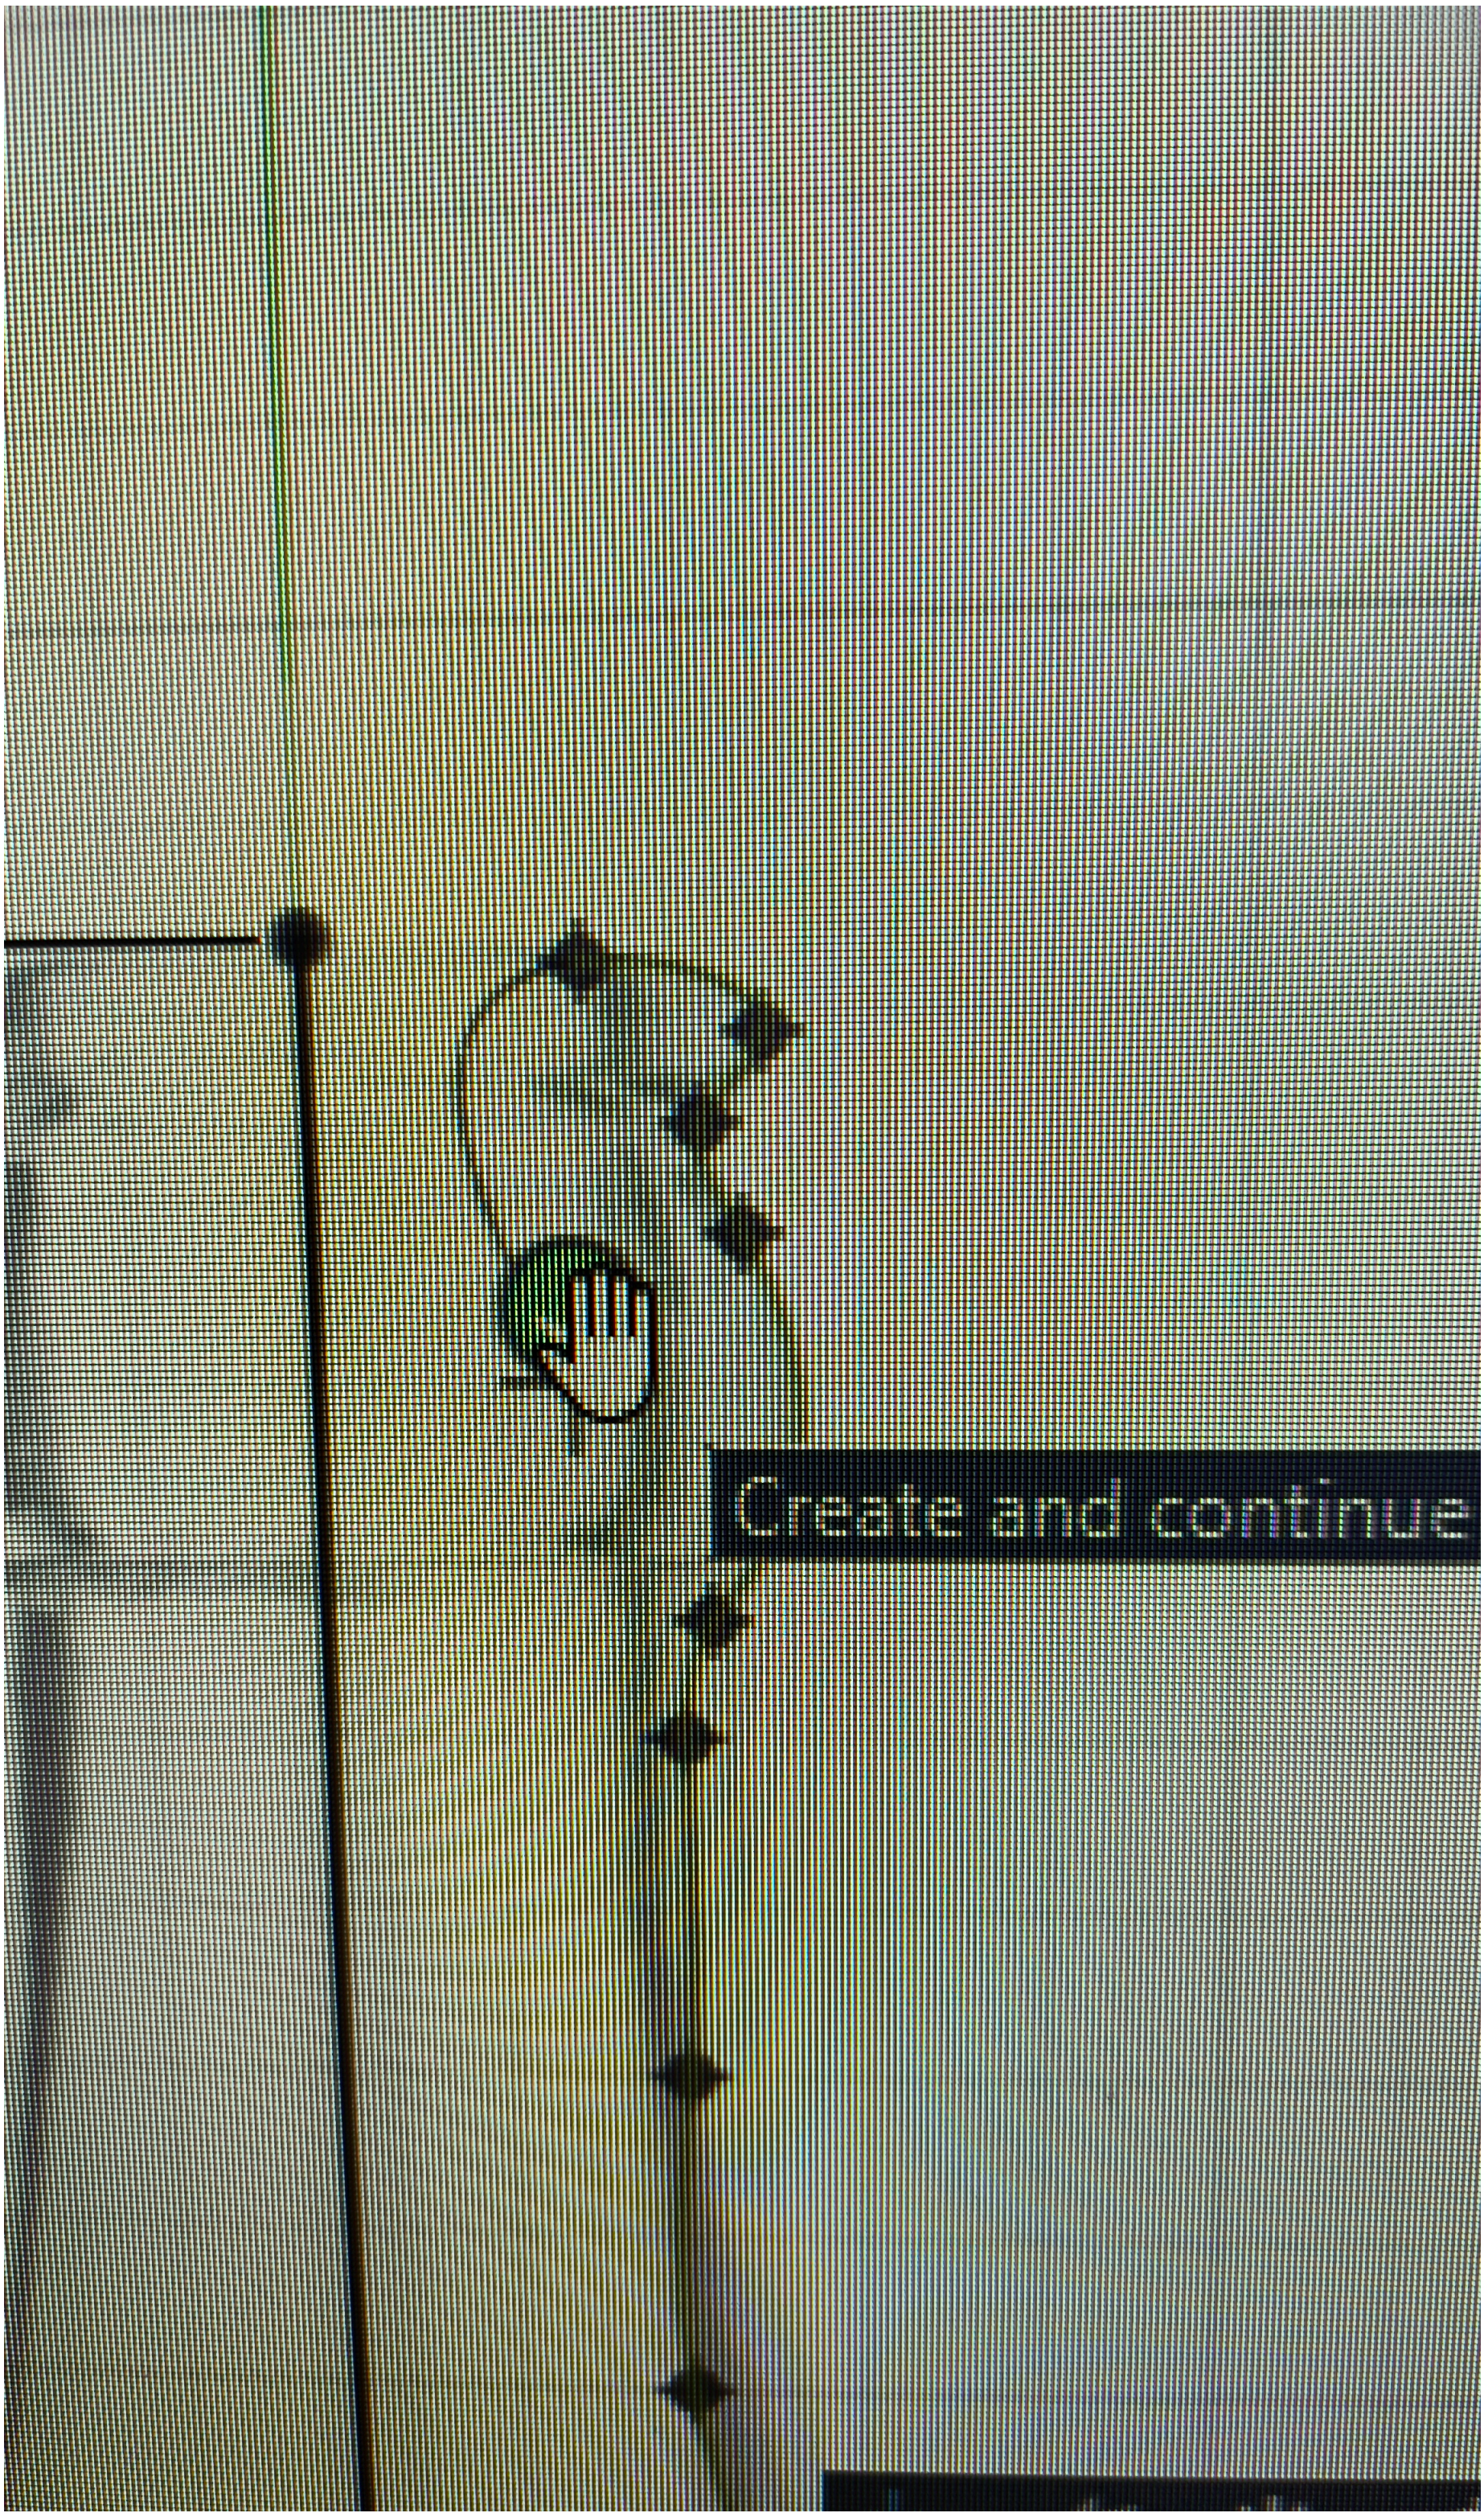
Create and continue



Click the tick mark to finish the spline


Click here — a green spline handle will appear

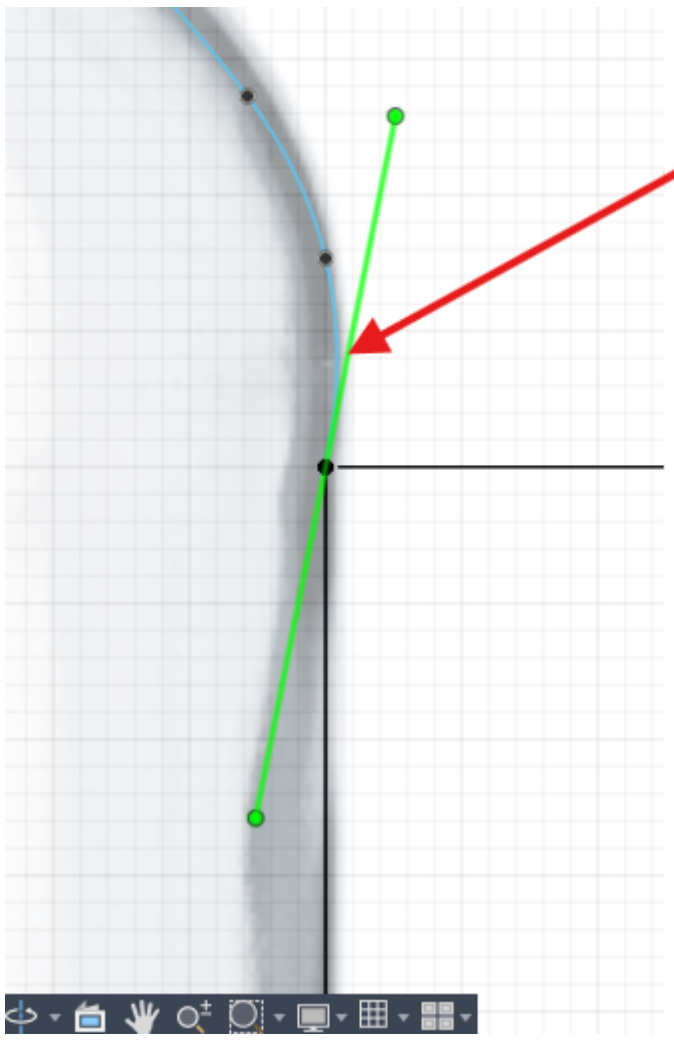

Click on it




Then click here to make it vertical for a smooth transition

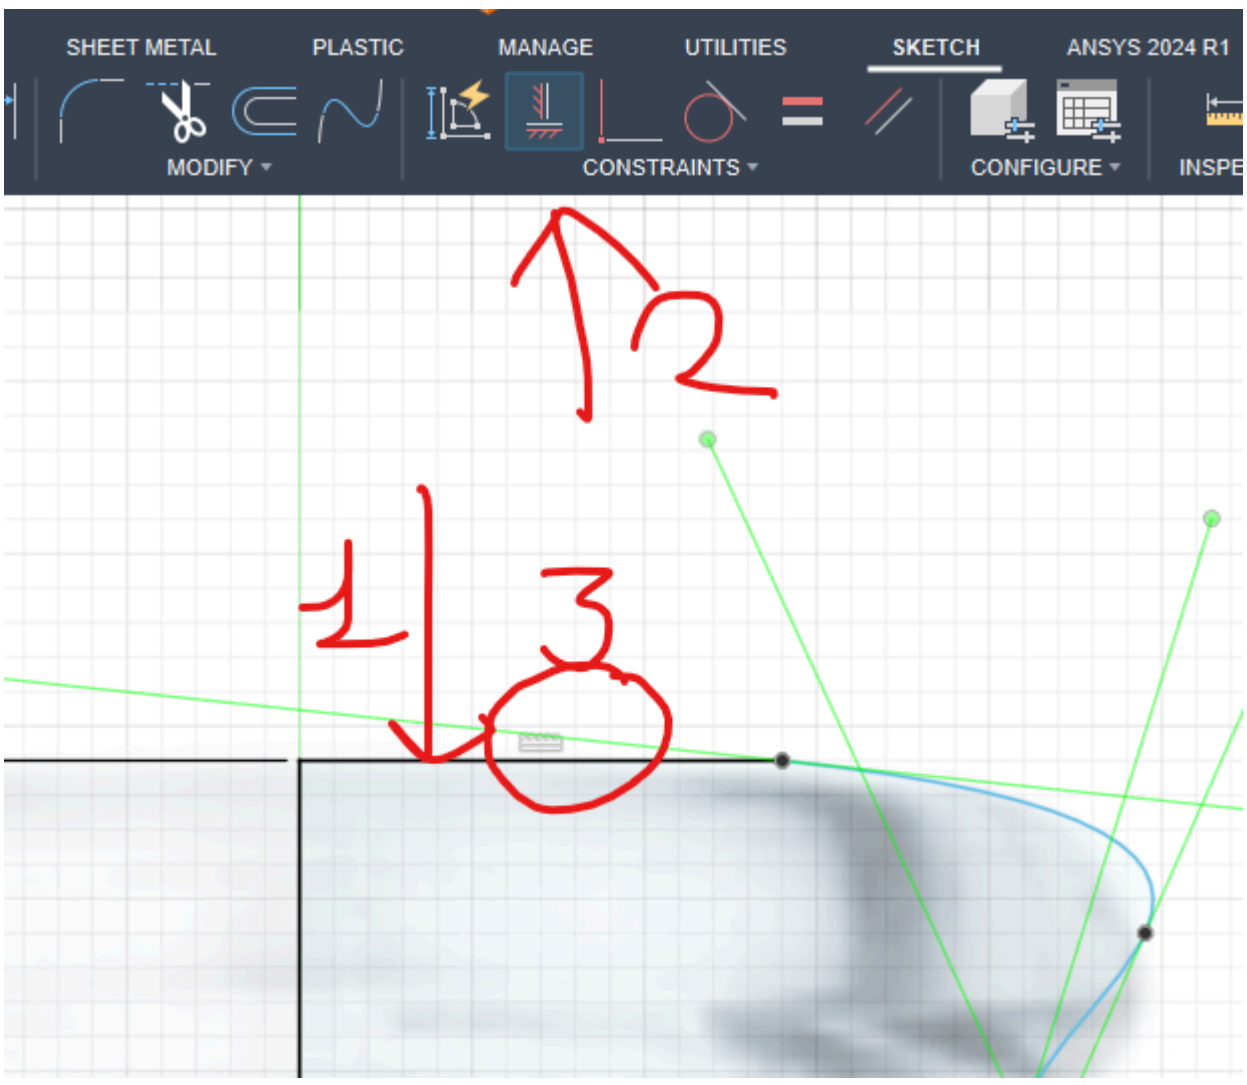

1. Draw a line between both ends

2. Apply the Horizontal/Vertical constraint


3. Make sure the constraint icon appears**

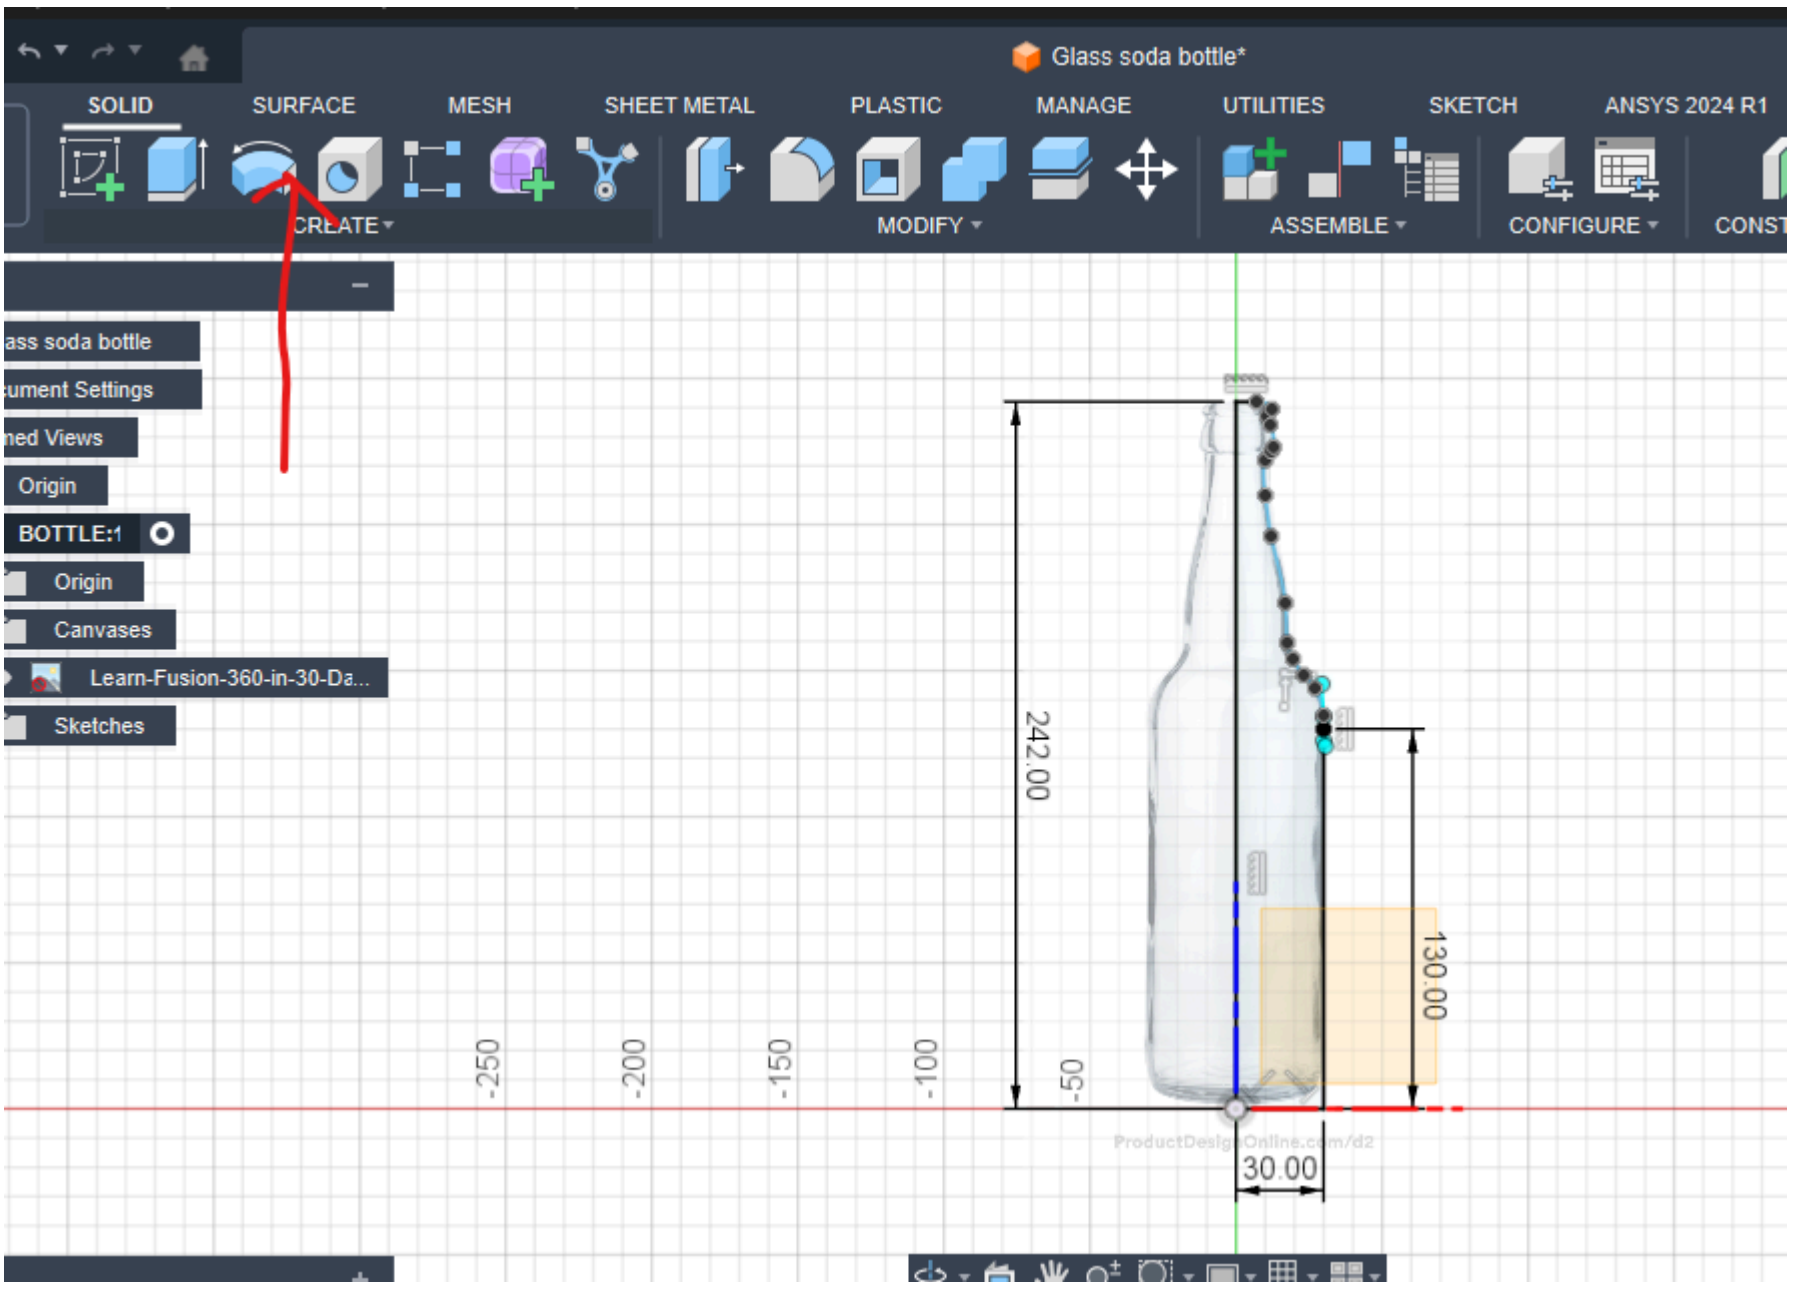


Go to Solid tab and click *Revolve*



Select this vertical center line as the revolve axis

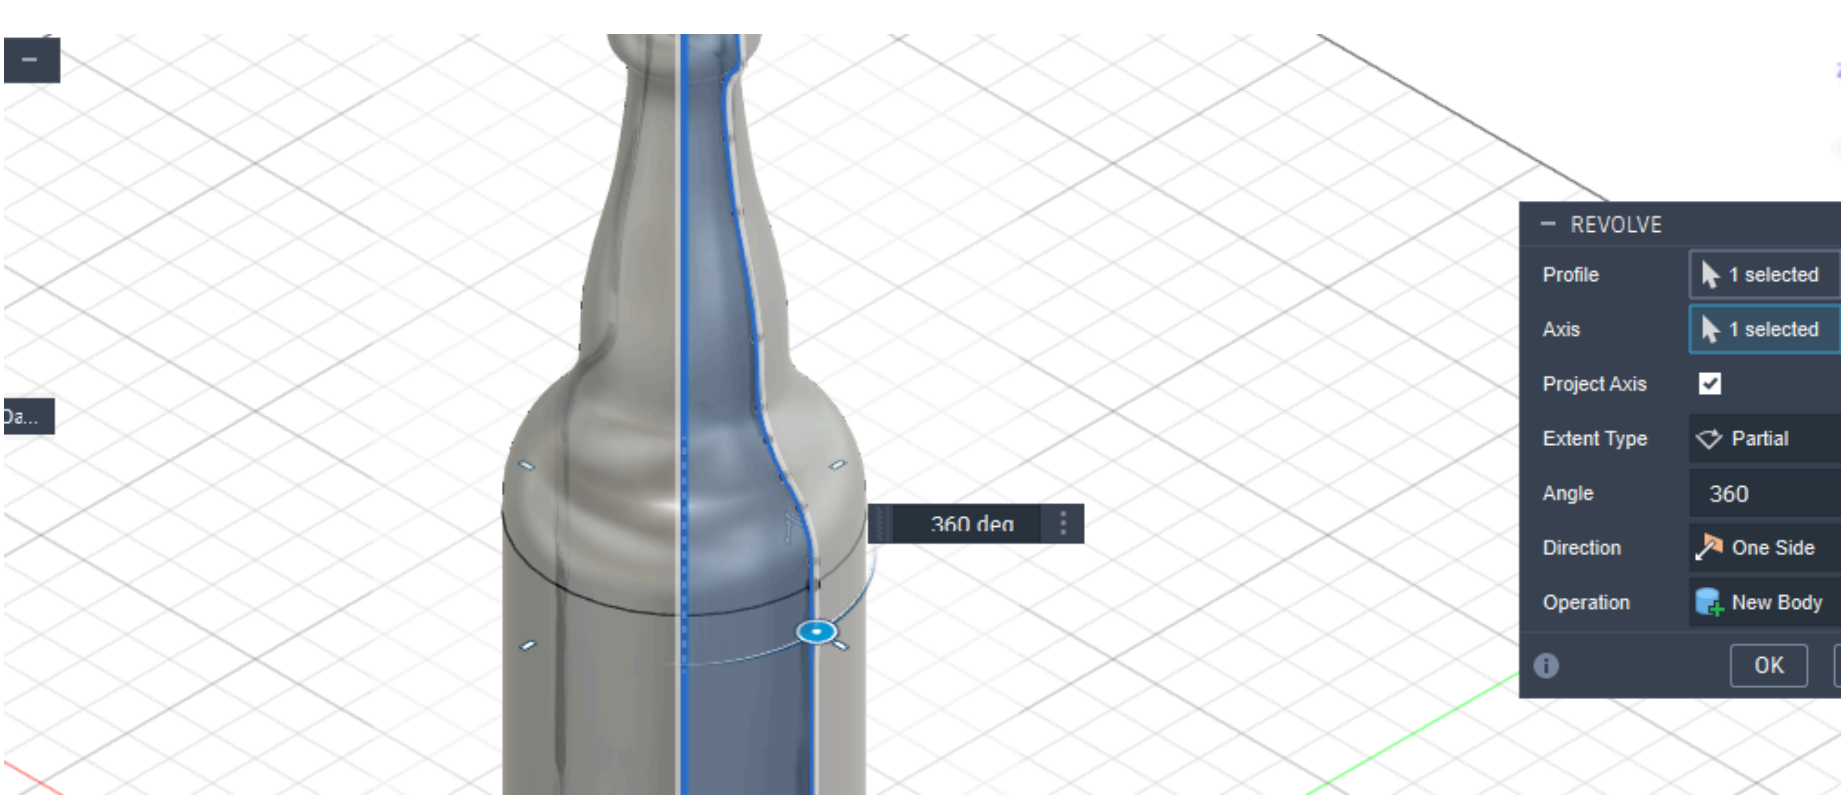


Click OK

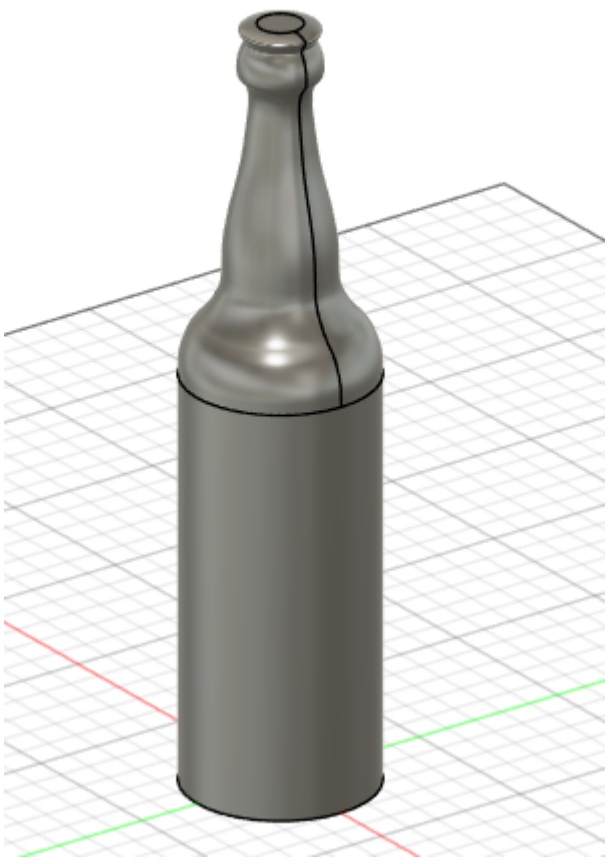


Done — the bottle is now visible


You may hide the profile lines (they are only for reference)

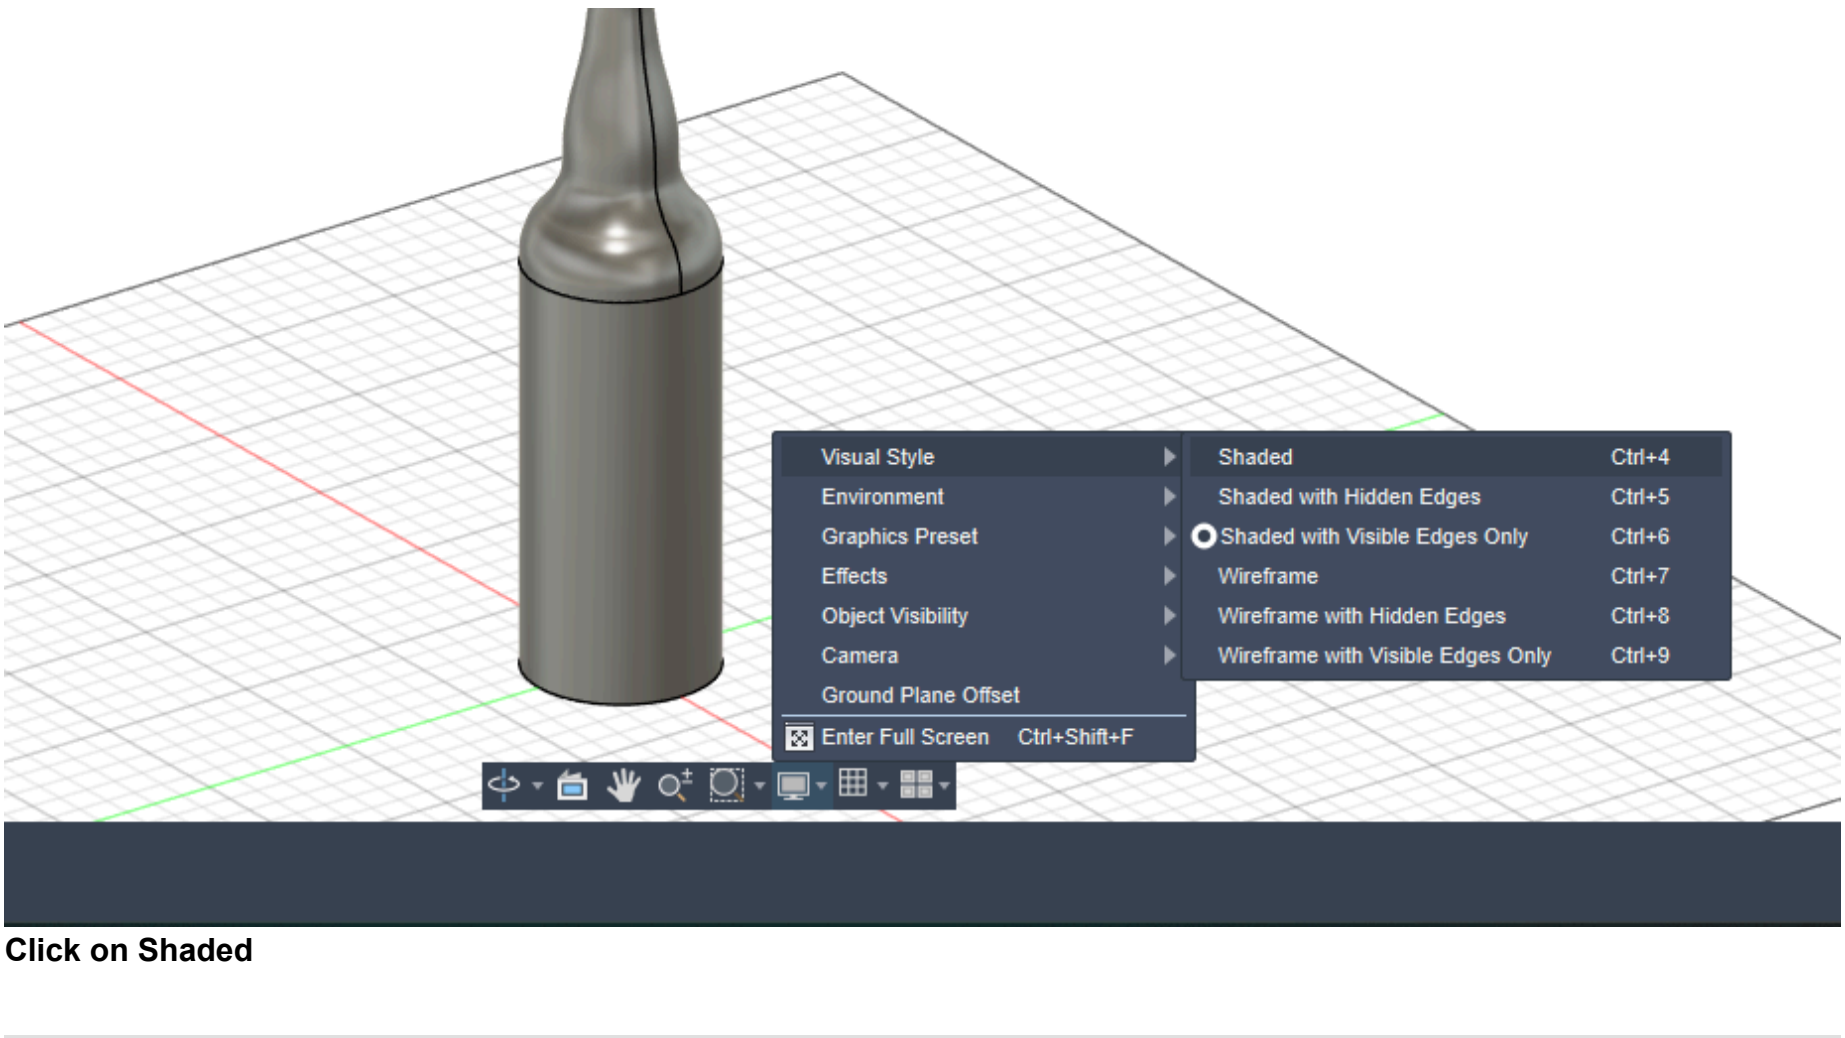


Click on Shaded

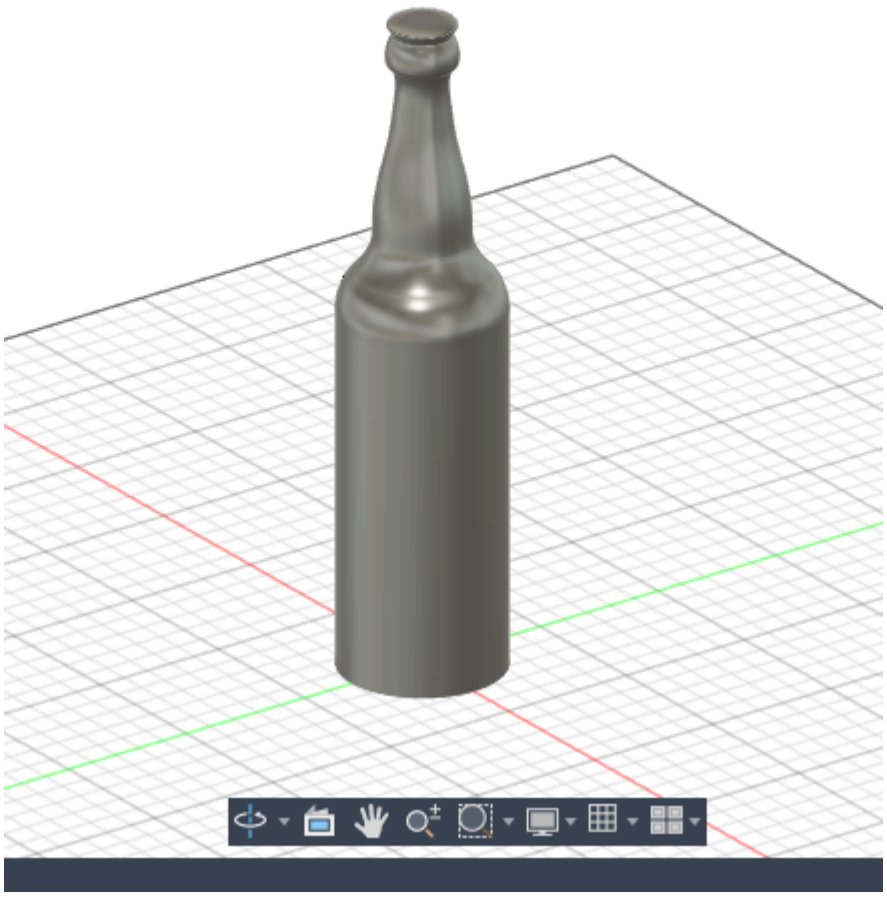

Done

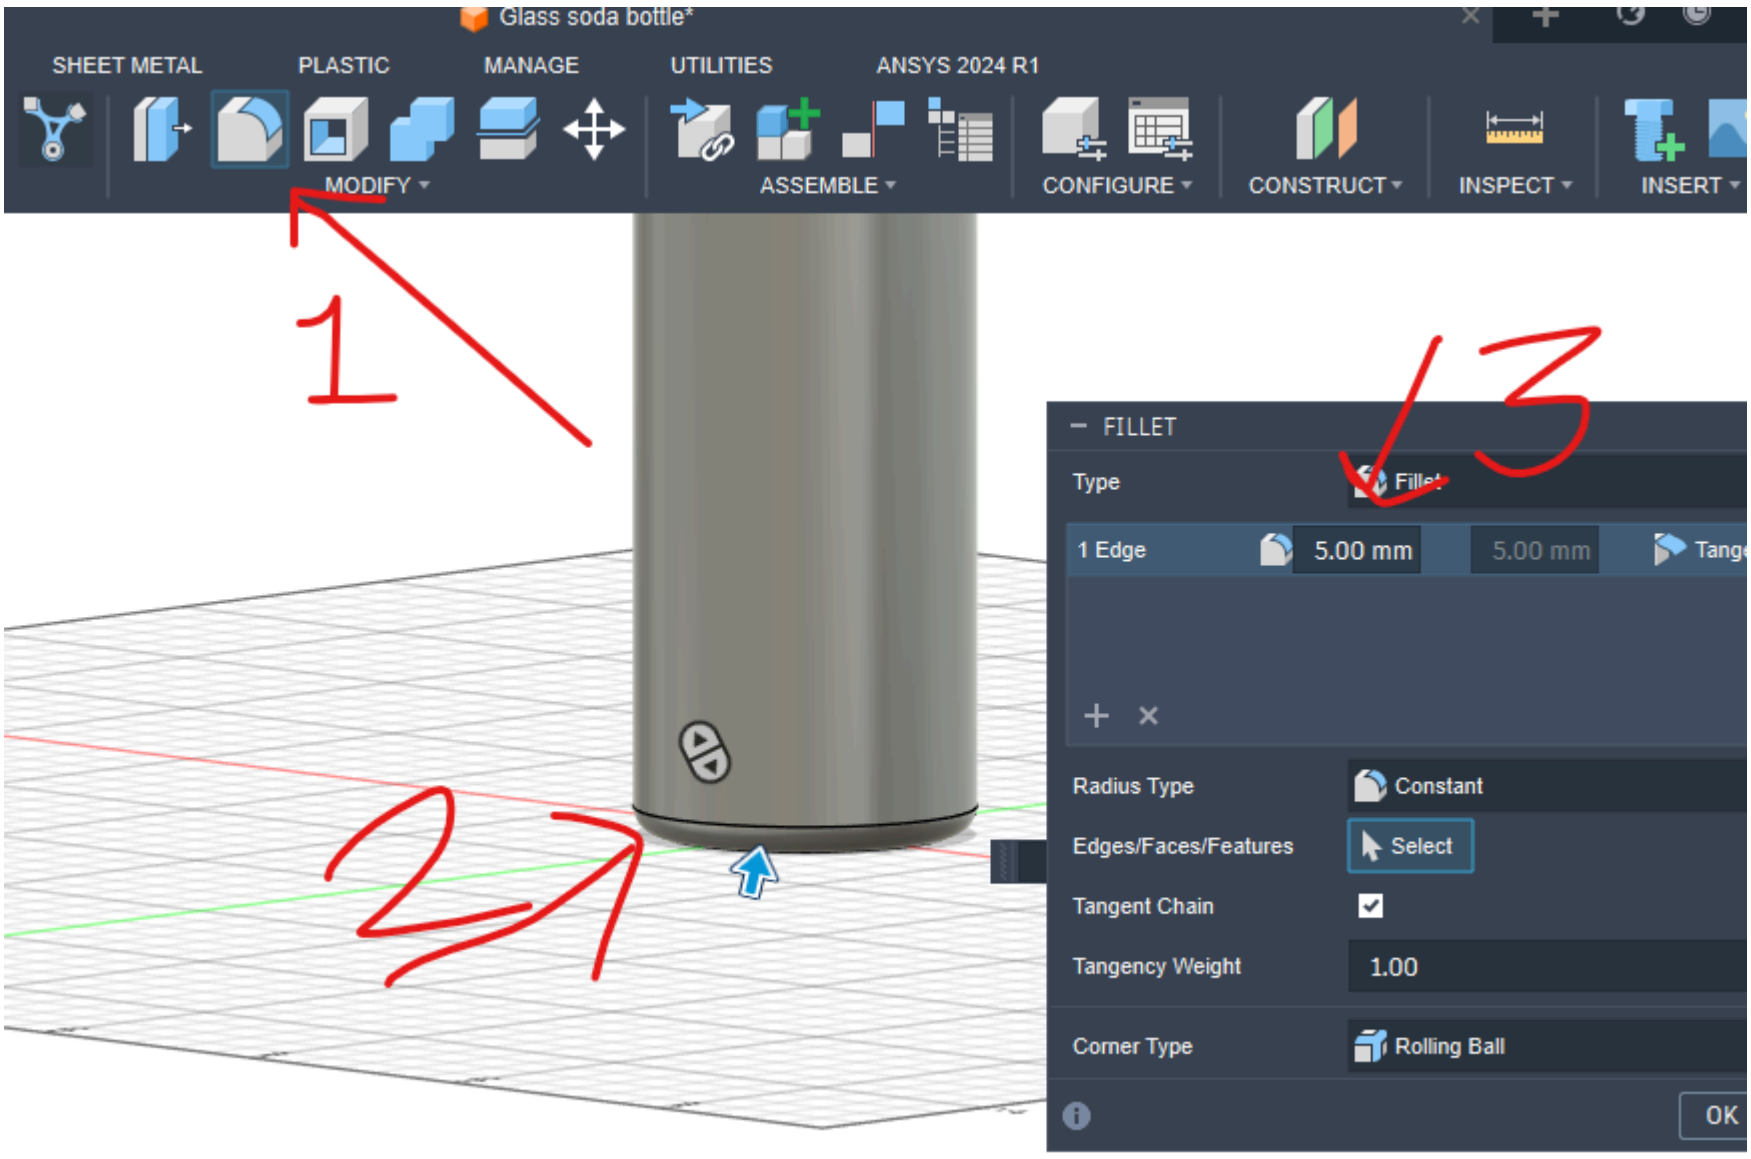


1. Click Fillet
2. Select the bottom edge
3. Set fillet to 5 mm

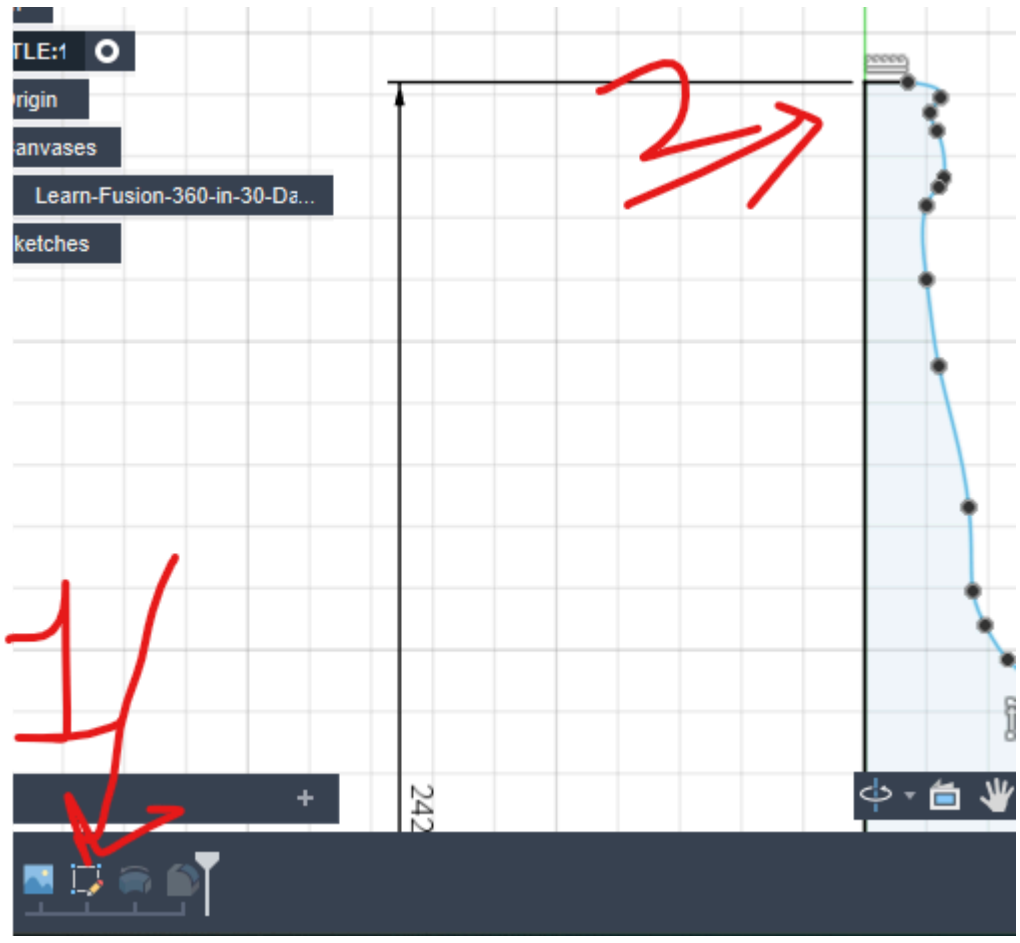

1. Double-click the sketch icon


2. Set the bottle opening to 11 mm**

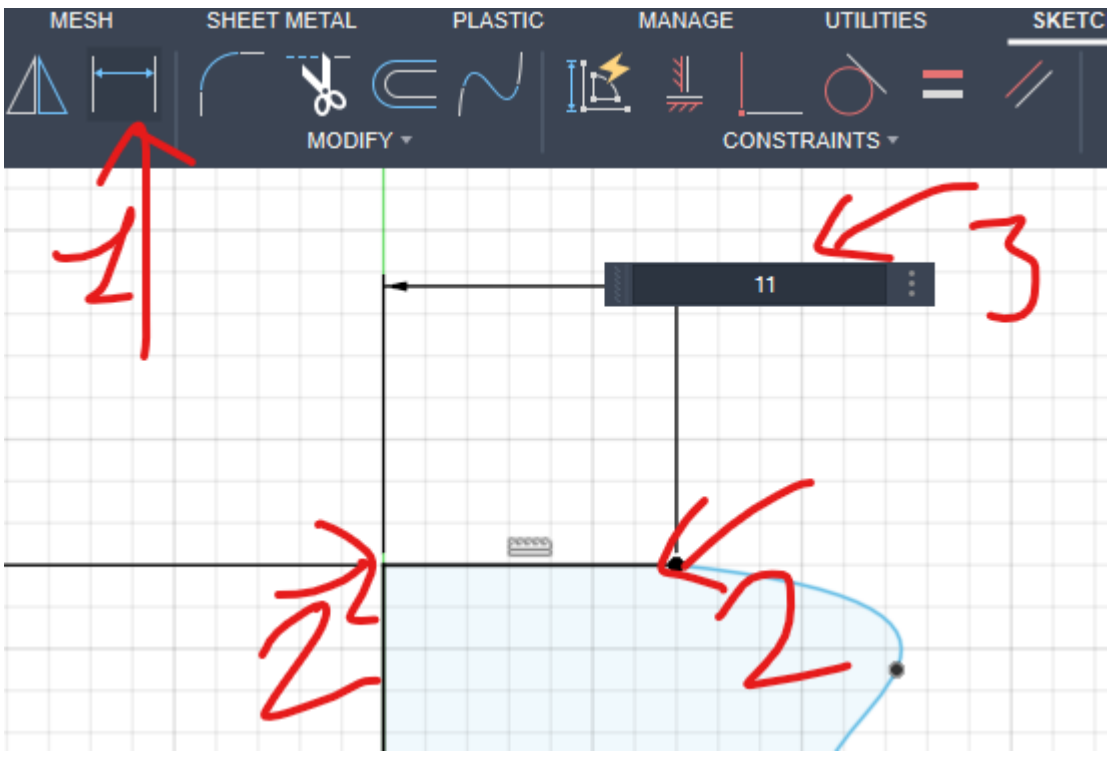


1. Click Sketch Dimension

2. Select both points

3. Set it to 11 mm**

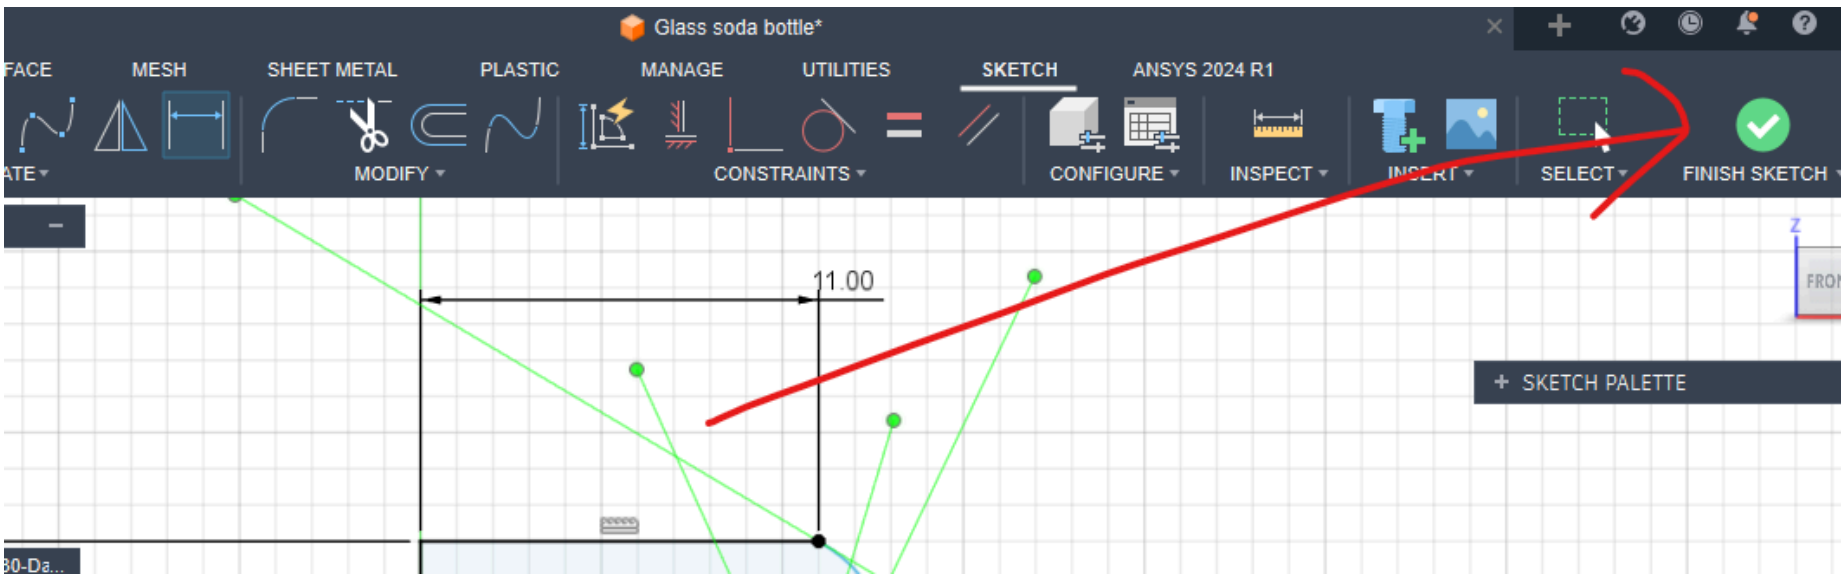


Click Finish Sketch

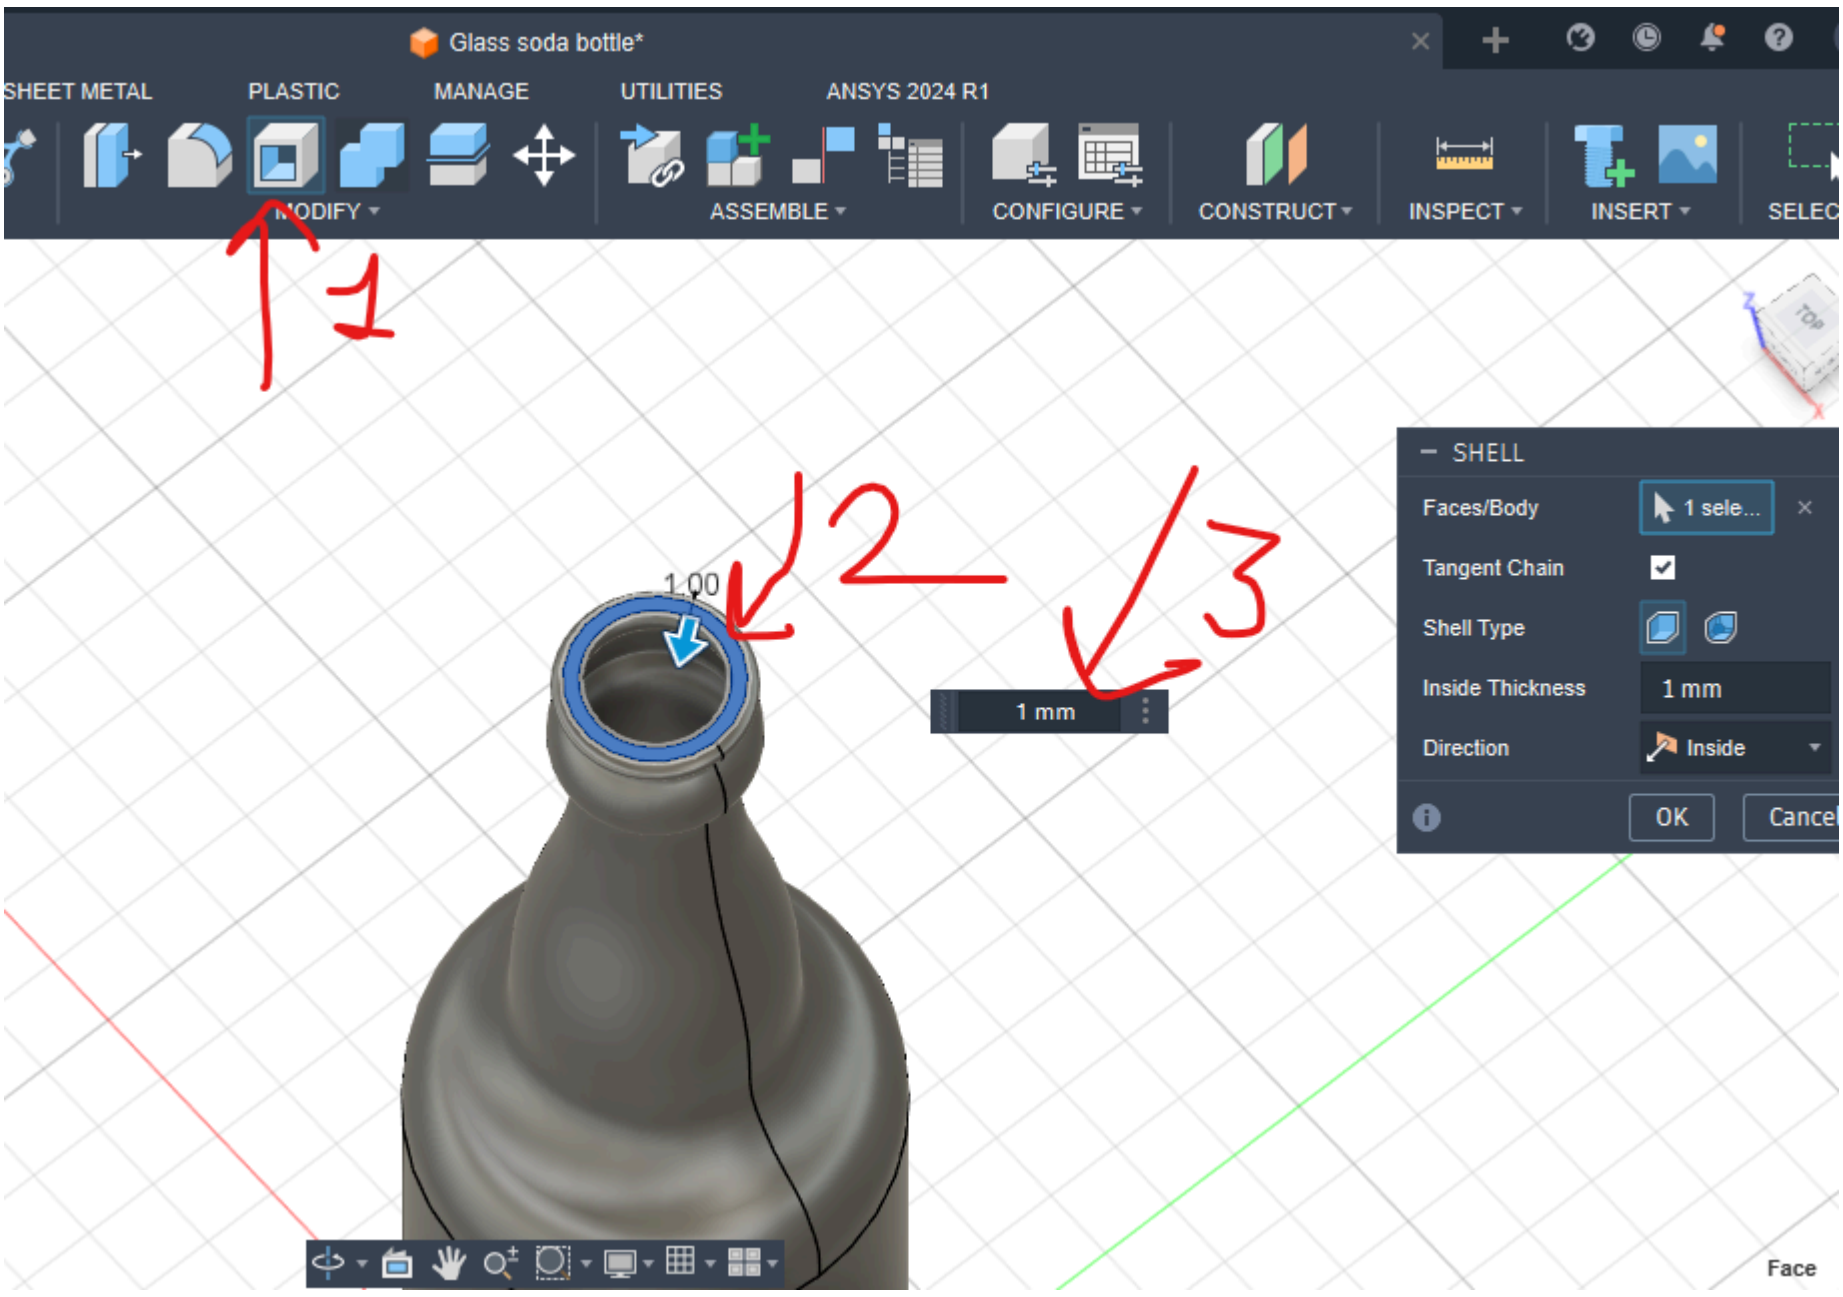

1. Select Shell

2. Select the top opening

3. Set the thickness (suggested: 1 mm)**

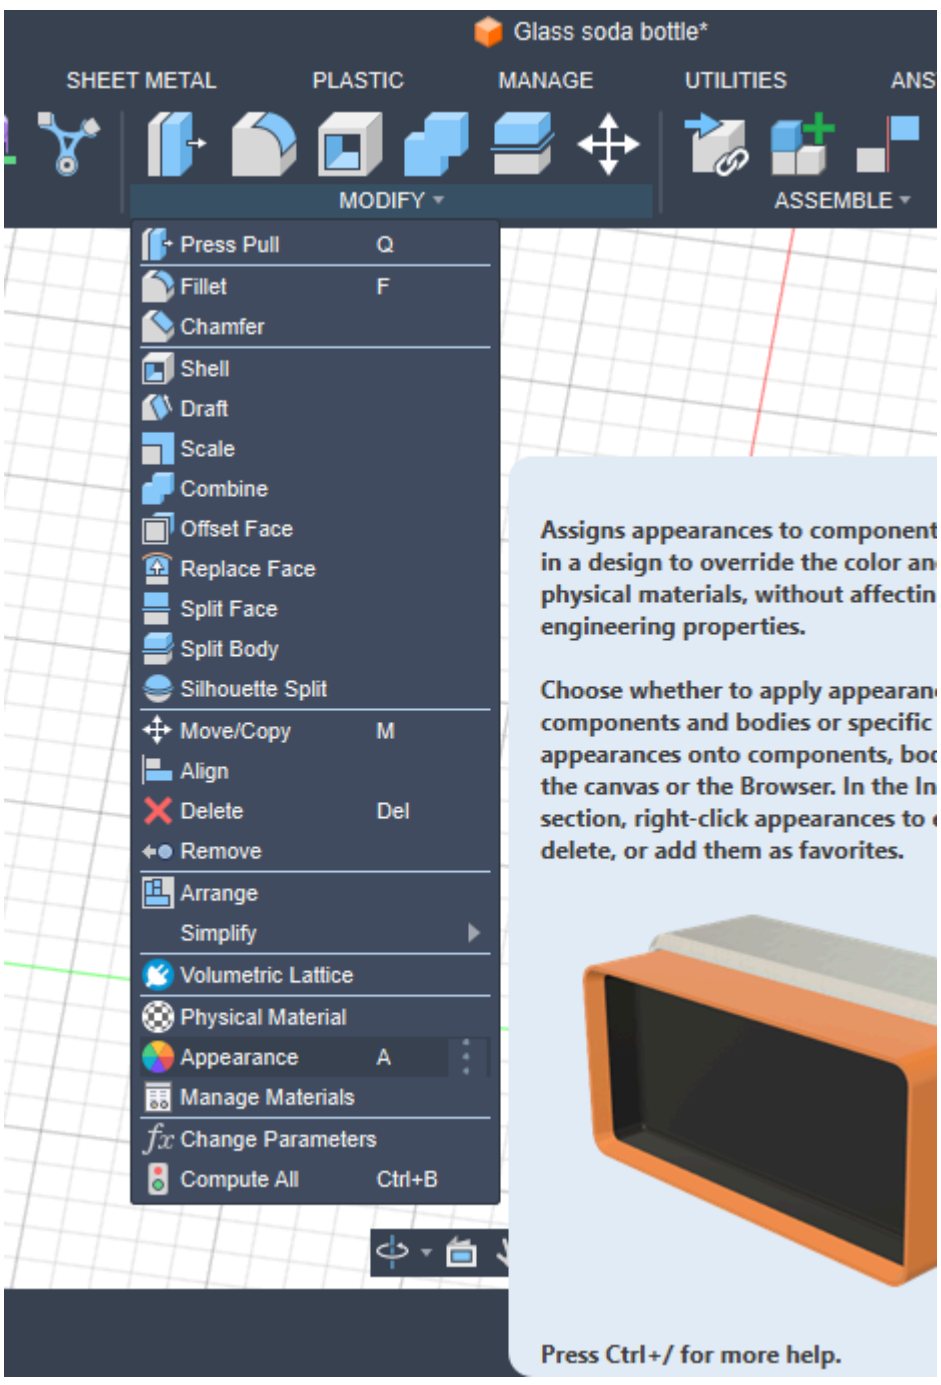

Now go to Appearance to set the bottle color/material