


As-Built Joint Concepts (Tripod Assembly)

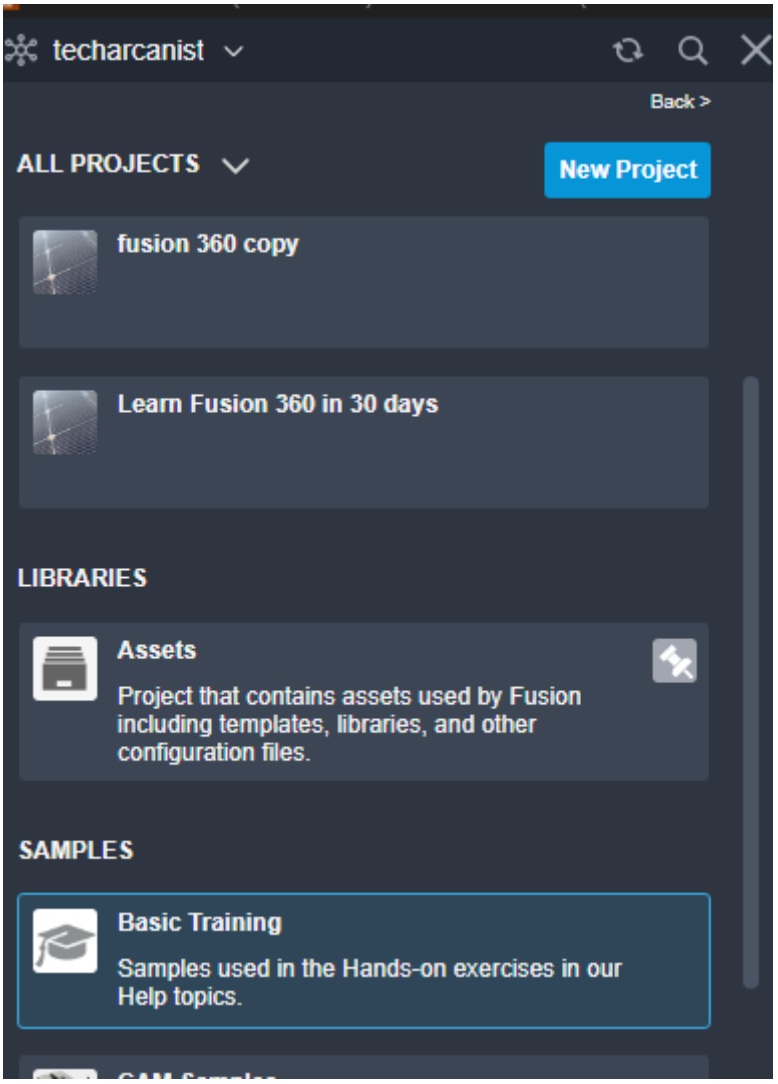


In the **Data Panel**, open the **Basic Training** project.

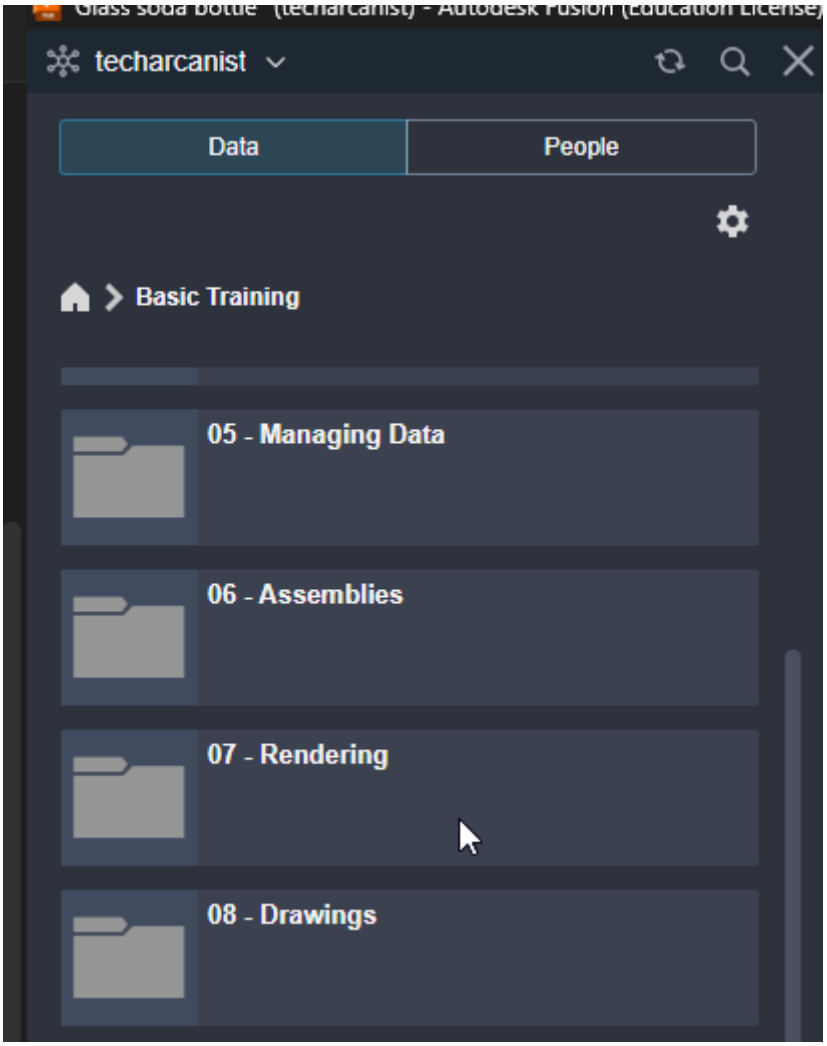


Open the **Assemblies** folder.

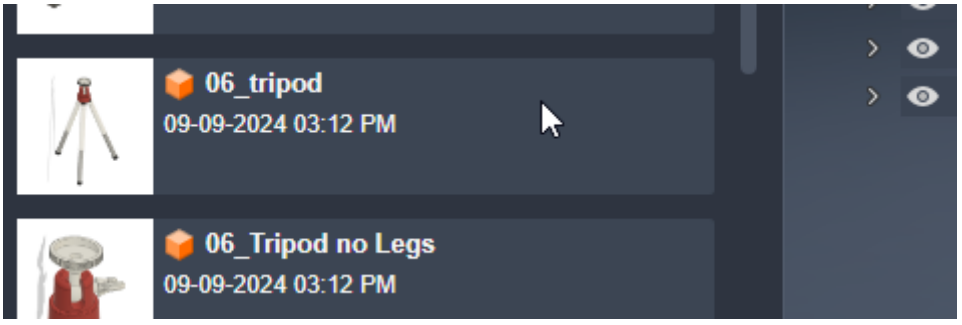


Double-click **Tripod** to open it.

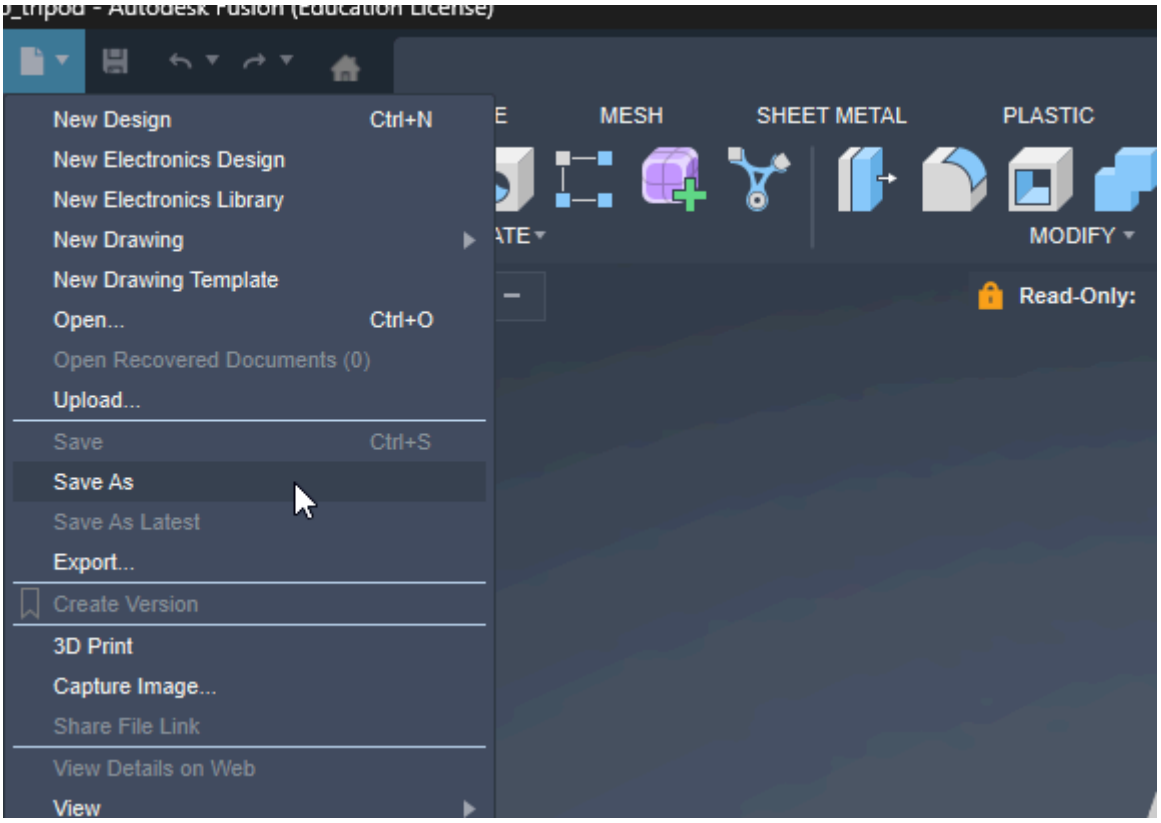


Go to **File** → **Save As** and save a local editable copy.

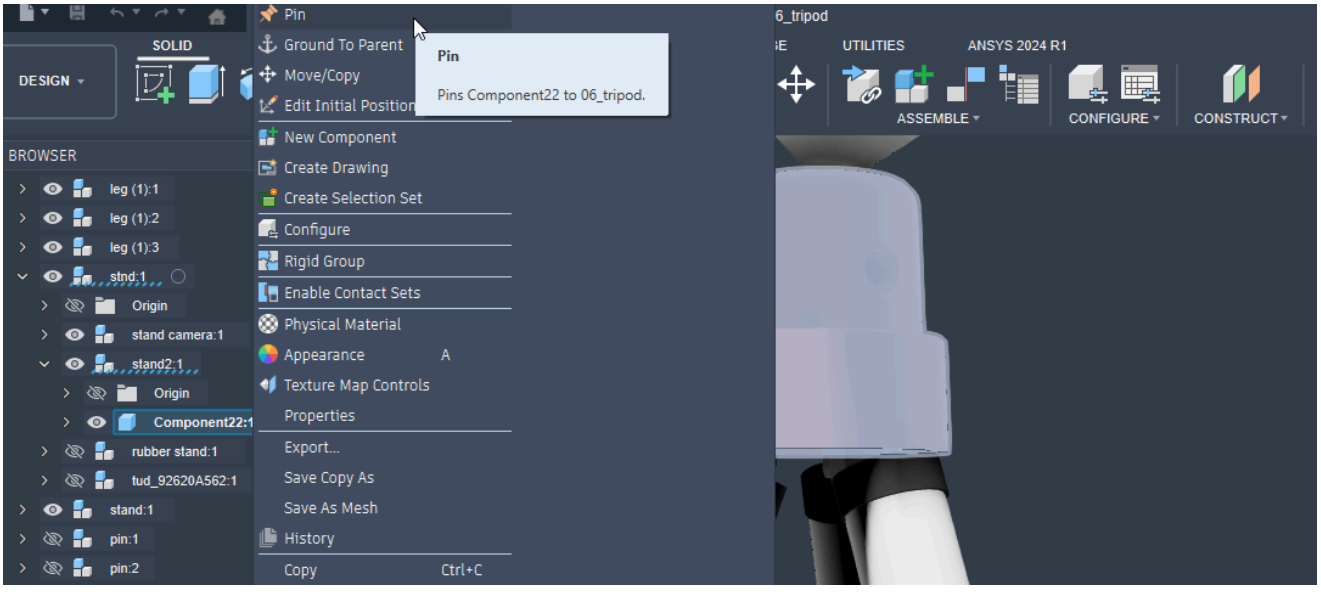

Right-click the **red stand component** → **Ground** it.
This freezes the part so it cannot move.

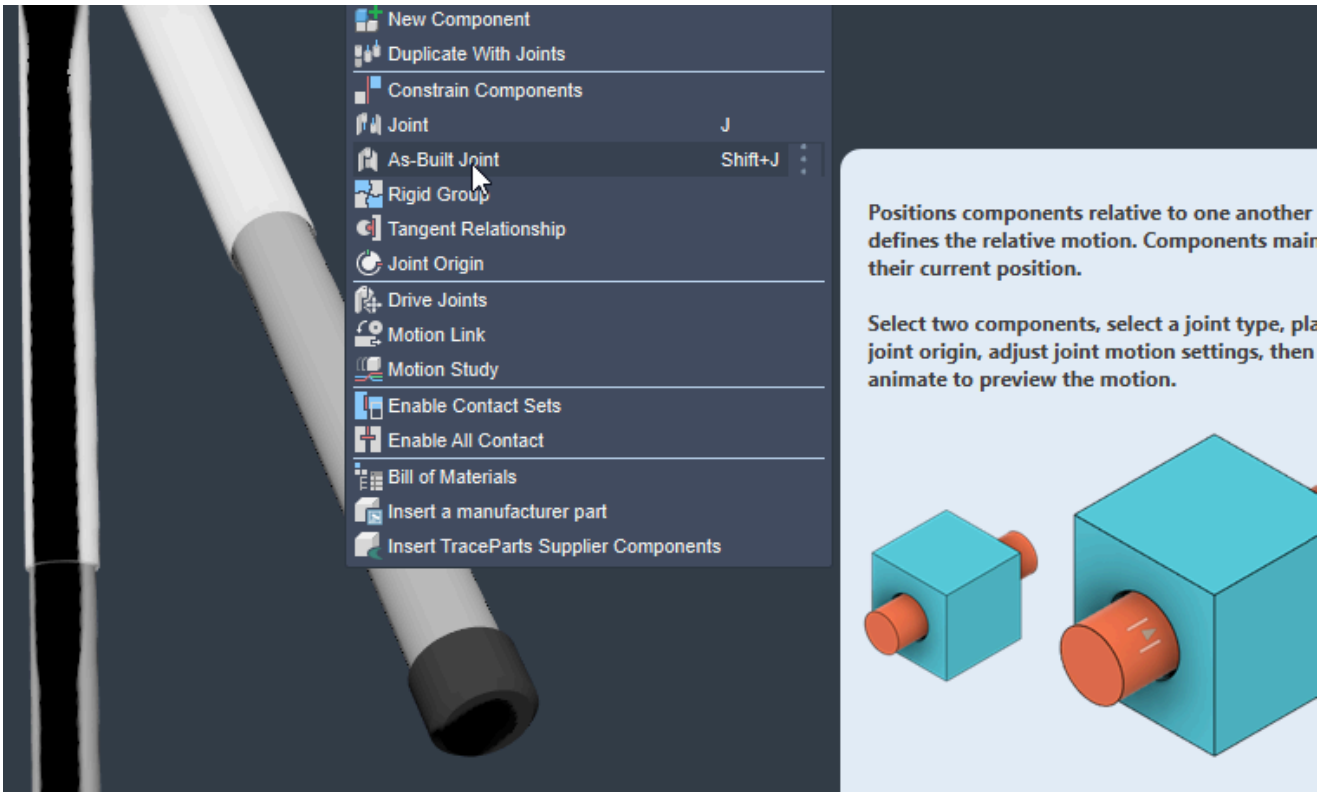


Go to **Assemble** → **As-Built Joint**.

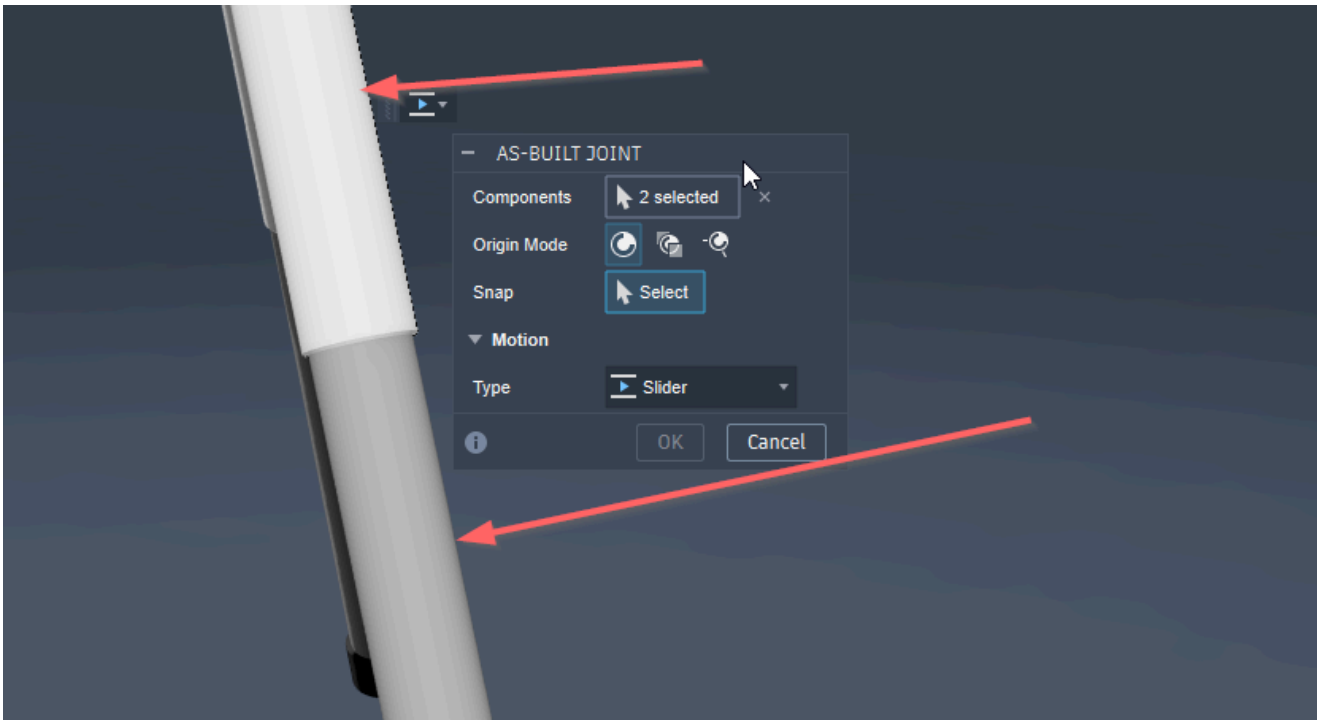


Set **Motion Type** → **Slider**.

Select the **lower pipe first**, then the **upper pipe**.

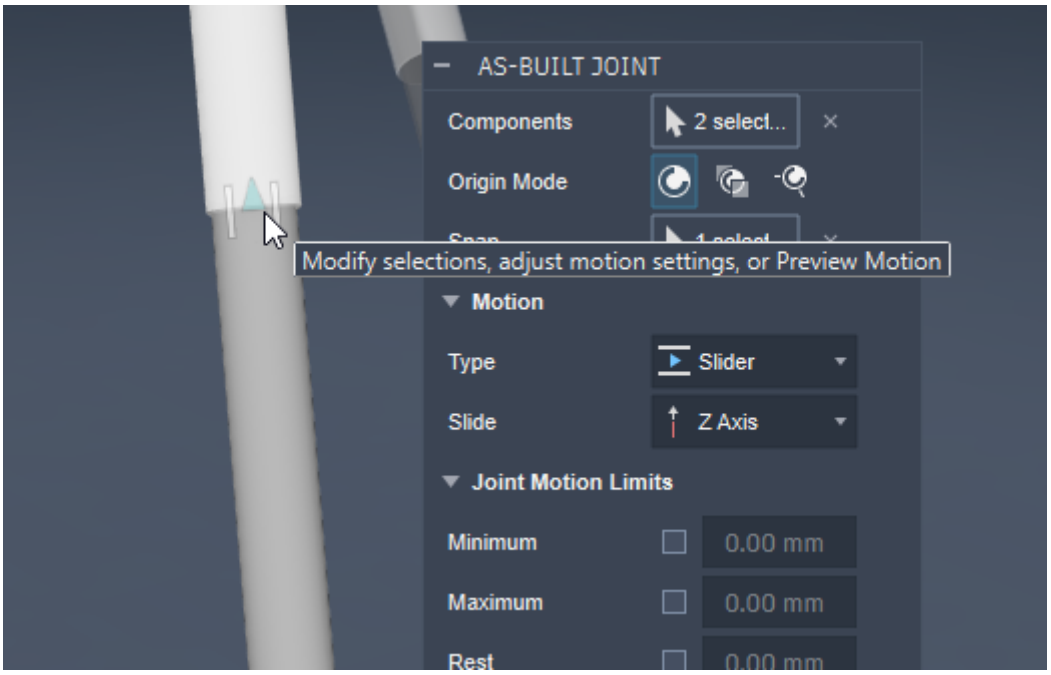


Choose this point as the **Snap location**.

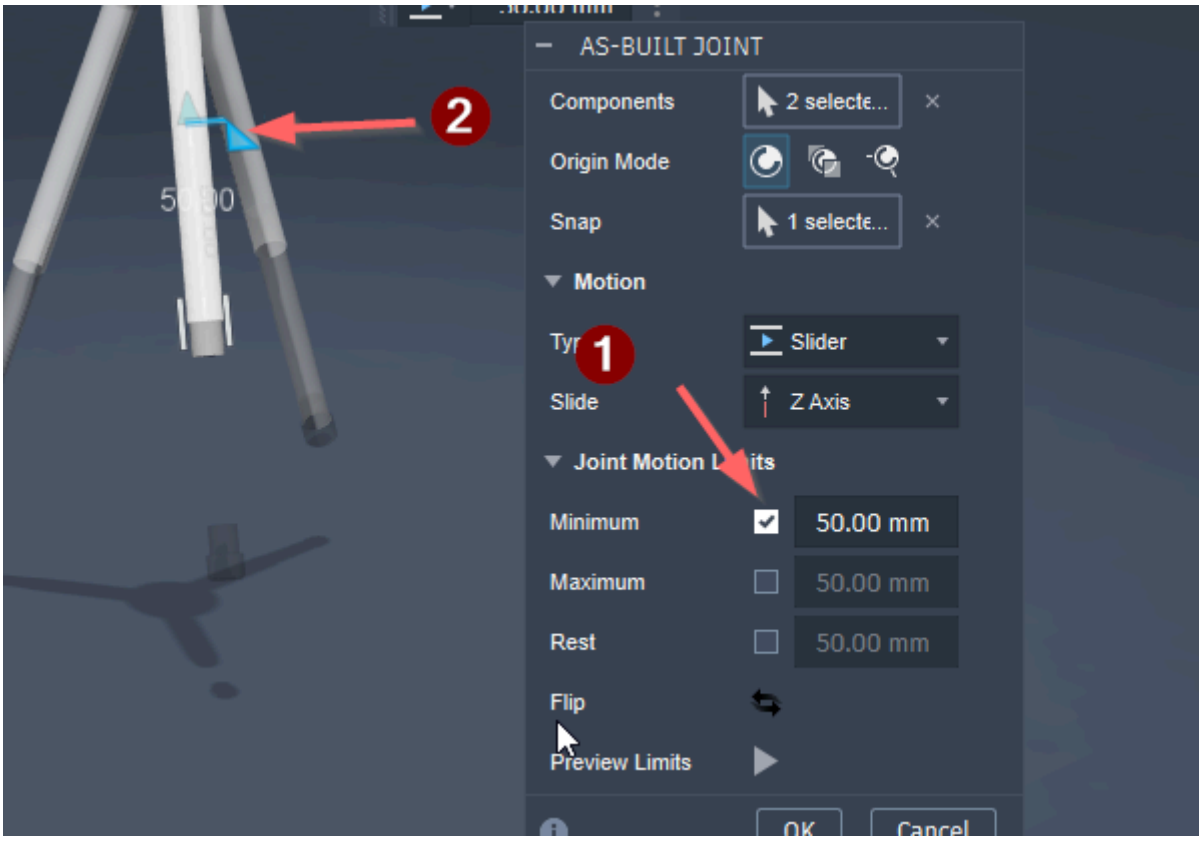


1 — Turn on **Minimum**


2 — Drag slider upward or set **50 mm** manually.

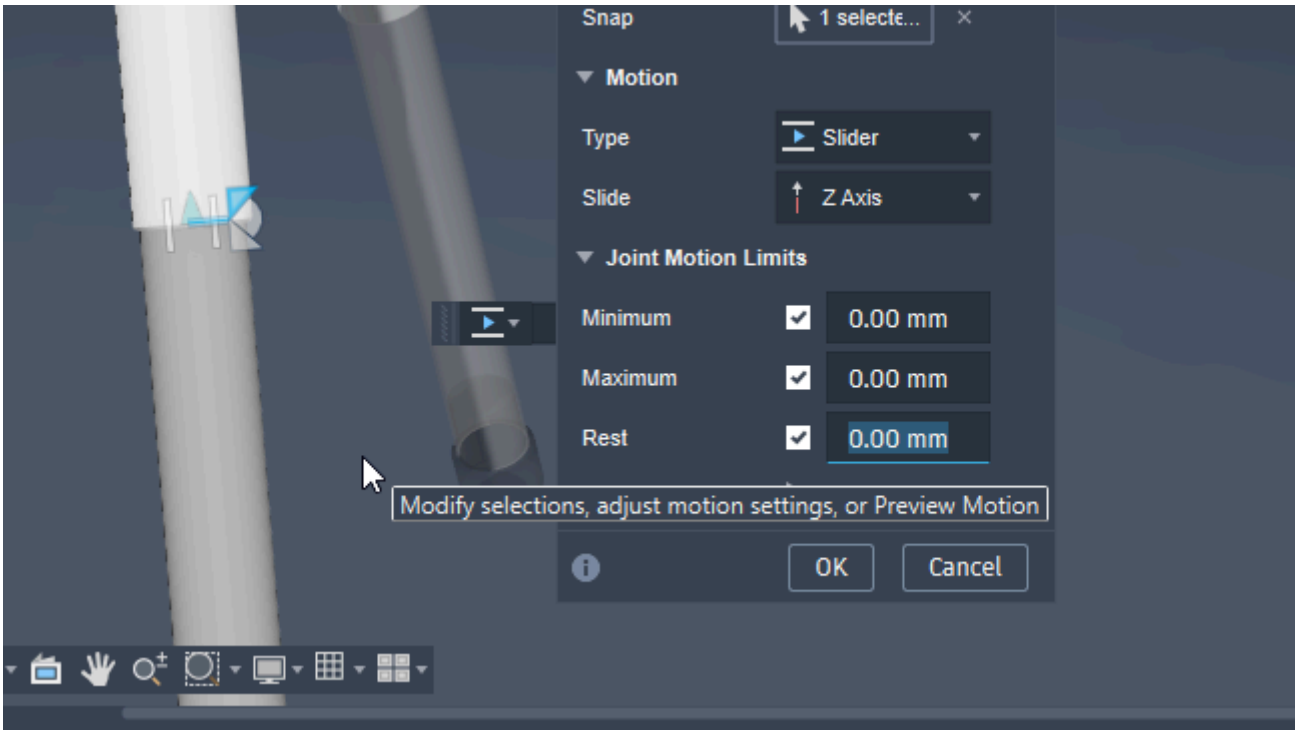


Set **Maximum** and keep **Rest = 0 mm**.

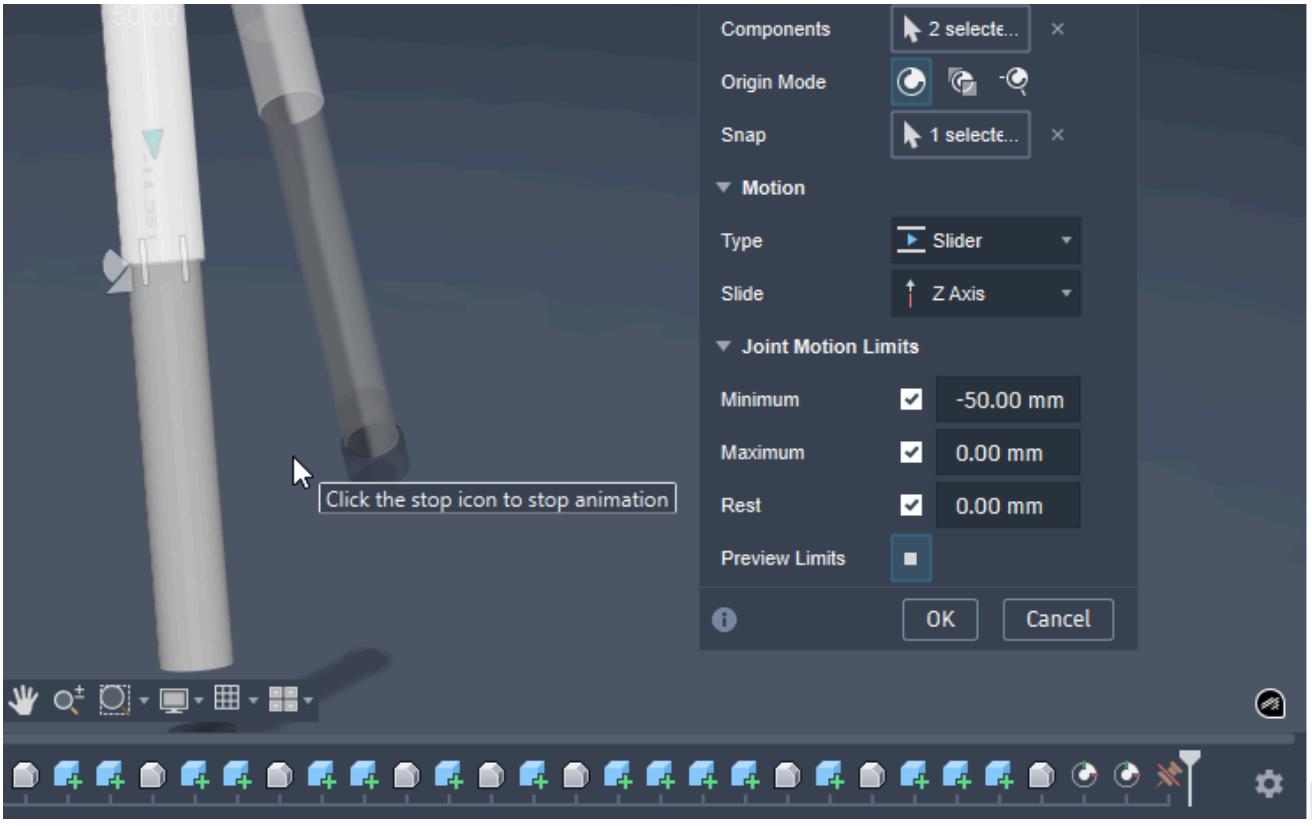


Click **Preview** — the leg should move up/down correctly.

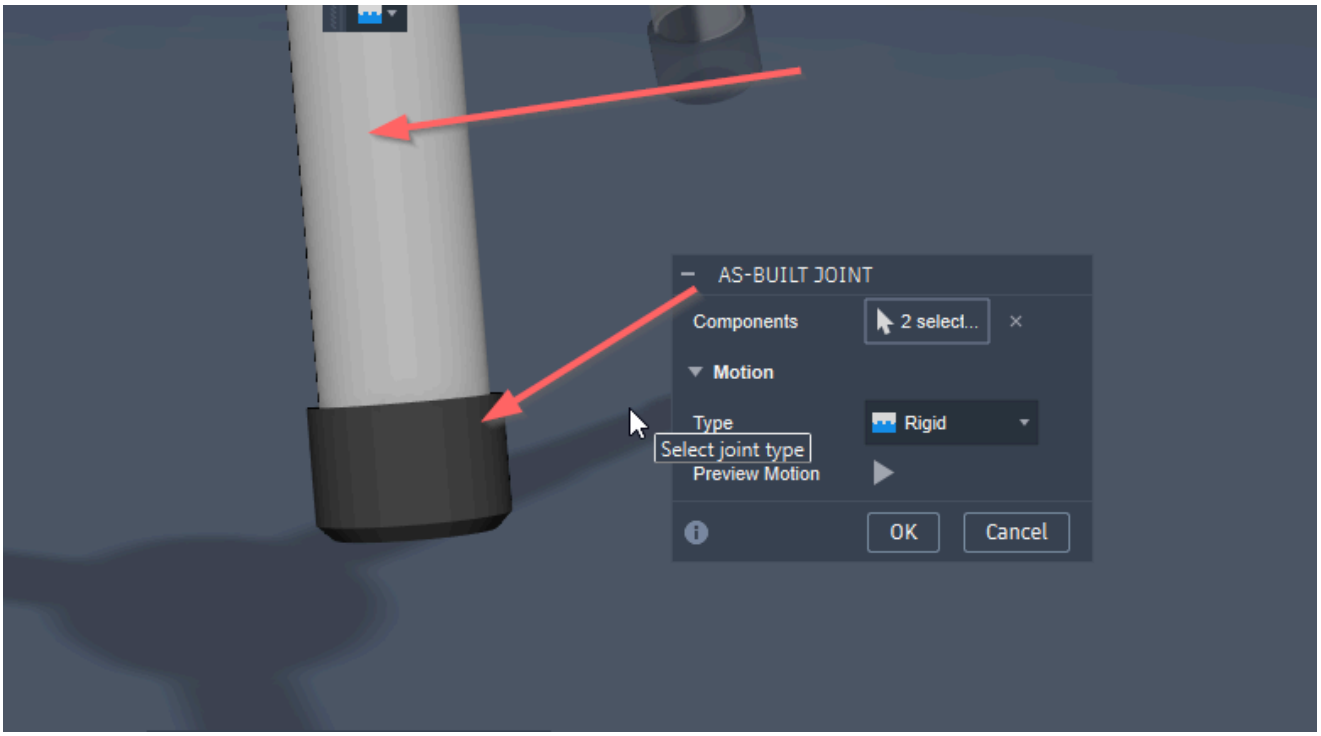


Set **Rigid As-Built Joint** for these two parts.

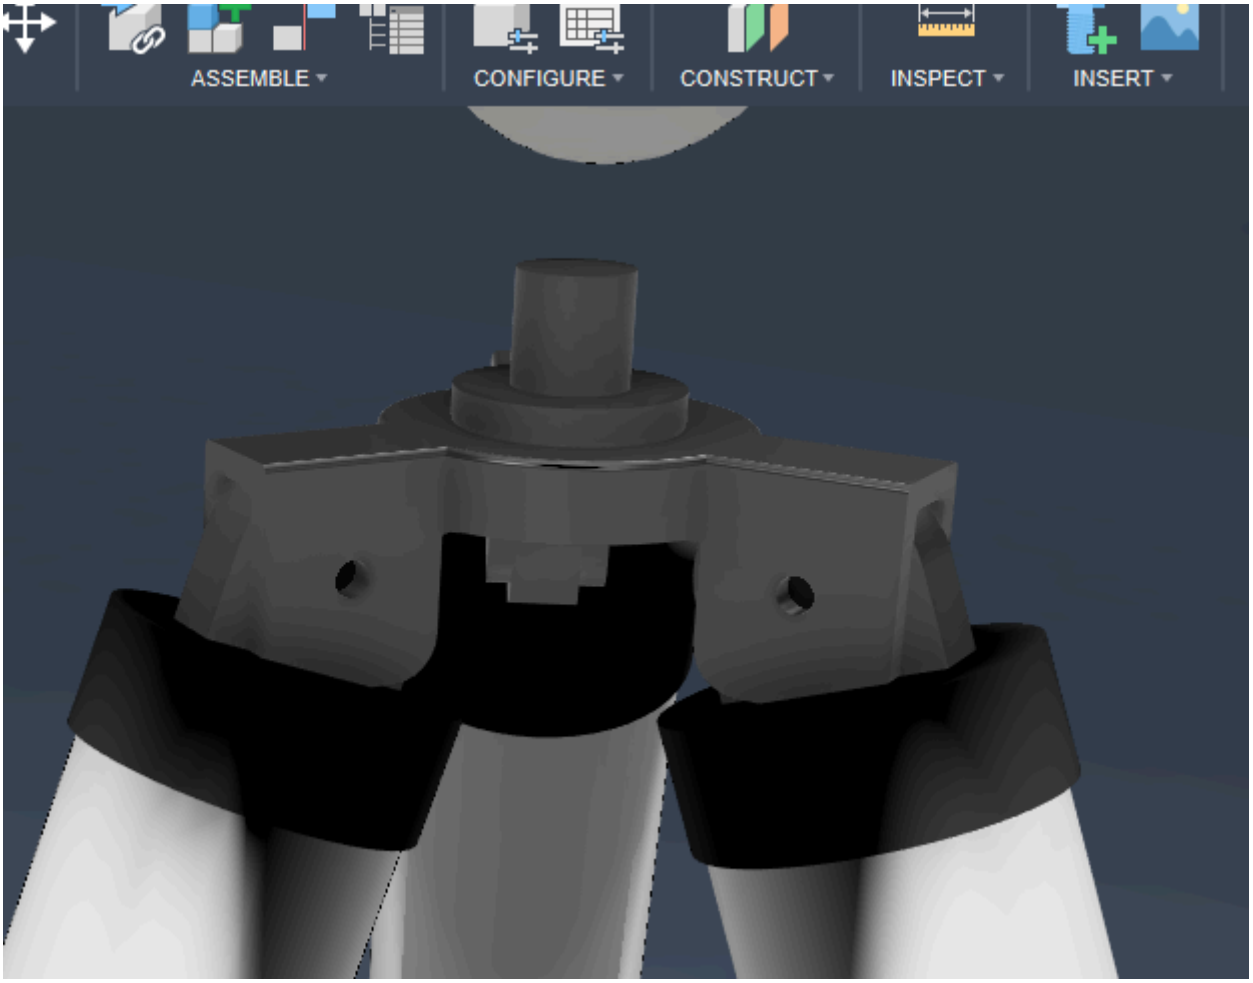


Hide the **red stand** to see the parts clearly.

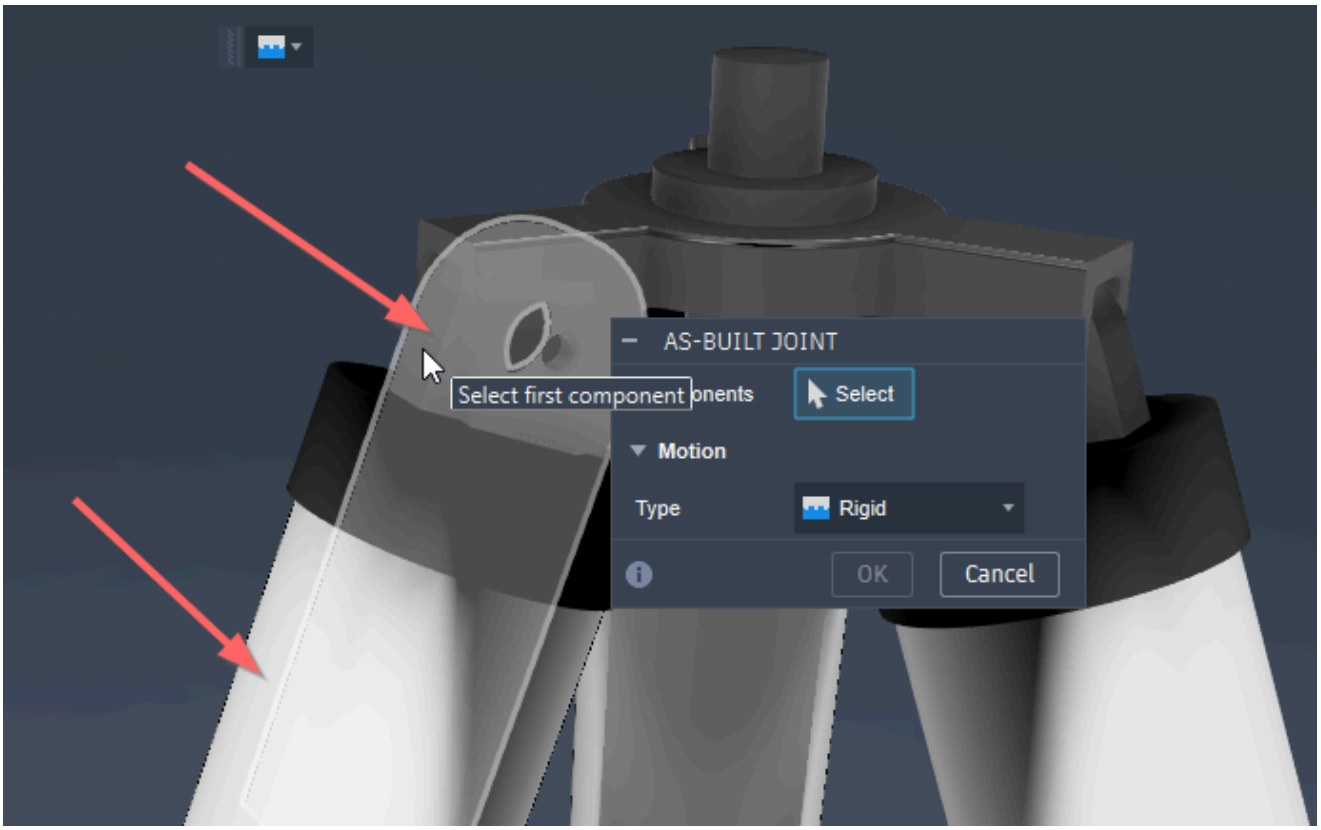


Add another **Rigid As-Built Joint** for these two components.

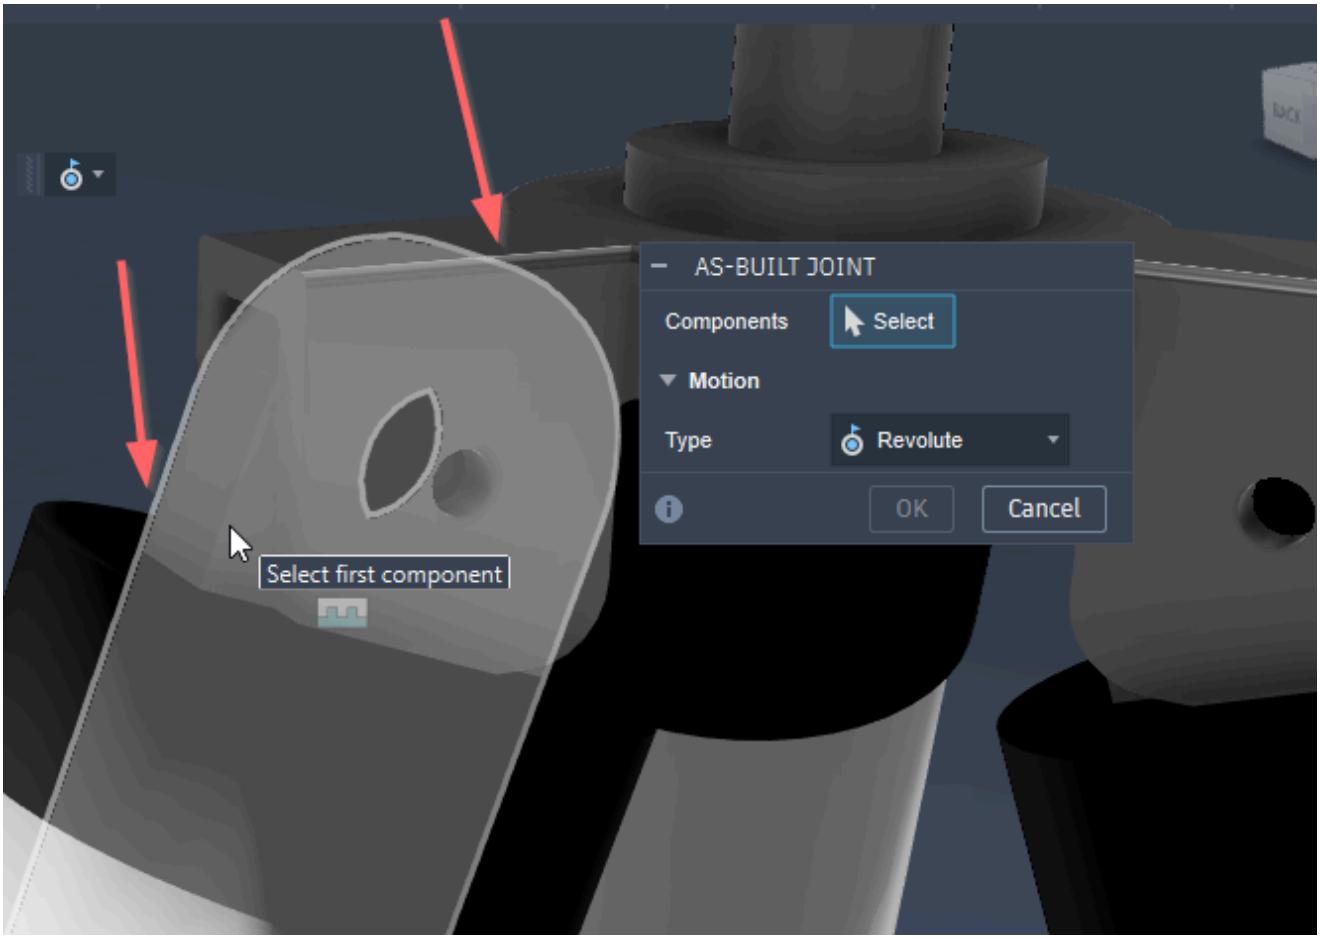


Now select **Revolute** type and choose these two parts.

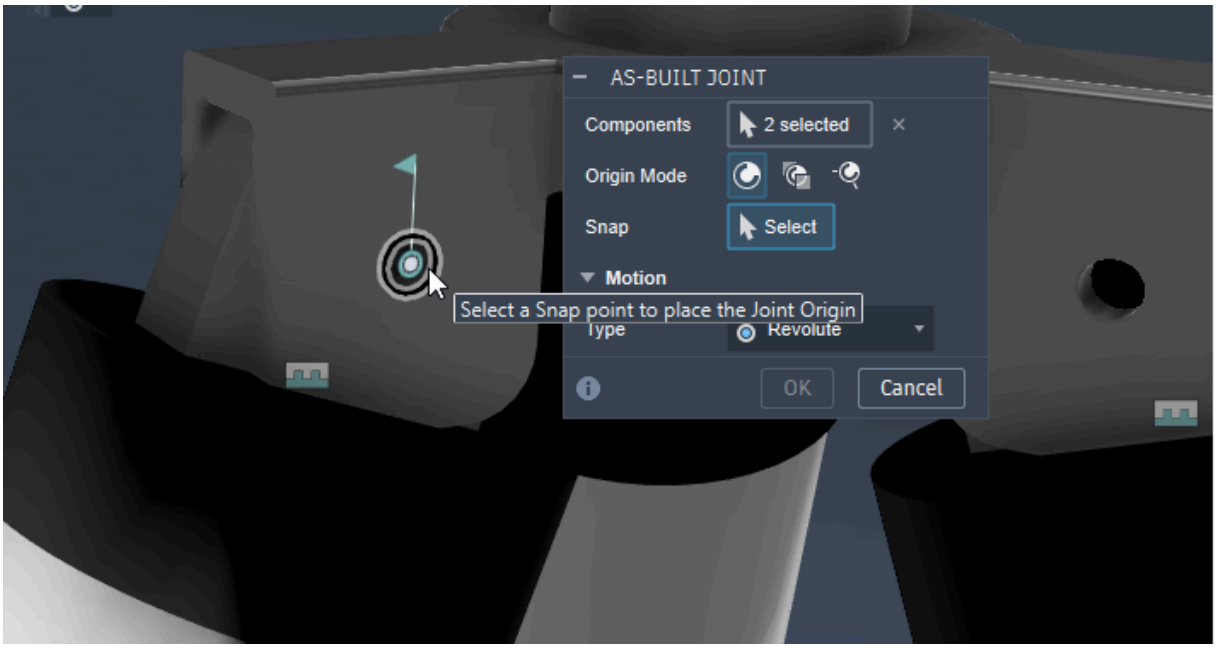


Pick this point as the **Revolute Snap**.

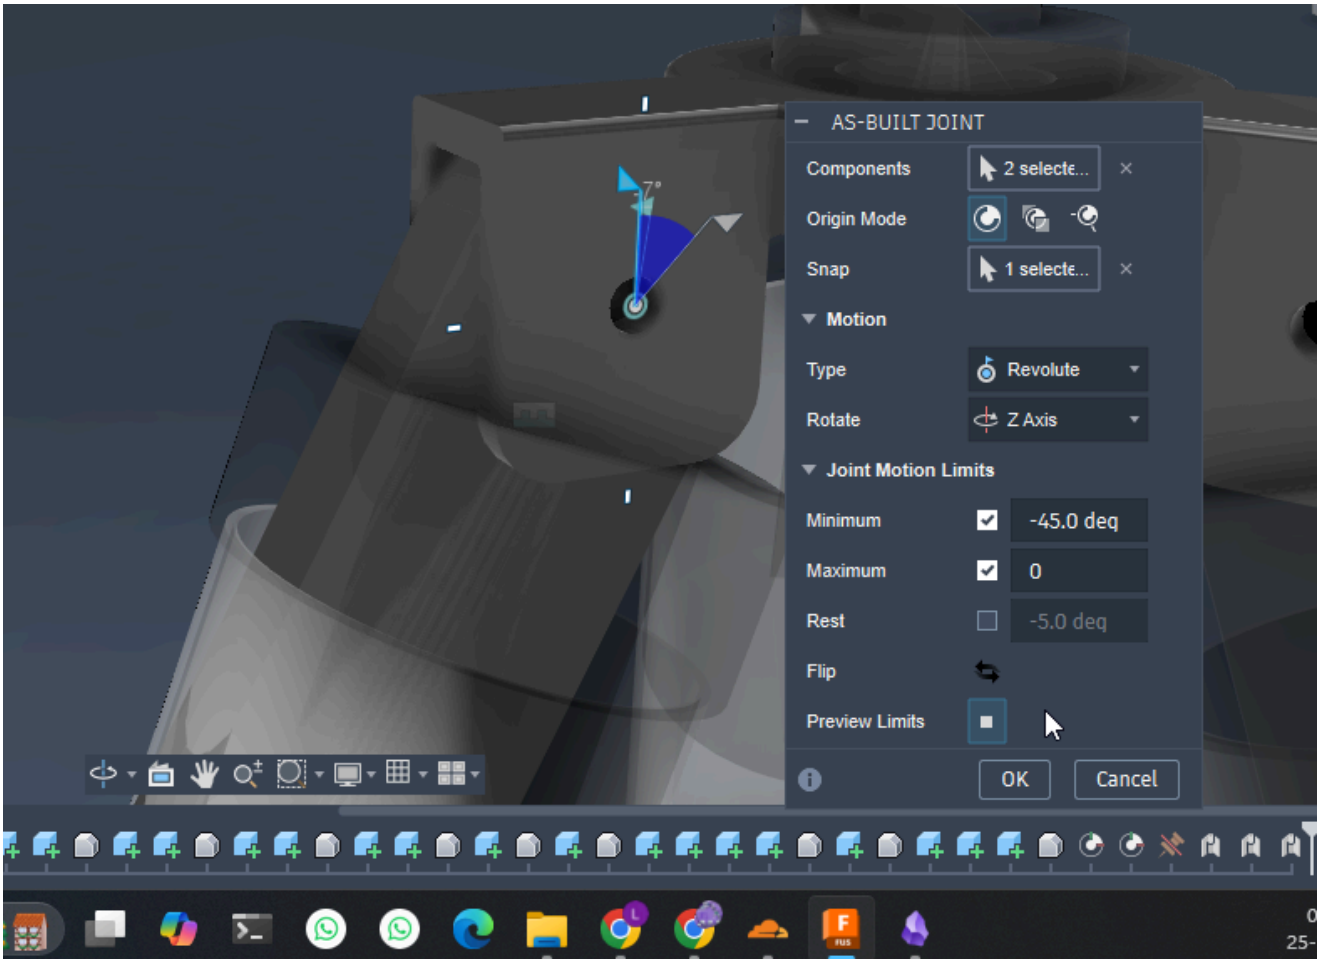


Set **Minimum** and **Maximum** rotation limits.

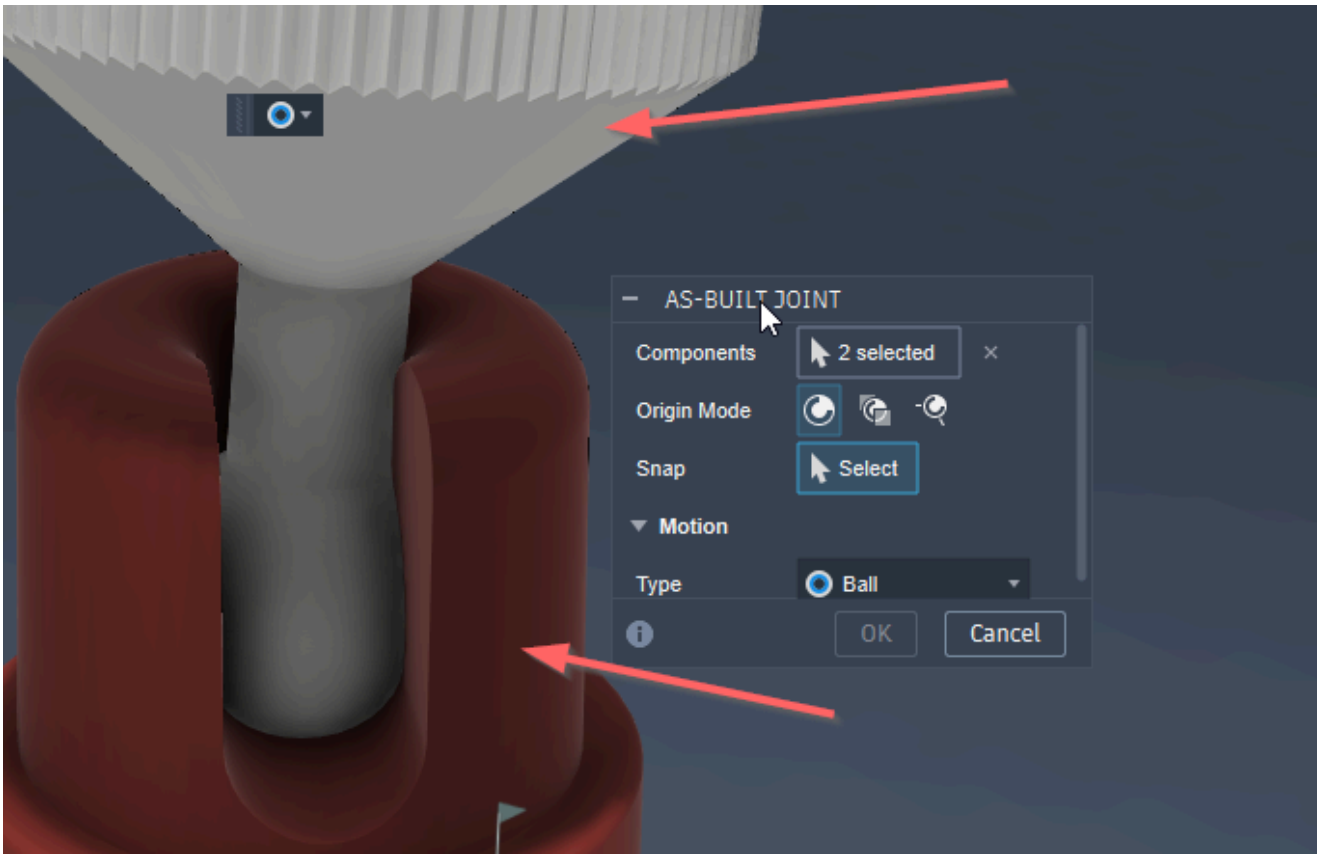

Choose **Ball Joint** type and select these two components.

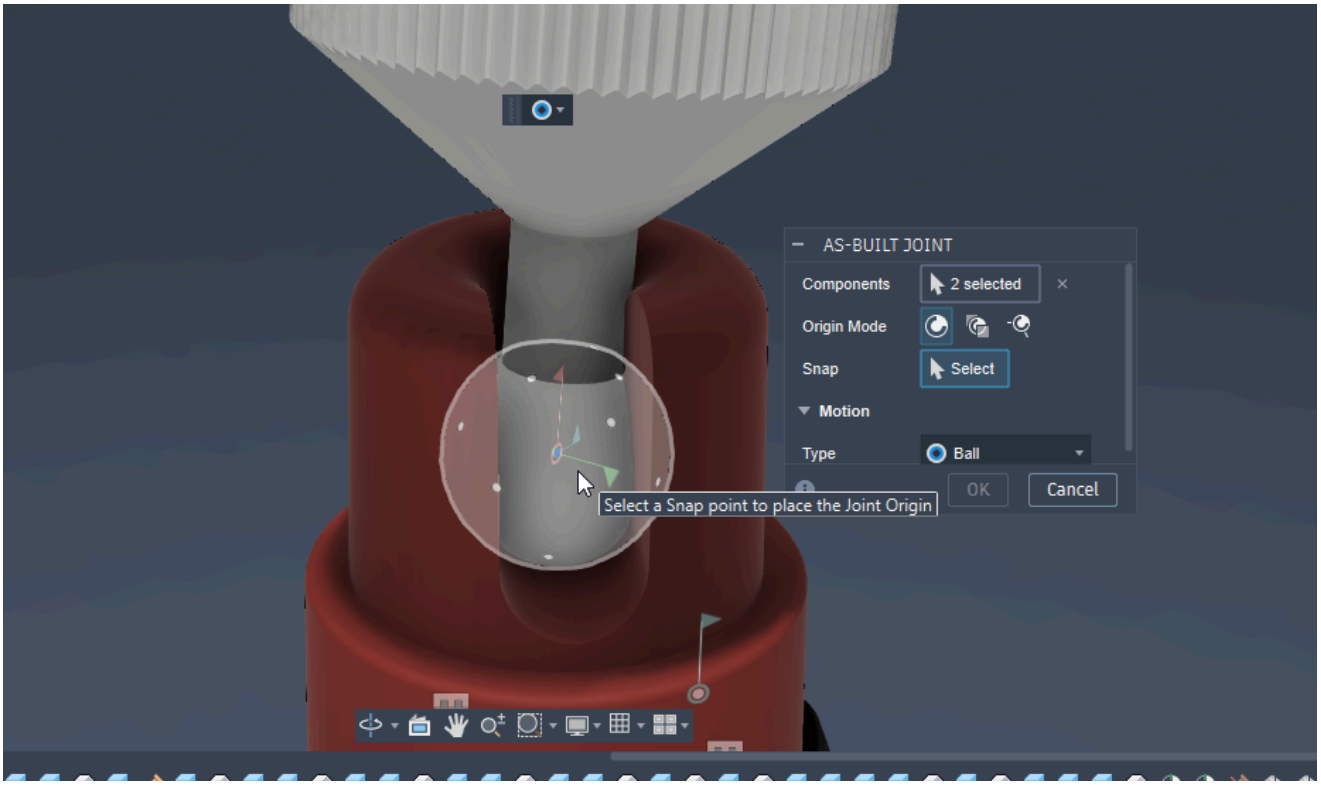

Use this point as the **Ball Snap**.

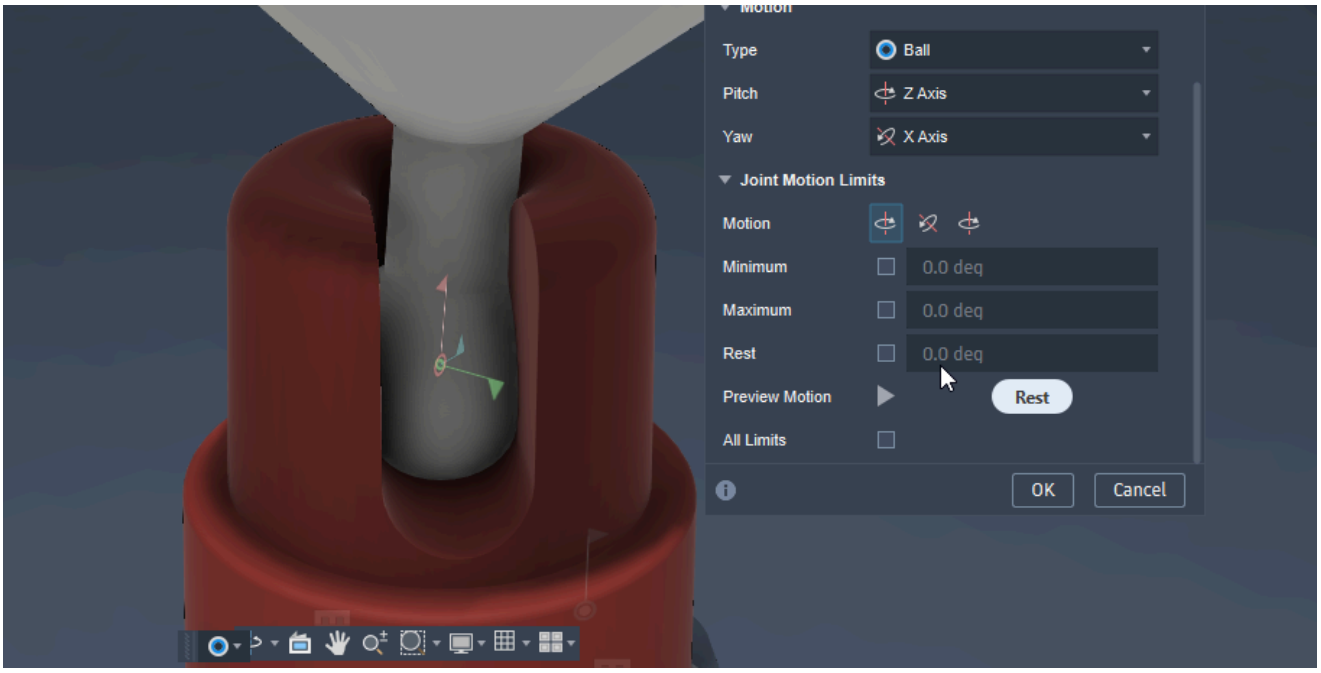

Click **Preview** to check ball-joint movement.

(Advanced ball-joint constraints will be explored later.)