


Propellor (Surface Modelling)

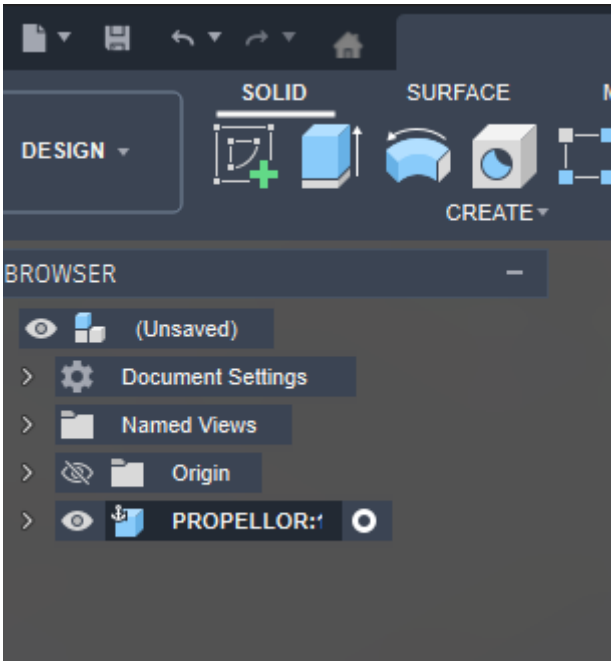


CREATE NEW COMPONENT

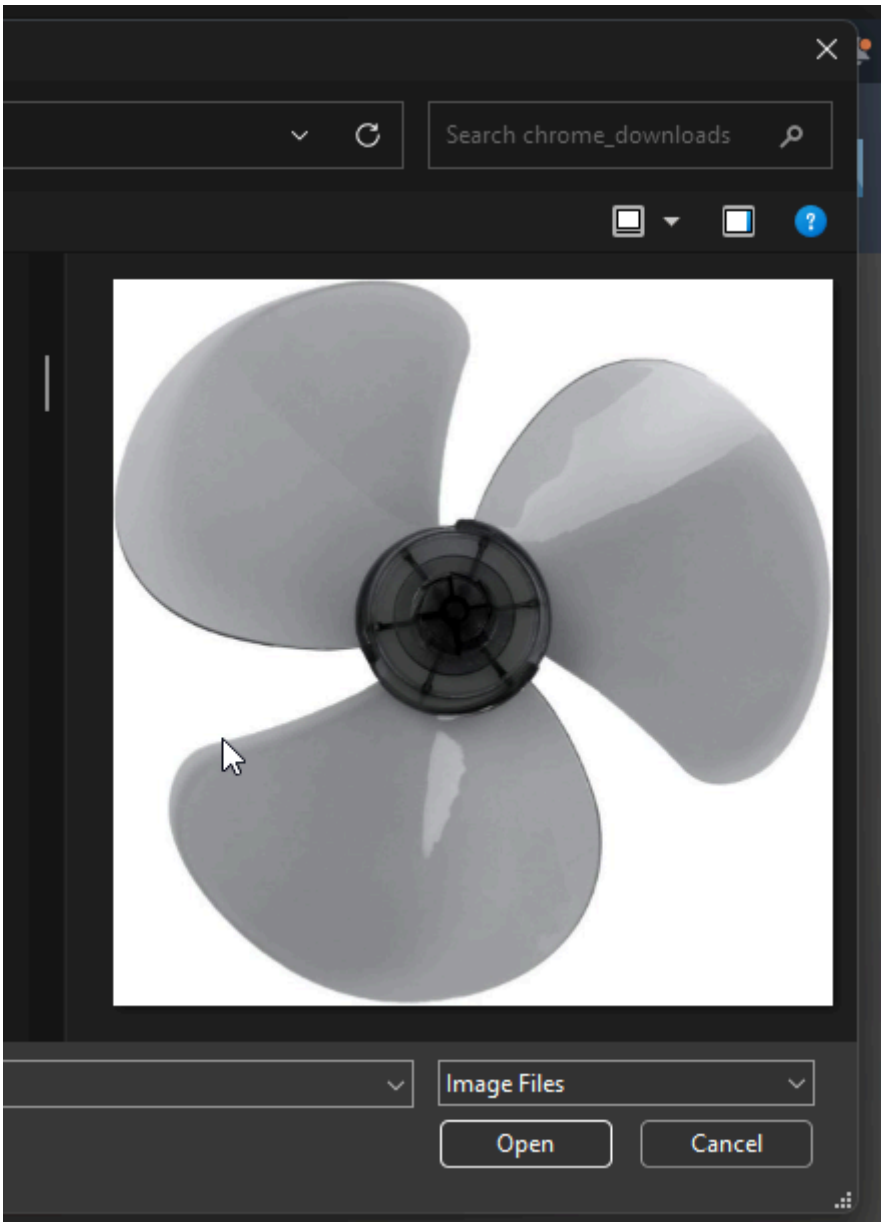


IMPORT THE PROPELLER IMAGE IN **XY PLANE**

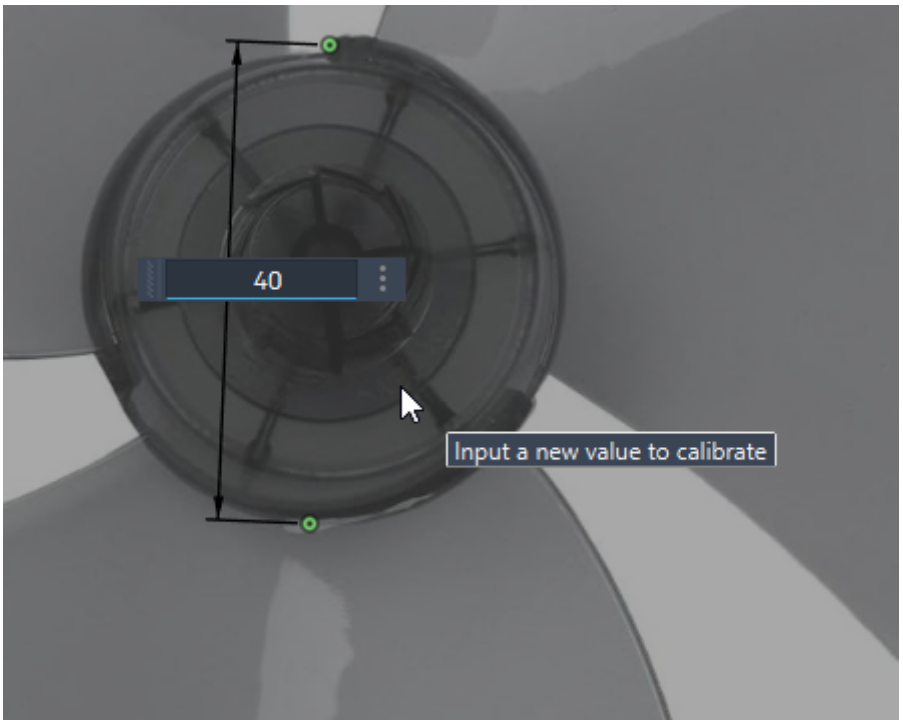

USE **CALIBRATE** → SET DIAMETER TO **40 MM**

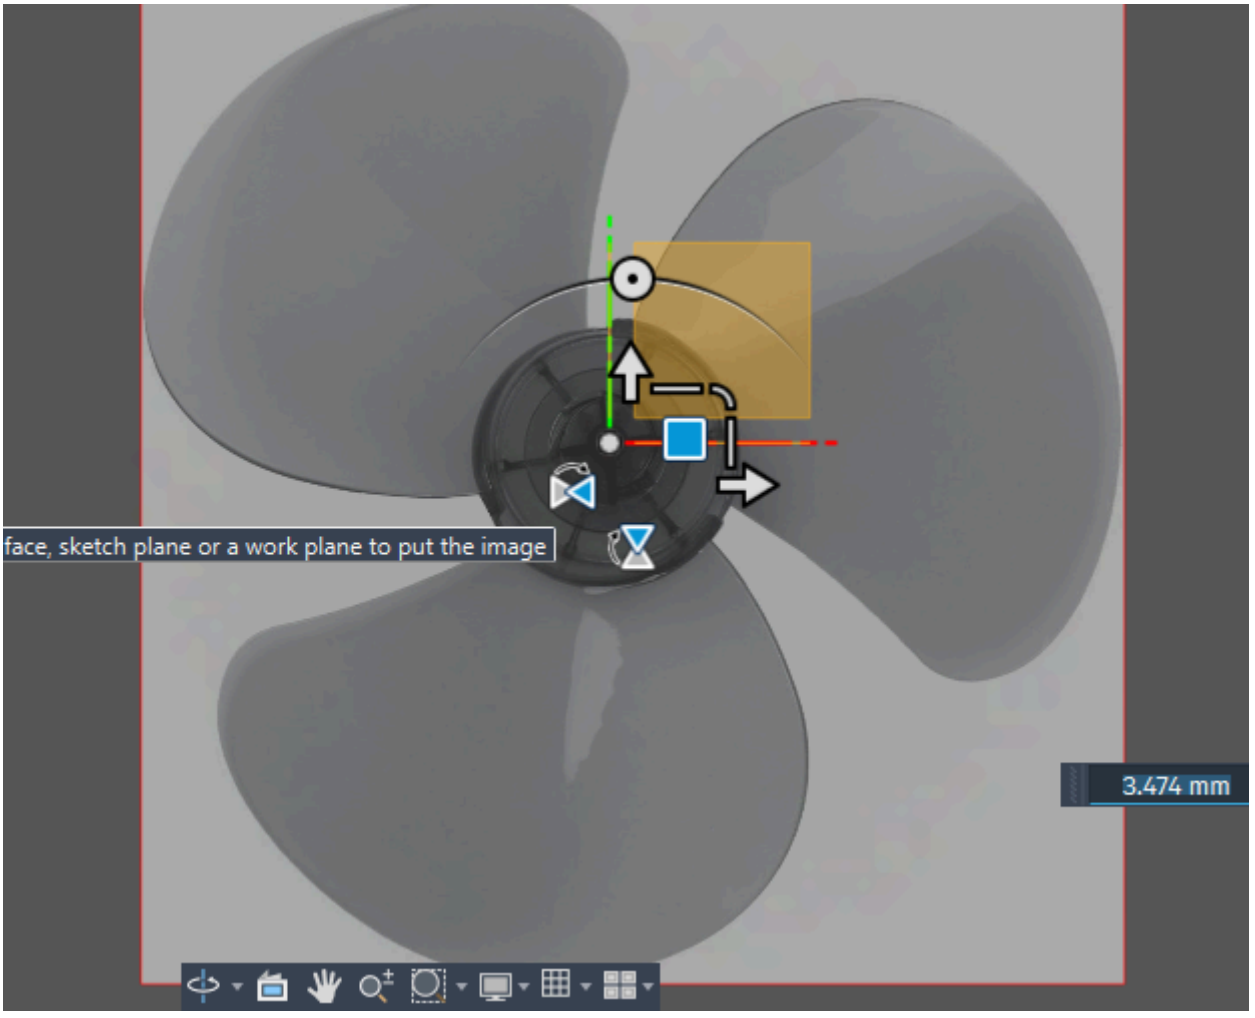


EDIT CANVAS → ALIGN IMAGE WITH ORIGIN (NEED NOT BE PERFECT)

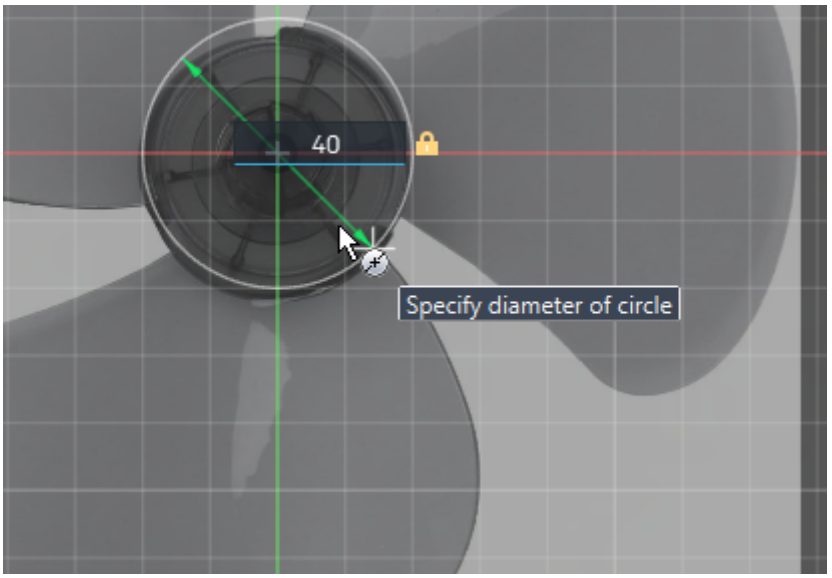

CREATE SKETCH ON **XY PLANE** → CIRCLE **40 MM DIA**




EXTRUDE **30 MM** FOR HUB

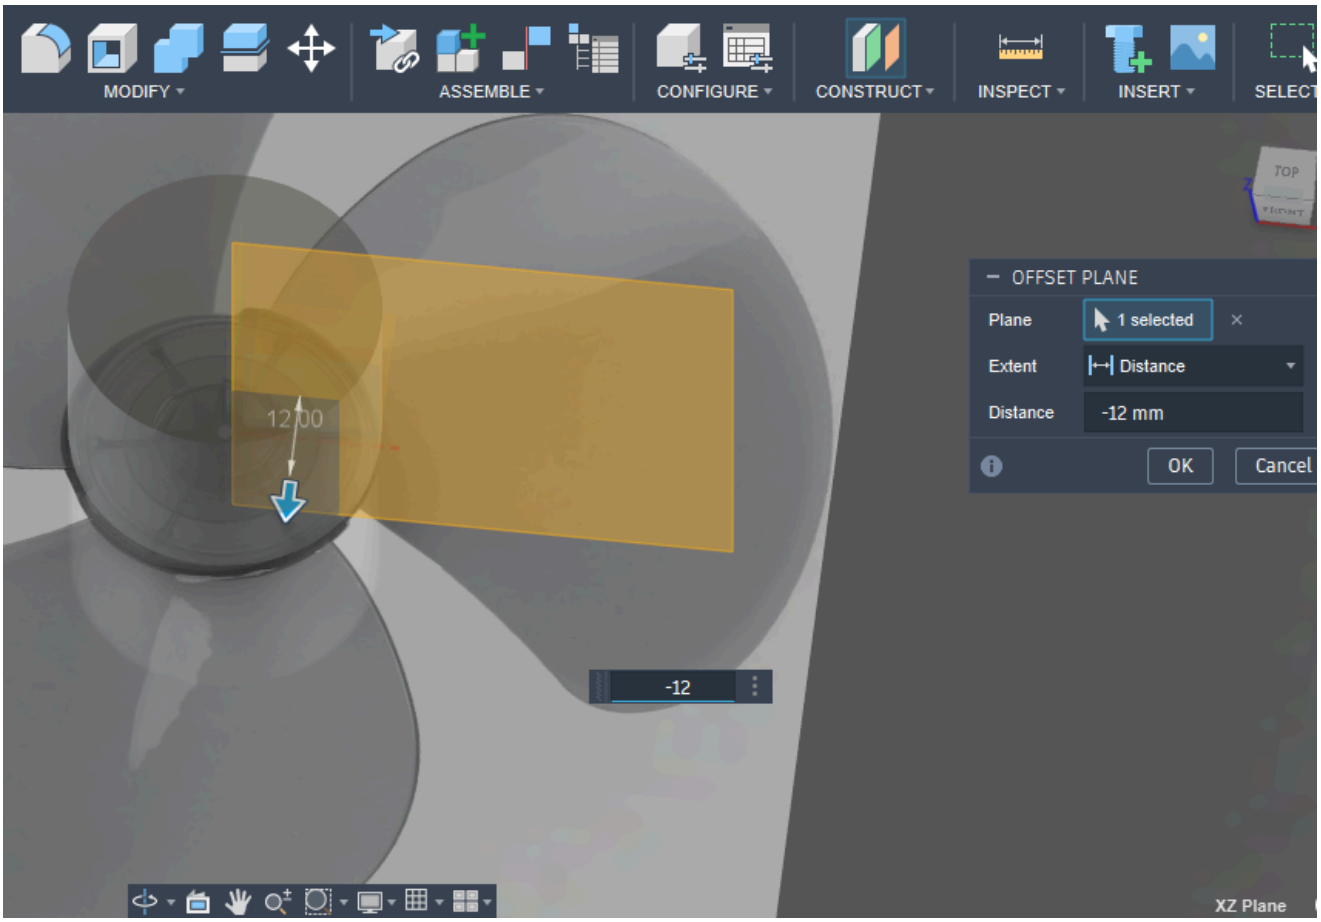


CREATE **OFFSET PLANE** 12 MM FROM XZ




SKETCH A **3-POINT ARC** ON THIS PLANE

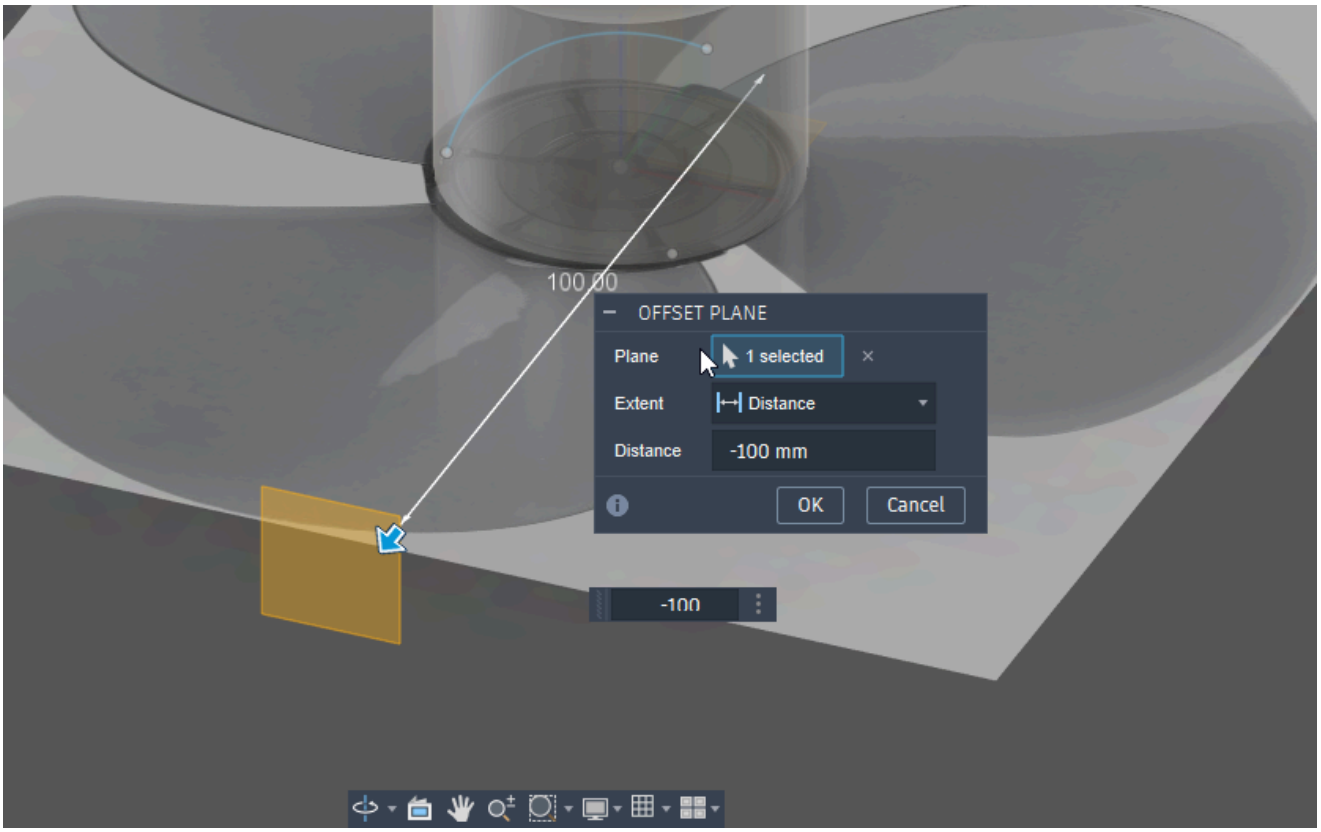


CREATE ANOTHER OFFSET PLANE **100 MM**

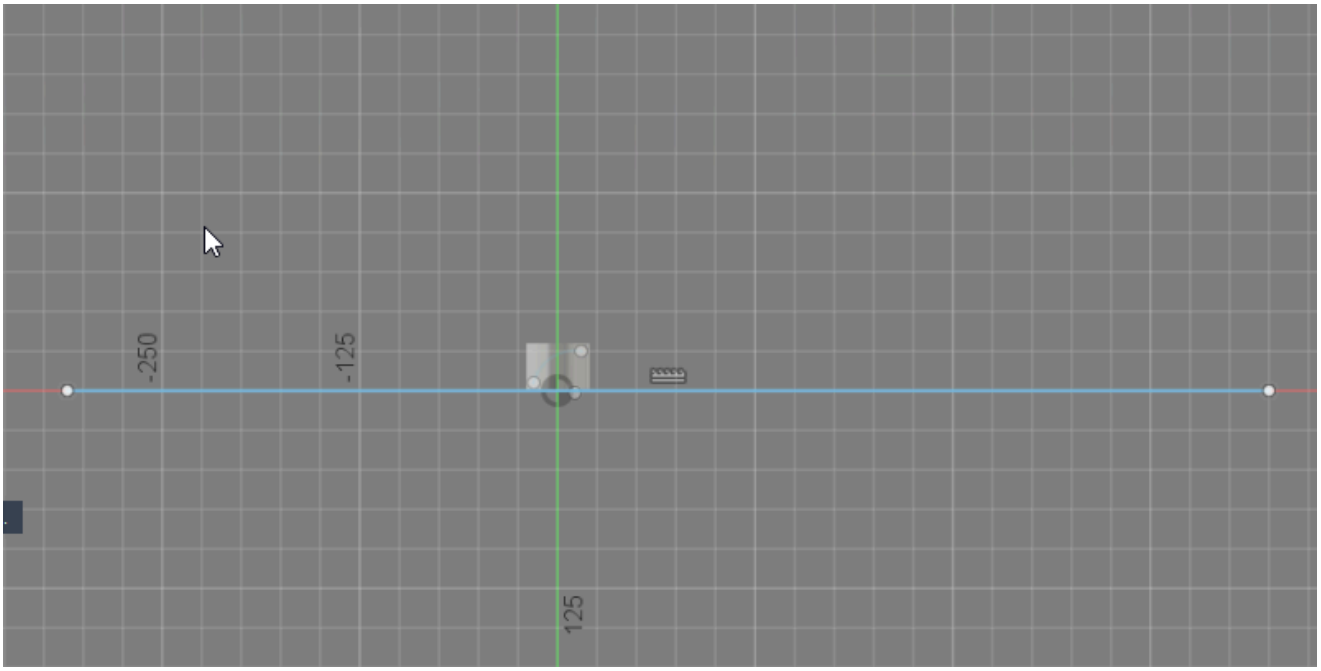


SKETCH A LONG STRAIGHT LINE FOR BLADE TIP

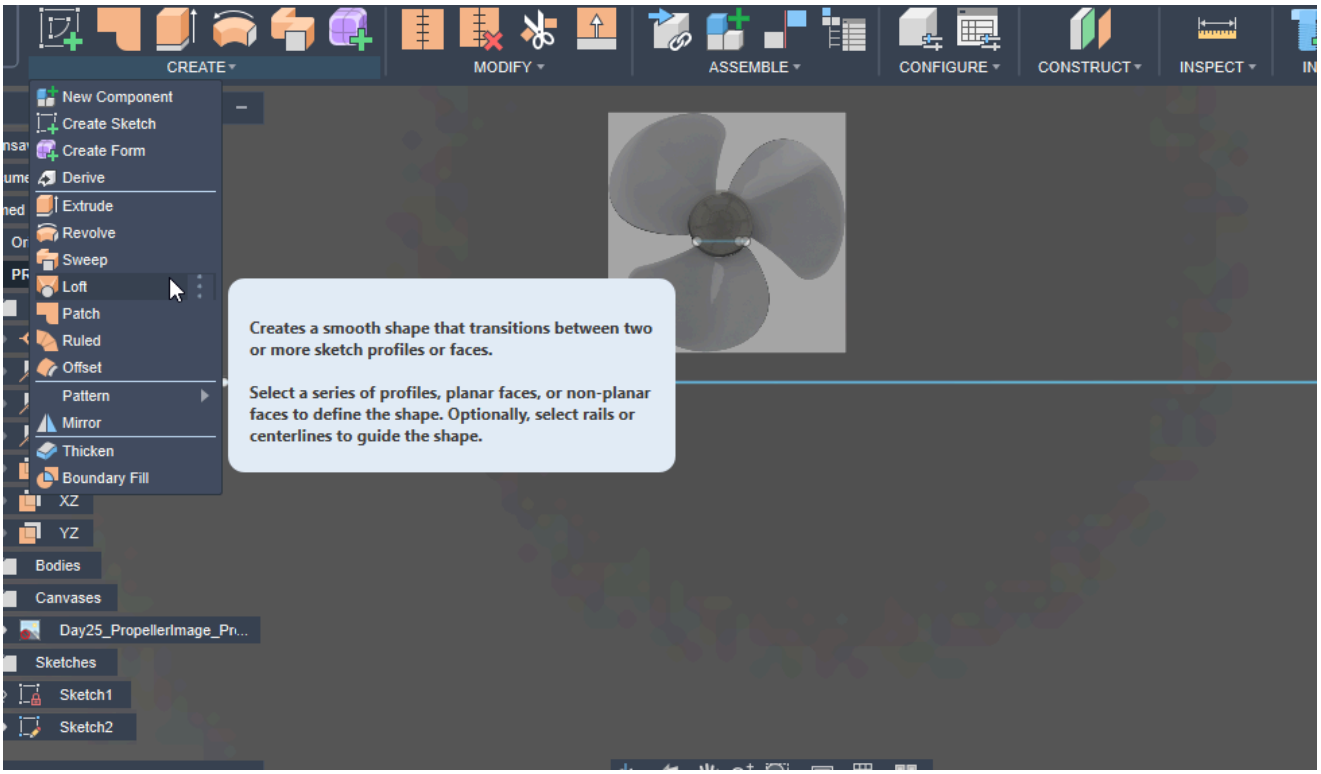


SURFACE → **LOFT** → SELECT ARC + LINE

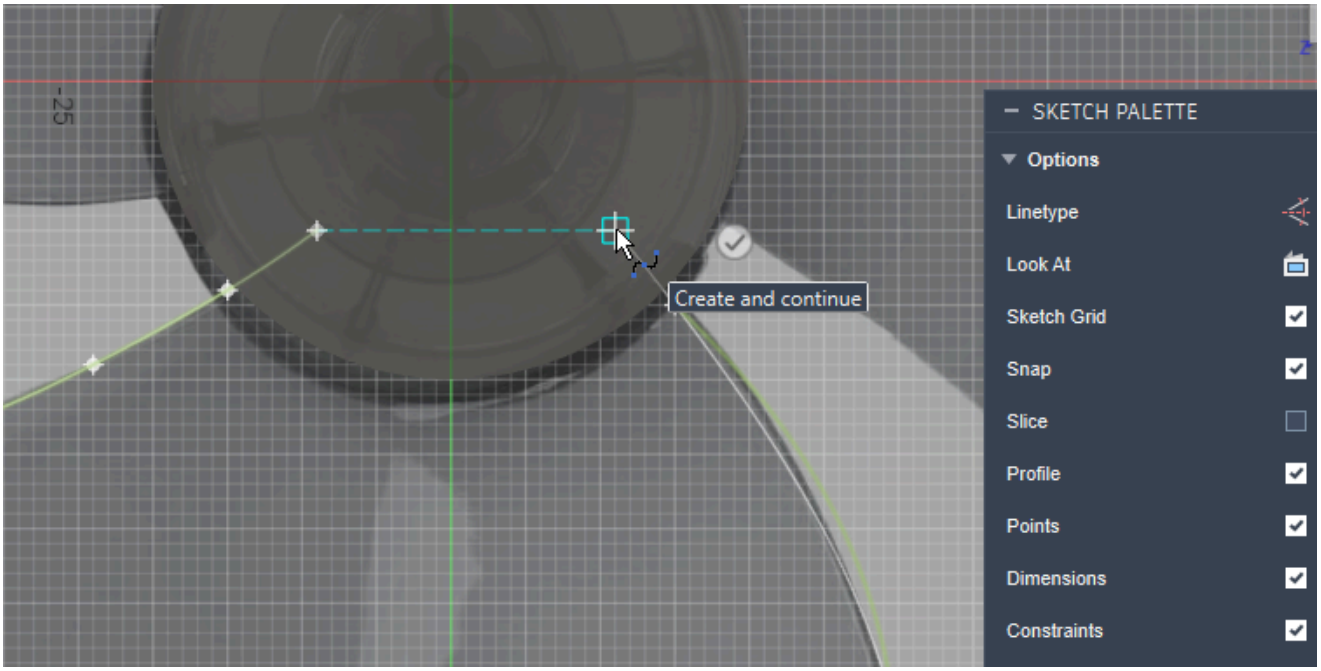


HIDE LOFT BODY → SKETCH ON **XY PLANE** (CANVAS PLANE) → DRAW BLADE OUTLINE WITH **FIT-POINT SPLINE**

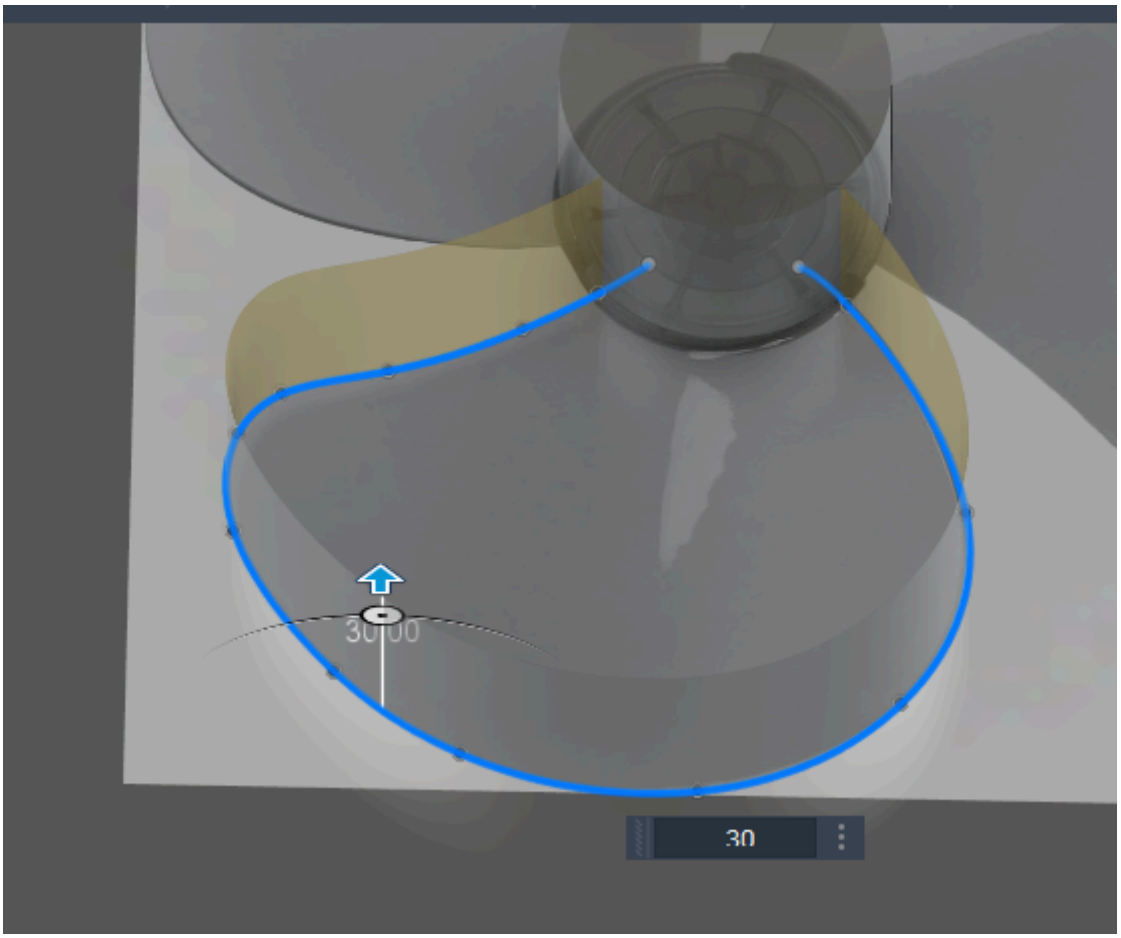

SURFACE → **EXTRUDE** SPLINE UP TO **30 MM**

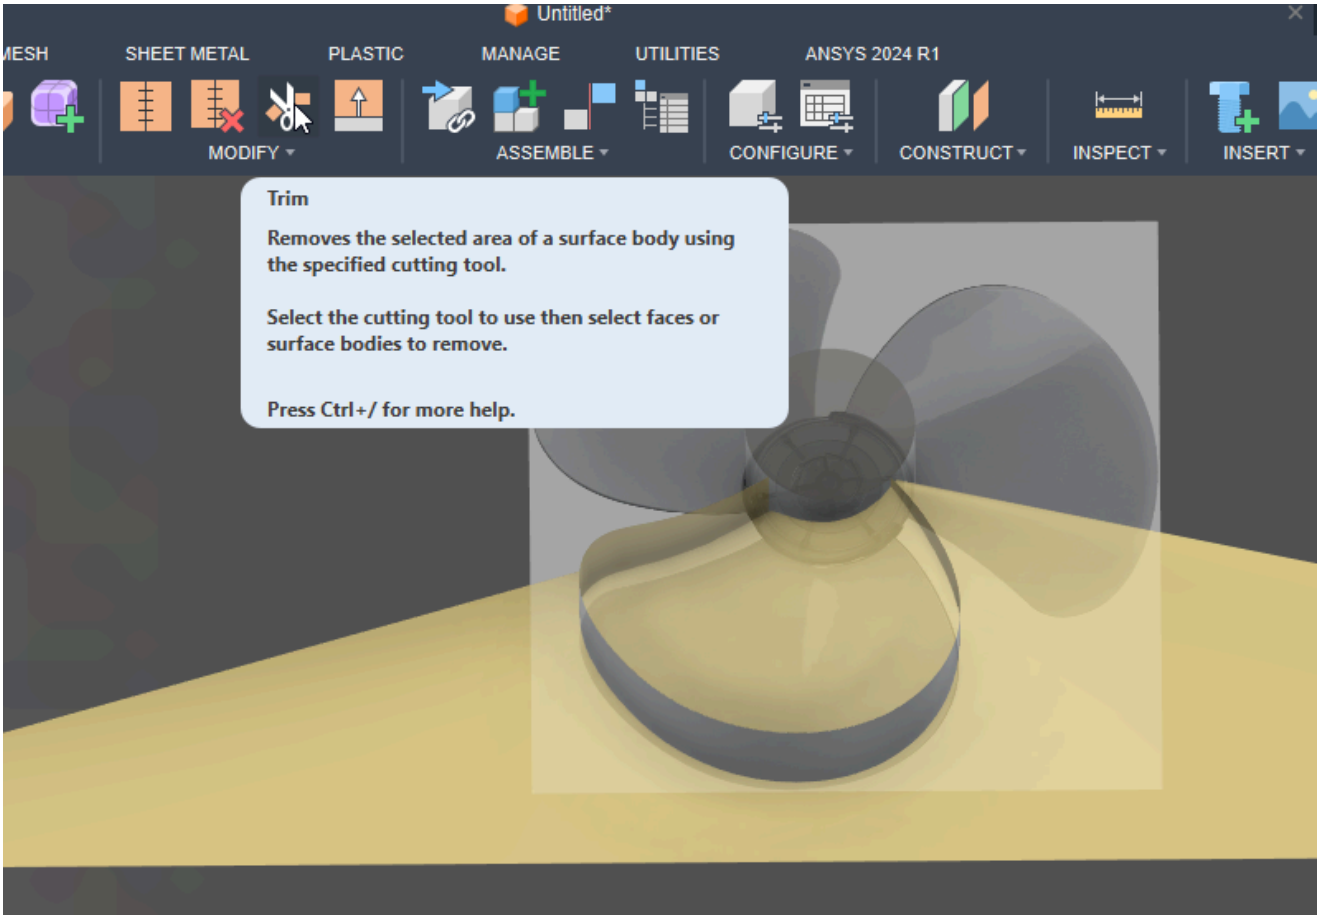


UNHIDE LOFT → SURFACE **TRIM**

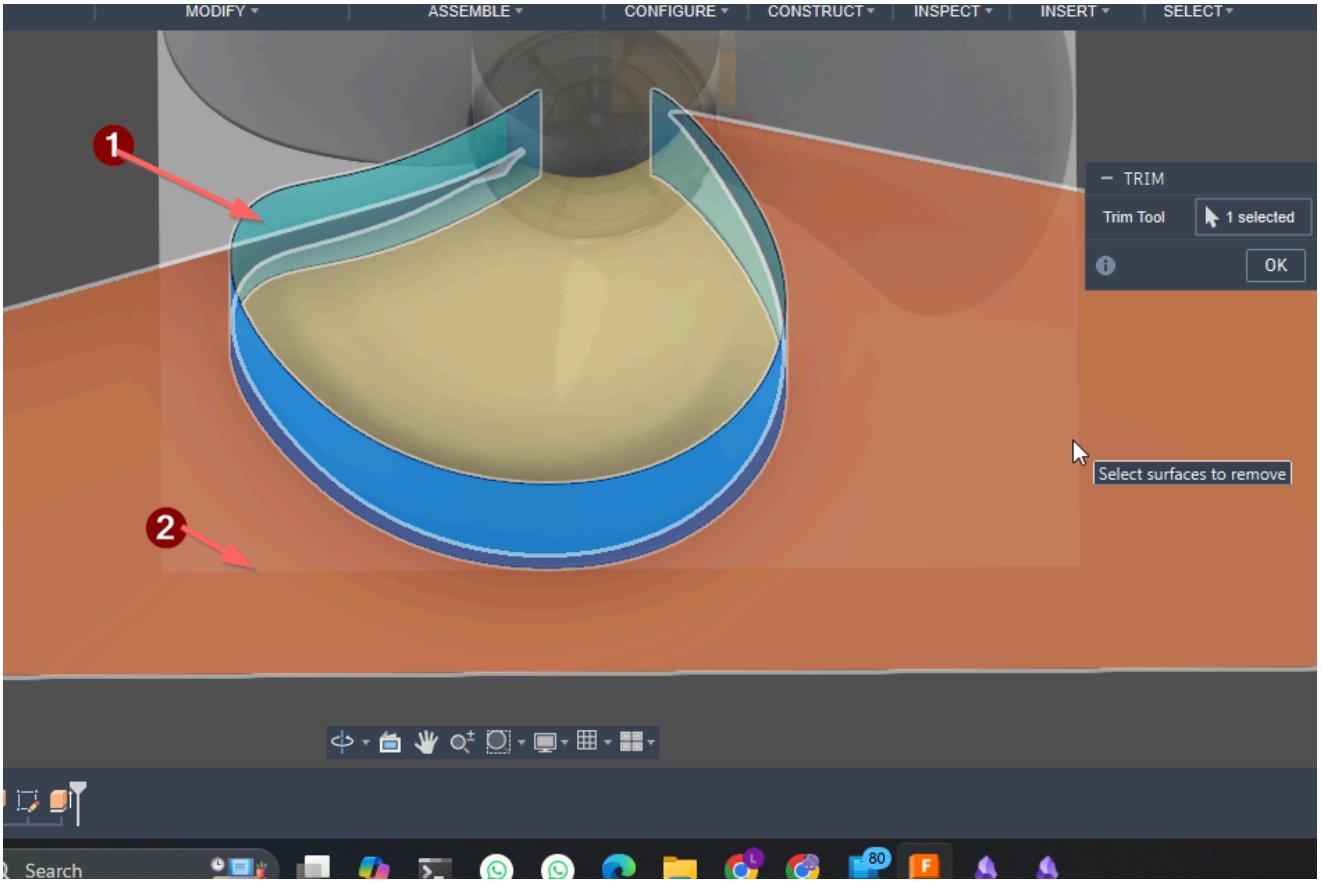


1 — SELECT LOFT AS TRIMMING TOOL


2 — SELECT BLADE SURFACE TO REMOVE → OK

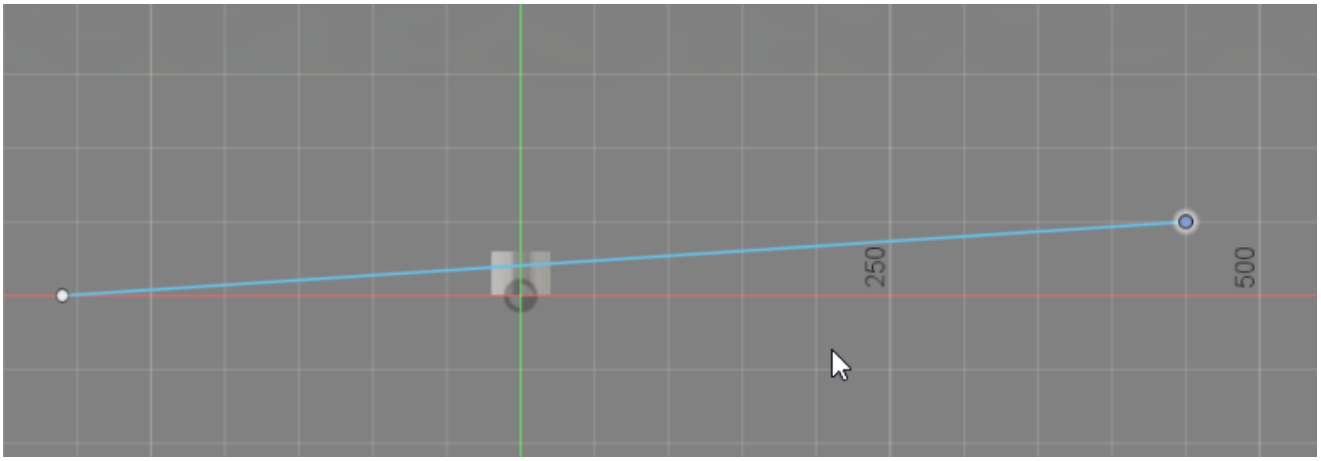


EDIT SPLINE IF NEEDED TO ADJUST SHAPE

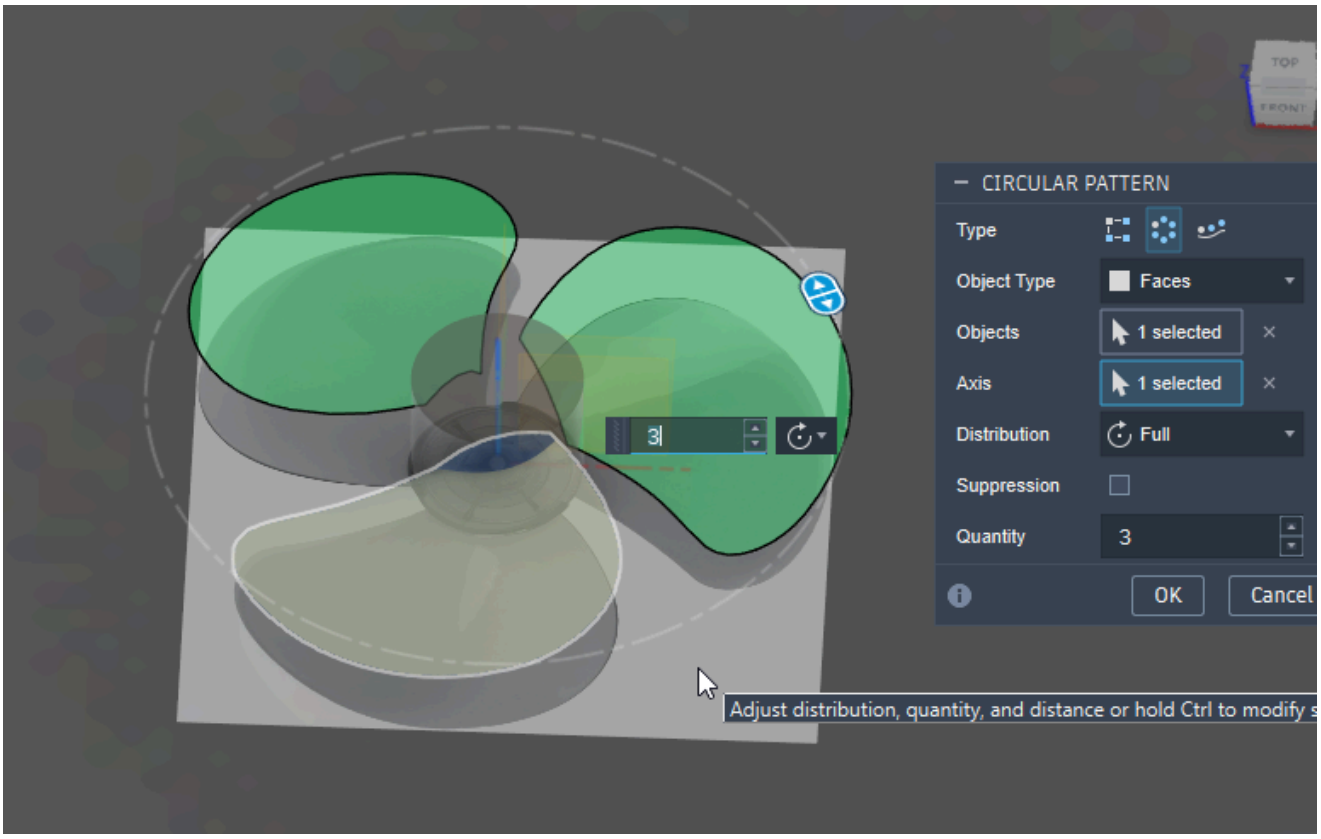

SURFACE → **CIRCULAR PATTERN**
SELECT SURFACE → AXIS = Z → QUANTITY **3**

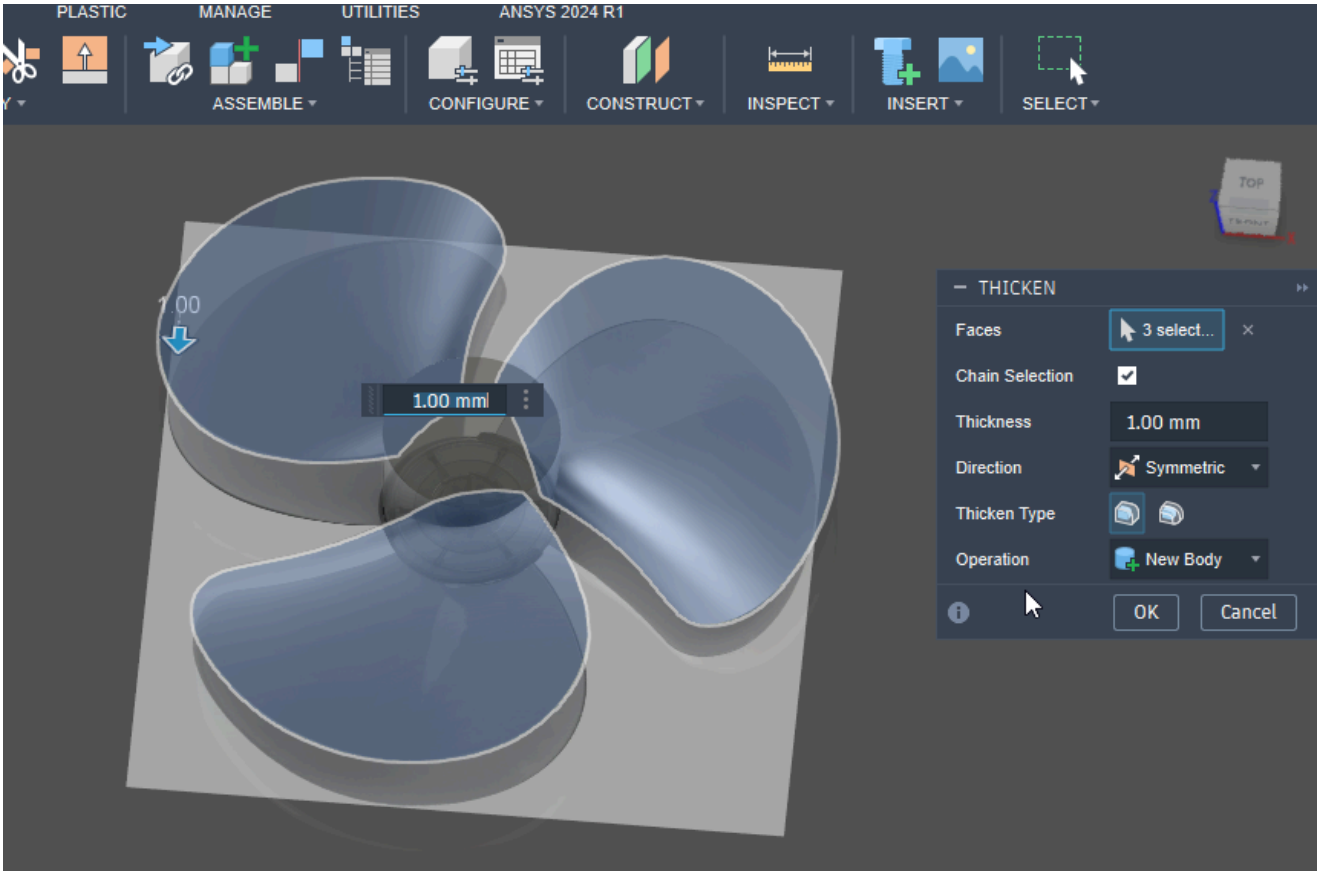

SURFACE → **THICKEN** → SELECT ALL BLADES → **1 MM**, SYMMETRIC

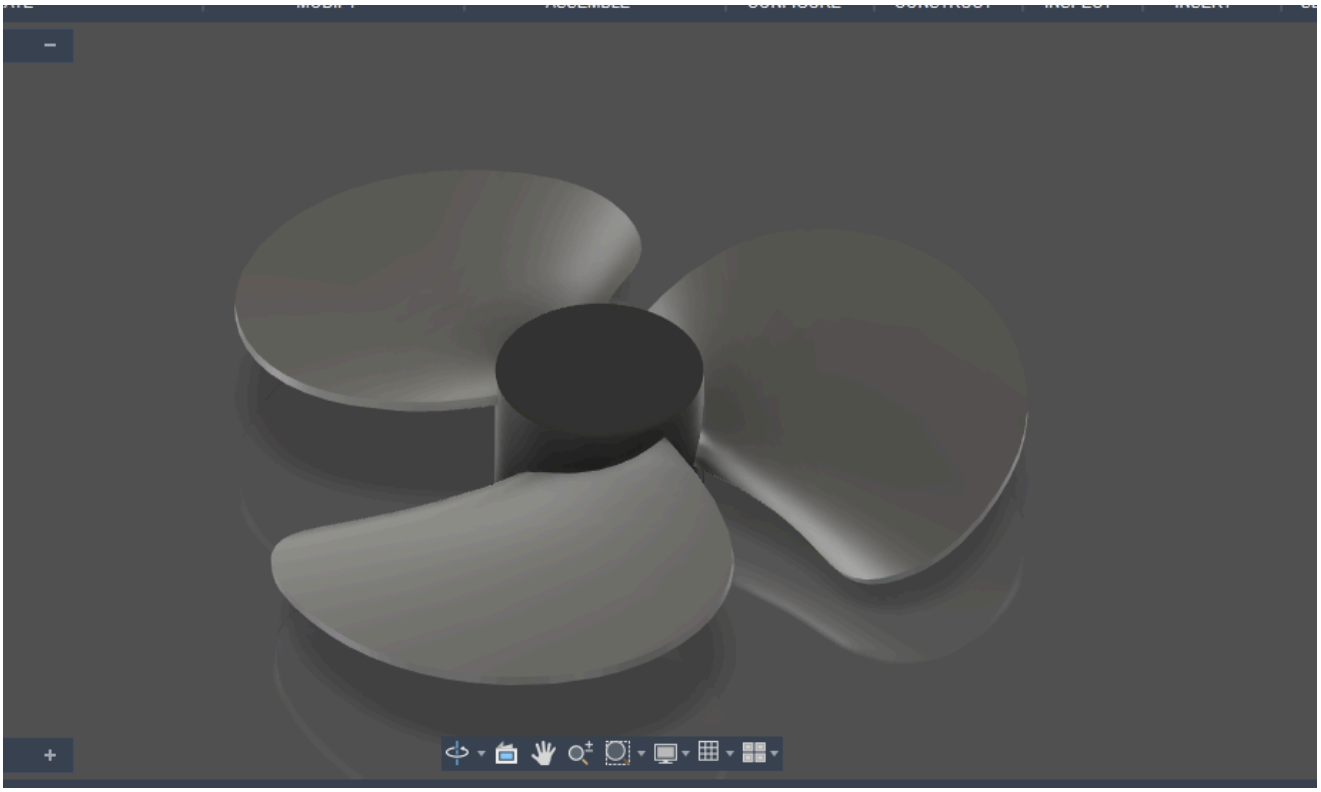

DONE ✓