
Technology of Microelectronic- Important values

An Open-Source Summary

Thomas Debelle



December 16, 2025

Contents

1 First Chapter	2
1.1 Silicon properties	2
1.2 Boule making	2
1.2.1 Wafer treatment	2
2 Lithography	4
2.1 Resist spinning	5
2.2 Optic	5
2.3 Mask and formulas	6
2.4 Lights	7
2.5 Double patterning	7
2.6 EUV	7
3 Deposition	7
4 Oxidation, wet, dry	8
4.1 Thermal oxidation	8
4.2 LOCOS	9
4.3 STI	9
4.4 Doping	10
4.4.1 Diffusion Theory	10
4.4.2 Constant-surface-concentration	11
4.4.3 Constant-total-dopant	11
4.5 Ion Implantation	12
5 Etching, wet, dry, plasma, DRIE	12
5.1 Anisotropic	12
5.1.1 Plasma Etching	12
5.1.2 DRIE	13
6 Interconnect	14
6.1 Electromigration	14
6.2 Interconnect	14
7 Ic Processing Overview	15
7.1 Al vs poly	15
7.2 Latch-up issue	15
7.3 Hot carrier effect	16
7.4 Contacting issues	16
7.4.1 Gate last	16
8 Packaging	16
9 Extra table – Used Gemini / Notebook LM	17
9.0.1 Growth and Etching Rates in Microfabrication Processes	17

10 License	20
10.1 Modification	20
10.2 Take down	20

1 First Chapter

Positive etch mask = exposed area will be removed. Negative vice versa.

Wafer Size	Thickness
4"	400 μm
8-12"	1.2 mm

1.1 Silicon properties

Cheap and strong, fragile. Resistivity 0.001 - 20 $\text{k}\Omega/\text{cm}$. Can be SCS, poly or amorphous. Can deform without cracking for quite some time.

$\star 10^{15}/\text{cm}^3 \rightarrow 10^{15}/\text{cm} = 10/\mu\text{m}$ (!) *looking into 1 direction 10⁵ atoms that aren't >: a 1cm*
 $\star 1\text{cm} = 10^8\text{\AA}$ *1\AA = 0,1nm*

Dopant level	Designation	Dopant concentration (cm^{-3})	Resistivity n/p (ohm-cm)
Very lightly doped	$\text{n}^{--}, \text{p}^{--}$	$<10^{14}$	$>100/>30$
Lightly doped	n^-, p^-	$10^{14} - 10^{16}$	$1 - 100/0.3 - 30$
Moderately doped	n, p	$10^{16} - 10^{18}$	$0.03 - 1/0.02 - 0.3$
highly doped	n^+, p^+	$10^{18} - 10^{19}$	$0.01 - 0.03/0.005 - 0.02$
Very highly doped	$\text{n}^{++}, \text{p}^{++}$	10^{19}	$0.001 < 0.01/0.005$

Figure 1: Resistivity

In a Si cube we have 8 atoms inside the cell. with:

$$\text{Volume} = (.543\text{nm})^3 \quad \frac{8}{\text{Volume}} = 5 \cdot 10^{22} \text{atoms}/\text{cm}^3$$

SCS has a purity up to 11 nines ! and is 2 FCC lattices displaced by .25, .25, .25.

1.2 Boule making

To create a Boule we can use a Czochralski pulling at 1420C. The pull rate is around **mm/min**. 30 hours for 2m + 30 hours for cooling!

1.2.1 Wafer treatment

First we have to cut then to get a perfect wafer we will have:

1. Lapping: 20 μm /side

2. Edge profiling: makes edge cleaner
3. Etching (chemical): $20\mu\text{m}/\text{side}$
4. Polishing (CMP): $25\mu\text{m}/\text{side}$

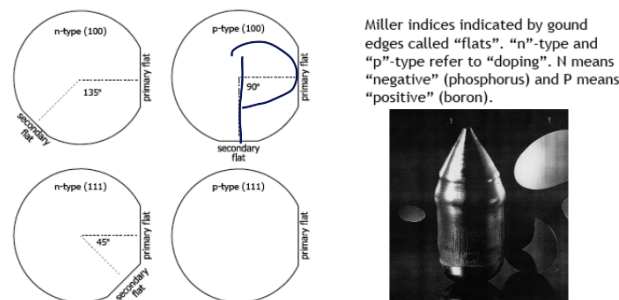


Figure 2: For fully doped wafer

A boat can contain between 12 to 24 wafer.

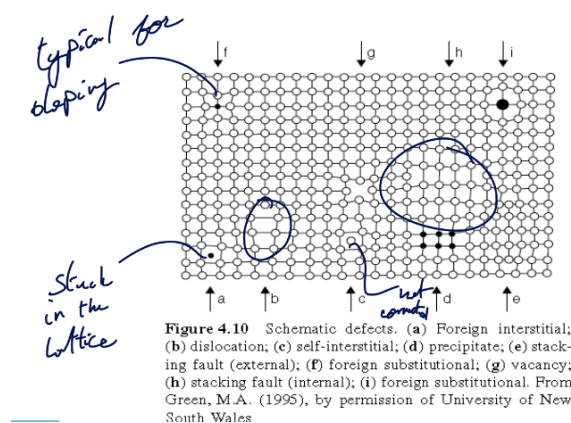


Figure 4.10 Schematic defects. (a) Foreign interstitial; (b) dislocation; (c) self-interstitial; (d) precipitate; (e) stacking fault (external); (f) foreign substitutional; (g) vacancy; (h) stacking fault (internal); (i) foreign substitutional. From Green, M.A. (1995), by permission of University of New South Wales

Figure 3: Source of non-idealities

We drop some die on the chips that aren't good due to a defect. Lower defect ratio allows to put bigger transistor. But going smaller isn't always the best as the interconnect cost can quickly ramp up as we go too small. So optimization process between Packaging and reliability (yield).

Class	1	10	100	1000	10 000
No. of particles $0.5\mu\text{m}$	1	10	100	1000	10 000
No. of particles $0.1\mu\text{m}$	35	350	3500	35 000	350 000

	$0.1\mu\text{m}$	$0.2\mu\text{m}$	$0.3\mu\text{m}$	$0.5\mu\text{m}$	$1\mu\text{m}$	$5\mu\text{m}$
ISO class 1	10	2				
ISO class 2	100	24	10	4		
ISO class 3	1000	237	102	35	8	
ISO class 4	10 000	2370	1020	352	83	
ISO class 5	100 000	23 700	10 200	3520	832	29

Figure 4: ISO classification

ISO	FS209	Certification Particle Size (µm)					
Class	Class	0.1	0.2	0.3	0.5	1.0	5.0
1	---	10	2	---	---	---	---
2	---	100	24	10	4	---	---
3	1	1,000	237	102	35	8	---
4	10	10,000	2,370	1,020	352	83	---
5	100	100,000	23,700	10,200	3,520	832	29
6	1,000	1,000,000	237,000	102,000	35,200	8,320	293
7	10,000	---	---	---	352,000	83,200	2,930
8	100,000	---	---	---	3,520,000	832,000	29,300
9	---	---	---	---	35,200,000	8,320,000	293,000

! Watch: how are microchips made

Figure 5: ISO and FS209

Class ISO:

- 10.000: PCB, packaging
- 1.000: MEMS, packaging, HDD
- 100: MEMS, RF/Photonic ICs
- 10: IC

2 Lithography

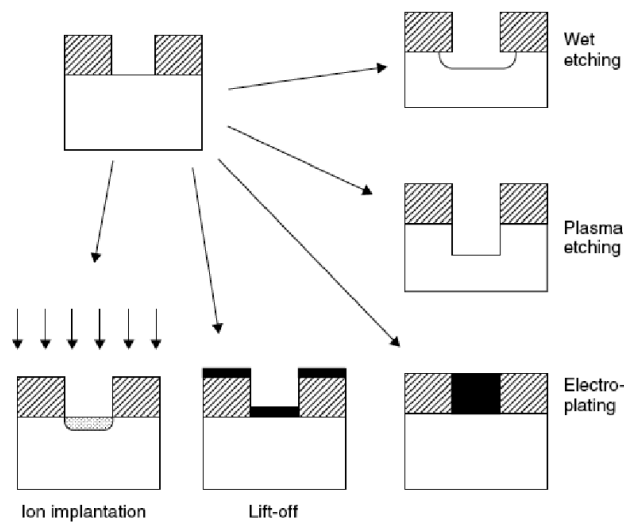


Figure 6: Various type of etching

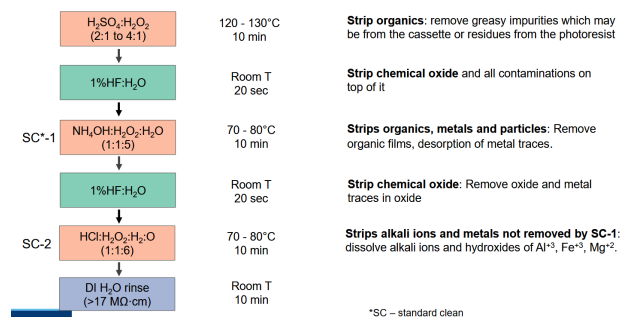


Figure 7: RCA clean sequence

After this we can apply some HMDS to remove the OH group at the top of the wafer to make the photoresist sticks better. We must also apply some anti-reflective coating to avoid the UV light to strike unwanted area.

2.1 Resist spinning

We drop a little bit of the photoresist and then spin it faster to make it a nice and even coat:

$$T = \frac{KC^{\beta}\eta^{\gamma}}{\omega^{\alpha}}$$

The thickness is $0.05 - 100\mu m$. The thickness varies due to step on the wafer (previously deposited material).

Start time (sec)	Duration (sec)	rpm	Dispense	Comments
0	0	0	—	Load wafer
0	2	1000	N ₂	Blow off wafer
2	10	500	HMDS spray	Apply primer
12	10	3000	—	Spin-dry primer
22	1	0	—	Allow wafer to stop spinning
23	3	0	Resist	Dispense resist and let spread
26	5	500	—	Spread resist
31	20	3000	—	Spin resist
51	0	0	—	Unload wafer

Figure 8: Takes around a minute to apply resist

We can also use some *spray coating* to spray and rinse through a nozzle. The step coverage is better and more uniform. There is also dip coating and laminating while they are less used in this industry.

After this we usually do some soft baking to improve resolution. If too long we may decompose the resist watch out !

- few mins at 100C
- 30 mins in a convection oven

2.2 Optic

PSM is a prime example to improve resolution. With ARC we also trap some lights in the resist create some over exposed and ripple in the sidewalls.

So we usually bake PEB to improve the sidewalls ripple ! We use some OPC to correct and get the desired shape that may looks different on the mask. Usually we print on a metal on chrome mask using an e-beam. Either we use a master mask and directly use it to print on the wafer or we first use the master mask to create a larger mask with multiple master mask print on it. Reduction by **4 to 5** times reduction from mask to wafer !!!

3 types of printing

1. Contact printing: Mask is touching the wafer

- Better resolution (less diffraction)
- Mask wear and wafer damage

2. Proximity printing: not touching this time
 - Lower resolution
 - Better mask lifetime
3. Project printing: uses a set of lenses to focus on the mask and then on the wafer
 - Expensive technique but best of both

2.3 Mask and formulas

The most important metrics are:

- **Critical Dimension:** $CD = k_1 \frac{\lambda}{NA}$
- **Numerical Aperture:** $NA = n \sin(\theta)$
- **Depth of Focus:** $DOF = k_2 \lambda / NA^2$ where $k_2 < 1$

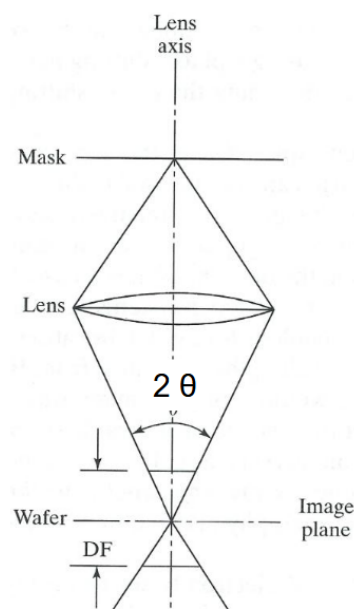


Figure 9: Lens

So clearly, we can see why having a small wavelength matters to get better precision. To improve again we can use a wider θ .

With the DOF, some part could be in focus while other not which is really problematic. We can't have a nice and uniform resolution accross multiple lengths.

2.4 Lights

Source	Wavelength (nm)	Name
Hg arc lamp	436 (blue)	g-line
	405 (violet)	h-line
	365 (UV)	i-line
	248	DUV
KrF excimer laser	248	DUV
ArF excimer laser	193	DUV
F ₂ excimer laser	157	DUV (vacuum UV)
plasma	13	EUV (long x-ray)

Figure 10: Important lights value

2.5 Double patterning

We can use two mask to get virtually smaller features by combining those two together.

- LELE: reduces k_1 , double the cost since double patterning. Overlay issue :(
- SADP: self aligning. Simply use dummy fill then add THICKKK sidewalls, etch it a lil, remove dummy and boom 2 pattern for the price of 1.
- LFLE: based on a freezing process.
- SAQP: close to SADP but pitches less than $38nm$

2.6 EUV

We can't use lenses anymore. **7 mirrors with 70% reflection per mirror!** No pellicles that are EUV transparent yet.

To tune the linewidth we can change the exposure and development time.

For etching:

- wet etching: using acetone, IPA, water rinse. 2% NaOH for positive resists
- plasma etching: O₂ plasma

3 Deposition

- Vaporize a target material onto the substrate - $0.1 - 1 \text{ nm/s}$
- 1. Thermal evaporation
 - Heat up a Tungsten filament that holds the target material
 - Heat up the target
 - Only for low melting point material and will have some parasitic from crucible
- 2. Electron beam evaporation
 - Use electron source to hit the target material
 - Cooling the crucible to avoid parasitic particle
 - Good for high melting point material
- 3. Sputtering - $1 - 10 \text{ nm/s}$

Figure 11: Slide of presentation

Method	Description	Pros ✓	Cons X
Atmospheric	Roll the wafer in with some ozone and TEOS gas	Simple and fast growth rate	Low temperature
Low Pressure	Same as APCVD but wafer rolls in their boat and under a vacuum	Large scale, better result than APCVD and EPCVD	Slow growth rate, higher temperature
Plasma Enhanced	Same principle as before but use RF to generate Plasma	High deposition rate, low temperature, good step coverage	More complex, plasma can induce damage

Figure 12: CVD

Method	Description	Pros ✓	Cons X
Electroplating	Simple, use an anode and cathode (wafer) to deposit Cu, Ni, Au, ...	Simple and fast growth rate - 0.1 – 10 $\mu\text{m}/\text{min}$	Can be a bit rough → use Damascene process
Electroless	Like Electroplating but without a DC current	No DC, conformal coating	Slow growth rate- 100 nm/min , need to replace often the bath's solution
Spin on Glasses	Spin coating to deposit <i>silicon-based dielectric film</i>	Re-use of equipment, conformal coating - 50 – 100 nm	Softer film, higher defect, shrinkage while curing, ...

Figure 13: Liquid Phase deposition

Method	Description	Pros ✓	Cons X	Accuracy
Needle measurement	Using a small needle, measure the thickness	Simple and good for PCB	Scratch the surface, low accuracy	$\frac{1}{2} \mu\text{m}$
Reflectometry	Measure vertically (normal), Top surface and substrate reflects and interfere	Compact equipment	Less accurate for thin films, only 1 layer, no polarization information	10 nm – 50 μm
Ellipsometry	Like reflectometry but on the side. Quantize amplitude ratio and phase difference	Good for thin films, multi-layer stacks and precise	More complex and expensive setup	< 100 μm

Figure 14: Measurements

4 Oxidation, wet, dry

SiO₂ is forming a *tetrahedral arrangement*. Can create some amorphous structure too. The quality is determined based on the ratio of bridging to non-bridging elements.

In elec, we use some amorphous.

Spec	Value
density	2 – 2.3 gm/cm^3
ϵ_r	3.9
reflection index n	1.5
Breakdown field	10 ⁷ V/cm
Trap/defect density at interface	10 ¹¹ cm^{-2}

4.1 Thermal oxidation

Natural growth of a oxide exposed to air and enhanced by temperature. Useful for:

- 1) implant/diffusion mask
- 2) surface passivation
- 3) isolation between transistors
- 4) key component of MOS structures
- 5) dielectric for multilevel interconnect
- 6) cleaning

This grows in both way but slightly more outwards (**54/46**). SiO₂ is 2.2 times larger than Si. Dry thermal is slower but better than wet oxidation. Dry has a higher breakdown voltage $\rightarrow 5 - 10 MV/cm$ so really good for gate oxide (since they are getting smaller and smaller)!

For $.5\mu m$ @ 1200C :

- Dry: 6 hours
- Wet: 1 hour

We can have some interface issue as the step is not exactly the same and so the development won't be equal. Can use color to determine the thickness:

Thickness (μm)	Color
0.07	Brown
0.31	Blue
0.39	Yellow
0.41	Light orange
0.47	Violet

4.2 LOCOS

To have some isolation between transistor. Reduces topography by 56%. use some Nitrite which has a higher thermal expansion than Si. Add padoxide as stress release.

- Si₃N₄: 100 – 200nm
- SiO₂: padoxide: 20 – 30nm

Wet oxi creating bird beak and then removing those oxide.

4.3 STI

Use CVD for the oxidation and CMP of the oxide avoids bird's beak and mechanical stress.

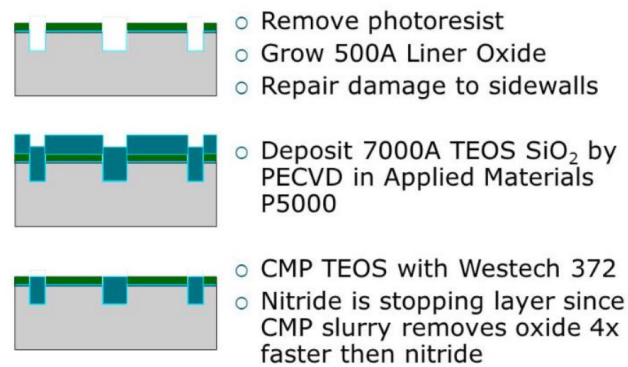


Figure 15: STI process

Better precision, the width drawn is the actual width. We also use some dry oxidation which makes it better for large drive current.

4.4 Doping

We use either:

- gas, coating or ion implementation

4.4.1 Diffusion Theory

We have a diffusion *flux* of *impurities* in one dimension. (We are always using x as the vertical direction of diffusion).

$$F = -D \frac{\partial C(x, t)}{\partial x} \quad D = D_0 \exp\left(\frac{-E_a}{kT}\right)$$

We have D that is the *diffusion coefficient* in cm^2/s . C is the dopant concentration per unit volume. We have D_0 that is the diffusion coefficient in cm^2/s at infinite temperature and E_a is the activation energy in eV .

At low concentrations of dopant in silicon ($10^{12} - 10^{16} \text{cm}^{-3}$) can be seen as constant. With this simplification, we can easily solve the equation, we also see that gold, copper, ... have high diffusion coefficient which is why we tend to avoid such metal in the clean room.

If we do not have a source or sink of the impurity, we know that the *change in impurity concentration with time must equal the local decrease of diffusion flux*:

$$\frac{\partial C}{\partial t} = -\frac{\partial F}{\partial x} = \frac{\partial}{\partial x} \left(D \frac{\partial C(x, t)}{\partial x} \right) \quad \frac{\partial C}{\partial t} = D \frac{\partial^2 C(x, t)}{\partial x^2} \text{ if } D \text{ cst}$$

There are 2 methods of diffusion:

1. Constant-surface-concentration: using vapor, we have a constant concentration of dopants at the surface.
2. Constant-total-dopant: thin layer, we have constant amount of impurity at the surface.

4.4.2 Constant-surface-concentration

$$\begin{aligned} \text{Init: } C(x, 0) &= 0 & C(0, t) &= C_s & C(\infty, t) &= 0 \\ C(x, t) &= C_s \operatorname{erfc}\left(\frac{x}{2\sqrt{Dt}}\right) & \operatorname{erfc}(z) &= 1 - \operatorname{erf}(z) & \operatorname{erf}(z) &= \frac{2}{\sqrt{\pi}} \int_0^z e^{-y^2} dy \end{aligned}$$

We have $\sqrt{Dt}$ that is called the *diffusion length* in *cm*. The total number of dopant atoms per unit area that has diffused into the semiconductor is given by:

$$Q(t) = \int_0^\infty C(x, t) dx = \frac{2}{\sqrt{\pi}} C_s \sqrt{Dt} \approx 1.13 C_s \sqrt{Dt}$$

4.4.3 Constant-total-dopant

$$\begin{aligned} C(x, 0) &= 0 & \int_0^\infty C(x, t) dx &= \phi & C(\infty, t) &= 0 \\ C(x, t) &= \frac{\phi}{\sqrt{\pi Dt}} \exp\left(-\frac{x^2}{4Dt}\right) \end{aligned}$$

Where ϕ is the *total amount of dopant* per unit area. So the surface concentration ($x = 0$) is $\phi/\sqrt{\pi Dt}$.

We usually use those two methods and we call this a *two step diffusion process*. a pre-deposition diffused layer is first formed using constant-surface-concentration condition. Then a drive-in (or redistribution) diffusion is used using constant-total-dopant condition.

For most practical cases the diffusion length for the pre-deposition stage is much smaller than the diffusion length of the drive-in diffusion. This allows to make deep junctions, e.g. for wells for CMOS.

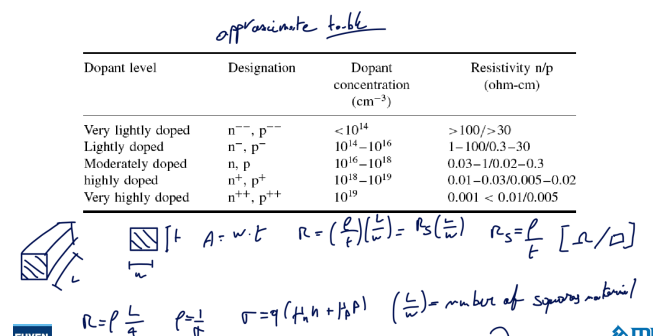


Figure 16: Resistivity vs Doping

We also need a minimum mask width to be able to absorb all those ions in the doping process.

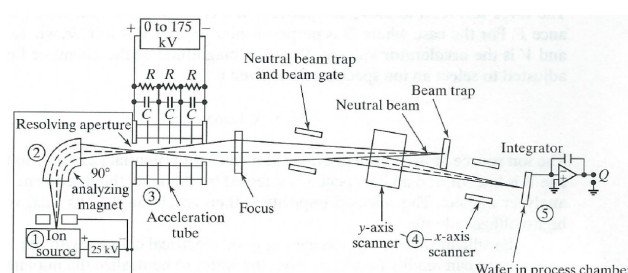


Figure 17: Ion Implanter

4.5 Ion Implantation

The source is at around $25kV$ and the high voltage accelerator goes above $> 5MeV$. There will be some undercut as the path traveled inside won't be straight and it will bounce. So the depth is a gaussian. Can have special behavior where the ion travels all the way through the lattice without bouncing.

$$N(x) = N_p \exp\left(-\frac{(x - R_p)^2}{2\Delta R_p^2}\right) \quad N_p = \frac{\phi}{\sqrt{2\pi}\Delta R_p}$$

ΔR_p being the *projected straggles* distance from the peak with concentration reduced by 40%.

Need some **rapid annealing** to repair the lattice after, will spread out the concentration sadly.

5 Etching, wet, dry, plasma, DRIE

Wet etching is cheaper **10k** while dry etching is **1M**. But wet etching is mostly isotropic meaning it goes into all direction which leads to a lot of undercut.

Wet etching is quite simple using a bath and a quick dump to stop precisely the etching and using some nozzle to stop any reaction. This limits the feature size as too close gaps can be bridged during the process $< 3\mu m$. We use **HF** for SiO_2 **WATCH OUT** it will get through your skin without any pain but starts attacking your bones after.

5.1 Anisotropic

It has a preferred lattice orientation that will be etched faster. Dry etching is a combination of temperature and vacuum.

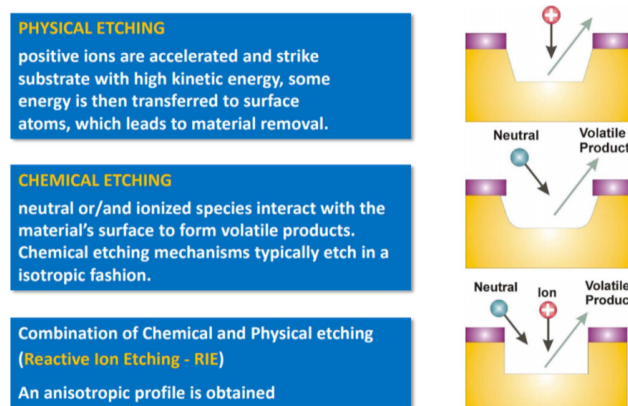


Figure 18: Main type of Dry Etching

5.1.1 Plasma Etching

Same amount of positive and negative charges but a different number of unionized molecules. Large electric field applied to a gas up to the **breakdown of the gas**.

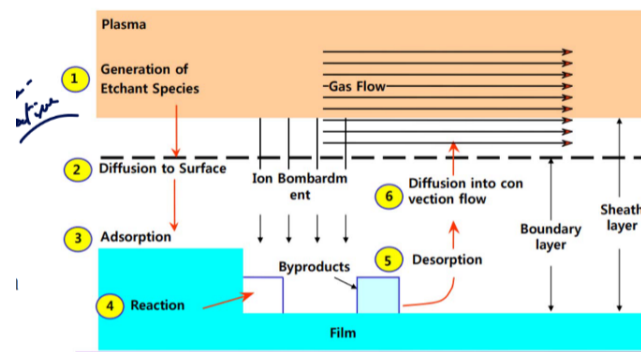


Figure 19: 6 steps of Plasma Etching

Needs **high kinetic energy and chemical reactions**. There are about 10^{15} cm^{-3} neutral species and $10^8 - 10^{12} \text{ cm}^{-3}$. Ions go on the surface and strike it to remove some molecules.

TABLE 2.3 Etching Pressure Ranges	
Etching Mode	Pressure (Torr)
Ion Milling	$10^{-4} - 10^{-3}$
Reactive Ion Etching/Ion Milling	$10^{-3} - 10^{-1}$
Plasma Etching	$10^{-1} - 5$

Figure 20: Pressure: PE = Isotropic Chemical Etching

RIE will create a DC bias to accelerate the ions and add some extra kinetic energy towards the substrate. This is a combination of **chemical and sputter etching**. The chemical is purely isotropic and with little electrical damage while the sputtering is anisotropic and slower (this is ion milling).

	Plasma Etching		Reactive Etching		Physical Etching	
	Barrel Reactor	Planar Reactor	Ion	Ion Beam	Sputtering	Ion Beam Milling
Substrate Location	Surrounded by plasma	On grounded electrode in Plasma	On powered electrode in plasma	In beam, remote from plasma	On powered electrode in plasma	In beam, remote from plasma
Pressure (torr)	$10^{-1} \sim 1$	$10^{-1} \sim 1$	$10^{-2} \sim 10^{-1}$	$10^{-4} \sim 10^{-3}$	$10^{-4} \sim 10^{-3}$	10^{-4}
Ion energy (eV)	0	$1 \sim 100$	$100 \sim 1000$	$100 \sim 1000$	$100 \sim 1000$	$100 \sim 1000$
Active Species	Atoms, Radicals	Atoms, radicals, reactive ions	Radicals, reactive ions	Reactive ions	Ar^+ ions	Ar^+ ions
Products	Volatile	Volatile	Volatile	Volatile	Nonvolatile	Nonvolatile
Mechanism	Chemical	Chemical/Chemical-Physical	Chemical/Physical	Chemical/Physical	Physical	Physical
Etch Profile	Isotropic	Isotropic/Anisotropic	Isotropic/Anisotropic	Anisotropic	Anisotropic	Anisotropic
Selectivity	$30 : 1 - 10 : 1$	$10 : 1 - 5 : 1$	$30 : 1 - 5 : 1$	$10 : 1 - 3 : 1$	$1 : 1$	$1 : 1$
Resist Compatibility	Excellent	Excellent	Good	Good	Poor	Poor
Device Damage	Little	Little	Some possible	Some possible	Very possible	Very possible
Etch Rate ($\mu\text{m}/\text{min}$)	$0.1 \sim 0.5$	$0.1 \sim 0.5$	$0.05 \sim 0.1$	$0.05 \sim 0.1$	$0.02 \sim 0.05$	$0.02 \sim 0.05$
Resolution ($\mu\text{m}/\text{min}$)	3	2	$1 \sim 2$	$1 \sim 2$	$0.5 \sim 1$	$0.5 \sim 1$

Ref: J. D. Lee, "Silicon Integrated Circuit microfabrication technology," 2nd edition

Figure 21: RIE possibilities

RIE is a sophisticated and complex process where changing a single parameters could impact the total chain of the reaction leading to issues.

5.1.2 DRIE

With this method we can obtain an **aspect ratio of 20-50** and the etch rate is around $> 10 \mu\text{m}/\text{min}$.

6 Interconnect

Aluminium has a fairly low melting point at around 577°C . The interconnect and contact Al is done during the same step. But Al has the tendency to fall into the crevices left by the Si that diffuses inside the Al. So add 1% of Si in Al or use barrier material like TiW.

We want to further reduce the contact resistance so we must employ some alloy mixed with Si. We are using the fact that Si diffuses into the metal so then we can remove the non-reacted metal and boom we got some nice silicide.

6.1 Electromigration

If the track is not made thick enough, the electrons can take with them some bits of the material and move them further. Creating gaps and increasing the resistance. One solution is to add 4% copper to the mix making the interconnect Al-Cu-Si, 95-4-1.

6.2 Interconnect

For stack up layer we may be misaligned so we must make the via wider each time as we go up or add some offset.

After making an interconnect we tend to planarize to have a fresh and flat surface to work on. So we will use some CMP process to make everything smooth. Damascene process is based on this idea.

We may need to add some dummy fill oxide to ensure a global planarity after the CMP. Or another technique is using some *reverse tone litho* and already pre-etch oxides that are on top of other stuff and are too wide.

But at some point, Al is not fast enough, too much delay for a small feature size. We had to go for Copper even though it has a high diffusivity. Issue with adhesion, ...

So we have to add a **seed layer** to avoid this diffusion. This seed layer is a thin conductive layer and then we can put the big chunk of copper.

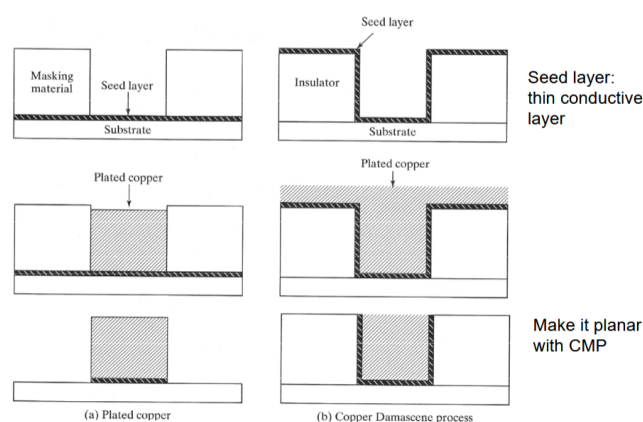


Figure 22: Electroplating

Dual damascene is used when creating those wider form of via. Good for vias and interconnect traces.

It is often hard to etch metal so we can use lift off where we first apply the photoresist and then the metal. Finally we simply need to etch the mask and everything should come off. Here we want a **bad step coverage**.

7 Ic Processing Overview

up to slide 47

The biggest issue currently is the non-aligning gate. With the Aluminium gate we **can't use some ion implantation** since it is happening above the melting point of the gate. So the process is trickier and same for etching, only low temp process → mostly isotropic and wet. Good for $> 5\mu m$.

We ditched it to go for some nice polygate, can use fancier process and they are self aligning. Good for $< 10\mu m$.

7.1 Al vs poly

Here, we first need to dope the substrate before depositing the gate as we usually go into melting point order. From high to low.

For poly, we first deposit the gate and then dope the wafer. This will make sure that drain and source are already aligned !

Here, we still do some LOCOS operation to isolate our PMOS and NMOS. And then once the base is laid down we can start adding our poly-gate. We apply all the tips and informations we have seen in the course to build a good transistor.

- | | |
|------------------------------------|--------------------------------------|
| 1. Starting wafer | 20. Sacrificial oxide etch |
| 2. Initial oxidation | 21. Gate oxidation |
| 3. N-well photolithography | 22. Poly-Si deposition |
| 4. Oxide and photoresist etch | 23. Gate definition |
| 5. N-well implant oxidation | 24. Plasma polysilicon etch |
| 6. N-well implant | 25. N+ S/D photolithography |
| 7. N-well drive-in | 26. N+ S/D implant |
| 8. Oxide etch | 27. Photoresist removal |
| 9. Pad oxidation | 28. N+ anneal |
| 10. Nitride deposition | 29. P+ S/D photolithography |
| 11. Active photolithography | 30. P+ S/D implant |
| 12. Plasma nitride etch | 31. Photoresist removal |
| 13. Field implant photolithography | 32. PSG deposition and densification |
| 14. Field implant | 33. Contact photolithography |
| 15. Photoresist removal | 34. Contact etch |
| 16. Field (LOCOS) oxidation | 35. Metallization |
| 17. Nitride and pad oxide etch | 36. Metal photolithography |
| 18. Sacrificial oxidation | 37. Metal etch |
| 19. Threshold implant | 38. Truncate/reflect Nmos |

Figure 23: Process of such transistor

7.2 Latch-up issue

For this, it is important to use some good EPI and STI to avoid any cross connection resulting in a possible *thyristor*.

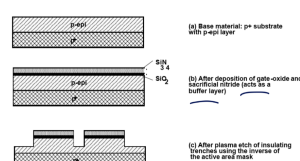
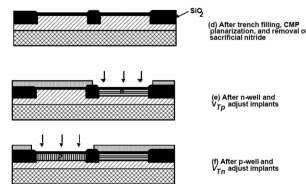
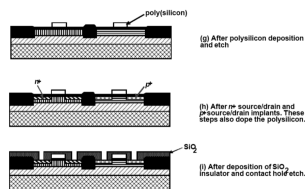
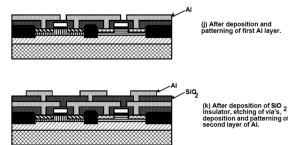


Figure 24: Advanced CMOS process 1

**Figure 25:** Advanced CMOS process 2**Figure 26:** Advanced CMOS process 3**Figure 27:** Advanced CMOS process 4

7.3 Hot carrier effect

It happens when a strong EM field is applied and when an electron has enough *kinetic energy* to break lattice bonds and hence create another electron-hole pair. They have an energy over kT . This will increase the current in the channel but the holes will be absorbed by the substrate creating a little current that can be monitored. This creates a sort of BJT.

This is why we often add some spacer to help with this effect.

7.4 Contacting issues

For this we again use some salicides, by blanket depositing, a bit of the metal will react and simply diffuse. The other non-reacted can be targeted and removed. Contact is now made easy. We usually do some **annealing** to improve the resistivity of the contact.

7.4.1 Gate last

Here we first add a dummy gate and at the end attach contact of the gate using some metal, replacement of poly-silicon.

8 Packaging

Not seen this year.

9 Extra table – Used Gemini / Notebook LM

Here is a summary of the growth and etching rates, presented in a table for clarity. This response incorporates information from both the newly provided sources and our conversation history, with clear indications where information from the previous summary is not directly supported by the current set of source documents.

9.0.1 Growth and Etching Rates in Microfabrication Processes

Table 4: about Deposition

Process / Material	Rate / Parameter
Photoresist Coating	0.05 μm to 100 μm.
PVD Evaporation	0.1-1 nm/s
PVD Sputtering	1-10 nm/s
CVD Polysilicon from Silane (SiH_4)	Approximately 10 nm/min at 630C and 400 mTorr
Dry Oxidation	About 0.5 μm in approximately 6 hours at 1200C
Wet Oxidation	About 0.5 μm in approximately 1 hour at 1200C
Electroplating	0.1 – 10 $\mu\text{m}/\text{min}$
Electroless plating	0.1 $\mu\text{m}/\text{min}$

Table 5: about etching

Process / Material	Rate / Parameter
Wet Etching (HF 49% for SiO_2 / PSG)	> 1 $\mu\text{m}/\text{min}$
Wet Etching (Dilute HF 1% for native oxide)	Approximately 10 nm/min
Wet Etching (Silicon with HNO_3 : HF : CH_3COOH)	> 10 $\mu\text{m}/\text{min}$ is possible
RIE	Can be between 0.1 – 0.5 $\mu\text{m}/\text{min}$ depending on the combination
Deep Reactive Ion Etching (DRIE)	> 10 $\mu\text{m}/\text{min}$

Table 6: Concentrations and Quantitative Measures in Microfabrication Processes

Category	Specific Parameter	Value / Range	Unit	Notes
Photoresist (Layer Characteristics)	Uniform Thickness	5 nm	-	Refers to the uniformity of the thickness of the photoresist layer formed by centrifugal force.
Photoresist (Layer Characteristics)	Total Thickness Range	0.05 μm to 100 μm	-	The range of thicknesses that can be achieved for a photoresist layer.
Plasma (Ionization)	Degree of Ionization	10^{-2} to 10^{-6}	-	This is the ratio of ionized particles to total neutral atoms/molecules in the “weak” plasma used for IC microfabrication.
Dopant Concentration (General)	Impurities of SCS (Lower Limit)	$1E13$	cm^{-3}	
Dopant Concentration (Thermal Diffusion)	Intrinsic Carrier Concentration (at 1000C)	5×10^{18}	cm^{-3}	Basic diffusion theory is valid for doping concentrations less than this intrinsic carrier concentration.
Dopant Concentration (Thermal Diffusion)	Upper Limit (Solid Solubility)	$\sim 1E14$ to $\sim 1E21$	cm^{-3}	This range represents the maximum solubility of various dopants in silicon, varying with the specific element (e.g., P, As, B, Sb, Al, Ga, Cu, In, Au, Fe, Zn) and temperature (700-1100C), as observed from the provided graph.
Dopant Concentration (Typical Doping)	MOS Transistor Sources / Drains and Bipolar Transistor Emitters	1×10^{20}	cm^{-3}	Typical doping concentration for these specific regions in integrated circuits.
Dopant Concentration (UV Photodiode Example)	Range Across Different Regions	1×10^{15} to 1×10^{20}	cm^{-3}	Example doping concentrations found in different regions of a UV photodiode, such as p+ anode, n+ cathode, p-base, n-collector, and n+ buried layer.

Category	Specific Parameter	Value / Range	Unit	Notes
Dopant Concentration (Ion Implantation)	CMOS Well	$10^{15} - 10^{17}$	atoms / cm^3	The typical concentration range for doping in a CMOS well.
Dopant Concentration (Ion Implantation)	Source / Channel / Drain	$10^{17} - 10^{20}$	atoms / cm^3	The typical concentration range for doping in source, channel, and drain regions of a device.
Dopant Concentration (Ion Implantation)	Phosphorous Implantation Peak (example for 50, 100, and 150 keV)	Over 10^{20}	cm^{-3}	Derived from the graph showing impurity concentration versus depth for phosphorous implantation at various energies; specific values can be read, e.g., approximately $2 \times 10^{20} \text{ cm}^{-3}$ for 50 keV.
Ion Implantation (Dose)	Ion Dose (Area Under Gaussian)	1×10^{15}	$/\text{cm}^2$	This is the total amount of dopant per unit area for the specific phosphorous implantation example given.

10 License

This work is licensed under a Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License (CC BY-NC-SA 4.0) for KU Leuven students.

You are free to:

- **Share** — copy and redistribute the material in any medium or format with people inside of KU Leuven or being granted access to the source material.
- **Adapt** — remix, transform, and build upon the material if you are a KU Leuven student.

Under the following terms:

- **Attribution** — You must give appropriate credit, provide a link to the license, and indicate if changes were made. You may do so in any reasonable manner, but not in any way that suggests the licensor endorses you or your use.
- **NonCommercial** — You may not use the material for commercial purposes.
- **ShareAlike** — If you remix, transform, or build upon the material, you must distribute your contributions under the same license as the original.

For the full legal text of the license, please visit: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>

10.1 Modification

To contribute to this work or any other one from this project please find more information at the Github repository.

10.2 Take down

If you are a professor or representing any official party and wish to take down this work, you can submit a takedown request at this url: https://github.com/Tfloop/ESATSummary/issues/new?template=takedown_notice.yml

Some Rights Reserved 2025 Authors of the Summary, Professors of the Course and possible book's authors. Some Rights Reserved.