
MODEL 463 (except 463.202) as of model year 2013 /model refinement package 2012

- 1 Roof frame paneling
- 2 Bolts
- 3 >Upper edge guard

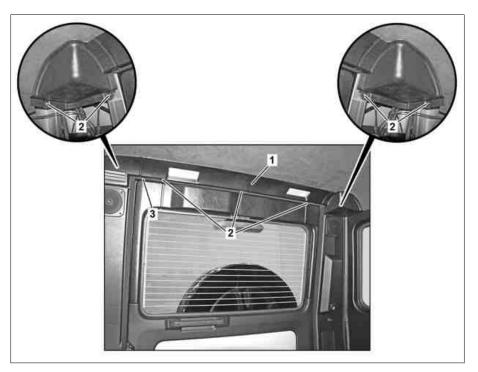

P68.30-3606-06

XX	Remove/install		
1	Remove rear dome lamp		AR82.20-P-0113GW
2	Remove upper edge guard (3)		
3	Remove paneling on left and right rear pillar		AR68.30-P-4505GW
4	Remove left and right side wall lining		AR68.30-P-1450GW
5	Remove bolts (2)		
6	Remove roof frame paneling (1)	© Carefully remove roof frame paneling (1) toward rear. Otherwise the plastic guides can break off.	
7	Install in the reverse order		