

MODEL 463.### ## as of 104283 Station wagon

- Rubber grommet 1 2 3
- Screws
- Mounting plate
- Gas pressure strut

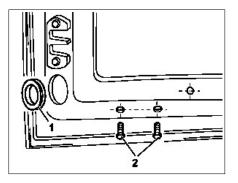

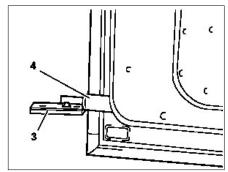

P72.20-0306-01

P72.20-0307-01

XX	Removal, installation		
1	Remove door liner on rear door		AR72.20-P-6615G
2	Remove rubber grommet (1)		
3	Unscrew screws (2) for mounting plate (3)	i Installation: Press gas pressure strut (4) together until the holes in the rear door coincide with the holes in the mounting plate (3)	
4	Press ball socket off of ball head on door arrester.		
5	Remove gas pressure strut (4) through hole at side of rear door together with mounting plate (3)		
6	Remove mounting plate (3) from gas pressure strut		
7	Reinstall in opposite order		