
Ge 4/4 II

Rhätische Bahn

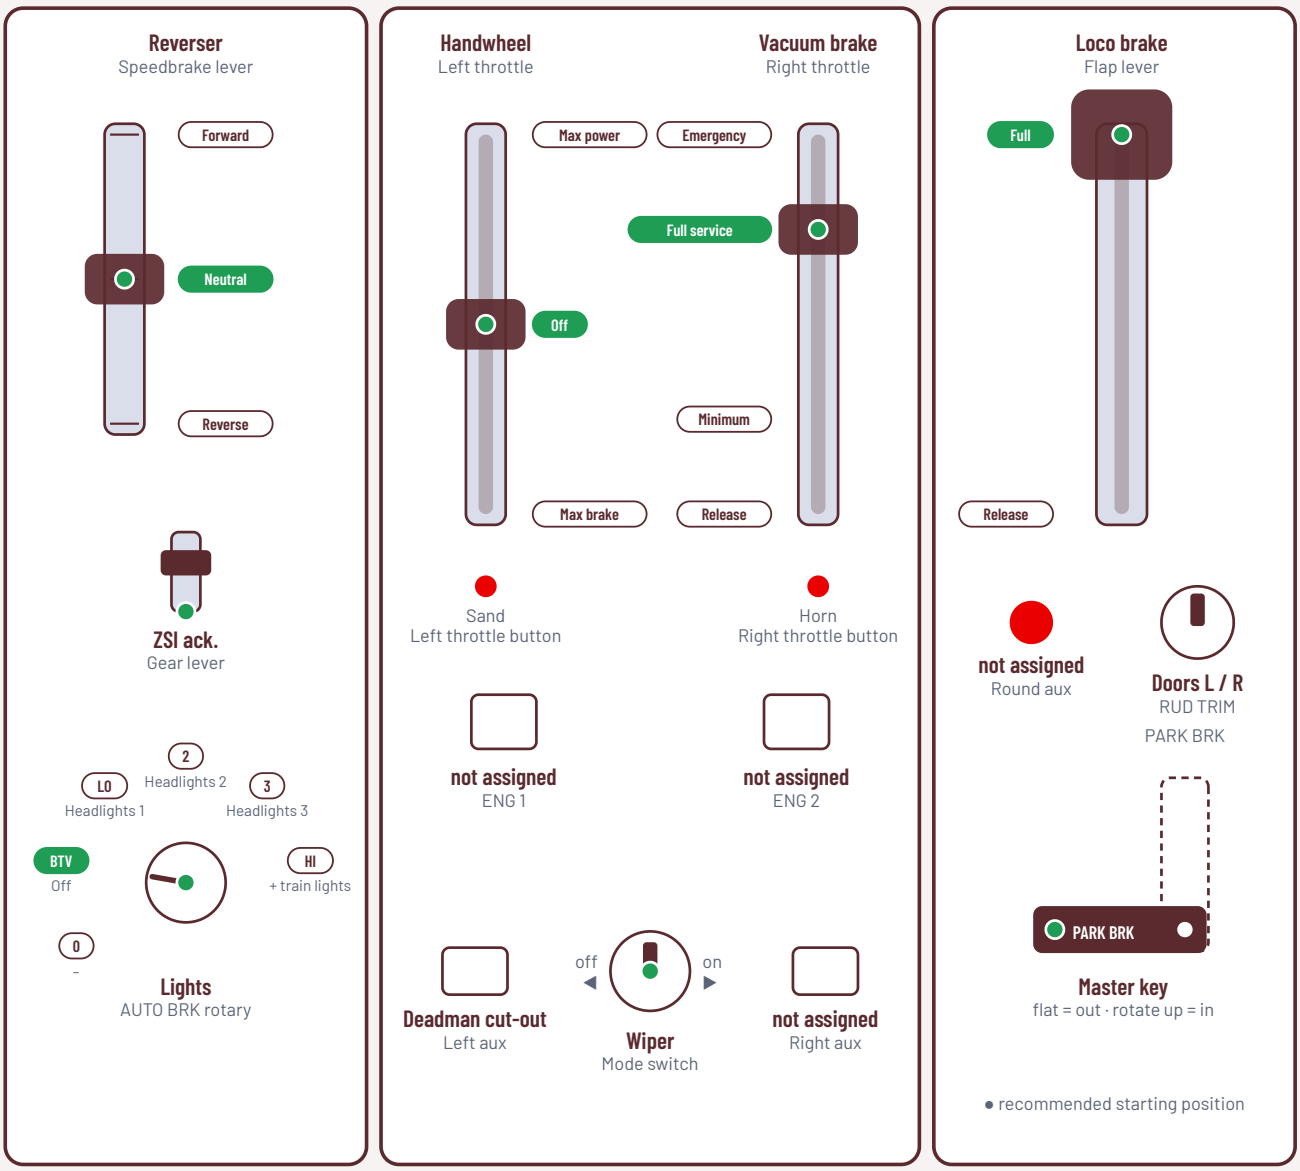

Cab setup

- Master key in (PARK BRK up); pantograph, main switch and compressor in the cab
- Reverser from Neutral to Forward
- Deadman cut-out light out (left aux)
- Lights to Headlights 3
- Loco brake at Full, vacuum brake at Full service (parked); handwheel at Off

Cleared to depart

- Close doors (RUD TRIM), check the signal
- Vacuum brake to Release, then Minimum; loco brake to Release
- Handwheel from Off into the power zone, notch by notch
- Acknowledge the ZSI with the gear lever
- Brake: handwheel back through Off into the electric brake zone, vacuum brake into the service zone; Emergency at the far end



© TheJAG