


BR 412 ICE 4

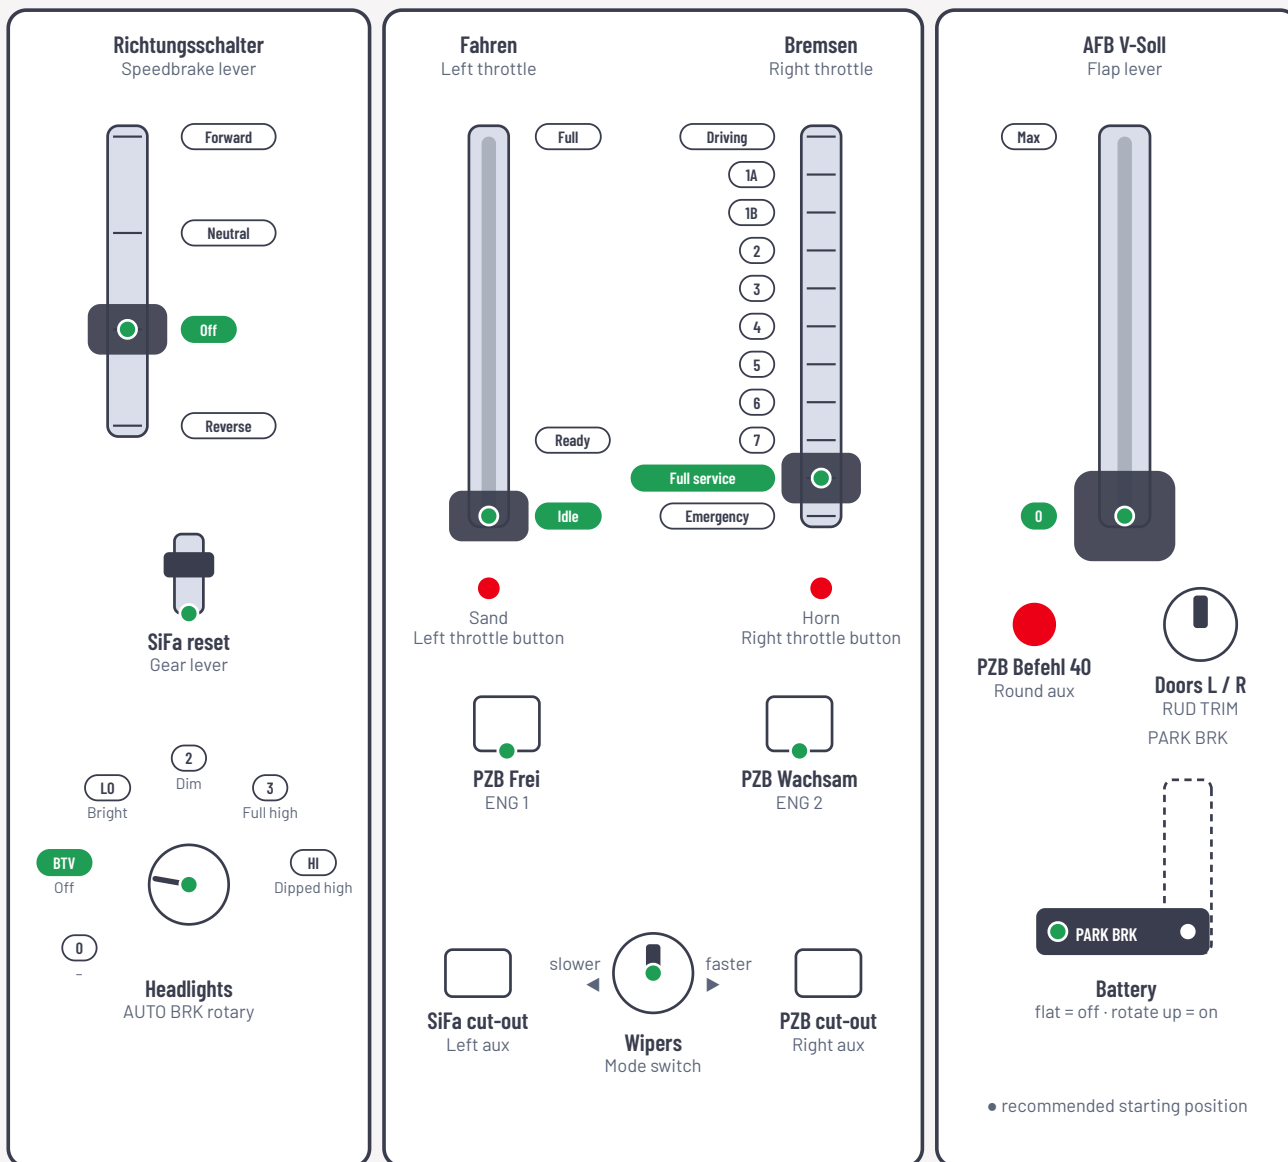

Cab setup

- Battery on (PARK BRK)
- Richtungsschalter to Off, raise the pantograph and close the Hauptschalter in the cab
- SiFa and PZB cut-outs off (aux squares unlit)
- Headlights to Bright
- AFB V-Soll on the flap lever to the wanted speed
- Open doors (RUD TRIM)

Cleared to depart

- Close doors, check the signal, PZB and LZB
- Richtungsschalter to Forward
- Bremsen to Driving
- Fahren towards Full; the AFB holds the set speed
- Acknowledge SiFa with the gear lever, PZB with the ENG switches
- Brake: Bremsen in steps towards Full service

