
Class 323

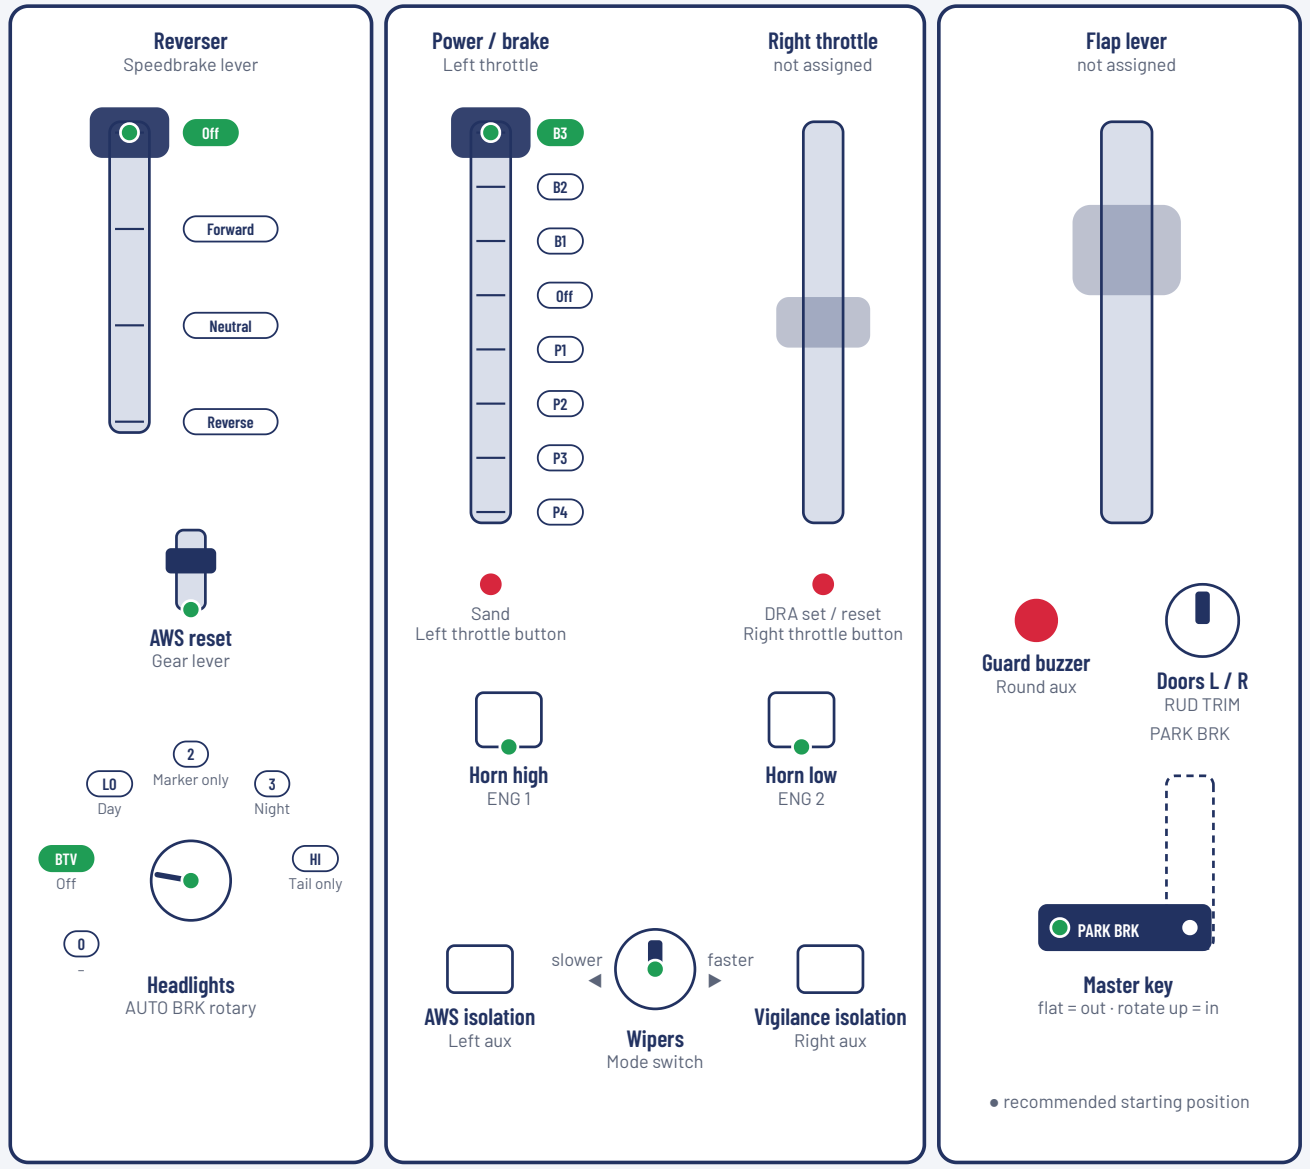

Cab setup

- Master key in (PARK BRK)
- Pantograph up (in the cab), wait for line volts
- Reverser to Neutral
- Check AWS and vigilance isolation lights are out
- Headlights to Day
- Open doors (RUD TRIM)

Cleared to depart

- Close doors, wait for the guard buzzer
- Check the signal, DRA off (right throttle button)
- Reverser to Forward
- Handle from B3 through Off to P1
- Notch up to P4 as speed rises
- Acknowledge AWS with the gear lever





Drawing: Chiltern006, Wikimedia Commons, CC BY-SA 4.0

© TheJAG