
QA PENDING · DB CARGO · DOVETAIL GAMES · TCA QUADRANT AIRBUS

BR 185

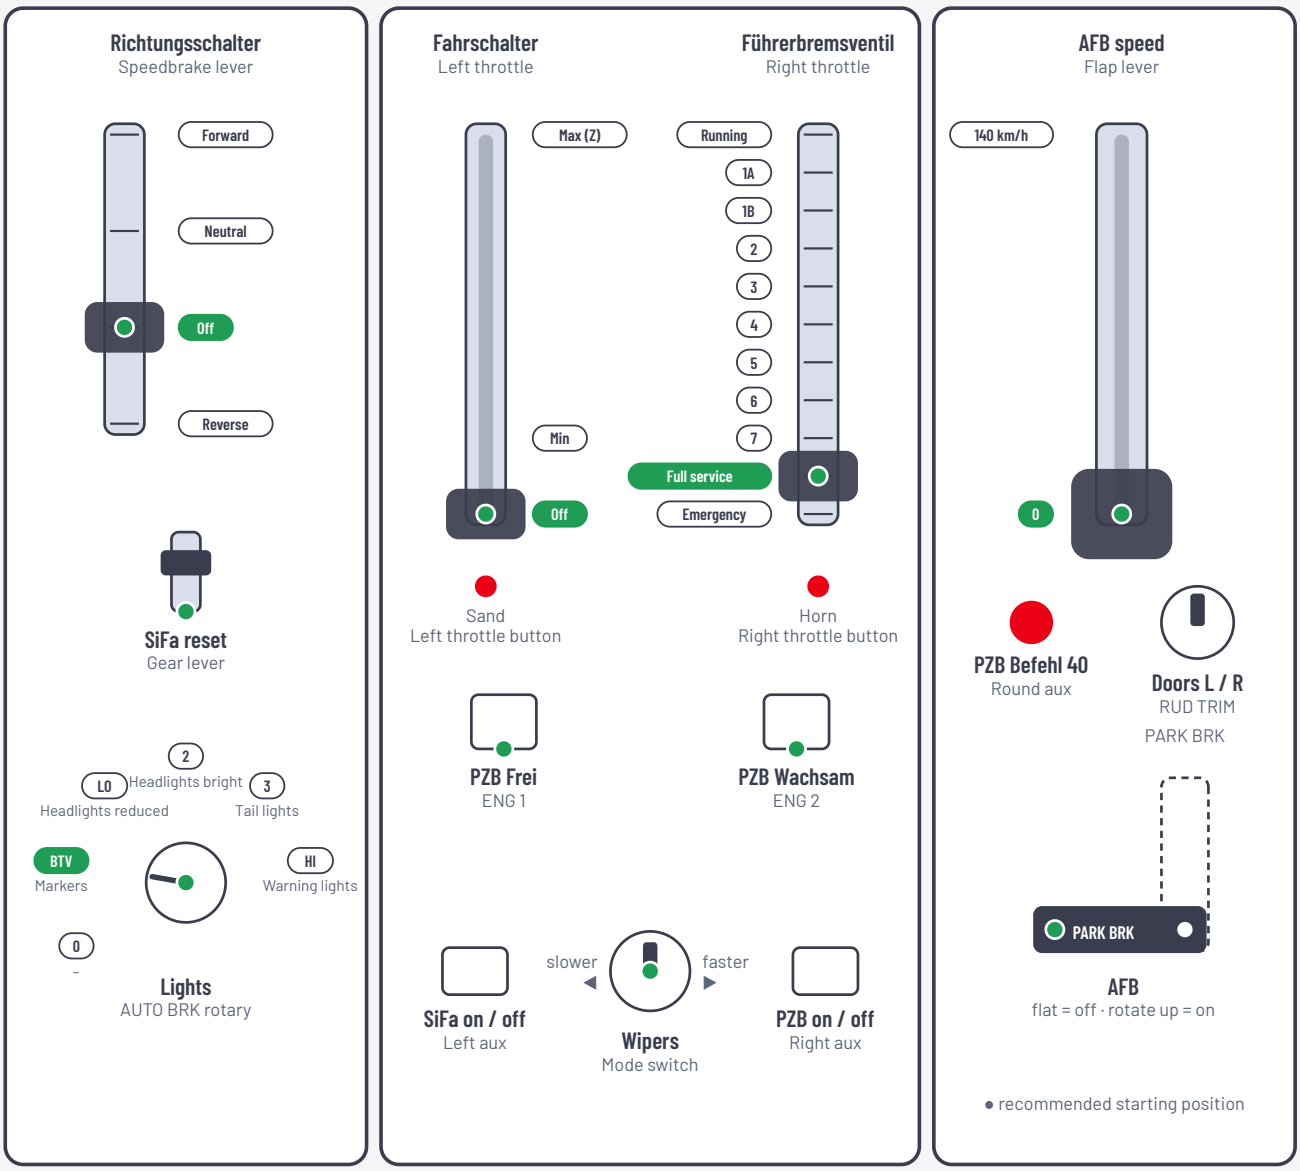


Cab setup

- Battery on in the cab, parking brake released
- Richtungsschalter from Off (the key position) to Neutral
- Raise the pantograph and close the Hauptschalter in the cab
- SiFa and PZB on (aux squares), PZB mode set
- Lights to Headlights
- AFB on (PARK BRK up) if you drive with the speed setter

Cleared to depart

- Check the signal and PZB
- Richtungsschalter to Forward
- Führerbremsventil to Running, wait for the brakes to release
- Fahrschalter towards Z, or set the AFB speed on the flap lever
- Acknowledge SiFa with the gear lever, PZB with the ENG switches
- Brake: Führerbremsventil towards SB in steps





Zeichnung: Deutsche Bahn AG, Einsatzmerkblatt BR 145 / 146 / 185 (11/2008)

store.steampowered.com/app/4678850 · Profile: TSW | BR 185 | DTG | TheJAG

© TheJAG