
Class 484

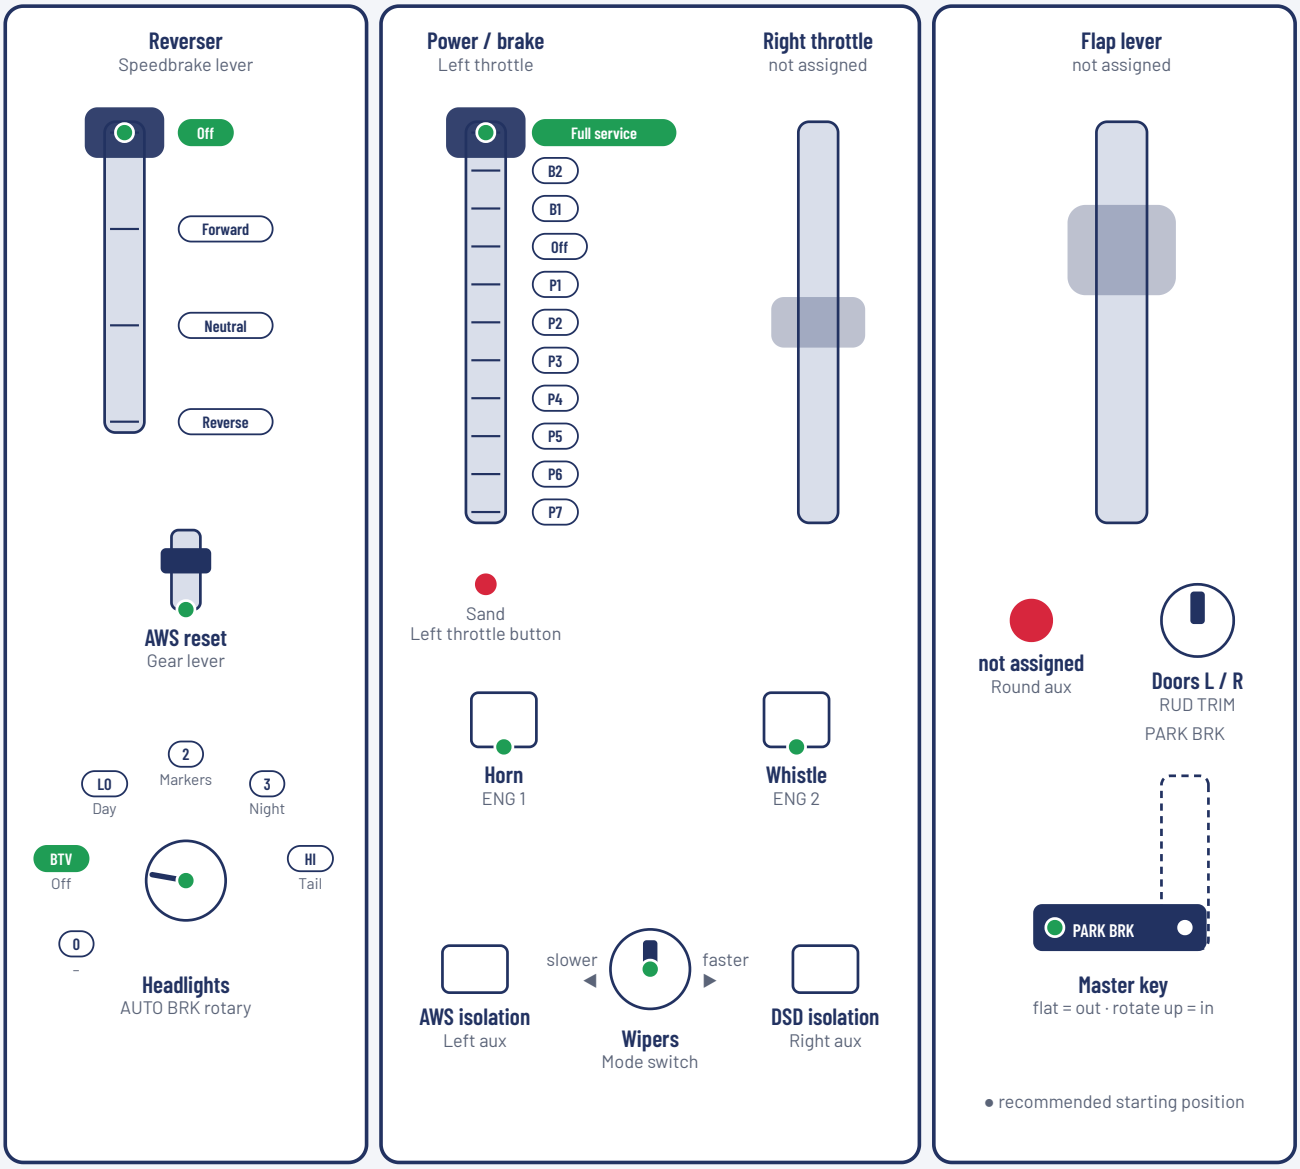

Cab setup

- Master key in (PARK BRK); the EP key and the circuit breaker (MLCB) in the cab
- Reverser from Off to Neutral
- Check the AWS and DSD isolation lights are out; DRA in the cab
- Headlights to Day
- Open doors (RUD TRIM)

Cleared to depart

- Close doors and check the signal
- Reverser to Forward
- Handle from Full service through Off to P1
- Notch up to P7 as speed rises
- Acknowledge AWS with the gear lever
- Brake: back through Off to B1..Full service





Drawing: PennCentral9, Wikimedia Commons, CC BY-SA 4.0

© TheJAG