JIANT FM · CONTROLS

every button, knob, layer, combo and page

firmware V10 · M-VAVE FM-1 · juanjiant-bit.github.io/JIANT

NAVIGATION · SIX RULES

1 · SELECT WALKS THE PAGES

Every page of the section in one chain, a page a detent, stopping at both ends. No levels, no zoom.

FX: SENDS → DIST → AUTO PAN → BUSES → DLY → DLY 2 → … → PUNCH

2 · THE BUTTON: IN, OR ON

From another section: the page you were last on there. Already inside: the first page of the next group (round).

FX › DLY 2: FX → REVERB · EDIT › FILTER: EDIT → FOCUS

3 · PRESETS LOADS PRESETS

Always: the track's sounds; SEQ the patterns (PHRASES, OCT+ loads); GEN the genre. Never a page, a track or a module.

FX › DLY: PRESETS ▶ the next sound

4 · KNOB 1 PICKS

The step, the bar, the slot, the stage, the operator, the kit's sound, the row. The track: always ALGORITHM.

SEQ › STEP: K1 = all 64 steps · SEQ › BAR: K1 = the bar

5 · HOLD = THE LAYER

Held + SELECT: HOME GEN · EDIT SEQ LFO FX their dice · GLO the tempo · ENV SCL ARP SAVE their chain.

SEQ + G5 CLR STEP · SAVE + C5 NAME

6 · THE SCREEN SAYS WHERE

Tabs on top: the section's groups, the one shown lit, a dot a page. Footer: SECTION · GROUP · page and n/N.

FX · DELAY · DLY 2 6/16

THE PANEL

KNOBS AND TRANSPORT

MASTER	Master volume.
SELECT	**Walks the section's pages**, a page a detent, stopping at the ends (the MENU: every row). Held with a button: HOME **GEN**; EDIT · SEQ · LFO · FX their **dice** (OK keeps, CANCEL back); GLO the tempo; ENV · SCL · ARP · SAVE their chain.
PRESETS	**Always presets**: the sounds (factory and user) on every page; SEQ: the patterns (PHRASES); GEN: the genre. Nothing in the MENU or with a button held, except **EDIT** (V10.7): the first sound of the next / previous engine.
ALGORITHM	Selects the track from any page: T1–T4, or T1–T6 with TRACKS 6. MENU: the tabs. A layer held: MAP · KNOBS · STATE.
KNOB 1–4	The four columns on screen; KNOB 1 picks (step, bar, slot, row). Fast sweeps the whole range, slow fine-tunes. With a layer held: the layer's.
OCT– · OCT+	The keyboard's octave (both together: back to 0); on DRUM the kit stays put: +1/+2/+3 ratchet x2/x4/x8, –1 SHORT, –2 GHOST, –3 FLAM, each sound its own (grid KNOB 3 HIT). On action pages and dialogs: back / confirm.
PLAY	Start / stop. GLO + PLAY: restart from the top.
REC	Arms live recording on the selected track (notes and knob moves, overdub).
HOME	Tap: HOME (on HOME the next group: ECO · BEING · GEN). **Hold: the MENU.**
KEYS	27 keys play the selected track in its scale; with a layer held they become that layer's.

SECTIONS

BUTTON	GROUPS (A TAP: THE NEXT) · PAGES (SELECT)	HOLD
HOME	ECO: ECO · MACROS | BEING: BEING · ROUTES | GEN: GEN 1 · GEN 2 · GEN 3	MENU
EDIT	SOUND: EDIT 1 · EDIT 2 | TONE: FILTER · MORPH · RETRIG · ROTOR · VOICE · VOICE 2 · WORDS | FOCUS (FM6: … OPERATOR: OPERATOR · OP ENV · OPERATOR 2; DRUM: KIT: KIT · KIT 2 · KIT 3 | SOUND: SOUND 1–4 | LEVELS 1–2 | TONE: X-MOD · FILTER · STEREO · VOICE)	INIT · RECALL · sound mutes
SEQ	STEP | LENGTH: LENGTH · TRACK | EUCLID: EUCLID · MODES · MUTATE | PLAYHEADS | STRETCH | COMP: COMP · COMP 2 | AUTO: AUTOMATION · AUTO LIST	SEQ TOOLS
FX	TRACK: SENDS · DIST · AUTO PAN | BUSES | DELAY: DLY 1–3 | REVERB 1–2 | CHORUS | SLICER: SLICER · SL BUS 1–2 · SL PITCH | PUNCH | MASTER · TAPE · EQ	PUNCH-IN FX
GLO	LIVE: MANO · RIELES | MIX: MIXER · SENDS | GLOBAL | SYSTEM | COMPS (at power-on GLO opens MIXER)	MUTE · SOLO · LEVEL · TAP
ENV	TRACKS: TRACKS · TRACKS DEST | ENV: ENV · ENV DEST | STAGE	—
LFO	MOD | LFO: LFO · LFO DEST | MSEQ: MSEQ · MSEQ 2	MACROS M1–M4 (stay latched)
SCL	KEY | CHORD	ROOT by key
ARP	ARP: ARP · ARP 2	—
SAVE	SONG: TIMELINE · SECTIONS | PROJECT: PROJECTS · ARRANGE · TOOLS | SOUND: USER · PRESETS (from outside, USER / SECTIONS come armed)	SONG layer · C5 NAME
REC	(transport)	CLEAR · CLICK · held alone: UNDO

BUTTON from elsewhere: the page last shown; inside: the next group. **SELECT** walks every page of the section.

LAYERS · HOLD A BUTTON

FX · PUNCH-IN EFFECTS

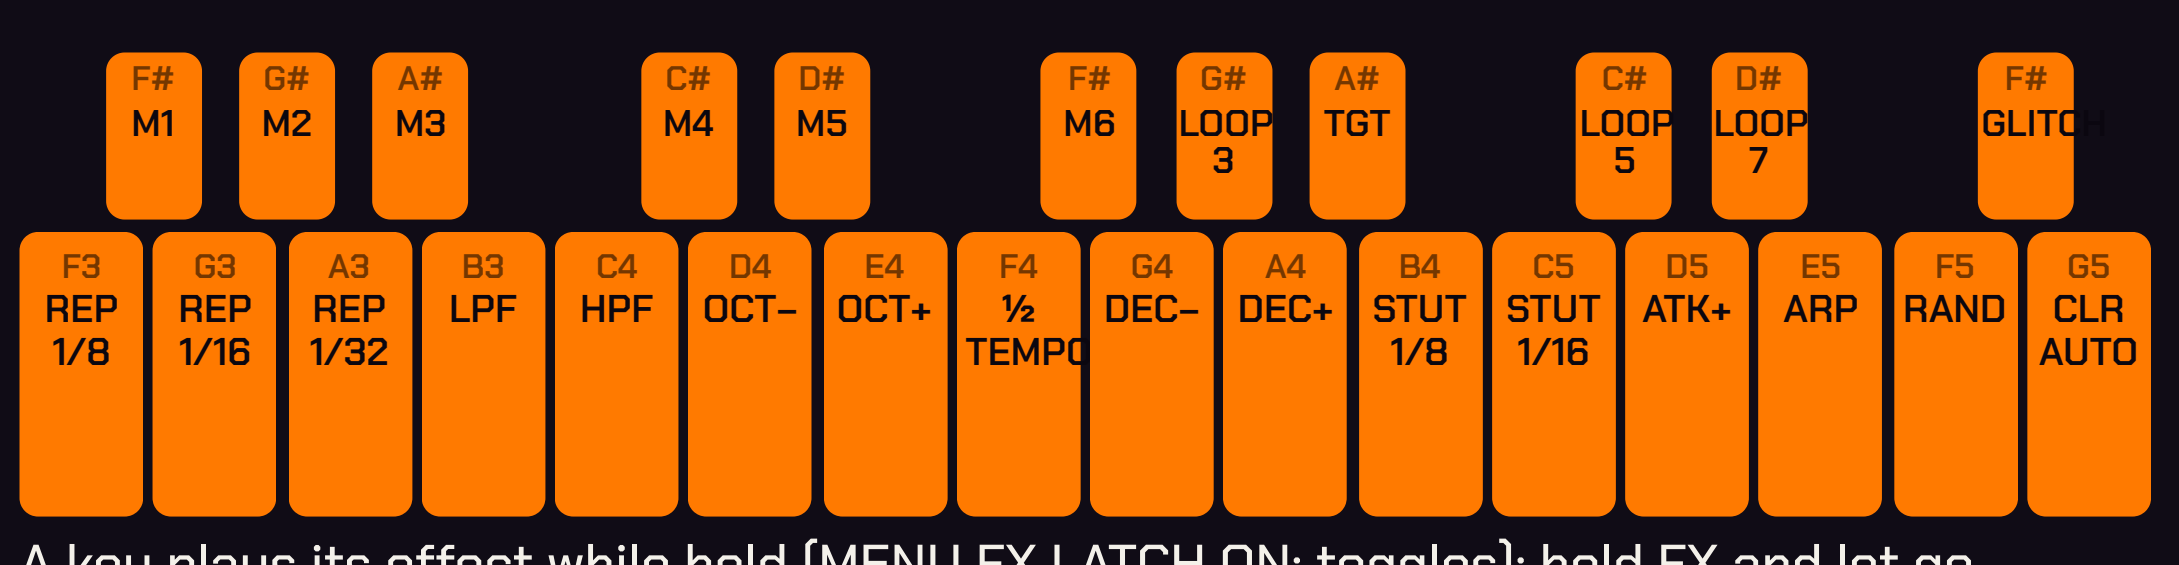

A key plays its effect while held (MENU FX LATCH ON: toggles); hold FX and let go untouched: **LOCKED** open, FX again unlocks; OCT- all off. In on the next 1/16. Black 1–6 mute T1–T6, A#4 picks which tracks the MIDI ones touch (all · synths · drums). G#4 C#5 D#5 loop the last 3 / 5 / 7 steps; F#5 **GLITCH** skips on the 1/16 grid, its cycle locked to the bar (par9). With REC armed and playing they record into the section's lane; G5 clears it.

KNOBS

FILTER	CRUSH	THROW	DEPTH

GLO · MIX

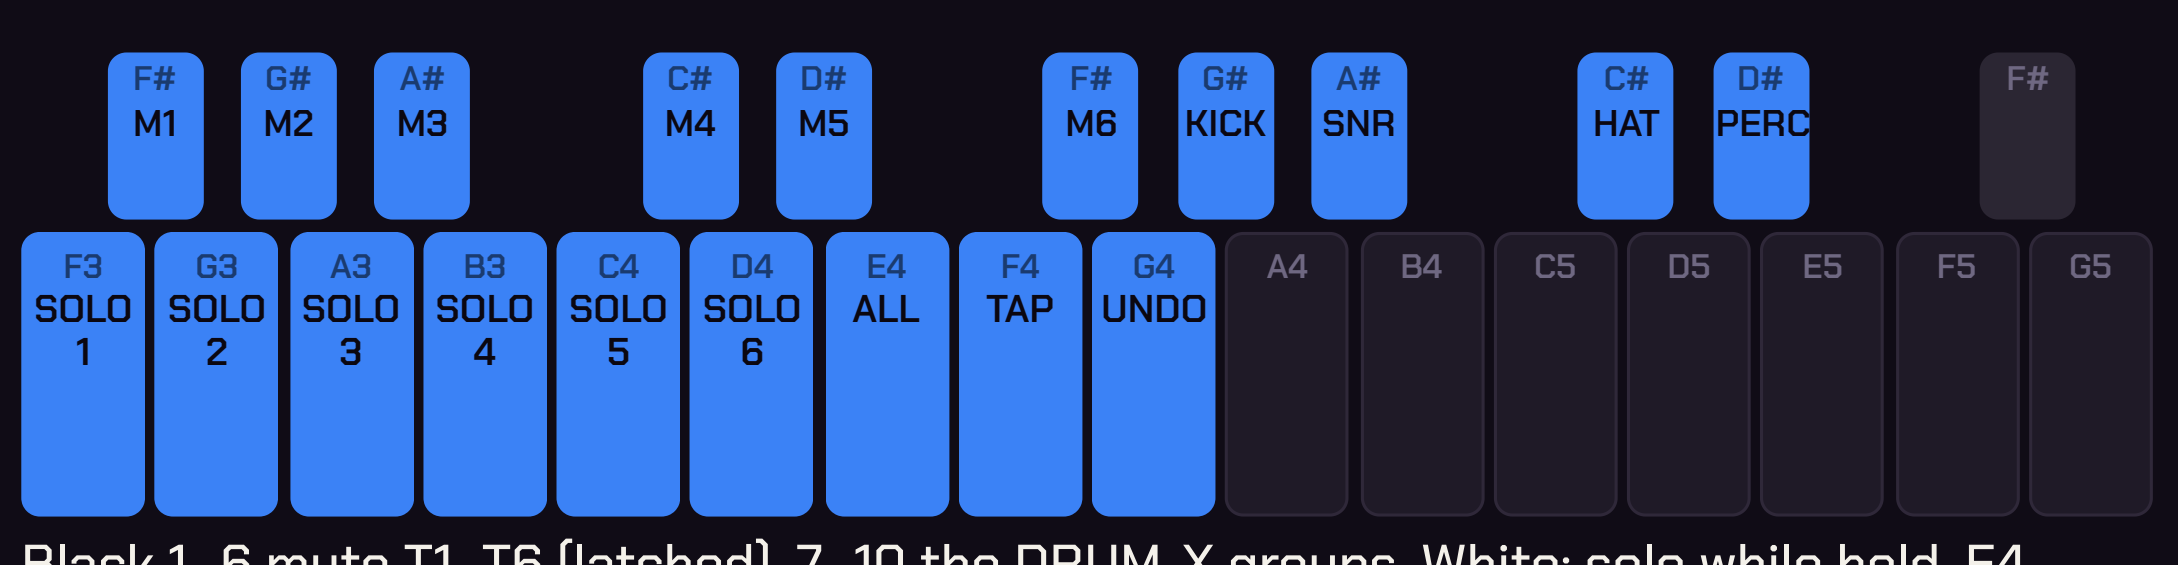

Black 1–6 mute T1–T6 (latched), 7–10 the DRUM-X groups. White: solo while held, E4 unmutes all, F4 tap tempo, G4 **UNDO** the last big change (again: redo; V10.7: also REC held alone and let go). SELECT: the tempo. PLAY: restart.

KNOBS

LEVEL T1	LEVEL T2	LEVEL T3	LEVEL T4

T5 or T6 selected: the knobs are T3–T6.

SAVE · SONG

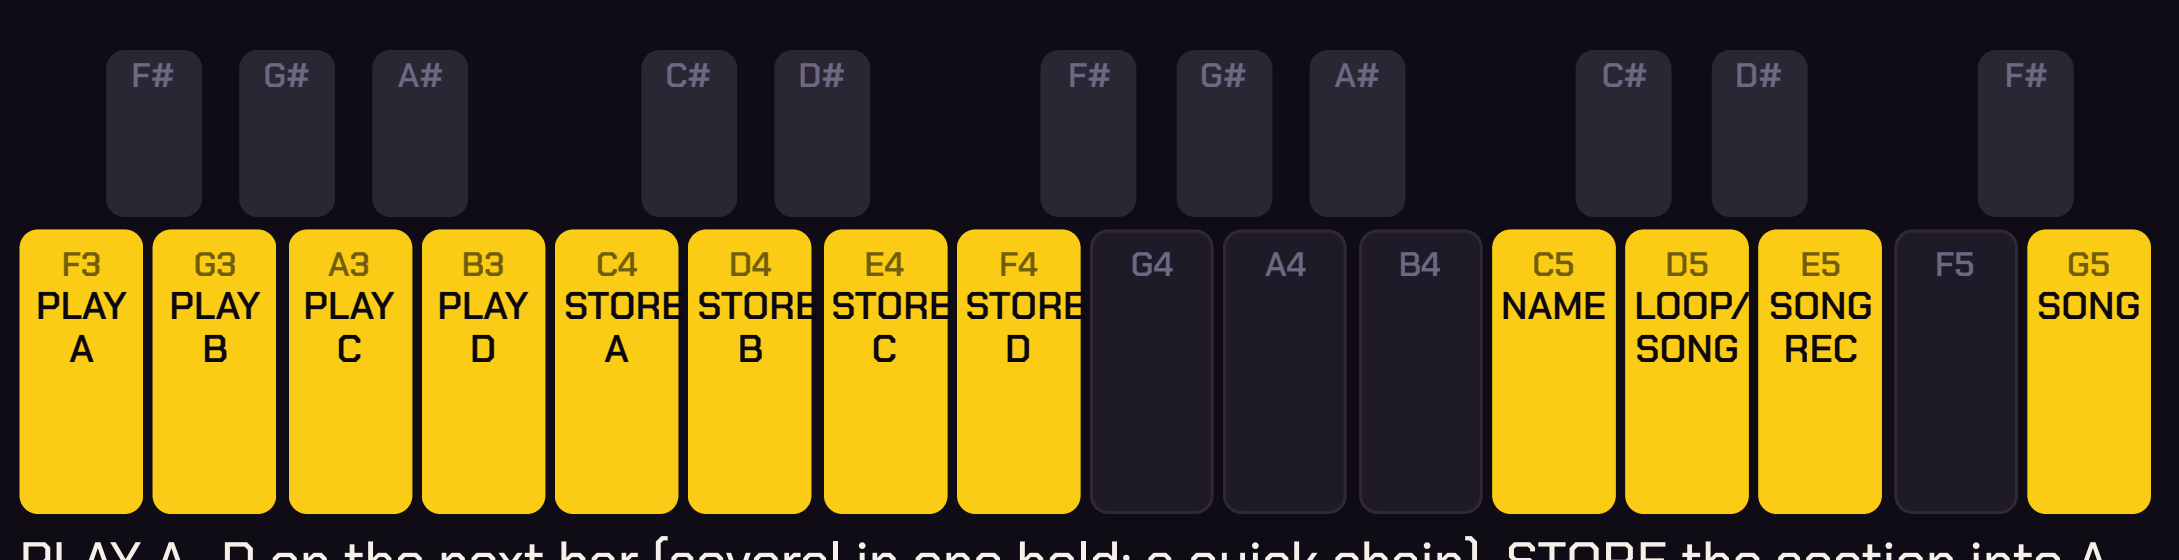

PLAY A–D on the next bar (several in one hold: a quick chain), STORE the section into A–D. OCT+ stores the playing section, OCT– recalls it. C5 renames (USER, SECTIONS, PROJECTS). On the SONG page KNOB 4 stores a scene.

KNOBS

SONG 1–8	-	-	-

EDIT · SOUND

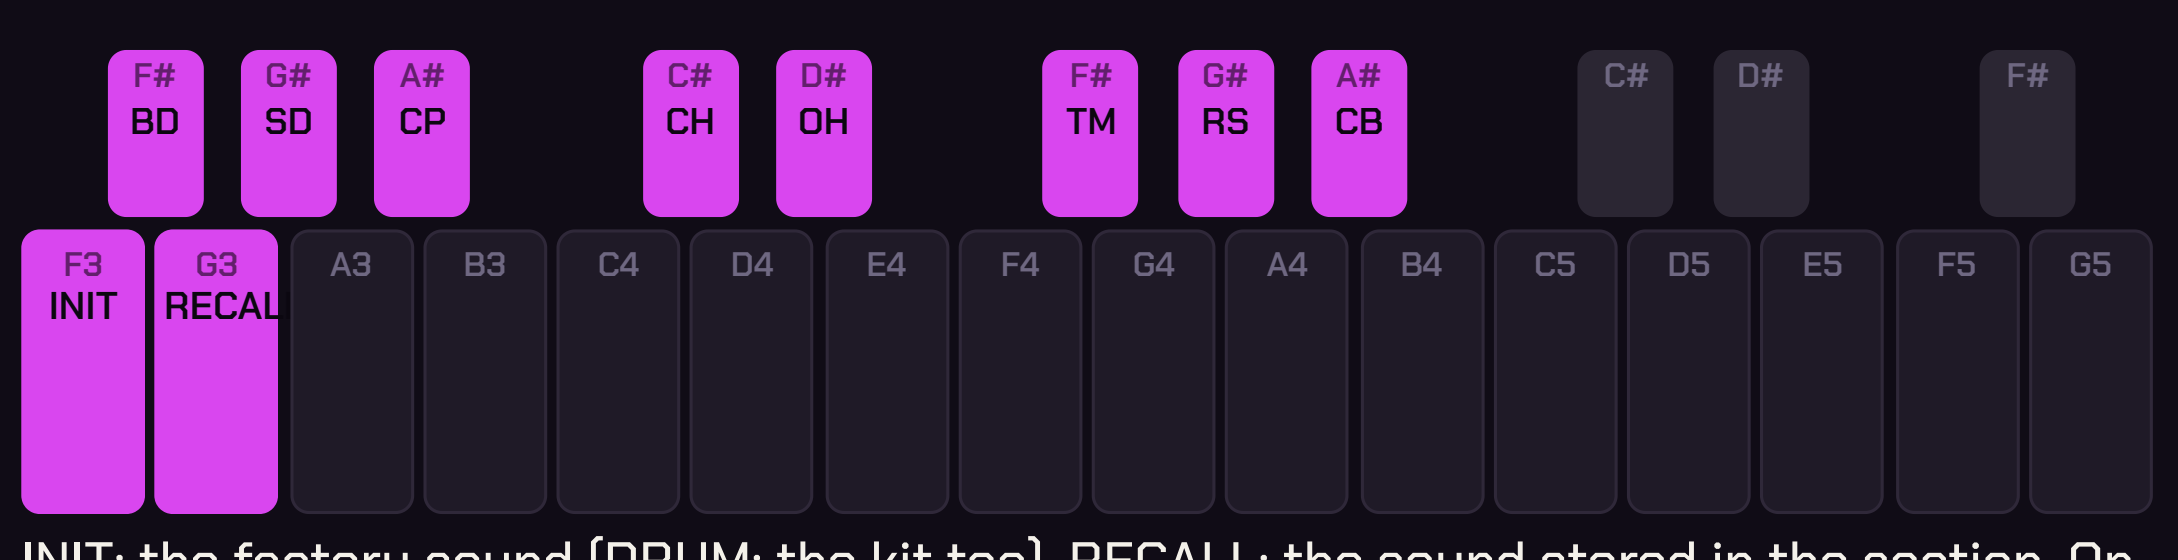

INIT: the factory sound (DRUM: the kit too). RECALL: the sound stored in the section. On a DRUM track black 1–8 mute each DRUM-X sound.

KNOBS

EDIT 1	EDIT 2	EDIT 3	EDIT 4

LFO · MACROS

Knobs M1–M4; they stay latched when let go (LFO again: off). F3 rolls new routes, G3 clears them (only tracks that sound). LFO + SELECT: the track's LFO diced.

KNOBS

M1	M2	M3	M4

SCL · SCALE

Any key sets the ROOT. ROOT and SCALE are every melodic track's (and RESO's).

KNOBS

ROOT	SCL	OFS	PIT

SEQ · TOOLS

On the SEQ pages: F3 CLEAR · G3 REVERSE · A3 B3 SHIFT · F4 CLR AUTO (the automation) · G5 CLR STEP (AUTO LIST: the record). DRUM: G4 CLR · A4 REV · B4 FILL the lane (black 1–8 pick it).

KNOBS

LEN	DIV	SWING	GATE

REC · RECORD

F3 CLEAR the track (at once; GLO + G4 undoes it), G3 the metronome CLICK.

KNOBS

CLICK	-	-	-

COMBOS

BUTTONS TOGETHER

HOME + SELECT	GEN, the song generator (HOME's last pages).
EDIT · SEQ · LFO · FX + SELECT	Their dice: sound · sequence · LFO · effects (KEEP? OK / CANCEL).
ENV · SCL · ARP · SAVE + SELECT	Into that section and along its chain.
SEQ + G5	CLR STEP: the cursor step and its locks (AUTO LIST: deletes the record).
SAVE + C5	NAME: rename the slot, the section, the project.
REC + FX EDIT ENV LFO SCL ARP GLO	Clear that part's automation on the selected track (FX: the punch-in lane too).
SEQ + REC	CLEAR ALL SEQUENCES? (OCT+ confirms).
SAVE + OCT+ / OCT–	Store / recall the playing section.
GLO + PLAY	Restart from the top.
GLO + SELECT	Tempo (from any page).
STEP HELD + KNOB	A parameter lock on that step (roll, grid).
HOME held	MENU: skins (AIR · COLORS · BOTTOM · HUD), SCOPE on the EDIT pages, palettes, knob accel, FX latch, hold time, USB level, animation…

EVERY PAGE · KNOB 1 – 4

ENV

ENV	ATK	DEC	SUS	REL
ENV DEST	FILTER	PITCH	SHAPE	LOOP
STAGE	STAGE	VALUE	LOOP	-

LFO

LFO	RATE	WAVE	PHASE	FADE
LFO DEST	PITCH	FILTER	SHAPE	AMP
MOD	SLOT	SRC	DEST	AMT
PROX (BT)	SRC PROX: the phone's distance · MENU › SYSTEM › BT, OCT+: OCT– FAR, OCT+ NEAR			
MSEQ	STEP	LEVEL	LEN	SLEW
MSEQ 2	DIV	-	-	-

SCL · ARP

SCL	ROOT SCALE QUANT ALL TR			
CHORD	CHORD	VOICING	STRUM	-
ARP	MODE	RATE	OCT	GATE
ARP 2	SWING	PROB	HOLD	ORDER

FX

FX	DIST	CHORUS	DLY	REV
DIST	DIST	TYPE	TONE	-
AUTO PAN	DEPTH	RATE	SYNC	WAVE
SLICER	MODE	PAT	RATE	DEPTH
SL BUS	T1	T2	T3	T4
SL BUS 2	T5	T6	FX	-
SL PITCH	STEP	PITCH	LEN	QUANT
DLY	TIME	FEEDBK	TONE	MIX
DLY 2	WIDE	PITCH	SPRAY	MOD
DLY 3	TYPE	PING	-	-
REVERB	TYPE	SIZE	DAMP	PRE/AIR
REVERB 2	MOD	RATE	FILT	WIDE
CHORUS	RATE	DEPTH	STEREO	-
PUNCH	LEN	RES	REC	CLEAR
MASTER	CLIP	PUNCH	DUCK	REL
TAPE	TAPE	WOW	-	-
EQ	LOW LO MID HI MID HIGH			

EDIT

EDIT 1	E1	E2	E3	E4
EDIT 2	E5	E6	E7	E8
WORDS	LANG LYRIC POS (OCT+ TYPE)			
RETRIG	RTRG	-	-	-
OPERATOR	OP	RATIO	FINE	LEVEL
OP ENV	OP	STAGE	RATE	LEVEL
OPERATOR 2	OP	MODE	DETUNE	VEL
FILTER	TYPE	CUT	RES	DRIVE
VOICE	VOICE	GLIDE	MODE	PRIO
VOICE 2	ALLOC	DETUNE	-	-
FOCUS	PARAM	VALUE	SRC	AMT
KIT 3	BP	FEEDBK	HANDS	-
X-MOD	RATE	DEPTH	SHAPE	RAND
LEVELS	KICK	SNARE	CLAP	HATCL
LEVELS 2	HATOP	TOM	RIM	BELL
SOUND	SOUND	SIDE	PITCH	PMOD
SOUND 2	SOUND	DECAY	NOISE	COLOR
SOUND 3	SOUND	MODE	PM.TYPE	DRIVE
SOUND 4	SOUND	LAYER	FEEDBK	SEND
STEREO	IMAGE	-	-	-

SEQ

PATTERN	LEN	DIV	SWING	GATE
STRETCH	x/÷	REPEAT	NUDGE	ROTATE
PLAYHEADS	HEAD	RATE	DIR	INTVL
TRACK	PITCH CHANCE HUMAN REC Q			
EUCLID	HITS	STEPS	ROTATE	VARY
EUCLID · DRUM	HITS	STEPS	ROTATE	LANE
EUCLID · DRUM ALL	DENSITY	STEPS	ROTATE	LANE
MODES	MOTION	HARMONY	OCTAVE	SLIDE
MODES · DRUM	ACCENT	GHOST	RATCHET	VARY
MUTATE	EVERY	AMOUNT	MODE	WHAT
BAR	BAR	LEN	-	-
STEP	STEP	NOTE	TIME	VEL
STEP · DRUM	STEP	LANE	HIT	ACC
NOTE	FOCUS	PITCH	MOVE	MICRO
AUTOMATION	PLAY	EVENT	LOCK	CLEAR
AUTO LIST	ROW	STEP	PARAM	VALUE
COMP	STEP	TYPE	VAL	EVERY
COMP 2	STEP	TYPE	VAL	EVERY

GLO · SAVE

MANO	RATE LOOP THIN DJ FILT (the keys: live modifiers)			
RIELES	PISTAS	RATE	CORTE	DENS
MIXER	LEVEL PAN REV DJ FILT			
GLOBAL	BPM	SWING	CLOCK	TUNE
SYSTEM	TRACKS	LOAD	ROUTE	CPU
PRESETS	No.	ENG	FAV	LIST
USER	SLOT	LOAD	ERASE	SAVE
PROJECTS	PROJECT	SECT	LOAD	SAVE
SECTIONS	SECT	ERASE	LOAD	SAVE
ARRANGE	ROW SECT BARS SCENE (OCT+ adds a row, OCT– deletes the one picked)			
TIMELINE	ROW LANE · SEC: SECT BARS · T1–T6: FROM VAR			
TOOLS	CLEAR SEQ · INIT SOUND · DEL ROW · CLEAR SONG · NEW PROJECT · CPU TEST: K1 picks, OCT+			

GPL-3.0 · fork of Felucca (Hügelton Instruments) · song mode from SLOOP