

SIENA

QUILTED COAT

SEWING INSTRUCTIONS





INTRODUCTION

The Siena Quilted Jacket Is a vintage-inspired sewing pattern that captures the grace and charm of timeless silhouettes. With its gently structured shape and cozy feel, this jacket blends classic elegance with everyday comfort.

Perfect for beginners and beyond, the Siena Jacket features a beautiful structure with refined details — including a fully lined interior, a comfortable hood, and neatly bias-bound edges that add a polished, handcrafted touch.

Whether you choose to make it from a solid quilted fabric or experiment with a patchwork design for added character, the Siena Quilted Jacket is perfect for year-round layering. It pairs effortlessly with high-waisted trousers, relaxed fits, and elevated casual looks alike — a timeless piece that celebrates creativity, comfort, and craftsmanship.

DIFFICULTY LEVEL

Beginner-friendly

SEAM ALLOWANCE

1 cm seams and 2 cm hems included.

Use 1 cm guide unless noted.

FABRIC SUGGESTIONS

The Siena Quilted Long Hood Coat Is best crafted in pre-quilted fabrics that provide warmth, structure, and a refined texture. Each fabric choice brings its own personality, making the coat adaptable for different seasons and styles.

Pre-quilted nylon or polyester — a practical choice for a long hooded coat with a modern, outdoor-inspired look. Lightweight yet durable, it offers weather resistance and a clean, structured finish.

Pre-quilted cotton — soft, breathable, and comfortable, perfect for transitional weather. It provides gentle warmth and a relaxed, easy-to-wear style ideal for everyday layering.

Pre-quilted denim — adds body and texture, giving the coat a structured silhouette and a casual, contemporary feel with durable wear.

Pre-quilted wool or wool blends — ideal for a cozy winter version, offering warmth, softness, and an elegant drape that enhances the long hooded design.

Pre-quilted velvet or velour — a luxurious option for a statement-making coat. The plush texture and subtle sheen bring depth and sophistication, perfect for creating a rich, elevated look.




PATTERN PRINTING & SCALING LAYOUT

To begin, you'll want to print the PDF pattern. Once you have all the pages, arrange them in the correct order and then secure them together using tape. It's vital to ensure that all files are printed at full size - that is, Actual size.


If you're new to our patterns, I strongly suggest printing a single page first. Verify that the print out size is correct by measuring the 2-inch scale on the pattern, using a ruler.

This trial run will ensure your printer settings are accurate and help you avoid wasting any ink or paper.

NOTE: This pattern is prepped and ready for you to start cutting, and it conveniently includes a 1cm seam allowance for each size.

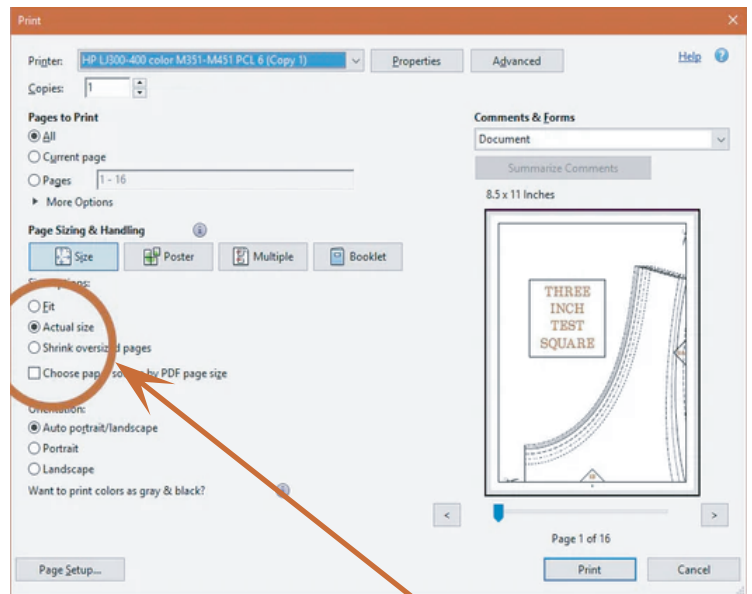

The pattern layout provides a mini version of what your pattern will look like when fully assembled, allowing you to identify which pages you need for your chosen design. Use this diagram to see the order in which to assemble the printed pages, guided by page numbers.

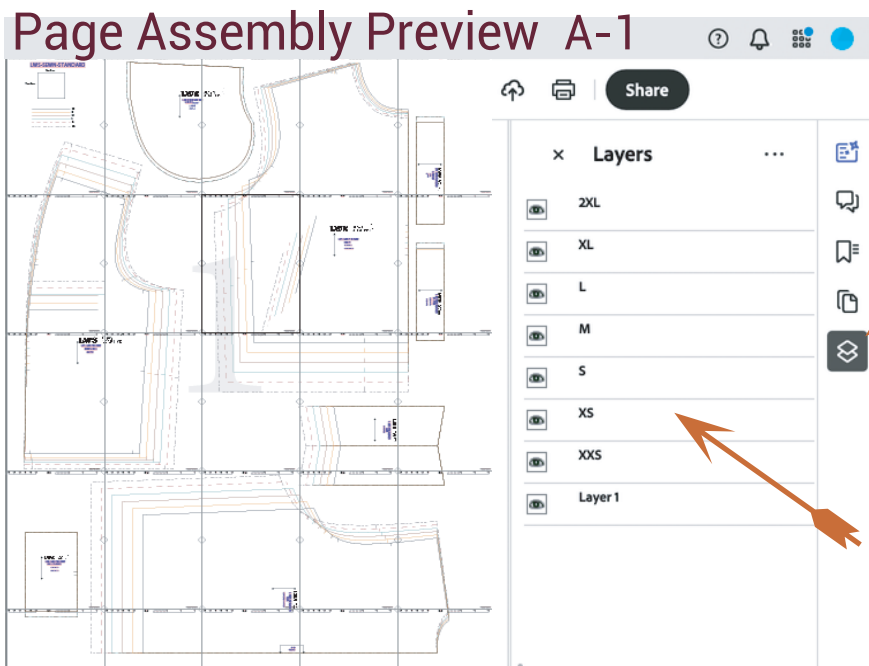

To open the pattern file, use Adobe Acrobat Reader and click on the "Layers" icon located on the right-hand side.

To avoid printing unwanted layers, simply click on the eye icon to deselect them. If you are using different sizes, make sure to display both sizes.



SIZE CHART

- Use the body measurement guide below to find your ideal size. Refer to the size chart to match your measurements and choose the best fit. Remember—every body is different, so sizes may vary slightly from person to person.
- Using a measuring tape, gently measure your bust, waist, and hips. Keep the tape comfortably fitted—not too tight or too loose—to ensure accuracy.
- Compare your measurements with the size chart and select the size range that fits you best.
- If your measurements fall between two sizes, we recommend choosing the larger one for a more relaxed and comfortable fit.

BODY MEASUREMENTS (INCHES)

Size	XXS	XS	S	M	L	XL	2XL	3XL	4XL	5XL
Bust	30-32	32-34	34-36	36-38	38-40	40-42	42-44	44-47	47-50	50-54
Waist	24-28	26-28	28-30	30-32	32-32	34-36	36-38	38-41	41-44	44-47
Hip	32-33	34-36	36-38	38-40	40-42	42-44	44-47	47-50	50-53	53-56


FINISHED GARMENT MEASUREMENTS (INCHES)

	XXS	XS	S	M	L	XL	2XL	3XL	4XL	5XL
Chest	40	42	44	46	48	50	52	54	56	58
Shoulder to shoulder	23	24	25	26	27	28	29	30	31	32
Full Length HSP	42.5	43	43.5	44	44.5	45	45.5	46	46.5	47
Sleeve (Length)	18.5	18.9	19.2	19.6	20	20.4	20.7	21.1	21.5	21.9



TOOLS REQUIRED


• Necessary

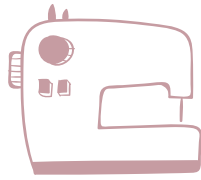

Sewing Machine




Sewing Pins

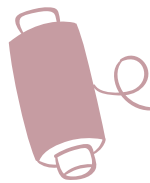

Sewing Thread



Iron

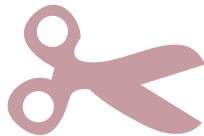

Fabric Scissors



Measuring tape

NOTIONS

Pre-quilted fabric (nylon, polyester, cotton, or denim)

Lining fabric (lightweight polyester or satin) (Optional)

Interfacing (optional)


Zipper or snap buttons (optional)

Ribbing or bias tape (optional)



PATTERN PIECES

- 1- Siena Coat Front - cut x1 pair'' fabric, cutx1 pair lining
- 2- Siena Coat Back - cut x1 On fold'' fabric, cutx1 On fold lining
- 3- Siena Coat lower pocket - cut x1 pair''
- 4- Siena Coat Upper pocket -cut x1 pair''
- 5- Siena Coat Hood - cutx 1 pair'' fabric,
cutx 1 pair lining
- 6- Siena Coat Sleeve - cut x2 On fold'' fabric,
cut x2 On fold lining
- 7- Siena Coat Pocket Boon- cut x1 pair''

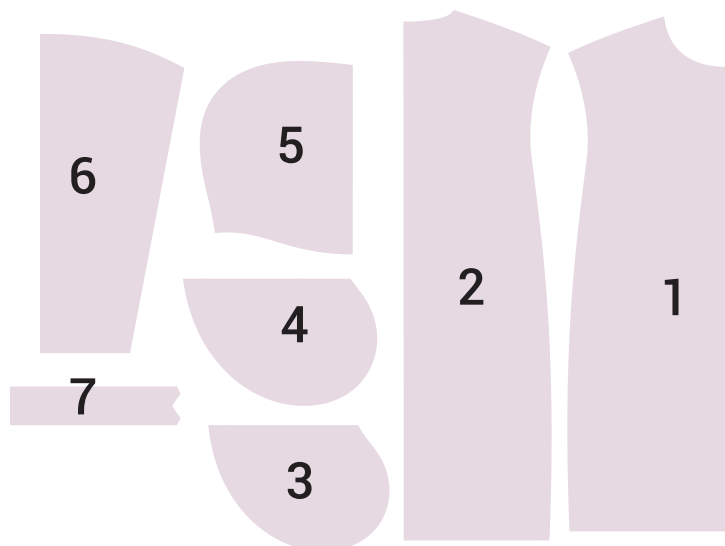

FABRIC REQUIRED (ESTIMATED)

Main Fabric: Approximately 3.5–4 yards (3.25–3.75 meters), depending on your size and fabric width. (Hood + long length increases yardage.)

Lining Fabric: Around 3–3.25 yards (2.75–3 meters) for a fully lined coat.

Bias Tape: About 1–1.25 yards of bias tape for finishing inner edges if needed.

Note: These amounts are estimates and may vary with size, coat flare, hood shape, fabric width (44" vs 58"), and cutting layout.




FABRIC CONSUMPTION GUIDE


Taking a little time to plan your fabric layout helps reduce waste and ensures efficient fabric use. This simple step not only saves material but also makes your project more sustainable and cost-effective.

Fabric and Lining =150 cm wide | Example is size L

Folded edges

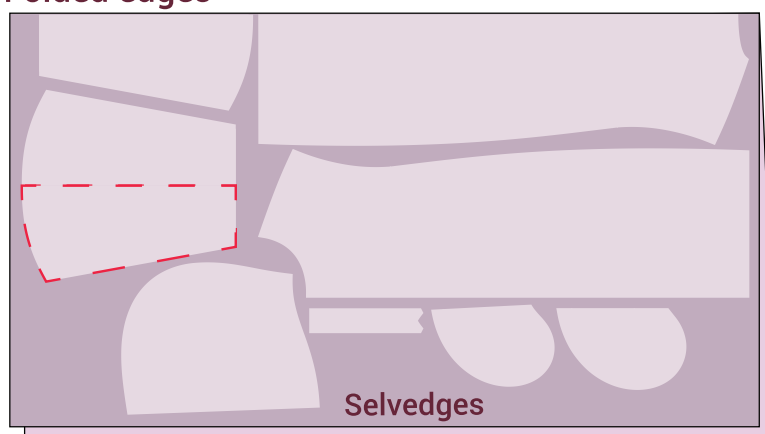

Folded edges

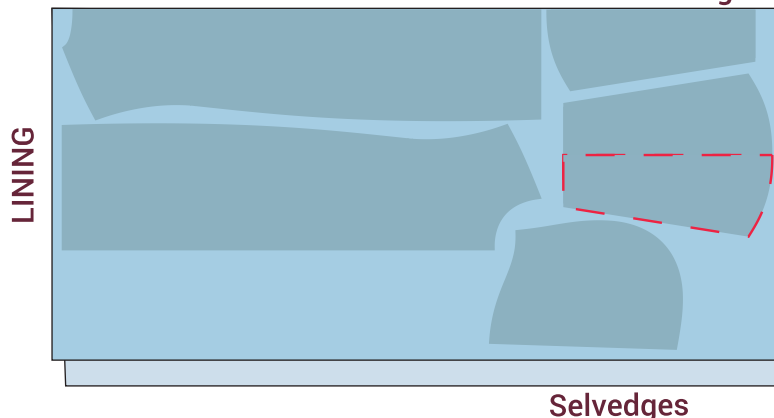

FABRIC PREPARATION & CUTTING

- Fold your fabric lengthwise, keeping the selvage edges aligned and the surface smooth.
- Secure the pattern pieces with pins or weights.
- Match fold markings to the fabric fold and never cut along the fold line.
- Align grainlines parallel to the selvage for accurate drape.
- Transfer all markings using chalk or an erasable pen—always test on a scrap before marking your main fabric.

SEWING INSTRUCTIONS



Right side of fabric



Right side of lining



Right side of Bias Band



Wrong side of fabric



Wrong side of lining



Wrong side of Bias Band

Optional Step: Bias Binding – How to Make and Apply

This optional guide is perfect for beginners who want to learn how to prepare their own bias binding and sew it neatly for a professional finish.

Step-1


Cut the required length of fabric for your binding. Place the fabric on a flat surface with the wrong side facing up, and press it lengthwise with an iron to create a neat center crease.




Open the fabric and fold both sides short raw edges inward, pressing them flat with an iron.



Then, fold both long edges lengthwise toward the center crease so they meet neatly in the middle, ensuring the right side of the fabric is facing outwards. Continue pressing along the length to keep the folds sharp and even.



Finally, fold the entire strip once more along the center crease to form a narrow strip. After this final fold, your bias binding tape is completely ready.




To use it, unfold the tape and place it along the edge of the garment, then topstitch neatly to secure it in place for a clean and professional finish.

Step-1

Take your front panel and, using the pattern markings, accurately transfer and mark the rectangle onto the fabric. Carefully trace the outline with a fabric pen or tailor's chalk to ensure precision.


This rectangle will serve as the placement guide for your pocket opening.

(Optional: You can also apply interfacing to the wrong side of the front panel for additional stability and structure.)

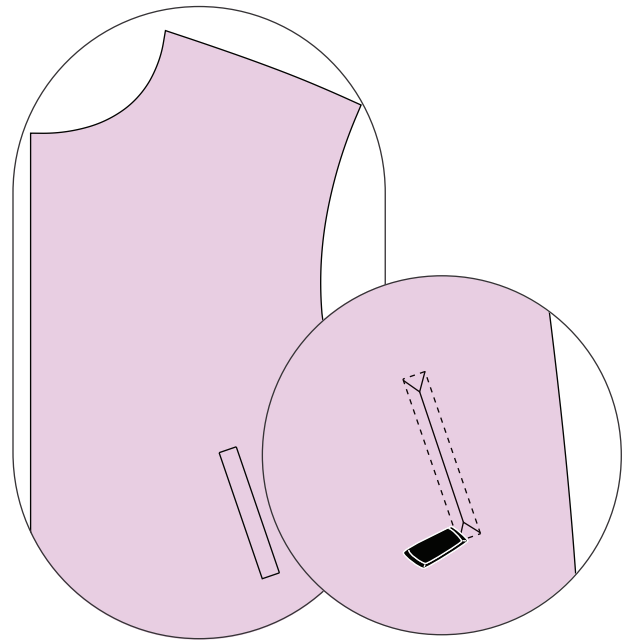


Interfacing(optional)


Next, fold the pocket boon piece in half lengthwise with right sides facing each other. Make sure the raw edges and corners are properly aligned.

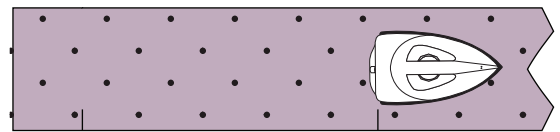


Pin the two short edges together to hold the fold securely in place while sewing. At the sewing machine, stitch both short ends using the 1 cm seam allowance.



Once both ends of the pocket boon piece are stitched, trim the seam allowances, leaving about 0.5 cm beyond the stitches. Clip the corners diagonally (without cutting the stitches) to reduce bulk. This will help achieve sharp, clean corners when the piece is turned right side out..



Finally, along the long raw edge, sew a basting stitch to hold the layers together. Keep the stitching close to the edge, using a 1 cm seam allowance. This will keep the welt neatly position and make It easier to handle during the next sewing steps..

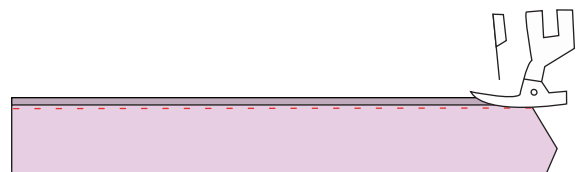



Step-2





Cut a piece of interfacing slightly larger than the pocket boon placement mark and apply it to the wrong side of the jacket front, making sure it fully covers the pocket opening area.

Use fabric markings or pins for accurate placement. If using sew-in interfacing, baste it in place by stitching directly along the welt pocket marking line to stabilize the fabric and prevent stretching.

Take the prepared pocket facing piece and place it on the right side of the jacket, aligning it precisely with the marked rectangle.

Ensure that the raw edge of the facing is positioned toward the rectangle line as indicated. Center the facing carefully along the center line of the rectangle.

Once aligned, pin along the outer rectangular marking line, keeping everything secure and flat, then stitch directly on the marked rectangle outline.

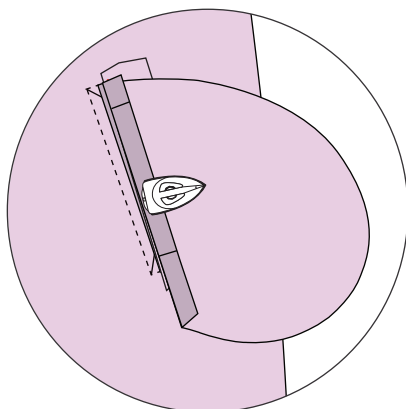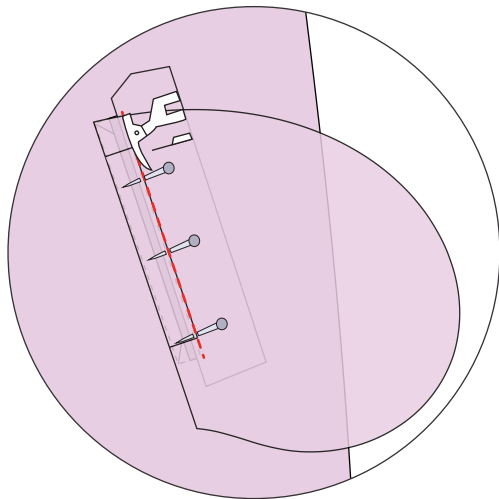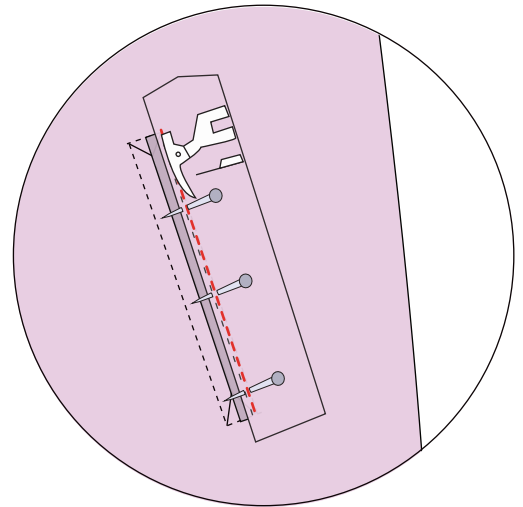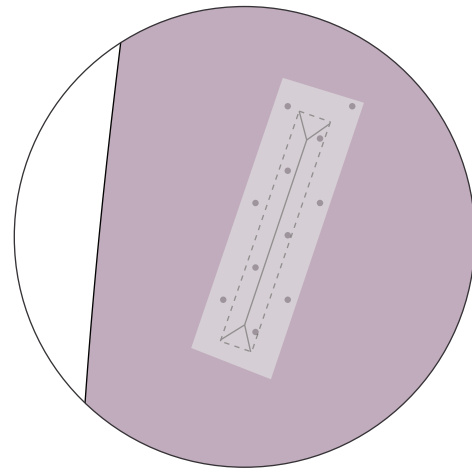

Step-3

Take your lower pocket piece and place to right side together with the pocket boon piece, aligning all pattern markings accurately.

Pin the piece securely in place to prevent shifting while sewing. Stitch along the line closest to the center front, keeping the stitching smooth and even.

Then fold the top edge of the pocket piece over the stitches, toward the top of the pocket, and press neatly to create a clean edge.



Step-4



Take your upper pocket piece and repeat the same process.

Place it right sides together with the pocket boon piece matching **all** notches and markings.

This time, align the notches on the jacket, closest to the side seam, with the stitching line on the pocket that's nearest to the straight edge.

Pin carefully, then stitch along the marked line.

Once stitched, fold the edge over the seam, toward the upper side of the pocket, and press to set the shape.

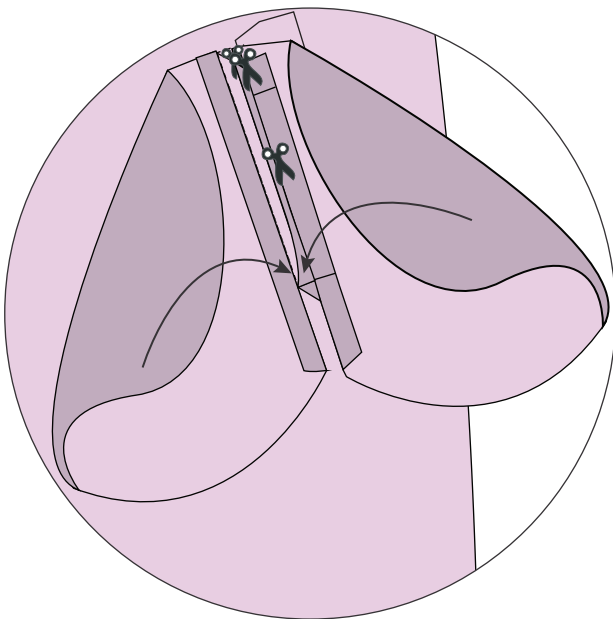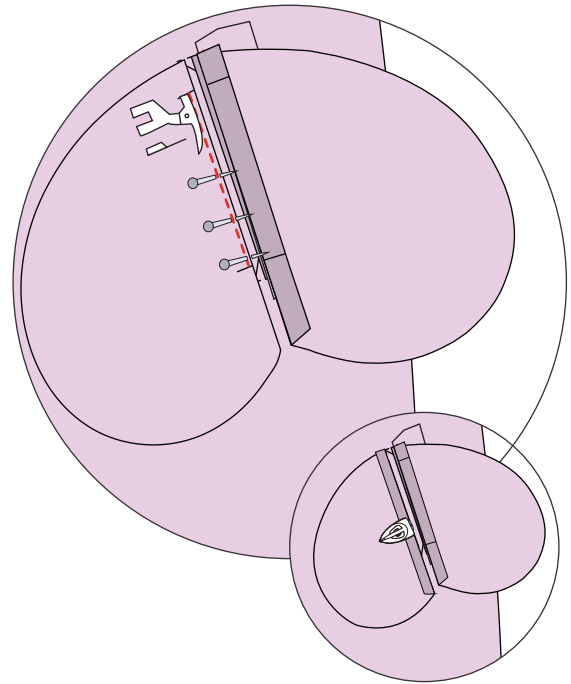


Step-5

With the pocket pieces attached, carefully cut down the center line of the pocket boon piece opening on the jacket front.

Stop about 1 cm before each end, then clip diagonally to the circle marks to form small triangles.

Be careful not to cut through the stitches.

Pull the pocket pieces through to the wrong side of the jacket front and press around the opening. This step will create a clean, rectangular boon opening.

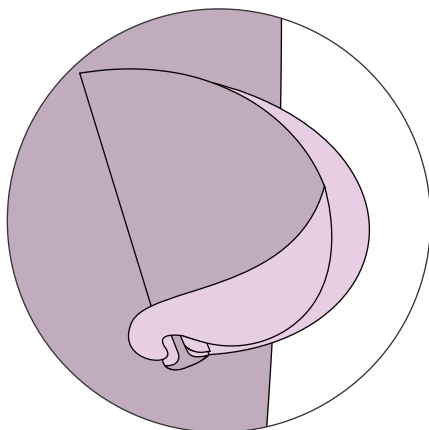


Step-6

On the right side of the jacket, press the boon piece so the folded edge faces the side seam.

Ensure the pocket bags are out of the way, then edge stitch along the boon piece seam on the jacket front only, securing the welt neatly in place.

This edge stitch adds durability and gives a refined finish to the pocket opening.

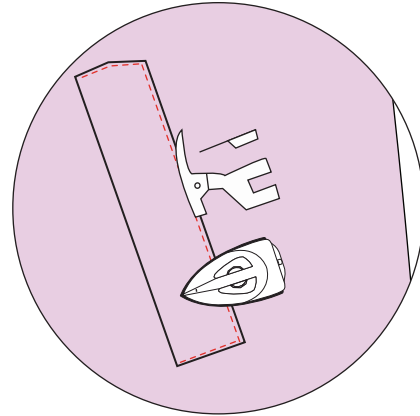

Step-7

Bring both pocket pieces toward the center front so they align properly. Pin the pocket edges together, keeping the jacket fabric out of the way.



Begin stitching just above the triangle, sewing around the entire pocket bag using the 1.5 cm seam allowance (or as specified in the pattern).

As you sew, catch the small triangles at each end of the boon piece opening into the seam to secure them in place.

Once stitched, press the pocket bag flat and check from the right side to ensure the boon piece sits neatly and evenly.

Finally, edge stitch the short ends of the boon piece on the right side of the jacket, keeping the pocket bag clear of the stitches.

Repeat the same process for the remaining pocket.

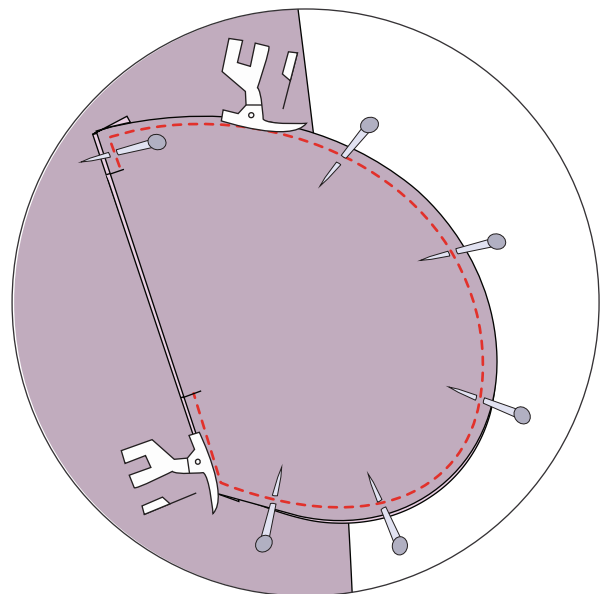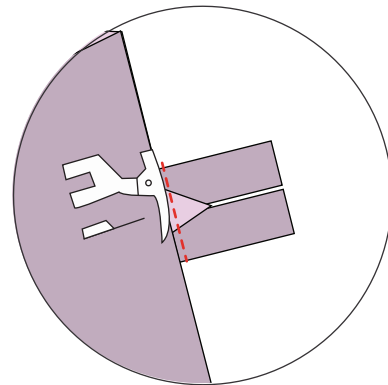



Step-8

Place the front and back pieces with right sides facing each other, matching all notches and edges carefully.


Pin along the shoulder seams and sideseams to hold the pieces in position.

Stitch the seams using a 1 cm seam allowance, keeping the fabric flat and even as you sew.

Once stitched, finish the raw edges with a serger or your preferred finishing method to prevent fraying.

Press the seams open or toward the back for a smooth, professional finish.

Repeat with the Front and Back lining pieces.

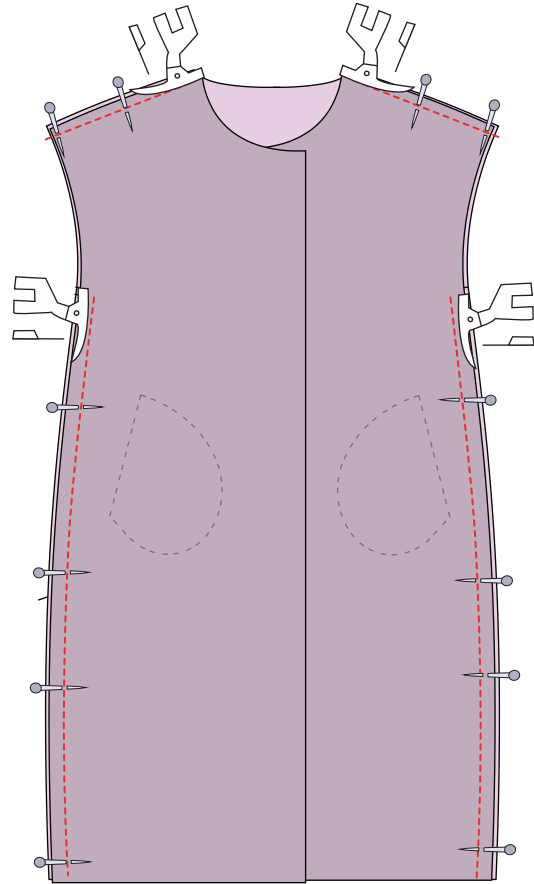


Step-9

Fold the sleeve in half lengthwise with the right sides facing each other. Pin the aligned edges of the sleeve to secure them in place. Then, sew along the pinned edge, forming the sleeve seam.

After sewing, press the sleeve seam open or to one side and then overlock.

Repeat with the sleeve lining.

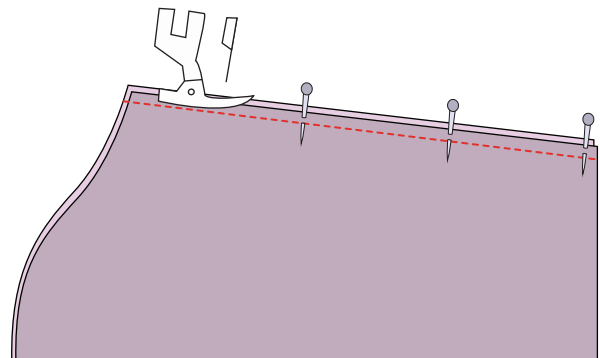



Step-10




Let's attach the sleeve to the armhole!

Start with the right sides of the sleeve and bodice facing each other. Line up the side seam of the sleeve with the side seam of the armhole and pin them together.

Next, gently pull the gathering threads ease the sleeve cap into the armhole, adjusting until it matches the armhole measurement. Once adjusted, pin the sleeve cap in place.

Now, sew around the armhole to attach the sleeve. After sewing, finish the seam using your preferred method and press with an iron.


Tip: Serge around the seam for added durability and to prevent fraying.

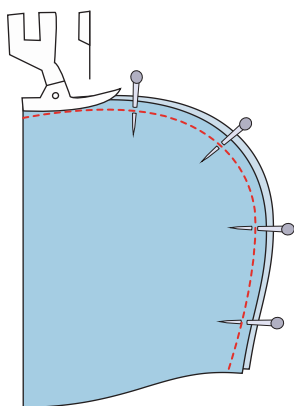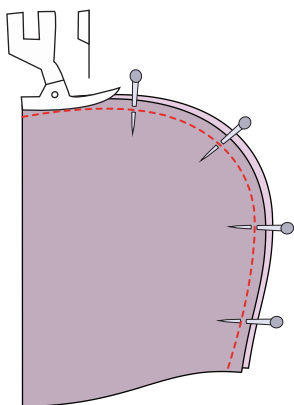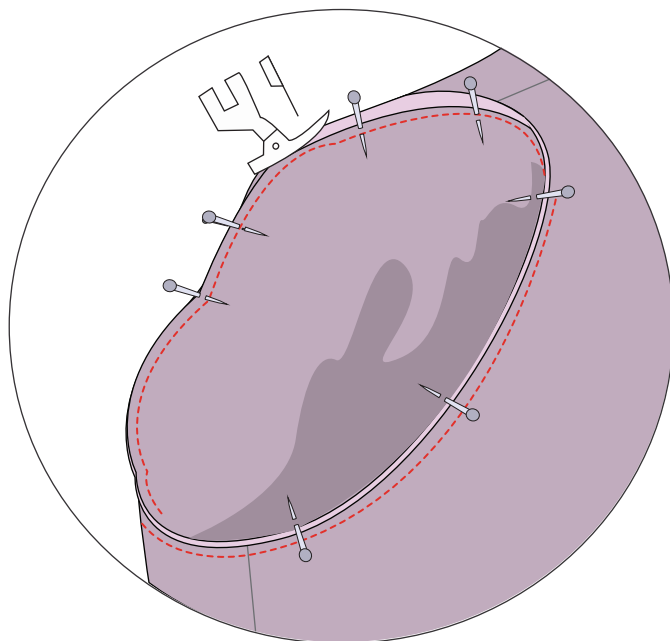

Step-11


Begin attaching the hood, place the two outer hood pieces right sides together and sew along the curved edge using a 1 cm seam allowance.

Repeat the same process for the lining pieces

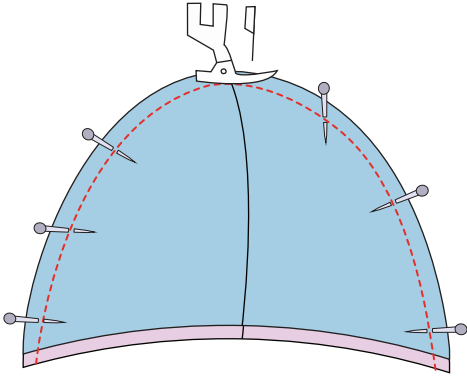

Once both the outer and lining hoods are stitched, open them up and place them right sides together, matching the center seams carefully.

Sew along the front edge of the hood with 1 cm seam allowance.

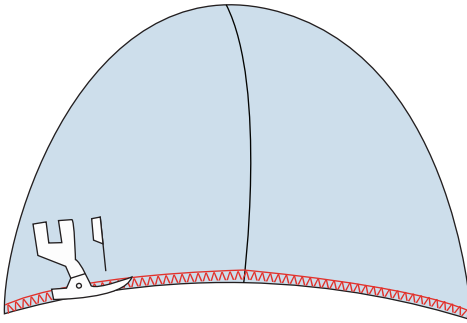

After sewing, turn the hood right side out and serge along the bottom edge to join both layers neatly.


Set the finished hood aside and serge the raw edge of the garment's neckline to prepare it for attaching the hood.

Step-12

To attach the hood, fold the neckline in half to mark the center point, then do the same for the hood.

With right sides together, match both center points and pin the hood evenly along the neckline.

Sew in place using a 0.5 cm seam allowance for a clean finish.

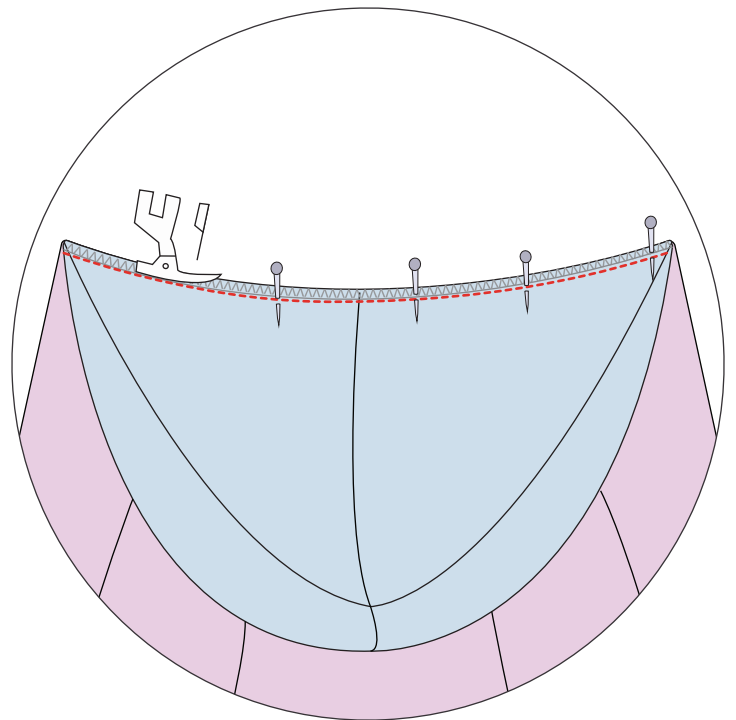



Step-13


First, place the jacket on a flat surface with the hood positioned downward and the sleeves folded inward.

Next, take the lining piece and place it on top of the jacket, keeping both right sides facing each other. Align the center front and neckline edges carefully, and secure them with pins.

Make sure the sleeves of the lining are also tucked inside, creating a sandwich-like arrangement where everything is enclosed neatly.

Once you're confident that everything is properly aligned and ready for stitching, Begin sewing from the bottom hem on the left side and continue around the back, ensuring all edges are evenly matched.


Trim the seam allowance along the curved edges for a smooth finish. Then, turn the jacket right side out through the hem and Press the edges with an iron to create crisp, clean lines.

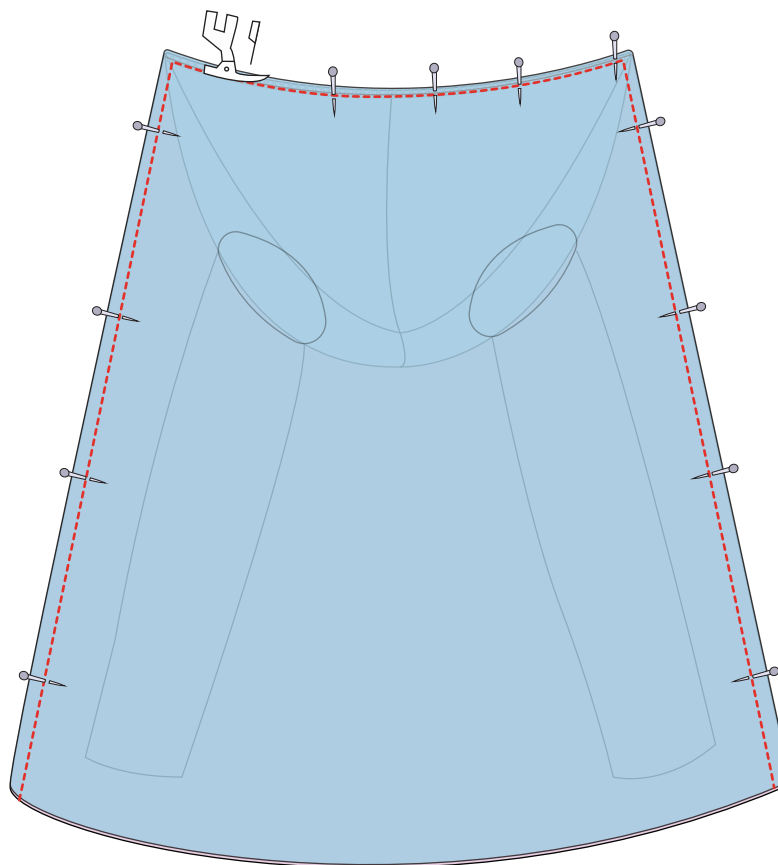



Step-14

Align the wrist edges of the lining and the main fabric, keeping the right sides facing each other. Make sure the edges are perfectly aligned and secure them with pins. For added durability, you may overlock the seam.

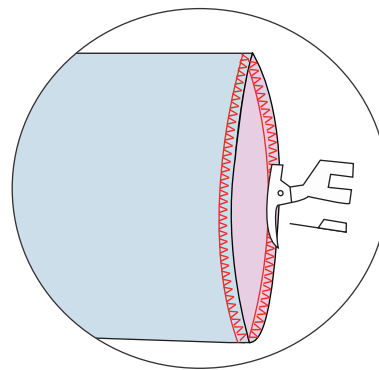

Once done, turn the jacket inside out to prepare for attaching the bias band.


Measure the wrist hem and cut a piece of bias band equal to that length. Open one folded edge of the bias band and align its raw edge with the raw edge of the wrist hem, keeping the right sides together.

Pin or clip it neatly around the wrist and stitch along the crease line of the opened bias band.

Next, fold the bias band over to the inside of the wrist hem so that it completely covers the raw edge.

Make sure the folded edge of the bias band covers the previous stitch line. Pin it in place smoothly and evenly, then topstitch close to the folded edge, ensuring both layers are securely caught.

Finally, press the wrist hem to achieve a clean, crisp, and polished finish.

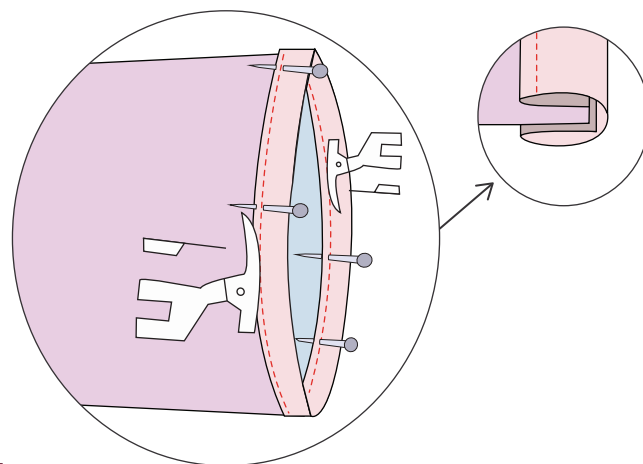


Step-15

Now, for the bottom hem of the jacket, align the lining and the main fabric neatly together, making sure both layers are smooth and even.

Once aligned, secure the edges with an overlock stitch to join them and finish the seam cleanly.

Next, add the bias band along the bottom edge for a refined look. Align the bias band with the raw edge and stitch it in place. Then fold it over to the inside to enclose the seam.

Topstitch neatly along the folded edge to secure the band and give the jacket a durable, professional finish.

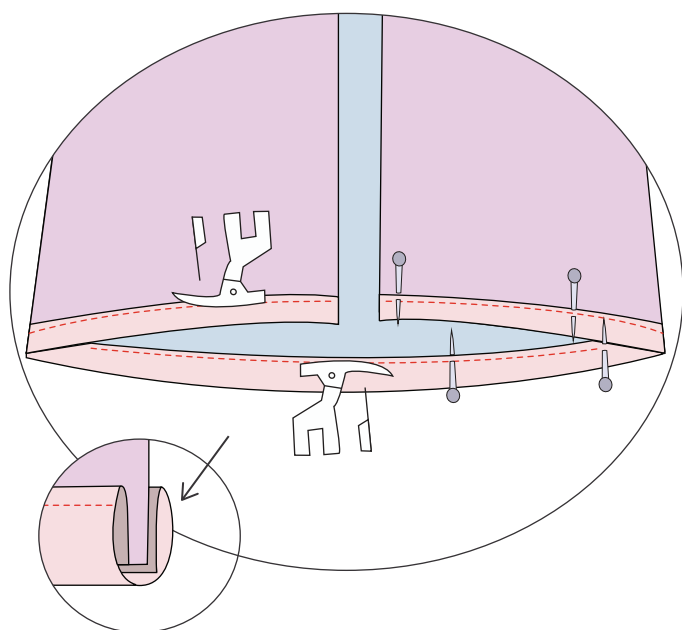



Optional Version: Bias Band Placement for Jacket Opening and Hood

This step is for those who want to add a bias band along the full-length jacket opening. If you wish to add the bias band only to the front opening and hood, skip the bottom hem bias band and follow this step accordingly.

Measure the full length of the jacket's front opening, Hood and hemline. Ensure the measurements are accurate, as this will determine the length of your bias band.

Now cut the piece of bias band to match the total length, adding a little extra for the seam allowance.

Open one folded edge of the bias band and align it with the raw edges of the jacket's opening. Pin or clip it in place around the neckline and hemline.

Sew along the crease of the opened bias band, securing it around the jacket's edges. Fold the bias band over the raw edges, encasing them neatly. Pin, then topstitch close to the folded edge to secure.

Press the bias band for a smooth, professional finish.





How to Add Buttons (Optional)

If you wish to include buttons as a closure option for your Hooded Jacket, follow these simple steps to achieve a neat and balanced finish.

Steps:

Mark the Placement: Determine the number and position of buttons along the front edge. Mark both button and buttonhole positions evenly.

Stitch the Buttonholes: Place the buttonholes on the right side of the jacket. Sew them securely, ensuring each one is straight and cleanly finished.

Align and Mark: After stitching the buttonholes, align the buttonhole side with the left side where the buttons will be attached. Mark the center of each buttonhole—this will guide accurate button placement.

Sew the Buttons: Hand or machine sew the buttons at the marked points, ensuring they are securely attached and properly aligned with their buttonholes.





Your project is now complete!
Congratulations on your hard work!

I'd love to hear your feedback! If you can, please include photos with your review – this really helps me improve the overall fit of the pattern. If you have any questions or concerns about the files, feel free to reach out. I'm always happy to help!

Thank you for sewing with love and creativity!