


Xu (2016) : Stress-Based Degradation Reporting

$$f_d = S_t(t) \cdot S_\sigma(\bar{\sigma}) \cdot S_T(T_c) + \sum_i n_i \cdot S_\delta(\delta_i) \cdot S_\sigma(\sigma_i) \cdot S_T(T_c)$$

$S_\delta(\delta)$: depth of discharge stress

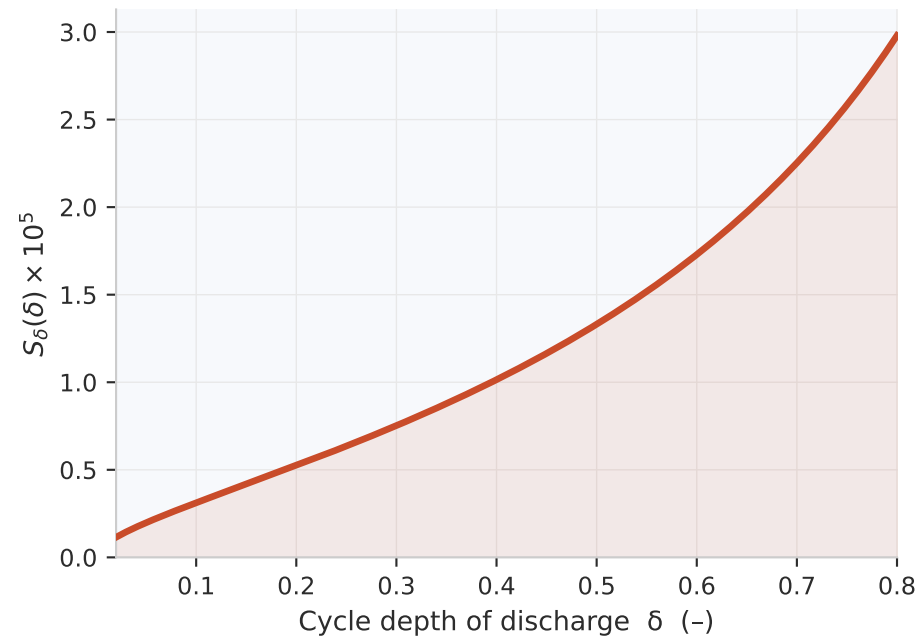

$S_\sigma(\sigma)$: mean SoC stress

