


This is required:




Open the back




Press the Pins in

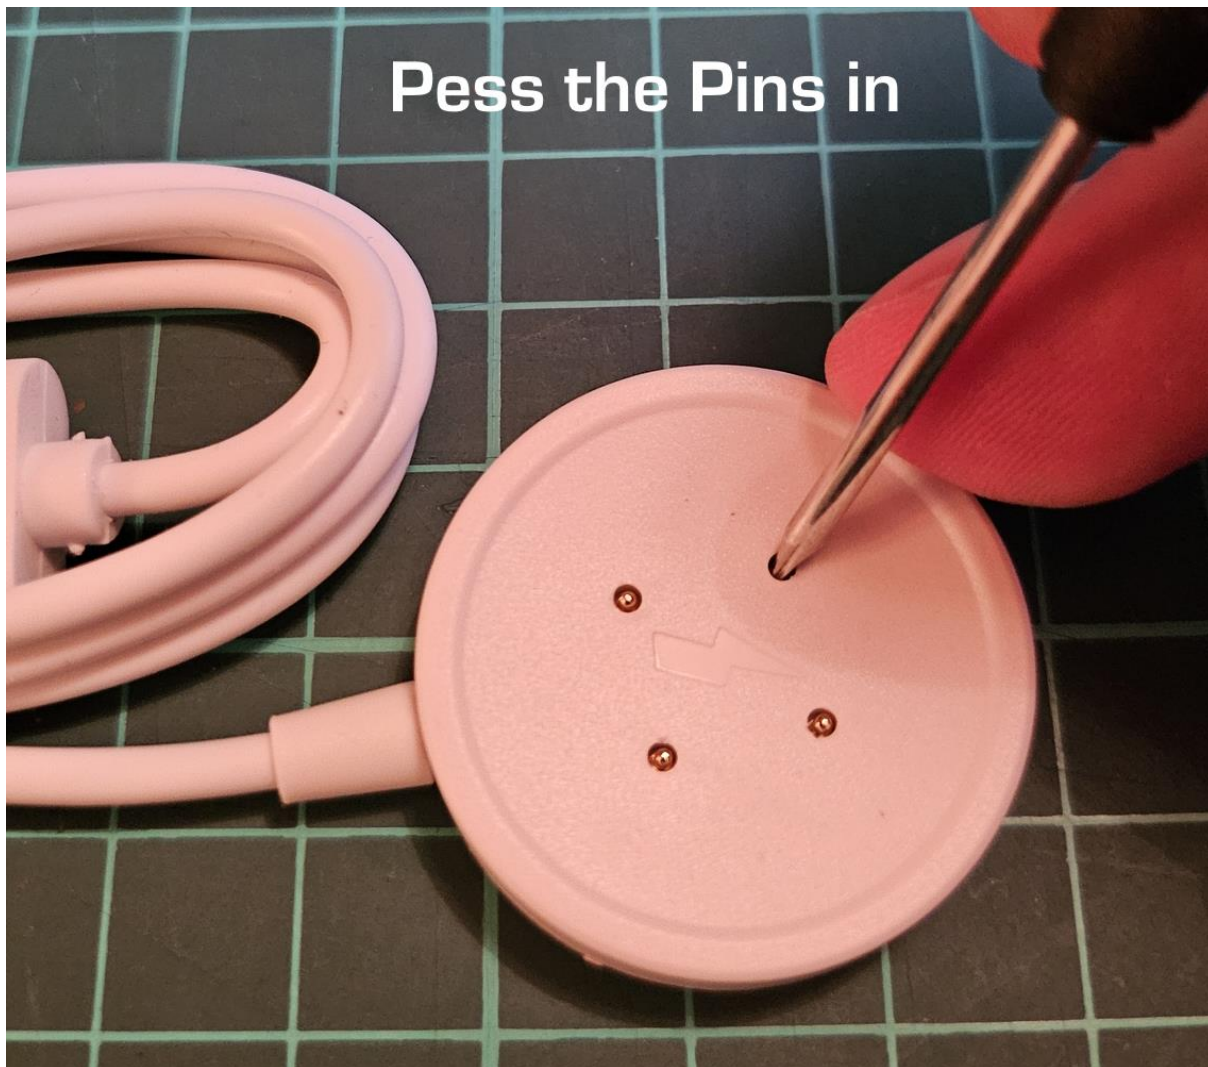


**Pull out
the pins
carefully**

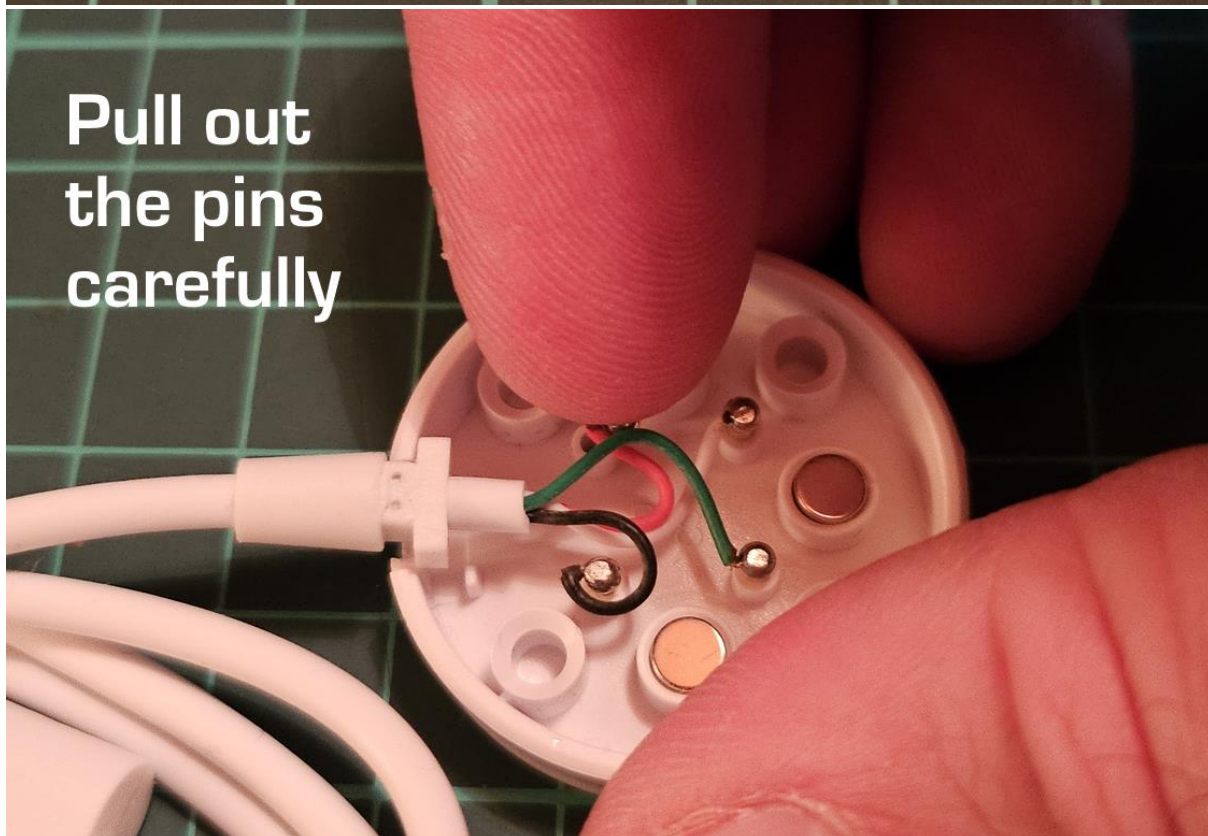

Remove the cable

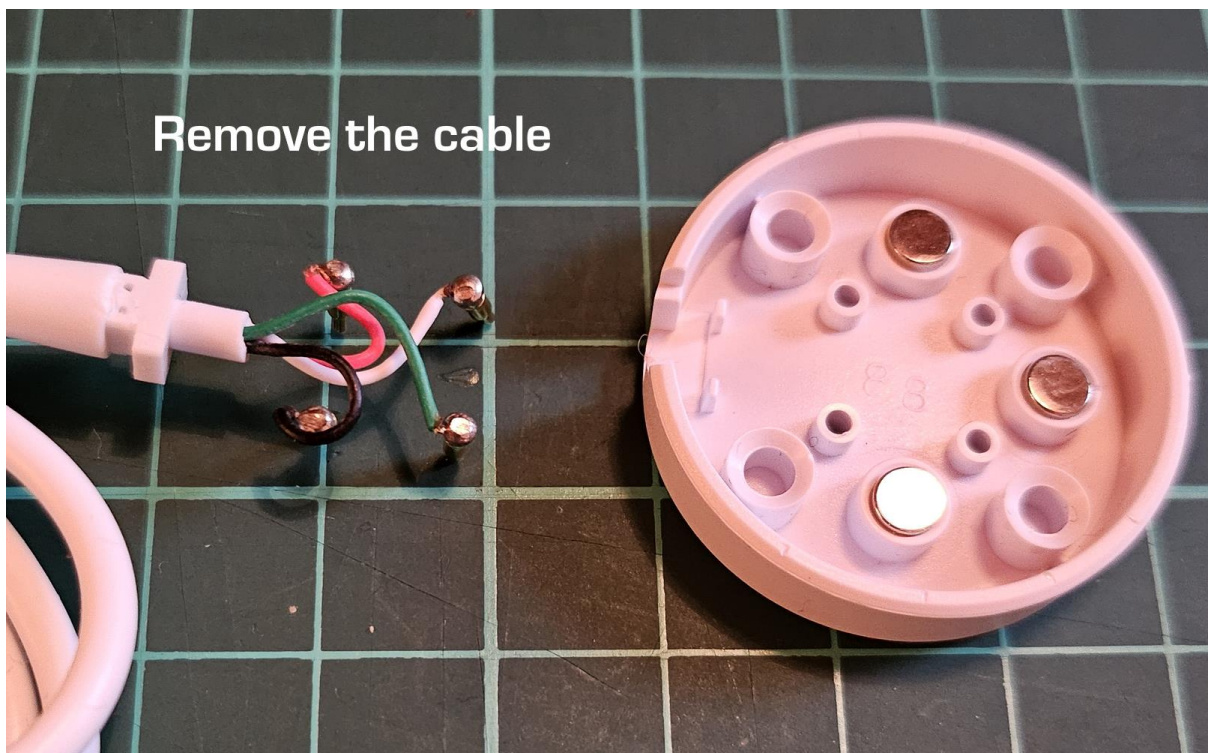

Mark the opposite magnets

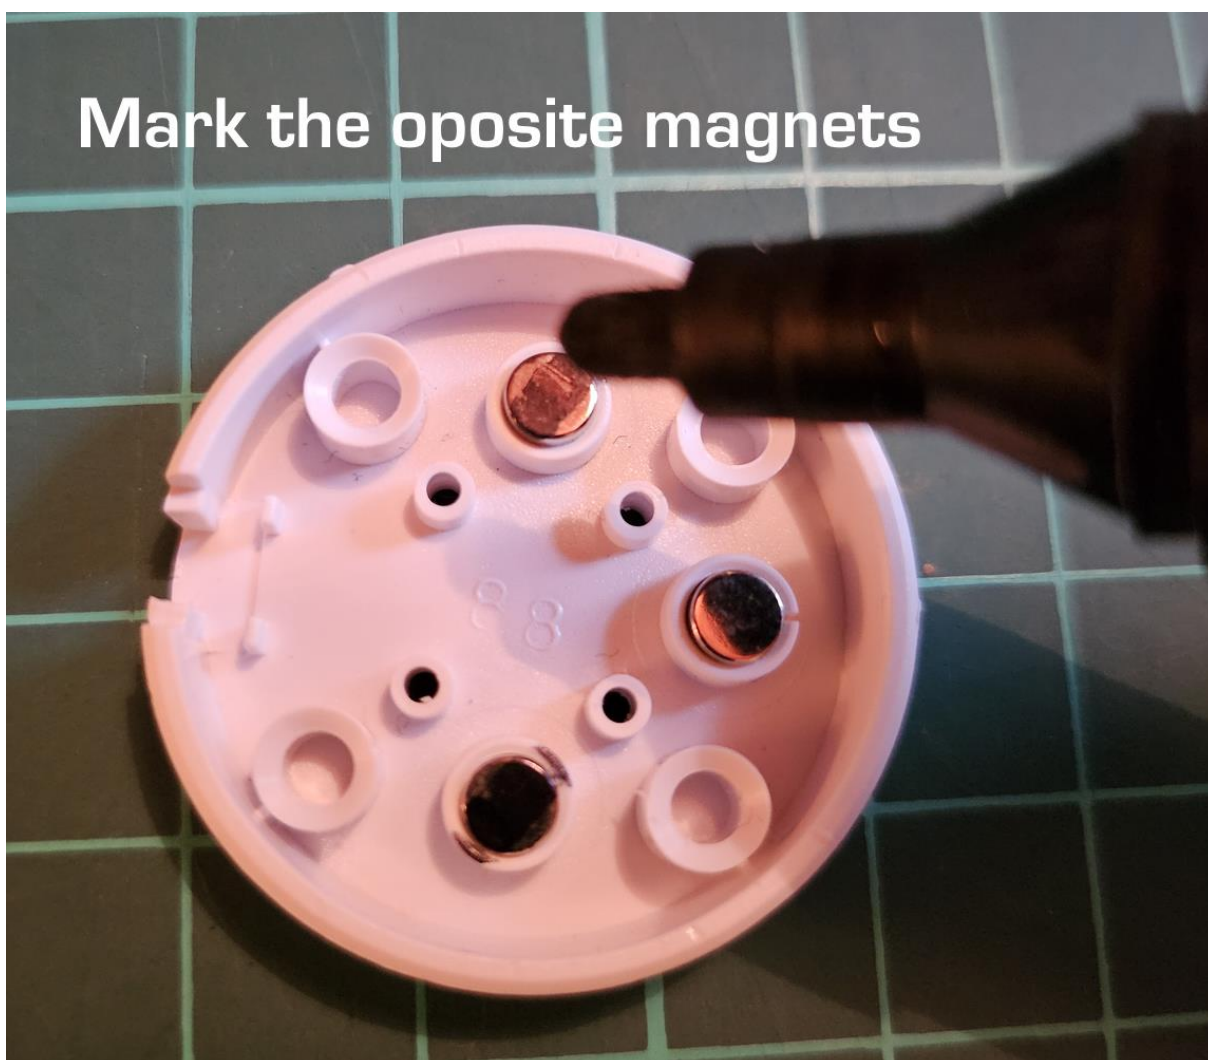

Heat a needle with a lighter




Locate the 1st magnet
and press it out




Pull it out...




...and put it back
the other way
round

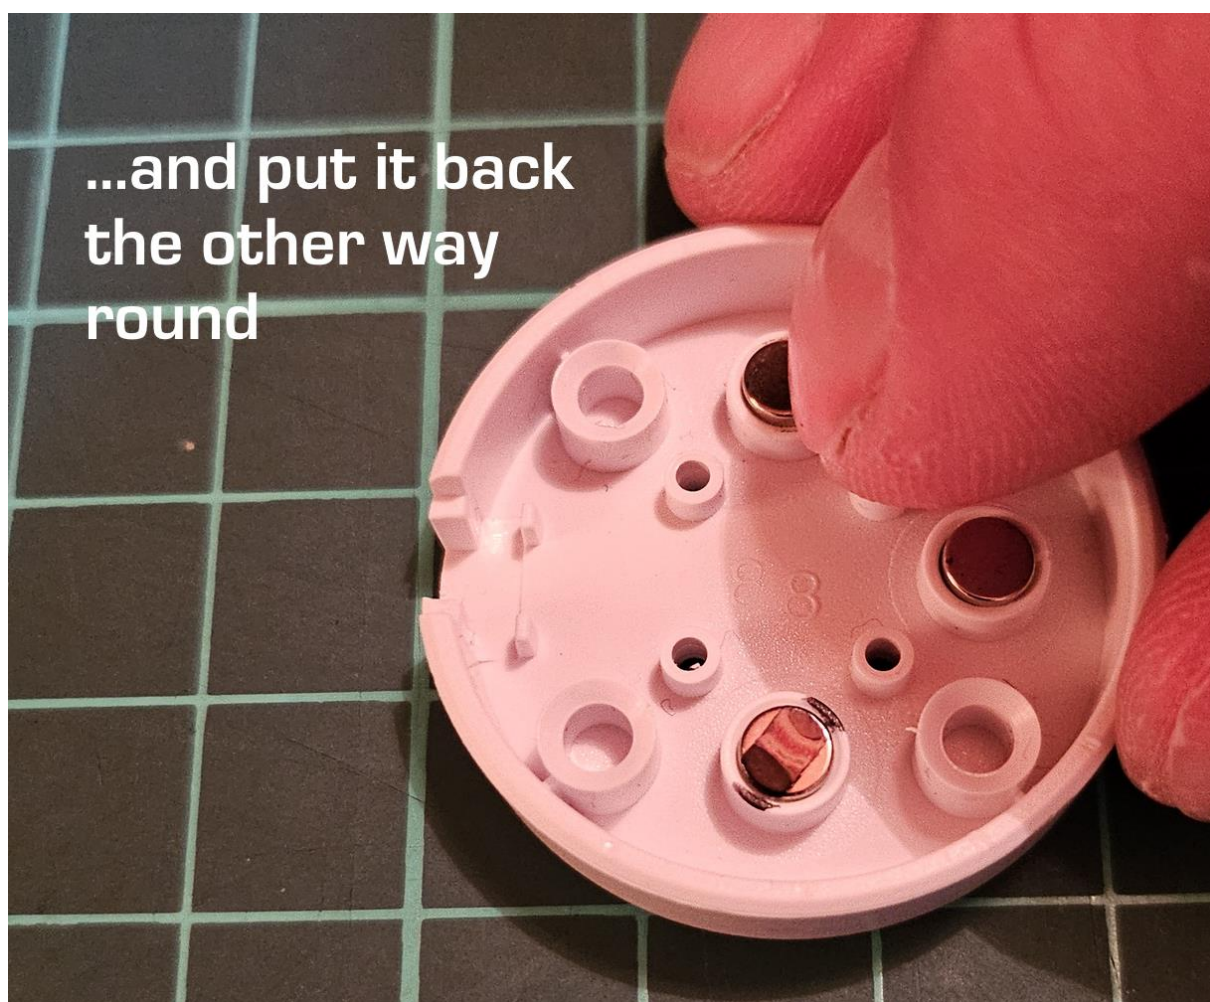


Then do the same
with the 2nd
magnet

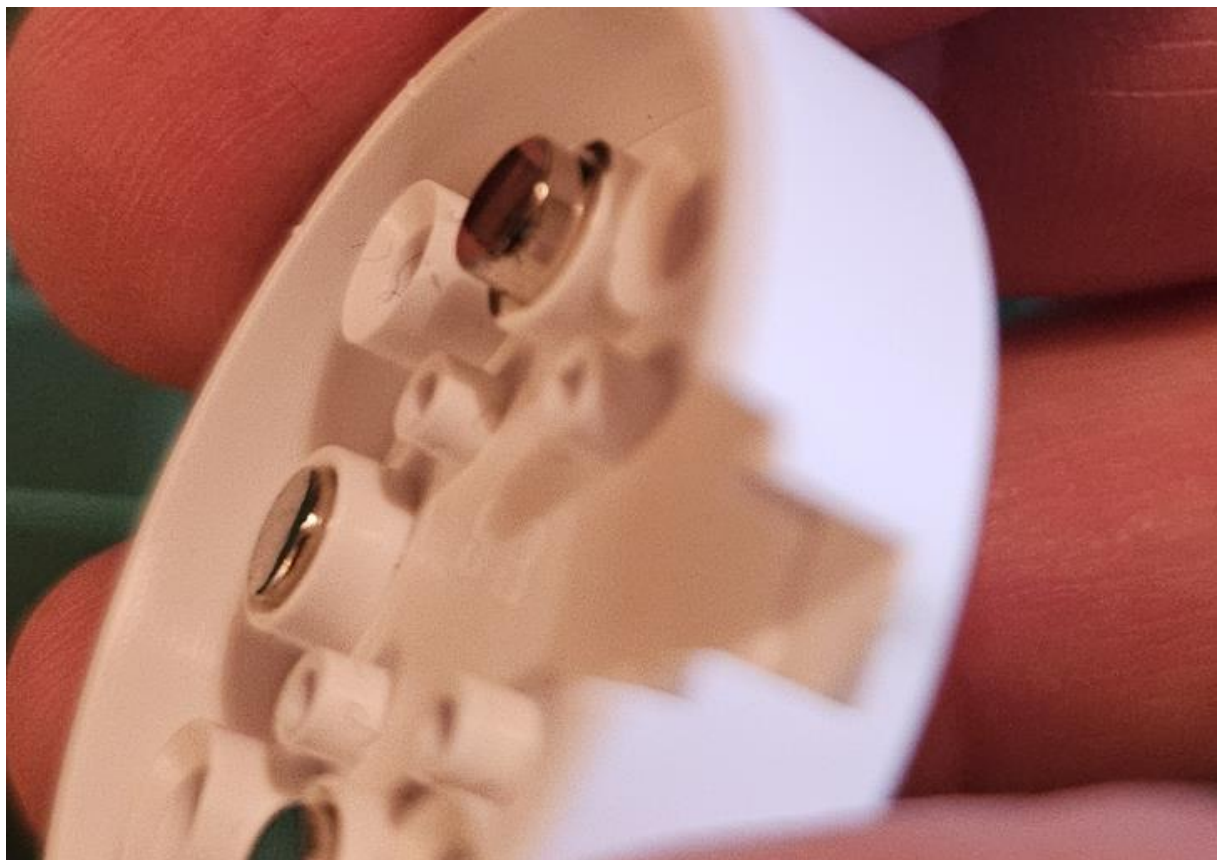

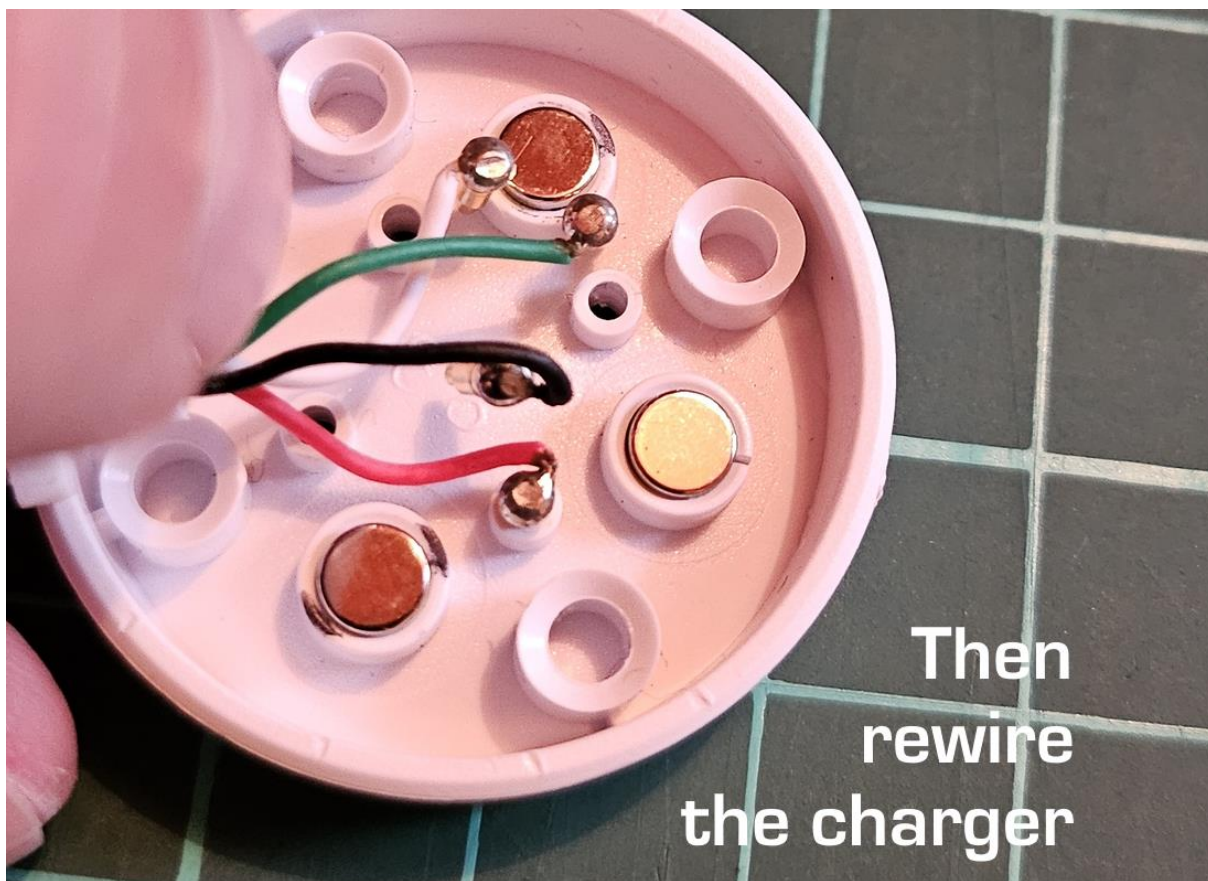


Then
rewire
the charger

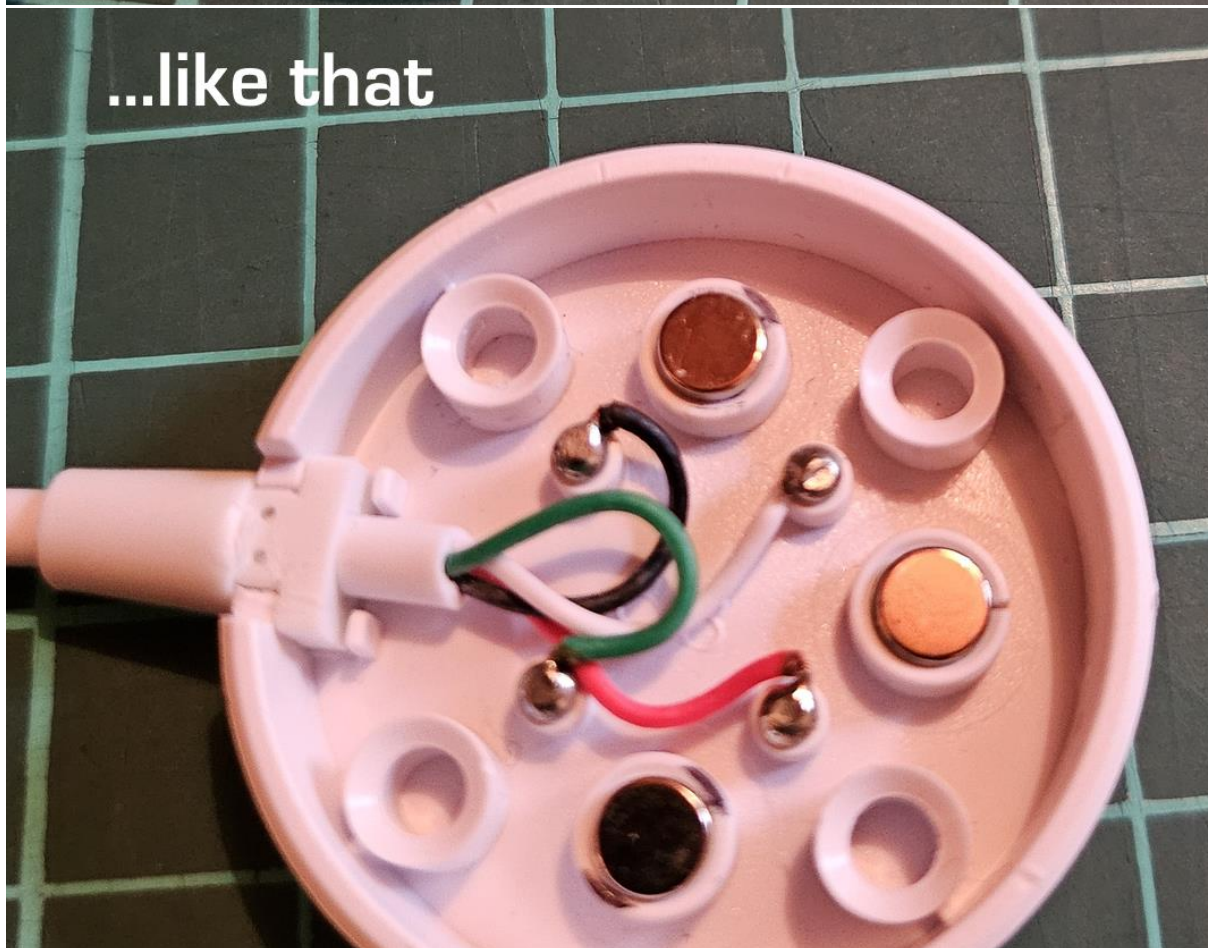

...like that

...close it...

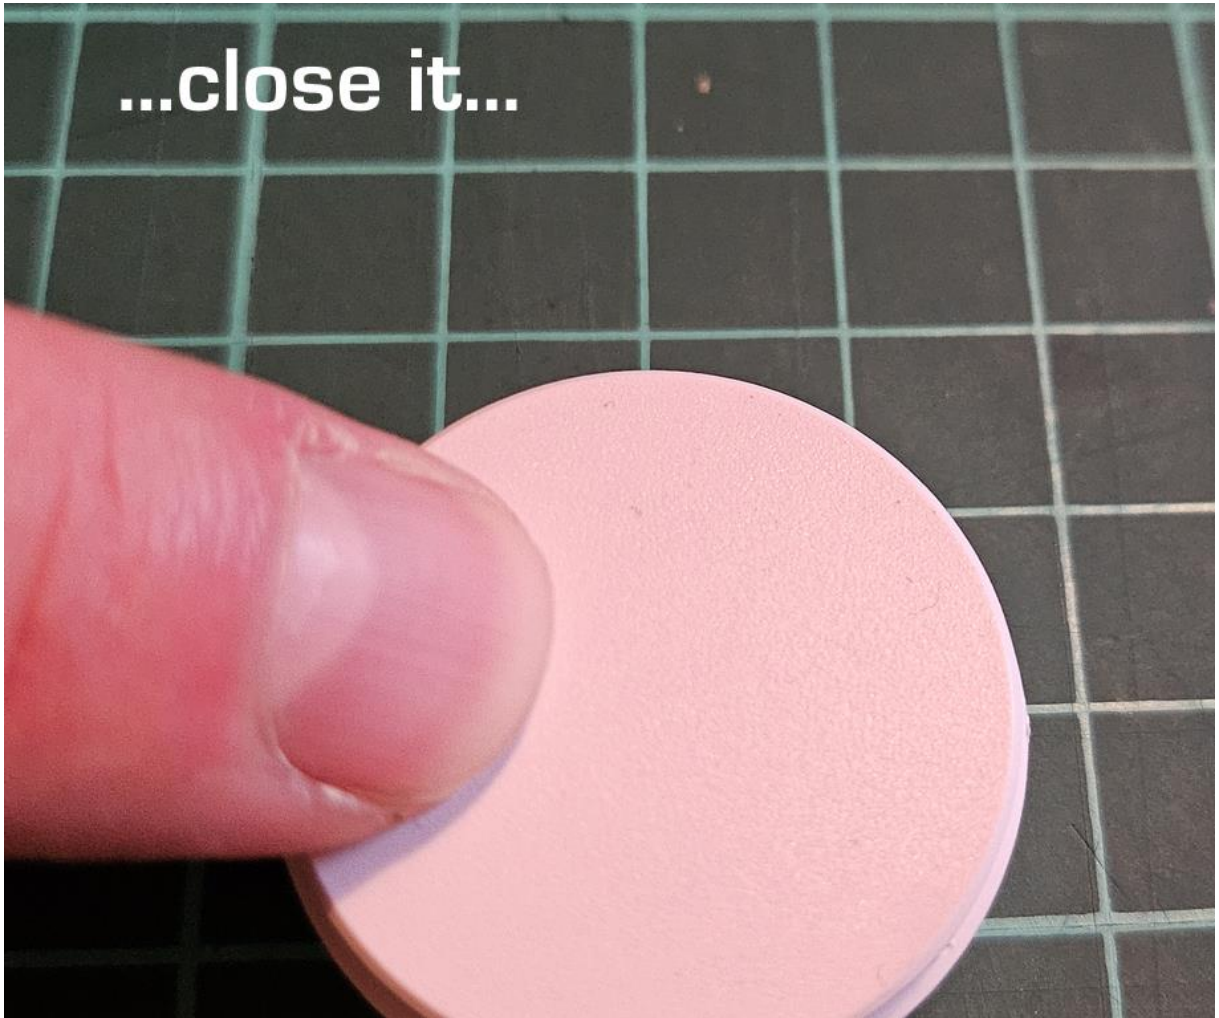

...and brand it! ;)

