# Modeling memory objects in gem5: Ports

IMPORTANT: This slide deck builds on top of what has already been developed in <u>Introduction to SimObjects</u>, <u>Debugging gem5</u>, and <u>Event Driven Simulation</u>.



#### **Ports**

In gem5, SimObjects can use Ports to send/request data. Ports are gem5's main interface to the memory. There are two types of Ports in gem5: RequestPort and ResponsePort.

As their names would suggest:

- [RequestPorts] make [requests] and await [responses].
- [ResponsePorts] await [requests] and send [responses].

Make sure to differentiate between request response and data. Both requests and response can carry data with them.



#### **Packets**

Packets facilitate communication through ports.

They can be either request or response packets.

NOTE: Packet in gem5 can change from a request to a response. This happens when the request arrives at a SimObject that can respond to it.

Every Packet has the following fields:

Addr: Address of the memory location being accessed.

- Data: Data associated with the Packet (the data that Packet carries).
- MemCmd: Denotes the kind of Packet and what it should do.
  - o Examples include: readReq / readResp / writeReq / writeResp.
- RequestorID: ID for the SimObject that created the request (requestor).

Class [Packet] is defined in gem5/src/mem/packet.hh. Note that, in our tutorial, we will deal with [Packet] in pointers.

PacketPtr is a type in gem5 that is equivalent to [Packet\*].



#### Ports in gem5

Let's take a look at gem5/src/mem/port.hh to see the declarations for Port classes.

Let's focus on the following functions. These functions make communication possible. Notice how recvTimingReq and recvTimingResp are pure virtual functions. This means that you can **not** instantiate an object of RequestPort or ResponsePort and instead you must extend them to fit your use case.

```
class RequestPort {
    ...
    public:
        bool sendTiminaRea(PacketPtr pkt):
        // inherited from TimingRequestProtocol in `src/mem/protocol/timing.hh`
        virtual bool recvTiminaResp(PacketPtr pkt) = 0;
        virtual void sendRetryResp();
    ...
};

class ResponsePort {
        ...
        bool sendTimingResp(PacketPtr pkt);
        // inherited from TiminaResponseProtocol in `src/mem/protocol/timing.hh`
        virtual bool recvTiminaRea(PacketPtr pkt) = 0;
        virtual void sendRetryReq();
        ...
};
```

#### **Access Modes: Timing, Atomic, Functional**

Ports allow 3 memory access modes:

- 1: In [timing] mode, accesses advance simulator time. In this mode, [requests] propagate down the memory hierarchy while each level imposes its latency and can potentially interleave processing of multiple requests. This mode is the only realistic mode in accessing the memory.
- 2: In atomic mode, accesses do not directly advance simulator time, rather it's left to the original requestor to move simulator time. Accesses are done atomically (are **not** interleaved). This access mode is useful for fast-forwarding simulation.
- 3: In functional mode, accesses to the memory are done through a chain of function calls.

Functional mode does not advance simulator time. All accesses are done in series and are not interleaved. This access mode is useful for initializing simulation from files, i.e. talking from the host to the simulator.



#### **Timing Protocol in Action**

IMPORTANT: A Port can only be connected to one other Port and it must be of a different type: RequestPort ResponsePort can only be connected to ResponsePort RequestPort.

If you look at <code>gem5/src/mem/port.hh</code> you'll see that class <code>RequestPort</code> has a <code>private</code> member called <code>ResponsePort\* \_responsePort</code> that holds a pointer to the <code>ResponsePort</code> that the <code>RequestPort</code> object is connected to (its <code>peer</code>).

Moreover, if you look at the definition of <code>sendTimingReq</code>/<code>sendTimingResp</code> in <code>gem5/src/mem/port.hh</code> you'll see that they will call and return <code>peer::recvTimingReq</code>/<code>peer::recvTimingResp</code>.

Now let's look at 2 scenarios for communication, in these scenarios let's assume:

- Requestor is a SimObject that has a RequestPort.
- Responder is a SimObject that has a ReponsePort.

**NOTE**: Note that while in our scenarios Requestor and Responder have one Port, SimObjects can have multiple ports of different types.

## **Scenario: Everything Goes Smoothly**





### Scenario: Everything Goes Smoothly

In this scenario:

```
1: Requestor sends a Packet as the request (e.g. a readReq). In C++ terms
Requestor::RequestPort::sendTimingReq is called which in turn calls
Responder::ResponsePort::recvTimingReq.
2: Responder is not busy and accepts the request. In C++ terms
Responder::ResponsePort::recvTimingReq returns true. Since Requestor has received true, it will
receive a response in the future.
3: Simulator time advances, Requestor and Responder continues execution. When Responder has
the response (e.g. readResp) ready, it will send the response to the requestor. In C++ terms
Responder::ResponsePort::sendTimingResp is called which in turn calls
Requestor::RequestPort::recvTimingResp .
4: Requestor is not busy and accepts the response. In C++ terms
Requestor::RequestPort::recvTimingResp returns true. Since Responder has received true, the
transaction is complete.
```



# Scenario: Responder Is Busy: Diagram





#### Scenario: Responder Is Busy

In this scenario:

```
1: Requestor Sends a Packet as the request (e.g. a readReq).
2: Responder is busy and rejects the request. In C++ terms
Responder::ResponsePort::recvTimingReq returns false. Since Requestor has received false, it waits
for a retry request from Responder .
3: When Responder becomes available (is not busy anymore), it will send a retry request to
Requestor |. In C++ terms | Responder::ResponsePort::sendReqRetry | is called which in turn calls
Requestor::RequestPort::recvReqRetry.
4: Requestor sends the blocked Packet as the request (e.g. a readReq).
5: Responder is not busy and accepts the request.
6: Simulator time advances, Requestor and Responder continue execution. When Responder has
the response ready it will send the response to the Requestor.
7: Requestor is not busy and can accept the response.
```



#### **Other Scenarios**

There are two other possible scenarios:

- 1- A scenario where the [Requestor] is busy.
- 2- A scenario where both [Requestor] and [Responder] are busy.

**CAUTION**: Scenarios where Requestor is busy should not happen normally. In reality, the Requestor makes sure it can receive the response for a request when it sends the request. I have never run into a situation where I had to design my SimObjects in a way that the Requestor will return false when recvTimingResp is called. That's not to say that if you find yourself in a situation like this, you have done something wrong; BUT I would look really hard into my code/design and verify I'm simulating something realistic.



#### InspectorGadget


In this step, we will implement our new [SimObject] called [InspectorGadget]. [InspectorGadget] will monitor all the traffic to the memory and make sure all the traffic is safe. In this tutorial, we will do this in multiple steps as laid out below.

- Step 1: We will implement InspectorGadget to forward traffic from CPU to memory and back, causing latency for queueing traffic.
- Step 2: We will extend InspectorGadget to *inspect* the traffic, causing further delay (for 1 cycle) for inspection.
- Step 3: We will extend [InpsectorGadget] like below:
  - It will do multiple inspection every cycle, resulting in higher traffic throughput.
  - It will expose [inspection\_latency] as a parameter.
- Step 4: We will extend [InspectorGadget] to allow for pipelining of the inspections.



#### InspectorGadget: Diagram

Here is a diagram of what InspectorGadget will look like eventually.

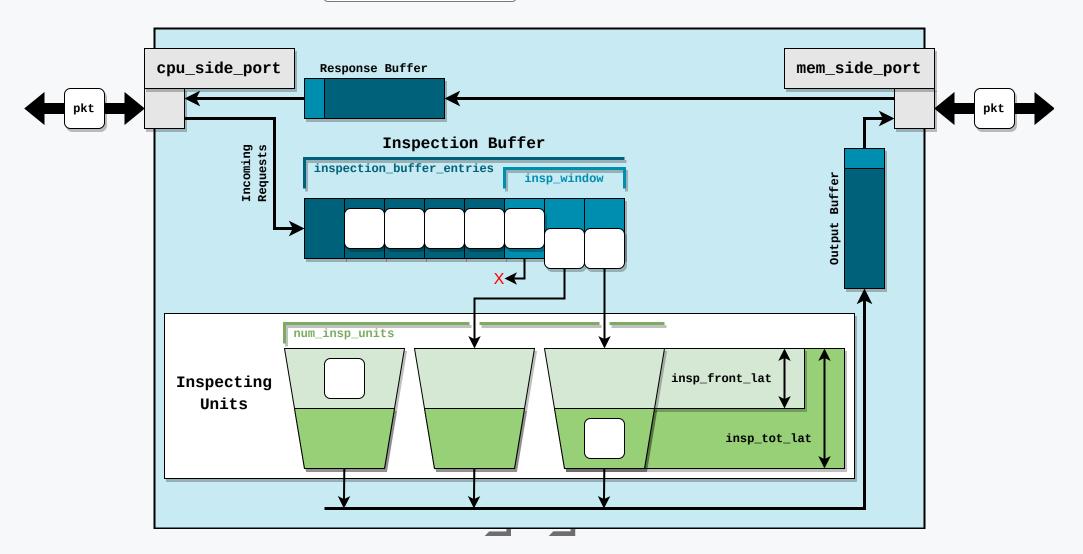

# Step 1: Buffering Traffic



#### ClockedObject

A ClockedObject is a child class of SimObject that provides facilities for managing time in cycles. Every ClockedObject has a clk\_domain parameter that defines its clock frequency. Using the clk\_domain, the ClockedObject provides functionalities like below:

- clockEdge(Cycles n): A function that returns the time of the nth clock edge into the future.
- nextCycle(): A function that return the time of first clock edge into the future, i.e. nextCycle() := clockEdge(Cycles(1)).

This class is defined in [gem5/src/sim/clocked\_object.hh] as shown below:

```
class ClockedObject : public SimObject, public Clocked
{
  public:
    ClockedObject(const ClockedObjectParams &p);

    /** Parameters of ClockedObject */
    using Params = ClockedObjectParams;

  void serialize(CheckpointOut &cp) const override;
  void unserialize(CheckpointIn &cp) override;

  PowerState *powerState;
};
```

### **InspectorGadget: Adding Files**

Now let's go ahead and create a SimObject declaration file for InspectorGadget. Do it by running the following commands:

```
cd /workspaces/2024/gem5/src
mkdir -p bootcamp/inspector-gadget
cd bootcamp/inspector-gadget
touch InspectorGadget.py
```

Now, let's also create a SConscript for registering InspectorGadget. Do it by running the following command:

touch SConscript



#### InspectoGadget: SimObject Declaration File

Now, inside InspectorGadget.py, let's define InspectorGadget as a ClockedObject. To do that, we need to import ClockedObject. Do it by adding the following line to InspectorGadget.py.

```
from m5.objects.ClockedObject import ClockedObject
```

The remaining part of the declaration is for now similar to that of [HelloSimObject] in Introduction to SimOjbects. Do that part on your own. When you are done, you can find my version of the code in the next slide.



#### InspectorGadget: SimObject Declaration File So Far

This is what should be in InspectorGadget.py now:

```
from m5.objects.ClockedObject import ClockedObject

class InspectorGadget(ClockedObject):
    type = "InspectorGadget"
    cxx_header = "bootcamp/inspector-gadget/inspector_gadget.hh"
    cxx_class = "gem5::InspectorGadget"
```



### **InspectorGadget: Ports in Python**

So far we have looked at the declaration of Ports in C++. However, to create an instance of a C++ class in Python we need a declaration of that class in Python. Ports are defined under <a href="mailto:gem5/src/python/m5/params.py">gem5/src/python/m5/params.py</a>. However, Ports do not inherit from class Param. I strongly recommend that you take a short look at <a href="mailto:gem5/src/python/m5/params.py">gem5/src/python/m5/params.py</a>.

Try to find what kind of parameters you can add to any SimObject /ClockedObject.

Our next step is to define a RequestPort and a ResponsePort for InspectorGadget. To do this add the following import line to InspectorGadget.py.

```
from m5.params import *
```

**NOTE**: My personal preference in python is to import modules very explicitly. However, when importing m5.params, I think it's ok to do import \*. This is mainly because, when I'm creating SimObjects, I might need different kinds of parameters that I might not know about in advance.



#### **InspectorGadget: Adding Ports**

Now, let's finally add two ports to <code>InspectorGadget</code>; One port will be on the side where the CPU would be in the computer system and one port will be on the side where the memory would be. Therefore, let's call them <code>cpu\_side\_port</code> and <code>mem\_side\_port</code> respectively.

Question: What type should cpu\_side\_port and mem\_side\_port be?

Before looking at the answer, try to answer the question for yourself.

**Answer**: cpu\_side\_port should be a ResponsePort and mem\_side\_port should be a RequestPort.

Make sure this answer makes sense to you, before moving on to the next slide.



#### InspectorGadget: Adding Ports cont.

Add the following two lines under the declaration of <a href="InspectorGadget">InspectorGadget</a> to add <a href="cpu\_side\_port">cpu\_side\_port</a> and <a href="mailto:mem\_side\_port">mem\_side\_port</a>:

```
cpu_side_port = ResponsePort("ResponsePort to receive requests from CPU side.")
mem_side_port = RequestPort("RequestPort to send received requests to memory side.")
```

To buffer traffic, we need two FIFOs: one for requests (from cpu\_side\_port to mem\_side\_port) and one for responses (from mem\_side\_port to cpu\_side\_port). For the the FIFO in the request path, we know that in the future we want to *inspect* the requests. Therefore, let's call it inspectionBuffer; we need a parameter to determine the the number of entries in this buffer so let's call that parameter inspection\_buffer\_entries. For the response path, we will simply call the buffer response\_buffer and add a parameter for its entries named response\_buffer\_entries. Do it by adding the following lines under the declaration of InspectorGadget:

```
inspection_buffer_entries = Param.Int("Number of entries in the inspection buffer.")
response_buffer_entries = Param.Int("Number of entries in the response buffer.")
```

#### InspectorGadget: SimObject Declaration File

This is what should be in InspectorGadget.py now:

```
from m5.objects.ClockedObject import ClockedObject
from m5.params import *
class InspectorGadget(ClockedObject):
    type = "InspectorGadget"
    cxx_header = "bootcamp/inspector-gadget/inspector_gadget.hh"
    cxx_class = "gem5::InspectorGadget"
    cpu_side_port = ResponsePort("ResponsePort to received requests from CPU side.")
    mem_side_port = RequestPort("RequestPort to send received requests to memory side.")
    inspection_buffer_entries = Param.Int("Number of entries in the inspection buffer.")
    response_buffer_entries = Param.Int("Number of entries in the response buffer.")
```



### **Updating SConscript**

Remember to register [InspectorGadget] as a [SimObject] as well as create a [DebugFlag] for it.

To do this, put the following in gem5/src/bootcamp/inspector-gadget/SConscript:

```
Import("*")
SimObject("InspectorGadget.py", sim_objects=["InspectorGadget"])
Source("inspector_gadget.cc")
DebugFlag("InspectorGadget")
```

**NOTE**: In the next steps we will create [inspector\_gadget.hh] and [inspector\_gadget.cc].



### **InspectorGadget: C++ Files**

Now, let's go ahead and create a header and source file for <code>InspectorGadget</code> in <code>gem5/src/bootcamp/inspector-gadget</code>. Remember to make sure the path to your header file matches that of what you specified in <code>cxx\_header</code> in <code>InspectorGadget.py</code> and the path for your source file matches that of what you specified in <code>SConscript</code>. Run the following commands from within our <code>inspector-gadget</code> directory:

```
touch inspector_gadget.hh
touch inspector_gadget.cc
```

Now, let's simply declare [InspectorGadget] as a class that inherits from [ClockedObject]. This means you have to import [sim/clocked\_object.hh] instead of [sim/sim\_object.hh]. Let's add everything that we have added in the Python to our class except for the [Ports].



#### InspectorGadget: Header File

```
#ifndef __BOOTCAMP_INSPECTOR_GADGET_INSPECTOR_GADGET_HH__
#define __BOOTCAMP_INSPECTOR_GADGET_INSPECTOR_GADGET_HH__
#include "params/InspectorGadget.hh"
#include "sim/clocked_object.hh"
namespace gem5
class InspectorGadget : public ClockedObject
  private:
    int inspectionBufferEntries;
    int responseBufferEntries;
  public:
    InspectorGadget(const InspectorGadgetParams& params);
} // namespace gem5
#endif // __BOOTCAMP_INSPECTOR_GADGET_INSPECTOR_GADGET_HH__
```



#### InspectorGadget::align Declaration

Since we're dealing with clocks and <code>Ticks</code>, let's add a function <code>[align]</code> that will return the time of the next clock cycle (in <code>Ticks</code>) after a given time (in <code>Ticks</code>).

To do this add the following lines under the <code>private</code> scope of <code>InspectorGadget</code> in <code>inspector\_gadget.hh</code>:

```
private:
   Tick align(Tick when);
```



#### InspectorGadget::align Definition

To define align, add the following code to inspector\_gadget.cc:

```
namespace gem5
{

Tick
InspectorGadget::align(Tick when)
{
    return clockEdge((Cycles) std::ceil((when - curTick()) / clockPeriod()));
}
} // namespace gem5
```

Make sure to add the following include statement to the top of the file since we're using std::ceil:

```
#include <cmath>
```



#### **Extending Ports**

Recall, RequestPort and ResponsePort classes were abstract classes, i.e. they had pure virtual functions which means objects can not be instantiated from that class. Therefore, for us to use Ports we need to extend the classes and implement their pure virtual functions.

Before anything, let's go ahead and import the header file that contains the declaration for Port classes. We also need to include mem/packet.hh since we will be dealing with and moving around Packets a lot. Do it by adding the following lines to inspector\_gadget.hh:

```
#include "mem/packet.hh"
#include "mem/port.hh"
```

**REMEMBER** to follow the right include order based on gem5's convention.



#### **Extending ResponsePort**

Now, let's get to extending [ResponsePort] class. Let's do it inside the scope of our [InspectorGadget] class to prevent using names used by other gem5 developers. Let's go ahead an create [CPUSidePort] class that inherits from [ResponsePort] in the [private] scope. To do this, add the following code to [inspector\_gadget.hh].

```
private:
  class CPUSidePort: public ResponsePort
    private:
     InspectorGadget* owner:
     bool needToSendRetry:
     PacketPtr blockedPacket:
   public:
     CPUSidePort(InspectorGadget* owner. const std::string& name):
          ResponsePort(name), owner(owner), needToSendRetry(false), blockedPacket(nullptr)
      {}
      bool needRetry() const { return needToSendRetry: }
      bool blocked() const { return blockedPacket != nullptr; }
     void sendPacket(PacketPtr pkt);
     virtual AddrRangeList getAddrRanges() const override:
     virtual bool recvTimingReq(PacketPtr pkt) override;
     virtual Tick recvAtomic(PacketPtr pkt) override:
     virtual void recvFunctional(PacketPtr pkt) override;
     virtual void recvRespRetry() override:
 };
```

#### **Extending ResponsePort: Deeper Look**

Here is a deeper look into the declaration of CPUSidePort.

- 1: InspectorGadget\* owner is a pointer to the instance of InspectorGadget that owns this instance of CPUSidePort. We need to access the owner when we receive requests, i.e. when recvTimingReq is called.
- 2: bool needToSendRetry tells us if we need to send a retry request. This happens when we reject a request because we are busy. When we are not busy, we check this before sending a retry request.
- 3: In addition to all the functions that are used for moving packets, the class [ResponsePort] has another [pure virtual] function that will return an [AddrRangeList] which represents all the address ranges for which the port can respond. Note that, in a system, the memory addresses can be partitioned among ports. Class [RequestPort] has a function with the same name, but it is already implemented and will just ask its peer [ResponsePort] for the ranges by calling [peer::getAddrRanges].
- 4: We will need to implement all of the functions that relate to moving packets the ones that start with recv. We will use owner to implement most of the functionality of these functions within InspectorGadget.
- 5: We'll talk about PacketPtr blockedPacket in the next slides.

### **Extending RequestPort**

We're going to follow a similar approach for extending RequestPort. Let's create class MemSidePort that inherits from RequestPort. Again we'll do it in the private scope of InspectorGadget. Do it by adding the following code to inspector\_gadget.hh.

```
private:
    class MemSidePort: public RequestPort
{
    private:
        InspectorGadget* owner;
        bool needToSendRetry;
        PacketPtr blockedPacket;

public:
        MemSidePort(InspectorGadget* owner, const std::string& name):
            RequestPort(name), owner(owner), needToSendRetry(false), blockedPacket(nullptr)
        {}
        bool needRetry() const { return needToSendRetry; }
        bool blocked() const { return blockedPacket != nullptr; }
        void sendPacket(PacketPtr pkt);

        virtual bool recvTimingResp(PacketPtr pkt) override;
        virtual void recvReqRetry() override;
};
```

#### **Extending RequestPort: Deeper Look**

Let's take a deeper look into what we added for class MemSidePort.

- 1: Like CPUSidePort, a MemSidePort instance holds a pointer to its owner with InspectorGadget\* owner. We do this to access the owner when we receive responses, i.e. when recvTimingResp is called.
- 2: When MemSidePort::sendTimingReq receives false, it means the request was blocked. We track a pointer to this blocked Packet in PacketPtr blockedPacket so that we can retry the request later.
- 3: Function blocked tells us if we are blocked by the memory side, i.e. still waiting to receive a retry request from memory side.
- 4: Function sendPacket is a wrapper around sendTimingReq to give our code more structure. Notice we don't need to definte sendTimingReq as it is already defined by TimingRequestProtocol.
- 5: We will need to implement all of the functions that relate to moving packets the ones that start with recv. We will use owner to implement most of the functionality of these functions within InspectorGadget.



### **Creating Instances of Ports in InspectorGadget**

Now that we have declared <code>CPUSidePort</code> and <code>MemSidePort</code> classes (which are not abstract classes), we can go ahead and create an instance of each class in <code>InspectorGadget</code>. To do that, add the following two lines to <code>inspector\_gadget.hh</code>

```
private:
   CPUSidePort cpuSidePort;
   MemSidePort memSidePort;
```



#### SimObject::getPort

Let's take a look at <code>gem5/src/sim/sim\_object.hh</code> again. Below is a snippet of code from the declaration of the function <code>getPort</code> in the class <code>SimObject</code>.

```
public:
   * Get a port with a given name and index. This is used at binding time
   * and returns a reference to a protocol-agnostic port.
   * dem5 has a request and response port interface. All memory objects
   * are connected together via ports. These ports provide a rigid
   * interface between these memory objects. These ports implement
   * three different memory system modes: timing, atomic, and
   * functional. The most important mode is the timing mode and here
   * timing mode is used for conducting cycle-level timing
   * experiments. The other modes are only used in special
   * circumstances and should *not* be used to conduct cycle-level
   * timing experiments. The other modes are only used in special
   * circumstances. These ports allow SimObjects to communicate with
   * each other.
   * @param if name Port name
   * @param idx Index in the case of a VectorPort
   * @return A reference to the given port
   * @ingroup api_simobject
 virtual Port &getPort(const std::string &if_name, PortID idx=InvalidPortID);
```



#### SimObject::getPort cont.

This function is used for connecting ports to each other. As far as we are concerned, we need to create a mapping between our Port objects in C++ and the Ports that we declare in Python. To the best of my knowledge, we will never have to call this function on our own.

For now, let's implement this function to return a <code>Port&</code> when we recognize <code>if\_name</code> (which would be the name that we gave to a <code>Port</code> in Python) and, otherwise, we will pass this up to the parent class <code>ClockedObject</code> to handle the function call.

Let's go ahead an add the declaration for this function to <code>inspector\_gadget.hh</code>.

```
public:
```

```
virtual Port& getPort(const std::string& if_name, PortID idxInvalidPortID);
```



#### **Enough with the Declarations! For Now!**

So far, we have declared quite a few functions that we need to implement. Let's start defining some of them. In the next several slides, we will be defining functions from <code>CPUSidePort</code> and <code>MemSidePort</code>, as well as <code>getPort</code> from <code>InspectorGadget</code>.

Open inspector\_gadget.cc and let's start by adding the following include statements:

```
#include "bootcamp/inspector-gadget/inspector_gadget.hh"

#include "debug/InspectorGadget.hh"
```

As we start defining functions, we will likely find the need to declare and define more functions. To keep things organized, let's just note them down as we go. We will then go back to declaring and defining them.



# **Defining InspectorGadget::getPort**

Let's start by implementing [InspectorGadget::getPort]. Add the following code inside [namespace gem5] in [inspector\_gadget.cc] to do this (all code in such definition files should go inside [namespace gem5]):

```
Port&
InspectorGadget::getPort(const std::string &if_name, PortID idx)
{
    if (if_name == "cpu_side_port") {
        return cpuSidePort;
    } else if (if_name == "mem_side_port") {
        return memSidePort;
    } else {
        return ClockedObject::getPort(if_name, idx);
    }
}
```

If you remember, <code>[getPort]</code> needs to create a mapping between <code>[Port]</code> objects in Python and <code>[Port]</code> objects in C++. In this function when <code>[if\_name == "cpu\_side\_port"]</code> we will retrun <code>[cpuSidePort]</code> (the name comes from the Python declaration, look at <code>[InspectorGadget.py]</code>). We do the same thing to map <code>[mem\_side\_port]</code> to our instance <code>[memSidePort]</code>. For now, you don't have to worry about <code>[idx]</code>. We will talk about it later in the context of <code>[VectorPorts] - ports</code> that can connect to multiple peers.

# **Defining Functions from CPUSidePort**

Now, that we have implemented <code>InspectorGadget::getPort</code>, we can start declaring and defining the functions that simulate the <code>request</code> path (from <code>cpu\_side\_port</code> to <code>mem\_side\_port</code>) in <code>InspectorGadget</code>. Here are all the functions that we need to define from <code>CPUSidePort</code>:

```
virtual AddrRangeList getAddrRanges() const override;
virtual bool recvTimingReq(PacketPtr pkt) override;
virtual Tick recvAtomic(PacketPtr pkt) override;
virtual void recvFunctional(PacketPtr pkt) override;
```

As we start defining these functions you will see that [Ports] are interfaces that facilitate communication between [SimObjects]. Most of these functions rely on [InspectorGadget] to provide the bulk of the functionality.



# CPUSidePort::recvAtomic, CPUSidePort::recvFunctional

These two functions are very simple to define. Basically, our responsibility is to pass the PacketPtr to SimObjects further down in the memory hierarchy. To implement them we will call functions with the same name from InspectorGadget. Add the following code to inspector\_gadget.cc:

```
Tick
InspectorGadget::CPUSidePort::recvAtomic(PacketPtr pkt)
{
    DPRINTF(InspectorGadget. "%s: Received pkt: %s in atomic mode.\n", __func__, pkt->print());
    return owner->recvAtomic(pkt);
}

void
InspectorGadget::CPUSidePort::recvFunctional(PacketPtr pkt)
{
    DPRINTF(InspectorGadget. "%s: Received pkt: %s in functional mode.\n", __func__, pkt->print());
    owner->recvFunctional(pkt);
}
```

We will also need to eventually declare the functions that we call from the owner, which is an InspectorGadget. Keep these in mind:

#### **Declarations:**

```
Tick InspectorGadget::recvAtomic(PacketPtr);
void InspectorGadget::recvFunctional(PakcetPtr);
```

# CPUSidePort::getAddrRanges

Reminder: This function returns an AddrRangeList that represents the address ranges for which the port is a responder. To understand this better, think about dual channel memory. Each channel in the memory is responsible for a subset of all the addresses in your computer.

To define this function, we are again going to rely on <code>InspectorGadget</code> and call a function with the same name from <code>InspectorGadget</code>. Do this by adding the following code to <code>inspector\_gadget.cc</code>:

```
AddrRangeList
InspectorGadget::CPUSidePort::getAddrRanges() const
{
    return owner->getAddrRanges();
}
```

#### **Declarations:**

AddrRangeList InspectorGadget::getAddrRanges() const;



# CPUSidePort::recvTimingReq

In this function we will do the following:

Ask the owner to receive the Packet the Port is receiving. To do this we will call a function with the same name from InspectorGadget. If InspectorGadget can accept the Packet then the Port will return true. Otherwise, the Port will return false as well as remember that we need to send a retry request in the future, i.e. we will set needToSendRetry = true.

To define this function add the following code to [inspector\_gadget.cc].

```
bool
InspectorGadget::CPUSidePort::recvTimingReq(PacketPtr pkt)
{
    DPRINTF(InspectorGadaet. "%s: Received pkt: %s in timing mode.\n", __func__, pkt->print());
    if (owner->recvTimingReq(pkt)) {
        return true;
    }
    needToSendRetry = true;
    return false;
}
```

#### **Declarations:**

bool InspectorGadget::recvTimingReq(PacketPtr);

#### **Back to Declaration**

Now that we are finished with defining functions from <code>CPUSidePort</code>, let's go ahead and declare the functions from <code>InspectorGadget</code> that we noted down.

To do this add the following code to the public scope of InspectorGadget in inspector\_gadget.hh.

```
public:
   AddrRangeList getAddrRanges() const;
   bool recvTimingReq(PacketPtr pkt);
   Tick recvAtomic(PacketPtr pkt);
   void recvFunctional(PacketPtr pkt);
```



#### **TimedQueue**

As we mentioned, in this first step, all InspectorGadget does is buffer the traffic, forwarding requests and responses. To do that, let's create a "first in first out" (FIFO) structure for inspectionBuffer and responseBuffer. We will wrap std::queue to expose the following functionalities, the purpose of this structure is impose a minimum latency between the times when items are pushed to the queue and when they can be accessed. We will add a member variable called latency to make this delay configurable.

- 1: Method front that will return a reference to the oldest item in the queue, similar to std::queue.
- 2: Method [pop] that will remove the oldest item in the queue, similar to [std::queue].
- 3: Method push that will add a new item to the queue as well as tracking the simulation time the item was inserted. This is useful for ensuring a minimum amount of time has passed before making it ready to be accessed, modeling the latency.
- 4: Method [empty] that will return true if queue is empty, similar to [std::queue].
- 5: Method [size] that will return the number of items in the queue, similar to [std::queue].
- 6: Method [hasReady] will return true if an item in the queue can be accessed at a given time (i.e. has spent a minimum latency in the queue).
- 7: Method | firstReadyTime | will return the time at which the oldest item becomes accessible.

#### **Timed Queue: Details**

Like CPUSidePort and MemSidePort, let's declare our class TimedQueue in the private scope of InspectorGadget. Do this by adding the lines on the right side of this slide to inspector\_gadget.hh.

Make sure to add the following include statement to the top of the file as well.

```
#include <queue>
```

```
private:
  template<tvpename T>
  class TimedQueue
   private:
     Tick latency:
     std::queue<T> items:
     std::queue<Tick> insertionTimes;
   public:
     TimedQueue(Tick latency): latency(latency) {}
     void push(T item, Tick insertion_time) {
          items.push(item):
          insertionTimes.push(insertion_time);
     void pop() {
          items.pop():
          insertionTimes.pop();
     T& front() { return items.front(): }
     bool emptv() const { return items.emptv(): }
     size_t size() const { return items.size(); }
     bool hasReadv(Tick current_time) const {
          if (empty()) {
              return false:
          return (current_time - insertionTimes.front()) >= latency;
     Tick firstReadyTime() { return insertionTimes.front() + latency; }
 };
```



# inspectionBuffer

Now, let's declare an instance of <code>TimedQueue</code> to buffer <code>PacketPtrs</code> that <code>InspectorGadget</code> receives from <code>InspectorGadget::cpuSidePort::recvTimingReq</code>. Add the following lines to the <code>private</code> scope of class <code>InspectorGadget</code> to do this:

```
private:
   TimedQueue<PacketPtr> inspectionBuffer;
```

Now that we have declared <code>inspectionBuffer</code>, we are ready to define the following functions (these are already declared):

```
AddrRangeList getAddrRanges() const;
bool recvTimingReq(PacketPtr pkt);
Tick recvAtomic(PacketPtr pkt);
void recvFunctional(PacketPtr pkt);
```

**NOTE**: For now we are focusing on the request path, i.e. we're not going to define recvRespRetry just yet.



# Let's Get the Easy Ones Out the Way

Between the four functions, <code>[getAddrRanges]</code> and <code>[recvFunctional]</code> are the most straight-forward to define. We just need to call the same functions from <code>[memSidePort]</code>. To define these two functions, add the following code under <code>[namespace gem5]</code> in <code>[inspector\_gadget.cc]</code>:

```
AddrRangeList
InspectorGadget::getAddrRanges() const
{
    return memSidePort.getAddrRanges();
}

void
InspectorGadget::recvFunctional(PacketPtr pkt)
{
    memSidePort.sendFunctional(pkt);
}
```

**NOTE**: These two functions are already defined by RequestPort and we don't need to redefine them. Notice how, for Ports, you only have to define functions that relate to receiving signals.



# InspectorGadget::recvAtomic

Looking at recvatomic, this function returns a value of type Tick. This value is supposed to represent the latency of the access if that access was done in singularity, i.e atomically/without being interleaved. **CAUTION**: This latency is not an accurate representation of the actual latency of the access in a real setup. In a real setup there are many accesses happening at the same time and most of the time accesses do not happen atomically.

Let's add *one* cycle to the latency of accesses from the lower level of memory hierarchy. To do this we are going to call <code>clockPeriod</code> from the parent class of <code>InspectorGadget</code>, which is <code>ClockedObject</code>. This function returns the period of the <code>clk\_domain</code> in <code>Ticks</code>. Add the following code to define of <code>InspectorGadget::recvAtomic</code> in <code>inspector\_gadget.cc</code>.

```
Tick
InspectorGadget::recvAtomic(PacketPtr pkt)
{
    return clockPeriod() + memSidePort.sendAtomic(pkt);
}
```



#### On to the Hard Part

As we discussed before, <code>timing</code> accesses are the accesses that advance simulator time and represent real setups.

InspectorGadget::recvTimingReq will need to check if there is at least one available entry in the inspectionBuffer. If there are no entries left, it should return false; otherwise, it should place the Packet at the end of the buffer — i.e. push into inspectionBuffer — and return true.

To define InspectorGadget::recvTimingReq, add the following code to inspector-gadget.cc:

```
bool
InspectorGadget::recvTimingReq(PacketPtr pkt)
{
   if (inspectionBuffer.size() >= inspectionBufferEntries) {
      return false;
   }
   inspectionBuffer.push(pkt, curTick());
   return true;
}
```

#### We're Not Done Yet!

So far, we have managed to program the movement of <code>Packets</code> from <code>cpuSidePort</code> into <code>inspectionBuffer</code>. Now, what we need to send the <code>Packets</code> that are inside <code>inspectionBuffer</code> to <code>memSidePort</code>.

One would ask, why not call <code>[memSidePort.sendTimingReq]</code> inside <code>[InspectorGadget::recvTimingReq]</code>? The answer is because we want to impose a latency on the movement of the <code>[Packet]</code> through <code>[inspectionBuffer]</code>. Think about how the real hardware would work. If the <code>[Packet]</code> is available on <code>[cpuSidePort]</code> on the rising edge of the clock, it would go inside <code>[inspectionBuffer]</code> by the falling edge of the clock, i.e. time will pass. Now, assuming that <code>[Packet]</code> is at the front of <code>[inspectionBuffer]</code>, it will be available on the rising edge of the next clock cycle. If you remember, we use <code>[events]</code> to make things happen in the future by defining callback functions.

Now, let's go ahead and declare an EventFunctionWrapper for picking the Packet at the front of inspectionBuffer and sending it through memSidePort.



# nextReqSendEvent

We're going to declare a function <a href="EventFunctionWrapper nextReqSendEvent">EventFunctionWrapper nextReqSendEvent</a> to send <a href="Packets">Packets</a> through <a href="memSidePort">memSidePort</a>. Remember what we need to do?

Add the following include statement to <code>inspector\_gadget.hh</code> to include the appropriate header file for the class <code>EventFunctionWrapper</code>.

```
#include "sim/eventq.hh"
```

If you remember from <a href="Event Driven Simulation">Event Driven Simulation</a>, we also need to declare a <a href="std::function</a><a href="std

```
private:
    EventFunctionWrapper nextReqSendEvent;
    void processNextReqSendEvent();
```

# Managing the Schedule of nextReqSendEvent

Now, that we have declared <code>[nextReqSendEvent]</code>, we can schedule <code>[nextReqSendEvent]</code> in <code>[InspectorGadget::recvTimingReq]</code>. We will see in a few slides why it is helpful to have a function that decides if and when <code>[nextReqSendEvent]</code> should be scheduled.

What I do when I write <code>SimObjects</code> is that, for every <code>[event]</code>, I create a function to schedule that event. I name these functions with <code>schedule</code> prefixing the name of the event. Let's go ahead and a declare <code>scheduleNextReqSendEvent</code> under the <code>private</code> scope in <code>InspectorGadget</code>.

Open [inspector\_gadget.hh] and add the following lines:

```
private:
```

void scheduleNextReqSendEvent(Tick when);

We'll see that one event might be scheduled in multiple locations in the code. At every location, we might have a different perspective on when an event should be scheduled. Tick when denotes the earliest we think that event should be scheduled from the perspective of the location.

# Back to InspectorGadget::recvTimingReq

Now, we can finally go ahead and add a function call to scheduleNextReqSendEvent in InspectorGadget::recvTimingReq. Since we are assuming it will take **one** cycle to insert an item to inspectionBuffer, we're going to pass nextCycle() as when argument.

This is how InspectorGadget::recvTimingReq should look after all the changes.

```
bool
InspectorGadget::recvTimingReq(PacketPtr pkt)
{
    if (inspectionBuffer.size() >= inspectionBufferEntries) {
        return false;
    }
    inspectionBuffer.push(pkt, curTick());
    scheduleNextReqSendEvent(nextCycle());
    return true;
}
```



#### MemSidePort::sendPacket

As mentioned before, it's a good idea to create a function for sending [Packets] through [memSidePort]. To do this, let's go ahead and define [MemSidePort::sendPacket]. We define this function now since we're going to need it in [processNextReqSendEvent].

To define MemSidePort::sendPacket add the following code to inspector\_gadget.cc

**NOTE**: We call panic if this function is called when we have a blocked Packet. This is because if there is already a Packet that is rejected, we expect consequent Packets be rejected until we receive a retry request. We make sure to follow this by not trying to send Packets when blocked prior.

#### InspectorGadget::processNextReqSendEvent cont.

Now that we have defined sendPacket, we can use it in processNextReqSendEvent. Add the following definition to inspector\_gadget.cc:

```
void
InspectorGadget::processNextReqSendEvent()
{
    panic_if(memSidePort.blocked(), "Should never try to send if blocked!");
    panic_if(!outputBuffer.hasReady(curTick()), "Should never try to send if no ready packets!");
    PacketPtr pkt = inspectionBuffer.front();
    memSidePort.sendPacket(pkt);
    inspectionBuffer.pop();
    scheduleNextReqSendEvent(nextCycle());
```



# InspectorGadget::processNextReqSendEvent: Deeper Look

Here are a few things to note about processNextReqSendEvent:

- 1: We should not try to send a Packet if memSidePort.blocked() is true. We made this design decision and checked for it in MemSidePort::sendPacket to prevent Packets from being lost or accidentally changing the order of Packets.
- 2: We should not try to send a Packet when there is no Packet ready at curtick().
- 3: When we are done, we need to try to schedule [nextReqSendEvent] in its callback event.

#### Let's take a step back...

Are we done with <code>cpuSidePort</code> yet? If we look at <code>InspectorGadget::recvTimingReq</code>, we return false when there is not enough space in <code>inspectionBuffer</code>. Also, if you remember, if the <code>reponsder</code> (in our case <code>InspectorGadget</code>) rejects a <code>request</code> because it's busy (in our case because we don't have enough space in <code>inspectionBuffer</code>), the <code>responder</code> has to send a <code>request retry</code> when it becomes available (in our case, when there is room freed in <code>inspectionBuffer</code>). So let's go ahead and send a <code>request retry</code> to the <code>peer</code> of <code>cpuSidePort</code>. We need to send that retry <code>one cycle later</code>. So, we need another event for that. Let's go ahead and add it.

#### nextReqRetryEvent

Let's add a declaration for <a href="mailto:nextReqRetryEvent">nextReqRetryEvent</a> as well as its callback function and its scheduler function. To do it add the following lines to the <a href="private">private</a> scope of <a href="mailto:InspectorGadget">InspectorGadget</a> in <a href="mailto:inspector\_gadget.hh">inspector\_gadget.hh</a>.

```
private:
    EventFunctionWrapper nextReaRetryEvent;
    void processNextReaRetryEvent();
    void scheduleNextReaRetryEvent(Tick when);
```

Define the functions by adding the following code in <code>inspector\_gadget.cc</code>.

```
void
InspectorGadget::processNextReqRetryEvent()
{
    panic if(!cpuSidePort.needRetry(), "Should never try to send retry if not needed!");
    cpuSidePort.sendRetryReq();
}

void
InspectorGadget::scheduleNextReqRetryEvent(Tick when)
{
    if (cpuSidePort.needRetry() && !nextReqRetryEvent.scheduled()) {
        schedule(nextReqRetryEvent, align(when));
    }
}
```

#### **Back to processNextReqSendEvent**

Now all that is left to do in processNextReqSendEvent is to try scheduling nextReqRetry for nextCycle after we have sent a Packet. Let's go ahead and add that our code. This is how processNextReqSendEvent should look like after these changes:

```
void
InspectorGadget::processNextReqSendEvent()
{
    panic_if(memSidePort.blocked(), "Should never try to send if blocked!");
    panic_if(!inspectionBuffer.hasReady(curTick()), "Should never try to send if no ready packets!");

    PacketPtr pkt = inspectionBuffer.front();
    memSidePort.sendPacket(pkt);
    inspectionBuffer.pop();

    scheduleNextReqRetryEvent(nextCycle());
    scheduleNextReqSendEvent(nextCycle());
}
```

Next we will see the details of the scheduler function for nextReqSendEvent.



# scheduleNextReqSendEvent

To define scheduleNextReqSendEvent, add the following code to inspector\_gadget.cc.

```
void
InspectorGadget::scheduleNextReqSendEvent(Tick when)
{
   bool port avail = !memSidePort.blocked():
   bool have_items = !inspectionBuffer.empty();

   if (port_avail && have_items && !nextReqSendEvent.scheduled()) {
        Tick schedule time = alian(inspectionBuffer.firstReadyTime());
        schedule(nextReqSendEvent, schedule_time);
   }
}
```

You might wonder why we need to calculate schedule\_time ourselves. As we mentioned, Tick when is passed from the perspective of the caller for when it thinks nextReqSendEvent should be scheduled. However, we need to make sure that we schedule the event at the time that simulates latencies correctly.

Make sure to add the following include statement as well since we're using std::max.

```
#include <algorithm>
```

# MemSidePort::recvReqRetry

We're almost done with defining the whole request path. The only thing that remains is to react to request retries we receive from the peer of memSidePort.

Since we tracked the last Packet that we have tried to send, we can simply try sending that packet again. Let's consider the following for this function:

- 1: We shouldn't receive a request retry if we're not blocked.
- 2: For now, let's accept that there might be scenarios when a request retry will arrive but when we try to send blockedPacket, it will be rejected again. So let's account for that when writing MemSidePort::recvReqRetry.
- 3: If sending blockedPacket succeeds, we can now try to schedule nextReqSendEvent for nextCycle (we have to ask owner to do this).



#### MemSidePort::recvReqRetry cont.

Add the following code to [inspector\_gadget.cc] to define [MemSidePort::recvReqRetry]

```
void
InspectorGadget::MemSidePort::recvReqRetry()
{
    panic_if(!blocked(), "Should never receive retry if not blocked!");

    DPRINTF(InspectorGadget, "%s: Received retry signal.\n", __func__);
    PacketPtr pkt = blockedPacket;
    blockedPacket = nullptr;
    sendPacket(pkt);

    if (!blocked()) {
        owner->recvReqRetry();
    }
}
```

#### **Declarations**:

void InspectorGadget::recvReqRetry();



#### InspectorGadget::recvReqRetry

Let's go ahead and declare and define recvReqRetry in the public scope of InspectorGadget. Add the following lines to inspector\_gadget.hh to declare InpsectorGadget::recvReqRetry:

```
private:
  void recvReqRetry();
```

Now, let's define it. We simply need to try to schedule <code>[nextReqSendEvent]</code> for the <code>[nextCycle]</code>. Add the following code to <code>[inspector\_gadget.cc]</code>:

```
void
InspectorGadget::recvReqRetry()
{
    scheduleNextReqSendEvent(nextCycle());
}
```

# Let's Do All of This for Response Path

So far, we have completed the functions required for the request path (from cpuSidePort to memSidePort). Now we have to do all of that for the response path. I'm not going to go over the details of that since they are going to look very similar to the functions for the request path.

However, here is a high level representation of both paths.

#### **Request Path** (without retries)

CPUSidePort.recvTimingReg

- ->InspectorGadget.recvTimingReq
- ->InspectorGadget.processNextReqSendEvent
- ->MemSidePort.sendPacket

#### **Response Path** (without retries)

MemSidePort.recvTimingResp

- ->InspectorGadget.recvTimingResp
- ->InspectorGadget.processNextRespSendEvent
- ->CPUSidePort.sendPacket

#### Response Path Additions to Header File

Let's declare the following in <code>inspector\_gadget.hh</code> to implement the <code>response</code> path.

```
private:
  TimedQueue<PacketPtr> responseBuffer;
  EventFunctionWrapper nextRespSendEvent;
  void processNextRespSendEvent();
  void scheduleNextRespSendEvent(Tick when);
  EventFunctionWrapper nextRespRetryEvent;
  void processNextRespRetryEvent();
  void scheduleNextRespRetryEvent(Tick when);
public:
  bool recvTimingResp(PacketPtr pkt);
```



# **Defining Functions for the Response Path**

Here is a comprehensive list of all the functions we need to declare and define for the response
path. Let's not forget about 
InspectorGadget::recvRespRetry.

```
bool MemSidePort::recvTimingResp(PacketPtr pkt);
void CPUSidePort::sendPacket(PacketPtr pkt);
void CPUSidePort::recvRespRetry();
bool InspectorGaget::recvTimingResp(PacketPtr pkt);
void InspectorGaget::recvRespRetry();
void InspectorGaget::processNextRespSendEvent();
void InspectorGaget::scheduleNextRespSendEvent(Tick when);
void InspectorGaget::processNextRespRetryEvent();
void InspectorGaget::scheduleNextRespSendEvent(Tick when);
```

To find the definition for all these functions please look at the <u>complete version</u> of <u>inspector\_gadget.cc</u>. You can search for <u>Too-Much-Code</u> to find these functions.



#### InspectorGadget::InspectorGadget

Now, what we have to do is define the constructor of <code>InspectorGadget</code>. To do it add the following code to <code>inspector\_gadget.cc</code>:

```
InspectorGadget::InspectorGadget(const InspectorGadgetParams& params):
   ClockedObject(params),
    cpuSidePort(this, name() + ".cpu_side_port"),
   memSidePort(this, name() + ".mem_side_port"),
    inspectionBufferEntries(params.inspection_buffer_entries),
    inspectionBuffer(clockPeriod()),
    responseBufferEntries(params.response_buffer_entries),
    responseBuffer(clockPeriod()),
    nextReqSendEvent([this](){ processNextReqSendEvent(); }, name() + ".nextReqSendEvent"),
    nextReqRetryEvent([this](){ processNextReqRetryEvent(); }, name() + ".nextReqRetryEvent"),
    nextRespSendEvent([this](){ processNextRespSendEvent(); }, name() + ".nextRespSendEvent"),
    nextRespRetryEvent([this](){ processNextRespRetryEvent(); }, name() + ".nextRespRetryEvent")
{}
```



# SimObject::init

Last step before compilation is to define the <code>init</code> function. Since <code>InspectorGadget</code> is a <code>Responder</code> object, the convention is to let <code>peer</code> ports know that they can ask for their address range when the ranges become known. <code>init</code> is a <code>virtual</code> and <code>public</code> function from <code>SimObject</code>. Let's go ahead and declare it to override it. To do this, add the following declaration to the <code>public</code> scope of <code>InspectorGadget</code> in <code>inspector-gadget.hh</code>.

```
virtual void init() override;
```

To define it, we need to simply call sendRangeChange from cpuSidePort. Add the following code to define init in inspector-gadget.cc

```
void
InspectorGadget::init()
{
    cpuSidePort.sendRangeChange();
}
```



# **Let's Compile**

We're ready to compile gem5. Let's do it and while we wait we will work on the configuration scripts. Run the following command in the base gem5 directory to rebuild gem5.

```
cd /workspaces/2024/gem5
scons build/NULL/gem5.opt -j$(nproc)
```



# **Let's Create a Configuration Script**

For this step, we're going to borrow some of the material from <u>Running Things in gem5</u>. We are specifically going to copy the materials for using *TrafficGenerators*. We are going to further expand that material by extending the *ChanneledMemory* class to put an <u>InspectorGadget</u> right before the memory controller.

Run the following commands in the base gem5 directory to create a directory for our configurations and copy the materials needed:

cp -r ../materials/03-Developing-gem5-models/04-ports/step-1/configs/bootcamp configs/



#### InspectedMemory

We will need to do the following to extend ChanneledMemory:

```
1: In InspectedMemory.__init__, we should create an object of InspectorGadget for every memory channel. Let's store all of them in self.inspectors. We need to remember to expose inspection_buffer_entries and response_buffer_entries from InspectorGadget to the user. Make sure to also expose the input arguments of ChanneledMemory.__init__.

2: Override incorporate_memory from ChanneledMemory. First call

ChanneledMemory.incorporate_memory and then connect the mem_side_port from each
InspectorGadget Object to the port from one MemCtrl Object.

3: Override get_mem_ports from ChanneledMemory to replace port from MemCtrl Objects with cpu_side_port from InspectorGadget Objects.
```



#### **InspectedMemory: Code**

#### This is what should be in

gem5/configs/bootcamp/inspector-

gadget/components/inspected\_memory.py :

```
from typing import Optional, Sequence, Tuple, Union, Type
from m5.objects import (
    AddrRange.
    DRAMInterface.
    InspectorGadget.
    Port,
from gem5.components.boards.abstract board import AbstractBoard
from gem5.components.memory.memory import ChanneledMemory
from gem5.utils.override import overrides
class InspectedMemory(ChanneledMemory):
    def init__(
        self.
        dram interface class: Type[DRAMInterface].
        num channels: Union[int. str].
       interleaving size: Union[int, str],
        size: Optional[str] = None.
        addr mapping: Optional[str] = None.
        inspection_buffer_entries: int = 16,
        response buffer entries: int = 32.
    ) -> None:
```

```
super(). init (
        dram_interface_class,
        num channels.
       interleaving_size,
        size=size.
        addr_mapping=addr_mapping,
   self.inspectors = [
       InspectorGadget(
            inspection_buffer_entries=inspection_buffer_entries,
           response_buffer_entries=response_buffer_entries,
       for _ in range(num_channels)
@overrides(ChanneledMemory)
def incorporate memory(self. board: AbstractBoard) -> None:
    super().incorporate memory(board)
   for inspector, ctrl in zip(self.inspectors, self.mem_ctrl):
       inspector.mem_side_port = ctrl.port
@overrides(ChanneledMemory)
def get mem ports(self) -> Sequence[Tuple[AddrRange, Port]]:
        (ctrl.dram.range, inspector.cpu side port)
        for ctrl, inspector in zip(self.mem_ctrl, self.inspectors)
```

# first-inspector-gadget-example.py

Now, let's just simply add the following imports to gem5/configs/bootcamp/inspector-gadget/firstinspector-gadget-example.py:

```
from components.inspected_memory import InspectedMemory
from m5.objects.DRAMInterface import DDR3_1600_8x8
```

Let's now create an object of InspectedMemory with the following parameters.

```
memory = InspectedMemory(
    dram_interface_class=DDR3_1600_8x8,
    num_channels=2,
    interleaving_size=128,
    size="1GiB",
)
```

Now, let's run the following command to simulate our configuration script.

```
./build/NULL/gem5.opt --debug-flags=InspectorGadget configs/bootcamp/inspector-gadget/first-inspector-gadget-example.py
```



#### Output: first-inspector-gadget-example.py

Here is a recording of my terminal when running the command above.

```
root at codespaces-83a491 in /workspaces/2024/gem5 on v24.0.0.0-0-g43769abaf0ppp

± ./build/NULL/gem5.opt --debug-flags=InspectorGadget configs/bootcamp/inspector-gadget/first-inspector-gadget-example.py
```



#### **Statistics**

In this step, we see how to add statistics to our SimObjects so that we can measure things with them. For now let's add statistics to measure the following.

- 1- The sum of the queueing latency in <code>inspectionBuffer</code> experienced by each <code>Packet</code>. Let's use the name <code>totalInspectionBufferLatency</code> for this statistic.
- 2- Total number of [requests] forwarded. Let'use the name [numRequestsFwded].
- 3- The sum of the queueing latency in responseBuffer experienced by each Packet. Let's use the name totalResponseBufferLatency for this statistic.
- 4- Total number of requests forwarded. Let'use the name numResponsesFwded.



#### **Statistics:: Header File**

gem5 has its own internal classes for measuring statistics (stats for short). Let's go ahead and include the header files for them in [src/bootcamp/inspector-gadget.hh]

```
#include "base/statistics.hh"
#include "base/stats/group.hh"
```

gem5 stats have multiple types, each useful for measuring specific types of data. We will look at using statistics::Scalar stats since all the things we want to measure are scalars.

Let's go ahead a declare a new struct called InspectorGadgetStats inside the private scope of InspectorGadget and also declare an instance of it. It will inherit from statistics::Group. Add the following lines to src/bootcamp/inspector-gadget.hh to do this.

```
private:
    struct InspectorGadgetStats: public statistics::Group
{
        statistics::Scalar totalInspectionBufferLatency;
        statistics::Scalar numRequestsFwded;
        statistics::Scalar totalResponseBufferLatency;
        statistics::Scalar numResponsesFwded;
        InspectorGadgetStats(InspectorGadget* inspector_gadget);
};
InspectorGadgetStats stats;
```

#### **Statistics: Source File**

Let's define the constructor of InspectorGadgetStats. Add the following code under namespace gem5 to do this.

```
InspectorGadget::InspectorGadgetStats::InspectorGadgetStats(InspectorGadget* inspector_gadget):
    statistics::Group(inspector_gadget),
    ADD STAT(totalInspectionBufferLatencv. statistics::units::Tick::get(). "Total inspection buffer latency."),
    ADD_STAT(numRequestsFwded, statistics::units::Count::get(), "Number of requests forwarded."),
    ADD STAT(totalResponseBufferLatencv. statistics::units::Tick::get(). "Total response buffer latency."),
    ADD_STAT(numResponsesFwded, statistics::units::Count::get(), "Number of responses forwarded.")
{}
```

#### Few things to note:

- 1- Initialize our stat object by adding stats(this) to the initialization list in the constructor InspectorGdaget.
- 2- statistics::Group::Group takes a pointer to an object of statistics::Group that will be its parent. Class SimObject inherits from statistics::Group so we can use a pointer to InspectorGadget as that input.
- 3- The macro ADD\_STAT registers and initializes our statistics that we have defined under the struct. The order of arguments are name, unit, description. To rid yourself of any headache, make sure the order of ADD\_STAT macros match that of statistic declaration.

# **Counting Things**

Now let's go ahead and start counting things with stats. We can simply count [numRequestsFwded] and [numResponsesFwded] in [processNextReqSendEvent] and [processNextRespSendEvent] respectively.

To do it, simply add the following lines inside the body of those functions.

```
void
InspectorGadget::processNextReqSendEvent()
{
    // ...
    stats.numRequestsFwded++;
    PacketPtr pkt = inspectionBuffer.front();
}

void
InspectorGadget::processNextReqSendEvent()
{
    // ...
    stats.numResponsesFwded++;
    PacketPtr pkt = responseBuffer.front();
}
```

#### **Measuring Queueing Latencies**

To measure the queueing latency in <code>inspectionBuffer</code> and <code>responseBuffer</code> we need to track the time each <code>Packet</code> is inserted in these buffers as well the time they are removed. We already track the insertion time for each <code>Packet</code>. We only need to make it accessible from the outside. We can use <code>curTick()</code> in <code>processNextReqSendEvent</code> and <code>processNextRespSendEvent</code> to track the time each <code>Packet</code> is removed from <code>inspectionBuffer</code> and <code>responseBuffer</code> respectively.

Let's go ahead an add the following function inside the public scope of TimedQueue.

```
public:
  Tick frontTime() { return insertionTimes.front(); }
```



#### Measuring Queueing Latencies cont.

This is how processNextReqSendEvent, processNextRespSendEvent would look for measuring all statistics.

```
void
InspectorGadget::processNextReqSendEvent()
    // ...
    stats.numRequestsFwded++;
    stats.totalInspectionBufferLatency += curTick() - inspectionBuffer.frontTime();
    PacketPtr pkt = inspectionBuffer.front();
void
InspectorGadget::processNextRegSendEvent()
    stats.numResponsesFwded++;
    stats.totalResponseBufferLatency += curTick() - responseBuffer.frontTime();
    PacketPtr pkt = responseBuffer.front();
```



#### Let's Rebuild and Simulate

We're ready to compile gem5. Let's do it and while we wait we will work on the configuration scripts. Run the following command in the base gem5 directory to rebuild gem5.

```
scons build/NULL/gem5.opt -j$(nproc)
```

Now, let's go ahead and run the simulation again. We don't need to make any changes to our configuration script. Run the following command in the base gem5 directory to run the simulation.

```
./build/NULL/gem5.opt configs/bootcamp/inspector-gadget/first-inspector-gadget-example.py
```

Now if you search for the name of the stats we added in [m5out/stats.txt]. This is what we will see.

NOTE: I did by searching for the name of the [InspectorGadget] objects in the file using [grep inspectors m5out/stats.txt] in the base gem5 directory.

```
system.memory.inspectors0.totalInspectionBufferLatency
                                                               7334
                                                                                           # Total inspection buffer latency. (Tick)
system.memory.inspectors0.numRequestsFwded
                                                                               # Number of requests forwarded. (Count)
system.memory.inspectors0.totalResponseBufferLatency
                                                                                         # Total response buffer latency. (Tick)
                                                             8608
system.memory.inspectors0.numResponsesFwded
                                                                                # Number of responses forwarded. (Count)
system.memory.inspectors0.power_state.pwrStateResidencyTicks::UNDEFINED
                                                                           1000000000
                                                                                                            # Cumulative time (in ticks) in various power states (Tick)
system.memorv.inspectors1.totalInspectionBufferLatency
                                                               6003
                                                                                           # Total inspection buffer latency. (Tick)
                                                                               # Number of requests forwarded. (Count)
system.memory.inspectors1.numRequestsFwded
                                                                                         # Total response buffer latency. (Tick)
system.memorv.inspectors1.totalResponseBufferLatency
                                                             7746
system.memory.inspectors1.numResponsesFwded
                                                      18
                                                                                # Number of responses forwarded. (Count)
```

# **End of Step 1**



# Step 2: Inspecting Traffic



# **Adding Inspection**

In this step, we're going to add an *inspection* step to the process of forwarding requests that we receive. You'll see that we will **not** create any class that models the inspection. For the purposes of this tutorial, the process of *inspection* is completely trivial; we just care about its latency. In this step, let's just assume that inspection takes 1 cycle to inspect the request.

This is how the request path will look like after our changes in this step.

```
CPUSidePort.recvTimingReq->InspectorGadget.recvTimingReq->[inspection]-
>InspectorGadget.processNextReqSendEvent->MemSidePort.sendPacket
```

Again, we need to model latency. Therefore, we need to declare a new event that moves the time for the process of *inspection*. In addition, we will need to add a <code>TimedQueue</code> called the <code>outputBuffer</code> to hold the <code>Packets</code> that are *inspected* and are not sent yet. We also need to add a parameter to limit the number of entries in <code>outputBuffer</code>, let's call that <code>output\_buffer\_entries</code>.



#### **Adding Inspection: Header File**

To declare nextInspectionEvent, add the following lines under the private scope of InspectorGadget in src/bootcamp/inspector-gadget/inspector\_gadget.hh.

```
private:
    TimedQueue<PacketPtr> outputBuffer;

EventFunctionWrapper nextInspectionEvent;
    void processNextInspectionEvent();
    void scheduleNextInspectionEvent(Tick when);
```

Add the following line under the declaration of <a href="InspectorGadget">InspectorGadget</a> in <a href="InspectorGadget.py">src/bootcamp/inspectorGadget.py</a>

```
output_buffer_entries = Param.Int("Number of entries in output buffer.")
```



#### **Changing the Request Path**

```
Now, what we want to do is add nextInspectionEvent after receiving a Packet in InspectorGadget::recvTimingReq and before sending a Packet in InspectorGadget::processNextReqSendEvent.
```

We also need to be careful to change the [retry path] to account for this change.

We'll go through this process in detail in the next slides.

Let's get rid of the easy things first. Add the lines below to the initialization list in

```
InspectorGadget::InspectorGadget in src/bootcamp/inspector-gadget/inspector_gadget.cc.
```

```
outputBufferEntries(params.output_buffer_entries),
outputBuffer(clockPeriod()),
nextInspectionEvent([this]() { processNextInspectionEvent(); }, name() + ".nextInspectionEvent")
```



# Changing the Request Path: InspectorGadget::recvTimingReq

The next thing we need to is schedule

nextInspectionEvent in

InspectorGadget::recvTimingReq. Currently, we schedule nextReqSendEvent in

InspectorGadget::recvTimingReq. This is how the code in src/bootcamp/inspector-gadget/inspector\_gadget.cc looks like right now (before our changes).

```
bool
InspectorGadget::recvTimingReq(PacketPtr pkt)
{
    if (inspectionBuffer.size() >= inspectionBufferEntries) {
        return false;
    }
    inspectionBuffer.push(pkt, curTick());
    scheduleNextReqSendEvent(nextCycle());
    return true;
}
```

#### We will just simply replace

scheduleNextReqSendEvent(nextCycle()); with scheduleNextInspectionEvent(nextCycle()); in this function. This is how the function should look like after the changes.

```
bool
InspectorGadget::recvTimingReq(PacketPtr pkt)
{
    if (inspectionBuffer.size() >= inspectionBufferEntries) {
        return false;
    }
    inspectionBuffer.push(pkt, curTick());
    scheduleNextInspectionEvent(nextCycle());
    return true;
}
```



# Changing the Request Path: InspectorGadget::scheduleNextInspectionEvent

Let's take a step back. Each *inspection* takes a request from inspectionBuffer, *inspects* the request and puts it in outputBuffer. To determine whether nextInspectionEvent has to be scheduled we need to check **a**) if there is a Packet in inspectionBuffer and **b**) if there is at least one empty entry in outputBuffer. If both conditions are satisfied, we need to calculate the right time it should be scheduled for like we have been doing it already.

Add the following code to src/bootcamp/inspector-gadget/inspector\_gadget.cc under namespace
gem5 to define InspectorGadget::scheduleNextInspectionEvent.

```
void
InspectorGadget::scheduleNextInspectionEvent(Tick when)
{
   bool have_packet = !inspectionBuffer.empty();
   bool have_entry = outputBuffer.size() < outputBufferEntries;

   if (have_packet && have_entry && !nextInspectionEvent.scheduled()) {
        Tick schedule_time = align(std::max(when, inspectionBuffer.firstReadyTime()));
        schedule(nextInspectionEvent, schedule_time);
   }
}</pre>
```

#### Little Bit About SenderState

As I mentioned before, for the purposes of this tutorial functionality of *inspection* is trivial. Let's take advantage of this and learn about Packet::SenderState. We will use SenderState to attach a sequence number to requests that we inspect to count the number of displacements in the order responses arrive.

#### Packet::SenderState

Struct Packet::SenderState allows adding additional information to a Packet object. This is specifically useful when you want to design a SimObject that interacts with the memory (like we are doing right now).

We don't really have to concern ourselves with the details of Packet::SenderState. All we need is to extend this struct to store a *sequence number*.



#### Changing the Request Path: SequenceNumberTag

Now, let's declare a new class that inherits from Packet::SenderState. Let's do it under the private scope of InspectorGadget in src/bootcamp/inspector-gadget/inspector\_gadget.hh.

```
struct SequenceNumberTag: public Packet::SenderState
{
    uint64_t sequenceNumber;
    SequenceNumberTag(uint64_t sequenceNumber):
        SenderState(), (sequenceNumber)
        {}
};
```



# InspectorGadget::inspectRequest: Declaring Additional Members

Now, let's go ahead and declare and define a function that does the inspection for us. To count the number of displacements we need to keep track of the next *sequence number* we expect. We need to increment this variable every time we receive a response. In addition, we need to generate new *sequence numbers* as well. Therefore, we need to keep track of the next available *sequence number*. Lastly, we need to count the number of displacement in a variable. Let's add that to <a href="InspectorGadgetStats">InspectorGadgetStats</a>. Add the following lines under the <a href="private">private</a> scope of <a href="InspectorGadgetStats">InspectorGadgetStats</a> in <a href="mailto:src/bootcamp/inspector-gadget/inspector-gadget.hh">Inspector-gadget/inspector-gadget.hh</a>.

```
private:
    uint64 t nextAvailableSeaNum;
    uint64_t nextExpectedSeqNum;
```

```
private:
    struct InspectorGadgetStats: public statistics::Group
{
        // ...
        statistics::Scalar numReqRespDisplacements;
        InspectorGadgetStats(InspectorGadget* inspector_gadget);
};
```



# InspectorGadget::inspectRequest: Initializing Additional Members

Now, let's go ahead and add the following lines to the initialization list in

 $igl[ ext{InspectorGadget} igr] ext{in} igl[ ext{src/bootcamp/inspector-gadget/inspector_gadget.cc} igr].$ 

nextAvailableSeqNum(0), nextExpectedSeqNum(0)

#### Add the following line to the initialization list in

InspectorGadget::InspectorGadget::InspectorGadgetStats in [src/bootcamp/inspector-gadget/inspector\_gadget.cc].

ADD\_STAT(numReqRespDisplacements, statistics::units::Count::get(), "Number of request-response displacements.")



# InspectorGadget::inspectRequest

Now, let's go ahead an declare a function that *inspects* [requests] as they are popped from inspectionBuffer. To do this, add the following line under the [private] scope of [InspectorGadget] in src/bootcamp/inspector-gadget/inspector-gadget.hh].

```
private:
   void inspectRequest(PacketPtr pkt);
```

Add the following code under namespace gem5 in src/bootcamp/inspector-gadget/inspector\_gadget.cc to define inspectRequest.

```
void
InspectorGadget::inspectRequest(PacketPtr pkt)
{
   panic if(!pkt->isRequest(). "Should only inspect requests!"):
    SequenceNumberTag* seq_num_tag = new SequenceNumberTag(nextAvailableSeqNum);
    pkt->pushSenderState(seq_num_tag);
    nextAvailableSeqNum++;
}
```

**NOTE**: In this function we call <code>pushSenderState</code> from <code>Packet</code> to attach our <code>SequenceNumberTag</code> to the <code>pkt</code>. We can use this tag on the **response path** to identify displacements.

# InspectorGadget::processNextInspectionEvent

Now, we need to define the callback function for <code>nextInspectionEvent</code>.

To simulate inspection and its latency, we need to pop the first item in <code>inspectionBuffer</code>, inspect it and push it in the <code>outputBuffer</code> for it to be sent to the memory. Then we can schedule <code>nextReqSendEvent</code> for <code>nextCycle</code>.

Now, since processNextInspectionEvent is popping items off of inspectionBuffer, it now becomes responsible for sending retry requests from cpuSidePort. This means we need to schedule nextReqRetryEvent for nextCycle as well.

We also need to schedule <code>[nextInspectionEvent]</code> for <code>[nextCycle]</code>. We discussed why before. So far we have added <code>[nextInspectionEvent]</code> after <code>[recvTimingReq]</code>. In the next slides, we change <code>[nextReqSendEvent]</code> accordingly.

Lastly, we need to measure totalInspectionBufferLatency in this function now.



#### InspectorGadget::processNextInspectionEvent cont.

Add the following code under [namespace gem5] in [src/bootcamp/inspector-gadget/inspector\_gadget.cc].

```
void
InspectorGadget::processNextInspectionEvent()
    panic_if(!inspectionBuffer.hasReady(curTick()), "Should never try to inspect if no ready packets!");
    stats.totalInspectionBufferLatency += curTick() - inspectionBuffer.frontTime();
    PacketPtr pkt = inspectionBuffer.front();
    inspectRequest(pkt);
    outputBuffer.push(pkt, curTick());
    inspectionBuffer.pop();
    scheduleNextReqSendEvent(nextCycle());
    scheduleNextReqRetryEvent(nextCycle());
    scheduleNextInspectionEvent(nextCycle());
```



# InspectorGadget::scheduleNextReqSendEvent

Now that we have add nextInspectionEvent and outputBuffer, we need to change the way we schedule nextReqSendEvent.

What we are going to change is that nextReqSendEvent is going to pop items off of outputBuffer instead of inspectionBuffer.

This is how scheduleNextReqSendEvent in src/bootcamp/inspector-gadget/inspector\_gadget.cc looks like before the changes.

```
void
InspectorGadget::scheduleNextReqSendEvent(Tick when)
{
   bool port avail = !memSidePort.blocked():
   bool have_items = !inspectionBuffer.empty();

   if (port_avail && have_items && !nextReqSendEvent.scheduled()) {
      Tick schedule time = align(std::max(when. inspectionBuffer.firstReadyTime()));
      schedule(nextReqSendEvent, schedule_time);
   }
}
```

This is how it should look like after the changes.

```
void
InspectorGadget::scheduleNextReqSendEvent(Tick when)
{
   bool port avail = !memSidePort.blocked();
   bool have_items = !outputBuffer.empty();

   if (port_avail && have_items && !nextReqSendEvent.scheduled()) {
      Tick schedule time = align(std::max(when. inspectionBuffer.firstReadyTime()));
      schedule(nextReqSendEvent, schedule_time);
   }
}
```



# InspectorGadget::processNextReqSendEvent

Now, let's go ahead and change the definition of processNextReqSendEvent. We need to do the following.

- 1- Pop items off of outputBuffer instead of inspectionBuffer.
- 2- Schedule nextInspectionEvent for nextCycle.
- 3- Remove scheduling of nextReqRetryEvent.
- 4- Remove measuring of totalInspectionBufferLatency.

This is how this function looks like right now.

```
void
InspectorGadget::processNextReqSendEvent()
{
    panic if(memSidePort.blocked(). "Should never trv to send if blocked!"):
    panic_if(!inspectionBuffer.hasReady(curTick()), "Should never try to send if no ready packets!");
    stats.numRequestsFwded++:
    stats.totalInspectionBufferLatency += curTick() - inspectionBuffer.frontTime();
    PacketPtr pkt = inspectionBuffer.front();
    memSidePort.sendPacket(pkt);
    inspectionBuffer.pop();
    scheduleNextReqRetryEvent(nextCycle());
    scheduleNextReqSendEvent(nextCycle());
}
```

This is how it should look like after the changes.

```
void
InspectorGadget::processNextReqSendEvent()
{
    panic if(memSidePort.blocked(). "Should never trv to send if blocked!"):
    panic_if(!inspectionBuffer.hasReady(curTick()), "Should never try to send if no ready packets!");

    stats.numRequestsFwded++:
    PacketPtr pkt = outputBuffer.front();
    memSidePort.sendPacket(pkt);
    outputBuffer.pop();

    scheduleNextInspectionEvent(nextCycle());
    scheduleNextReqSendEvent(nextCycle());
}
```



# InspectorGadget::inspectResponse

We're not going to change anything in the **response path**. However, we are going to add the process of counting displacement when we put Packets in the responseBuffer.

Let's declare [inspectResponse] under the private SCOPE Of InspectorGadget in src/bootcamp/inspector-gadget.hh.

```
private:
  void inspectResponse(PacketPtr pkt);
```

All we need to do is to count the number of the times pkt has a different sequence number than

```
what we expect to see. To define inspectResponse, add the following code under namespace gem5 in src/bootcamp/inspector-gadget/inspector_gadget.cc.
```

We will use Packet::findNextSenderState to find the SequenceNumberTag object we attach to the request. After we're done, we should make sure to release the memory location for the object and remove it from pkt.

```
void
InspectorGadget::inspectResponse(PacketPtr pkt)
{
    panic if(!pkt->isResponse(). "Should only inspect responses!"):
    SequenceNumberTaq* seq_num_taq = pkt->findNextSenderState<SequenceNumberTag>();
    panic_if(seq_num_taq == nullptr. "There is not taq attached to pkt!");
    if (seq_num_taq->sequenceNumber != nextExpectedSeqNum) {
        stats.numReqRespDisplacements++;
    }
    delete pkt->popSenderState();
    nextExpectedSeqNum++;
}
```



# InspectorGadget::processNextRespSendEvent

Now, let's go ahead and call <code>inspectResponse</code> in the response path. Do it by adding a function call to <code>inspectResponse</code> in <code>processNextRespSendEvent</code>. This is how the function should look like after the changes.

```
void
InspectorGadget::processNextRespSendEvent()
{
    panic if(cpuSidePort.blocked(). "Should never trv to send if blocked!"):
    panic_if(!responseBuffer.hasReady(curTick()), "Should never try to send if no ready packets!");

    stats.numResponsesFwded++;
    stats.totalResponseBufferLatency += curTick() - responseBuffer.frontTime();

    PacketPtr pkt = responseBuffer.front();
    inspectResponse(pkt);
    cpuSidePort.sendPacket(pkt);
    responseBuffer.pop();

    scheduleNextRespRetrvEvent(nextCvcle());
    scheduleNextRespSendEvent(nextCycle());
}
```

#### Let's Rebuild

We are now done with making all the required changes. Let's run the following command in the base gem5 directory to rebuild gem5.

scons build/NULL/gem5.opt -j\$(nproc)

# Let's Extend InspectedMemory

Now that we have added a new parameter to class InspectorGadget, let's go ahead and extend InspectedMemory to expose output\_buffer\_entries as an argument to its constructor (\_\_init\_\_).

Open configs/bootcamp/inspectorgadget/components/inspected\_memory.py and
make the appropriate changes. You only need to
change InspecteMemory.\_\_init\_\_. This is how
the function should look like after the changes.

```
class InspectedMemory(ChanneledMemory):
    def init__(
        self.
        dram interface class: Type[DRAMInterface],
        num channels: Union[int. str].
        interleaving size: Union[int, str],
        size: Optional[str] = None.
        addr mapping: Optional[str] = None.
        inspection_buffer_entries: int = 8,
        output buffer entries: int = 8.
        response buffer entries: int = 32.
    ) -> None:
        super(). init (
            dram interface class.
            num channels.
            interleaving_size,
            size=size.
            addr_mapping=addr_mapping,
        self.inspectors = [
            InspectorGadget(
                inspection buffer entries=inspection buffer entries.
                output_buffer_entries=output_buffer_entries,
                response_buffer_entries=response_buffer_entries,
            for _ in range(num_channels)
```



#### **Let's Simulate**

Now, let's remove data\_limit when configuring HybridGenerator in configs/inspector-gadget/first-inspector-gadget-example.py. This is how I configured it in my code.

```
generator = HybridGenerator(
   num cores=6.
   rate="1GB/s",
   duration="1ms",
)
```

After the compilation is over, run the following command in the base gem5 directory to simulate

the new version of InspectorGadget. You should now see a stat for numReqRespDisplacements.

 $./build/NULL/gem5.opt \ configs/bootcamp/inspector-gadget/first-inspector-gadget-example.py \\$ 

Now, if you do grep numReqRespDisplacements m5out/stats.txt in the base gem5 directory, this is what you'll see.

system.memory.inspectors0.numReqRespDisplacements system.memory.inspectors1.numReqRespDisplacements 6 # Number of request-response displacements. (Count)

**PRACTICE**: Add as stat for totalOutputBufferLatency.



# **End of Step 2**



# Step 3: More Inspection Throughput, More Latency



# InspectorGadget: New Parameters: Modeling Bandwidth

In this step, let's go ahead and add three more parameters to [InspectorGadget]. Here is what they represent.

- [insp\_window]: Number of entries in front of [inspectionBuffer] to try to inspect every cycle.
- [num\_insp\_units]: Number of inspection units.
- [insp\_tot\_latency]: Latency to complete one inspection (latency of an inspection unit).

Now, let's go ahead and add their declarations under class [InspectorGadget] in src/bootcamp/inspector-gadget/InspectorGadget.py].

```
insp_window = Param.Int(
    "Number of entries in front of inspectionBuffer "
    "to try to inspect every cycle."
)
num_insp_units = Param.Int("Number of inspection units.")
insp_tot_latency = Param.Cycles(
    "Latency to complete one inspection (latency of an inspection unit)."
)
```

# InspectorGadget: New Parameters: Header File

Now let's go ahead and declare counterparts for these parameters in C++. Add the following lines under the private scope of InspectorGadget in src/bootcamp/inspector-gadget/inspector-gadget.hh.

```
private:
   int inspectionWindow:
   int numInspectionUnits;
   Cycles totalInspectionLatency;
```

As we mentioned we do **not** create a class for inspection units. However, now that we are going to make it possible to have multiple inspection units that might take more than 1 cycle to complete inspection, we need to keep track of the availability of each inspection unit. To do this

we will create an array with numInspectionUnits elements of type Tick that stores when each inspection unit is available. Let's go ahead and declare that array. Add the following lines under the private scope of InspectorGadget to declare it.

```
private:
   std::vector<Tick> inspectionUnitAvailableTimes;
```

**NOTE**: Since we're using <code>std::vector</code>, let's go ahead and include its header file by adding the line below to <code>src/bootcamp/inspector-gadget/inspector-gadget.hh</code>.

```
#include <vector>
```



#### InspectorGadget: New Parameters: Source File

Now, let's add the following lines to the initialization list in [InspectorGadget::InspectorGadget] in src/bootcamp/inspector-gadget/inspector\_gadget.cc to initialize our params.

```
inspectionWindow(params.insp_window),
numInspectionUnits(params.num_insp_units),
totalInspectionLatency(params.insp_tot_latency),
inspectionUnitAvailableTimes((size_t) params.num_insp_units, 0),
```



# Changing the Behavior: scheduleNextInspectionEvent

Now, we need to account for inspection units being available when scheduling [nextInspectionEvent]. To do this we will need to find the first available inspection unit. We should not schedule [nextInspectionEvent] earlier than that.

Let's go ahead and change scheduleNextInspectionEvent in src/bootcamp/inspector-gadget/inspector\_gadget.cc. This is how the function should look like after the changes.

# Changing the Behavior: processNextInspectionEvent

Change processNextInspectionEvent in src/bootcamp/inspector-gadget/inspector\_gadget.cc to look like this.

```
InspectorGadget::processNextInspectionEvent()
    panic_if(!inspectionBuffer.hasReady(curTick()), "Should never try to inspect if no ready packets!");
    int insp window left = inspectionWindow:
    for (int i = 0; i < numInspectionUnits; i++) {</pre>
        if (inspectionUnitAvailableTimes[i] > curTick()) {
            DPRINTF(InspectorGadget, "%s: Inspection unit %d is busy.\n", __func__, i);
        if (inspectionBuffer.empty()) {
            DPRINTF(InspectorGadget, "%s: Inspection buffer is empty.\n", __func__);
        if (outputBuffer.size() >= outputBufferEntries) {
            DPRINTF(InspectorGadget, "%s: Output buffer is full.\n", __func__);
            break;
        stats.totalInspectionBufferLatencv += curTick() - inspectionBuffer.frontTime();
        PacketPtr pkt = inspectionBuffer.front();
        inspectRequest(pkt):
        outputBuffer.push(pkt. curTick());
        inspectionBuffer.pop():
        inspectionUnitAvailableTimes[i] = clockEdge(totalInspectionLatency);
        insp window left--:
        if (insp_window_left == 0) {
            break;
    for (int i = 0; i < numInspectionUnits; i++) {</pre>
        inspectionUnitAvailableTimes[i] = std::max(inspectionUnitAvailableTimes[i], nextCycle());
    scheduleNextRegSendEvent(nextCvcle()):
    scheduleNextReaRetrvEvent(nextCvcle()):
    scheduleNextInspectionEvent(nextCycle());
```



# Changing the Behavior: processNextInspectionEvent: Deeper Look

Let's take a deeper look at how we process [nextInspectionEvent]. It's important to note the following.

- 1- We want to impose a limit on the number of entries at the front we will look at each time we process nextInspectionEvent. So we keep a copy of inspectionWindow and decrement each time we inspect a request. We break out of the loop as soon as insp\_window\_left == 0
- 2- Iterations of the for-loop represent assignment of inspection to one inspection unit. Therefore, we need to check the following: **a**) if the inspection unit is available at curTick, **b**) if inspectionBuffer has items, and **c**) if there is an entry available in outputBuffer. We skip the inspection units that are busy and will break out of the loop when **b** or **c** do not hold.
- 3- If every check has passed, we can now do the actual inspection and impose the latency. Now that we have a parameter for the latency of inspection, we will push pkt with a timestamp that is equivalent to curTick + totalInspectionLatency (this is what clockEdge(totalInspectionLatency) returns). We also need to make the inspection unit that we just assigned work to until the same time.

  4- After all the assignment of work is done, we need to make sure that the available time of all inspection units are bigger than or equal to nextCycle. Why?

#### **Practice**

Compile your gem5 and make the appropriate changes to your configuration script to make simulation possible.



# **End of Step 3**

