AVISO: Esta página ha sido generada para facilitar la impresión de los contenidos. Los enlaces externos a otras páginas no serán funcionales.

Computer Network



A computer network, often simply referred to as a network, is a collection of hardware components and computers interconnected by communication channels that allow sharing of resources and information. Where at least one process in one device is able to send/receive data to/from at



least one process residing in a remote device, then the two devices are said to be in a network.

Networks may be classified according to a wide variety of characteristics such as the medium used to transport the data, communications protocol used, scale, topology, and organizational scope.

Communications protocols define the rules and data formats for exchanging information in a computer network, and provide the basis for network programming. Well-known communications protocols are Ethernet, a hardware and link layer standard that is ubiquitous in local area networks, and the internet protocol suite, which defines a set of protocols for internetworking, i.e. for data communication between multiple networks, as well as host-to-host data transfer, and application-specific data transmission formats.

Computer networking is sometimes considered a subdiscipline of electrical engineering, telecommunications, computer science, information technology or computer engineering, since it relies upon the theoretical and practical application of these disciplines.

History of Internet - Great Infographic Video



Adobe Flash Player ya no está disponible

Communication Media



Computer networks classified can be according the hardware and associated software technology that is used to interconnect the individual devices in the network, such electrical cable



(HomePNA, power line communication, G.hn), optical fiber, and radio waves (wireless LAN). In the OSI model, these are located at levels 1 and 2.

A well-known family of communication media is collectively known as Ethernet. It is defined by IEEE 802 and utilizes various standards and media that enable communication between devices. Wireless LAN technology is designed to connect devices without wiring. These devices use radio waves or infrared signals as a transmission medium.

Wired technologies

The order of the following wired technologies is, roughly, from slowest to fastest transmission speed.

Twisted pair wire is the most widely used medium for telecommunication. Twisted-pair cabling consist of copper wires that are twisted into pairs. Ordinary telephone wires consist of two insulated copper wires twisted into pairs. Computer networking cabling (wired Ethernet as defined by IEEE 802.3) consists of 4 pairs of copper cabling that can be utilized for both voice and data transmission. The use of two

13/4/23, 17:29 example 1.5 example 2.5 exa

wires twisted together helps to reduce crosstalk and electromagnetic induction. The transmission speed ranges from 2 million bits per second to 10 billion bits per second. Twisted pair cabling comes in two forms: unshielded twisted pair (UTP) and shielded twisted-pair (STP). Each form comes in several category ratings, designed for use in various scenarios.

Coaxial cable is widely used for cable television systems, office buildings, and other work-sites for local area networks. The cables consist of copper or aluminum wire surrounded by an insulating layer (typically a flexible material with a high dielectric constant), which itself is surrounded by a conductive layer. The insulation helps minimize interference and distortion. Transmission speed ranges from 200 million bits per second.

ITU-T G.hn technology uses existing home wiring (coaxial cable, phone lines and power lines) to create a high-speed (up to 1 Gigabit/s) local area network.

An optical fiber is a glass fiber. It uses pulses of light to transmit data. Some advantages of optical fibers over metal wires are less transmission loss, immunity from electromagnetic radiation, and very fast tramission speed, up to trillions of bits per second. One can use different colors of lights to increase the number of messages being sent over a fiber optic cable.

Wireless technologies

Terrestrial microwave - Terrestrial microwave communication uses Earth-based transmitters and receivers resembling satellite dishes. Terrestrial microwaves are in the low-gigahertz range, which limits all communications to line-of-sight. Relay stations are spaced approximately 48 km (30 mi) apart.

Communications satellites - The satellites communicate via microwave radio waves, which are not deflected by the Earth's atmosphere. The satellites are stationed in space, typically in geosynchronous orbit 35,400 km (22,000 mi) above the equator. These Earth-orbiting systems are capable of receiving and relaying voice, data, and TV signals.

Cellular and PCS systems use several radio communications technologies. The systems divide the region covered into multiple geographic areas. Each area has a low-power transmitter or radio relay antenna device to relay calls from one area to the next area.

Radio and spread spectrum technologies - Wireless local area network use a high-frequency radio technology similar to digital cellular and a low-frequency radio technology. Wireless LANs use spread spectrum technology to enable communication between multiple devices in a limited area. IEEE 802.11 defines a common flavor of open-standards wireless radio-wave technology.

Infrared communication can transmit signals for small distances, typically no more than 10 meters. In most cases, line-of-sight propagation is used, which limits the physical positioning of communicating devices.

A global area network (GAN) is a network used for

supporting mobile across an arbitrary number of wireless LANs, satellite coverage areas, etc. The key challenge in mobile communications is handing off user communications from one local coverage area to the next. In IEEE Project 802, this involves a succession of terrestrial wireless LANs.

Exotic technologies

There have been various attempts at transporting data over more or less exotic media:

IP over Avian Carriers was a humorous April fool's Request for Comments, issued as RFC 1149. It was implemented in real life in 2001.

Extending the Internet to interplanetary dimensions via radio waves.


Both cases have a large round-trip delay time, which prevents useful communication.



How to make a network cable

Communications protocols and network



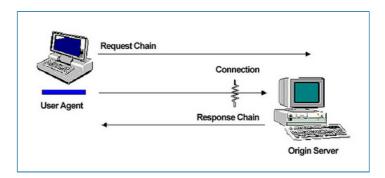

Communications protocol

A communications protocol is a set of rules for exchanging information over a network. It is typically a protocol stack (also see the OSI model), which is a "stack" of protocols, in which each protocol uses the protocol below it. An important example of a protocol stack is HTTP running over TCP over IP over IEEE 802.11 (TCP and IP are members of the Internet Protocol Suite, and IEEE 802.11 is a member of the Ethernet protocol suite). This stack is used between the wireless router and the home user's personal computer when the user is surfing the web.

Communication protocols have various properties, such as whether they are connection-oriented or connectionless, whether they use circuit mode or packet switching, or whether they use hierarchical or flat addressing.

There are many communication protocols, a few of which are described below.

Ethernet

Ethernet is a family of connectionless protocols used in LANs, described by a set of standards together called IEEE 802 published by the Institute of Electrical and Electronics Engineers. It has a flat addressing scheme and is mostly situated at levels 1 and 2 of the OSI model. For home users today, the most well-known member of this protocol family is IEEE 802.11, otherwise known as Wireless LAN (WLAN). However, the complete protocol suite deals with a multitude of networking aspects not only for home use, but especially when the technology is deployed to support a diverse range of business needs. MAC bridging (IEEE 802.1D) deals with the routing of Ethernet packets using a Spanning Tree Protocol, IEEE 802.1Q describes VLANs, and IEEE 802.1X defines a port-based Network Access Control protocol, which forms the basis for the authentication mechanisms used in VLANs, but it is also found in WLANs - it is what the home user sees when the user has to enter a "wireless access key".

Internet Protocol Suite

The Internet Protocol Suite, often also called TCP/IP, is the foundation of all modern internetworking. It offers connection-less as well as connection-oriented services over an inherently unreliable network traversed by datagram transmission at the Internet protocol (IP) level. At its core, the protocol suite defines the addressing, identification, and routing specification in form of the traditional Internet Protocol Version 4 (IPv4) and IPv6, the next generation of the protocol with a much enlarged addressing capability.

SONET/SDH

Synchronous Optical NETworking (SONET) and Synchronous Digital Hierarchy (SDH) are standardized multiplexing protocols that transfer multiple digital bit streams over optical fiber using lasers. They were originally designed to transport circuit mode communications from a variety of different sources, primarily to support real-time, uncompressed, circuit-switched voice encoded in PCM format. However, due to its protocol neutrality and transport-oriented features, SONET/SDH also was the obvious choice for transporting Asynchronous Transfer Mode (ATM) frames.

Asynchronous Transfer Mode

Asynchronous Transfer Mode (ATM) is a switching technique for telecommunication networks. It uses asynchronous timedivision multiplexing and encodes data into small, fixed-

sized cells. This differs from other protocols such as the Internet Protocol Suite or Ethernet that use variable sized packets or frames. ATM has similarity with both circuit and packet switched networking. This makes it a good choice for a network that must handle both traditional high-throughput data traffic, and real-time, low-latency content such as voice and video. ATM uses a connection-oriented model in which a virtual circuit must be established between two endpoints before the actual data exchange begins.

While the role of ATM is diminishing in favor of nextgeneration networks, it still plays a role in the last mile, which is the connection between an Internet service provider and the home user. For an interesting write-up of the technologies involved, including the deep stacking of communications protocols used, see.

Network programming

Computer network programming involves writing computer programs that communicate with each other across a computer network. Different programs must be written for the client process, which initiates the communication, and for the server process, which waits for the communication to be initiated. Both endpoints of the communication flow are implemented as network sockets; hence network programming is basically socket programming.

Network Size



Personal area network

A personal area network (PAN) is a computer network used for communication among computer and different information technological devices close to one person. Some examples of devices that are used



in a PAN are personal computers, printers, fax machines, telephones, PDAs, scanners, and even video game consoles. A PAN may include wired and wireless devices. The reach of a PAN typically extends to 10 meters. A wired PAN is usually constructed with USB and Firewire connections while technologies such as Bluetooth and infrared communication typically form a wireless PAN.

Local area network

A local area network (LAN) is a network that connects

computers and devices in a limited geographical area such as home, school, computer laboratory, office building, or closely positioned group of buildings. Each computer or device on the network is a node. Current wired LANs are most likely to be based on Ethernet technology, although new standards like ITU-T G.hn also provide a way to create a wired LAN using existing home wires (coaxial cables, phone lines and power lines).

Typical library network, in a branching tree topology and controlled access to resources

All interconnected devices must understand the network layer (layer 3), because they are handling multiple subnets (the different colors). Those inside the library, which have only 10/100 Mbit/s Ethernet connections to the user device and a Gigabit Ethernet connection to the central router, could be called "layer 3 switches" because they only have Ethernet interfaces and must understand IP. It would be more correct to call them access routers, where the router at the top is a distribution router that connects to the Internet and academic networks' customer access routers.

The defining characteristics of LANs, in contrast to WANs (Wide Area Networks), include their higher data transfer rates, smaller geographic range, and no need for leased telecommunication lines. Current Ethernet or other IEEE 802.3 LAN technologies operate at speeds up to 10 Gbit/s. This is the data transfer rate. IEEE has projects investigating the standardization of 40 and 100 Gbit/s. LANs can be connected to Wide area network by using routers.

Home area network

A home area network (HAN) is a residential LAN which is used for communication between digital devices typically deployed in the home, usually a small number of personal computers and accessories, such as printers and mobile computing devices. An important function is the sharing of Internet access, often a broadband service through a cable TV or Digital Subscriber Line (DSL) provider.

Storage area network

A storage area network (SAN) is a dedicated network that provides access to consolidated, block level data storage. SANs are primarily used to make storage devices, such as disk arrays, tape libraries, and optical jukeboxes, accessible to servers so that the devices appear like locally attached devices to the operating system. A SAN typically has its own network of storage devices that are generally not accessible through the local area network by other devices. The cost and complexity of SANs dropped in the early 2000s to levels allowing wider adoption across both enterprise and small to medium sized business environments.

Campus area network

A campus area network (CAN) is a computer network made up of an interconnection of LANs within a limited geographical area. The networking equipment (switches, routers) and transmission media (optical fiber, copper plant, Cat5 cabling etc.) are almost entirely owned (by the campus tenant / owner: an enterprise, university, government etc.).

In the case of a university campus-based campus network, the network is likely to link a variety of campus buildings including, for example, academic colleges or departments, the university library, and student residence halls.

Backbone network

A backbone network is part of a computer network infrastructure that interconnects various pieces of network, providing a path for the exchange of information between different LANs or subnetworks. A backbone can tie together diverse networks in the same building, in different buildings in a campus environment, or over wide areas. Normally, the backbone's capacity is greater than that of the networks connected to it.

A large corporation which has many locations may have a backbone network that ties all of these locations together, for example, if a server cluster needs to be accessed by different departments of a company which are located at different geographical locations. The equipment which ties these departments together constitute the network backbone. Network performance management including network congestion are critical parameters taken into account when designing a network backbone.

A specific case of a backbone network is the Internet backbone, which is the set of wide-area network connections and core routers that interconnect all networks connected to the Internet.

Metropolitan area network

A Metropolitan area network (MAN) is a large computer network that usually spans a city or a large campus.

Sample EPN made of Frame relay WAN connections and dialup remote access.

Sample VPN used to interconnect 3 offices and remote users

Wide area network

A wide area network (WAN) is a computer network that covers a large geographic area such as a city, country, or spans even intercontinental distances, using a communications channel that combines many types of media such as telephone lines, cables, and air waves. A WAN often uses transmission facilities provided by common carriers, such as telephone companies. WAN technologies generally function at the lower three layers of the OSI reference model: the physical layer, the data link layer, and the network layer.

Enterprise private network

An enterprise private network is a network built by an enterprise to interconnect various company sites, e.g., production sites, head offices, remote offices, shops, in order to share computer resources.

Virtual private network

A virtual private network (VPN) is a computer network in which some of the links between nodes are carried by open connections or virtual circuits in some larger network (e.g.,

the Internet) instead of by physical wires. The data link layer protocols of the virtual network are said to be tunneled through the larger network when this is the case. One common application is secure communications through the public Internet, but a VPN need not have explicit security features, such as authentication or content encryption. VPNs, for example, can be used to separate the traffic of different user communities over an underlying network with strong security features.

VPN may have best-effort performance, or may have a defined service level agreement (SLA) between the VPN customer and the VPN service provider. Generally, a VPN has a topology more complex than point-to-point.

Internetwork

An internetwork is the connection of multiple computer networks via a common routing technology using routers. The Internet is an aggregation of many connected internetworks spanning the Earth.



Adobe Flash Player ya no está disponible



vvaτch the video above and summarize how internet works, and send it to the teacher.

Network Topology



A network topology is the layout of the interconnections of

the nodes of a



computer network. Common layouts are:

A bus network: all nodes are connected to a common medium along this medium. This was the layout used in the original Ethernet, called 10BASE5 and 10BASE2.

A star network: all nodes are connected to a special central node. This is the typical layout found in a Wireless LAN, where each wireless client connects to the central Wireless access point.

A ring network: each node is connected to its left and right neighbour node, such that all nodes are connected and that each node can reach each other node by traversing nodes left- or rightwards. The Fiber Distributed Data Interface (FDDI) made use of such a topology.

A mesh network: each node is connected to an arbitrary number of neighbours in such a way that there is at least one traversal from any node to any other.

A fully connected network: each node is connected to every other node in the network.

Note that the physical layout of the nodes in a network may not necessarily reflect the network topology. As an example, with FDDI, the network topology is a ring (actually two counter-rotating rings), but the physical topology is a star, because all neighboring connections are routed via a central physical location.

Overlay network

An overlay network is a virtual computer network that is built on top of another network. Nodes in the overlay are connected by virtual or logical links, each of which corresponds to a path, perhaps through many physical links, in the underlying network. The topology of the overlay network may (and often does) differ from that of the underlying one.

A sample overlay network: IP over SONET over Optical For example, many peer-to-peer networks are overlay networks because they are organized as nodes of a virtual system of links run on top of the Internet. The Internet was initially built as an overlay on the telephone network.

The most striking example of an overlay network, however, is the Internet itself: At the IP layer, each node can reach any other by a direct connection to the desired IP address, thereby creating a fully connected network; the underlying network, however, is composed of a mesh-like interconnect of subnetworks of varying topologies (and, in fact, technologies). Address resolution and routing are the means which allows the mapping of the fully connected IP overlay network to the underlying ones.

Overlay networks have been around since the invention of networking when computer systems were connected over telephone lines using modems, before any data network existed.

Another example of an overlay network is a distributed hash table, which maps keys to nodes in the network. In this case, the underlying network is an IP network, and the overlay network is a table (actually a map) indexed by keys.

Overlay networks have also been proposed as a way to improve Internet routing, such as through quality of service guarantees to achieve higher-quality streaming media. Previous proposals such as IntServ, DiffServ, and IP Multicast have not seen wide acceptance largely because they require modification of all routers in the network. On the other hand, an overlay network can be incrementally deployed on end-hosts running the overlay protocol software, without cooperation from Internet service providers. The overlay has no control over how packets are routed in the underlying network between two overlay nodes, but it can control, for example, the sequence of overlay nodes a message traverses before reaching its destination. For example, Akamai Technologies manages an overlay network that provides reliable, efficient content delivery (a kind of multicast). Academic research includes end system multicast and overcast for multicast; RON (resilient overlay network) for resilient routing; and OverQoS for quality of service guarantees, among others.



Choose the right answer

This network typically consists of two or more local area networks, covering a large geographical area

LÅN WAN Intranet

This type of network does not have a dedicated server; all the computers are independent

Peer-to-peer client-server MAN

On this topology, all devices are connected to the same circuit, forming a continuous loop

star ring bus

Basic Components Hardware



Apart from the physical communications media themselves as described before, networks comprise additional basic hardware building blocks interconnecting their terminals, such as network interface cards



(NICs), hubs, bridges, switches, and routers.

Network interface cards

A network card, network adapter, or NIC (network interface card) is a piece of computer hardware designed to allow computers to physically access a networking medium. It provides a low-level addressing system through the use of MAC addresses.

Each Ethernet network interface has a unique MAC address which is usually stored in a small memory device on the card, allowing any device to connect to the network without creating an address conflict. Ethernet MAC addresses are composed of six octets. Uniqueness is maintained by the IEEE, which manages the Ethernet address space by assigning 3-octet prefixes to equipment manufacturers. The list of prefixes is publicly available. Each manufacturer is then obliged to both use only their assigned prefix(es) and to uniquely set the 3-octet suffix of every Ethernet interface they produce.

Repeaters and hubs

A repeater is an electronic device that receives a signal, cleans it of unnecessary noise, regenerates it, and retransmits it at a higher power level, or to the other side of an obstruction, so that the signal can cover longer distances without degradation. In most twisted pair Ethernet configurations, repeaters are required for cable that runs longer than 100 meters. A repeater with multiple ports is known as a hub. Repeaters work on the Physical Layer of the OSI model. Repeaters require a small amount of time to regenerate the signal. This can cause a propagation delay which can affect network communication when there are several repeaters in a row. Many network architectures limit the number of repeaters that can be used in a row (e.g. Ethernet's 5-4-3 rule).

Today, repeaters and hubs have been made mostly obsolete by switches (see below).

Bridges

A network bridge connects multiple network segments at the data link layer (layer 2) of the OSI model. Bridges broadcast to all ports except the port on which the broadcast was received. However, bridges do not promiscuously copy traffic to all ports, as hubs do, but learn which MAC addresses are reachable through specific ports. Once the bridge associates a port and an address, it will send traffic for that address to that port only.

Bridges learn the association of ports and addresses by examining the source address of frames that it sees on various ports. Once a frame arrives through a port, its source address is stored and the bridge assumes that MAC address is associated with that port. The first time that a previously unknown destination address is seen, the bridge will forward the frame to all ports other than the one on which the frame arrived.

Bridges come in three basic types:

Local bridges: Directly connect LANs

Remote bridges: Can be used to create a wide area network (WAN) link between LANs. Remote bridges, where the connecting link is slower than the end networks, largely have been replaced with routers.

Wireless bridges: Can be used to join LANs or connect remote stations to LANs.

Switches

A network switch is a device that forwards and filters OSI laver 2 (chunks datagrams of data communication) between ports (connected cables) based on the MAC addresses in the packets.A switch is distinct from a hub in that it only forwards the frames to ports involved in the communication rather than all ports connected. A switch breaks collision domain represents itself as a broadcast



domain. Switches make forwarding decisions of frames on the basis of MAC addresses. A switch normally has numerous ports, facilitating a star topology for devices, and cascading additional switches. Some switches are capable of routing based on Layer 3 addressing or additional logical levels; these are called multi-layer switches. The term switch is used loosely in marketing to encompass devices including routers and bridges, as well as devices that may distribute traffic on load or by application content (e.g., a Web URL identifier).

Routers

A router is an internetworking device that forwards packets between networks by processing information found in the datagram or packet (Internet protocol information from Layer 3 of the OSI Model). In many situations, this information is processed in conjunction with the routing table (also known as forwarding table). Routers use routing tables to determine

what interface to forward packets (this can include the "null" also known as the "black hole" interface because data can go into it, however, no further processing is done for said data).

Firewalls

A firewall is an important aspect of a network with respect to security. It typically rejects access requests from unsafe sources while allowing actions from recognized ones. The vital role firewalls play in network security grows in parallel with the constant increase in 'cyber' attacks for the purpose of stealing/corrupting data, planting viruses, etc.



Fill in the gaps

Read the paragraph below and fill in the missing words.

A network bridge connects multiple network segments at the data link 2 of the OSI model.

Each Ethernet network interface has a unique addres.

A switch normally has numerous.

A repeater is an electronic device that receives a , cleans it of unnecessary , regenerates it, and retransmits it at a higher power level.

Routers use routing tables to determine what interface to forward.