


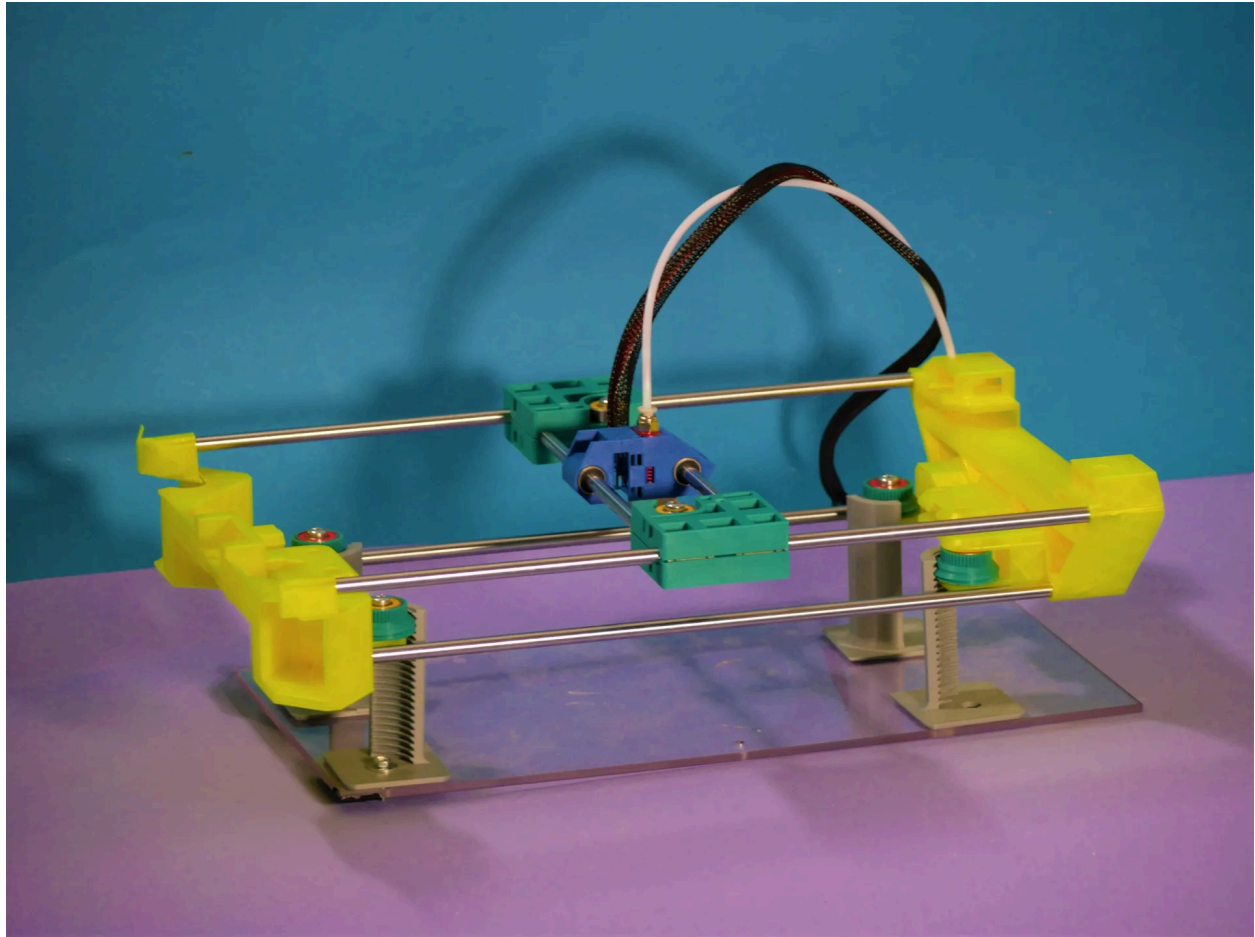


Infini-Z 3D-Printer


Parts to print

Quantity	Parts
1	Hotend
4	Worm gear
1	frame motor side
1	frame tensioner side
2	Motor_side_threaded_pin_for_worm_gear
2	Tensioner_side_threaded_pin_for_worm_gear
1	Z-tensioner2
4	Gantry_connection
4	Legs
6	smooth_pin
1	Z-tensioner3
2	X-Y_tensioner
1	Z-tensioner1


HotEnd assembling

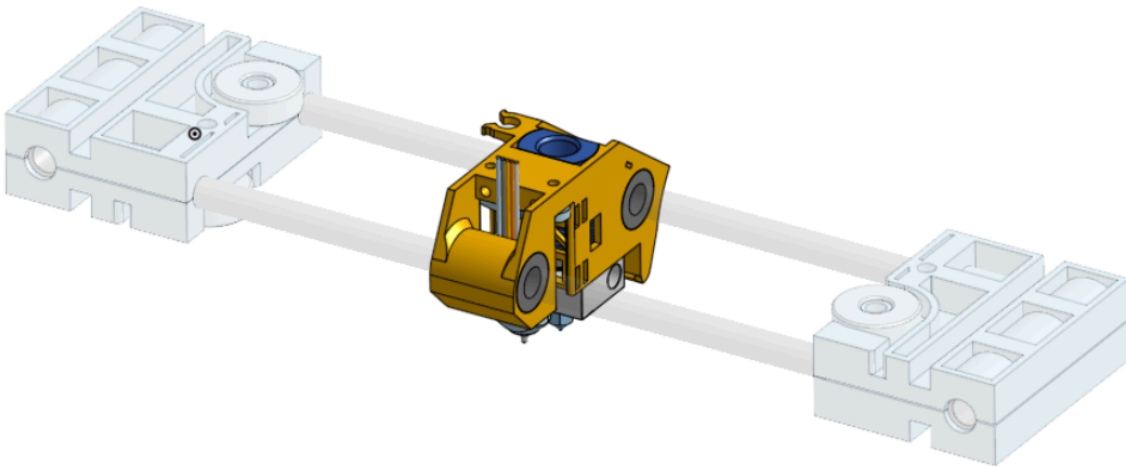


1. Place the LM8UU bearings in the main holes of the hotend as shown in the image.

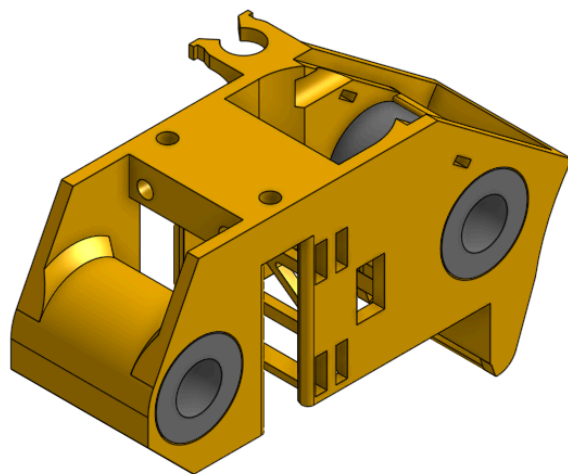

2. Place the 3D Touch and the Ender 3/CR 10 as shown in the image.

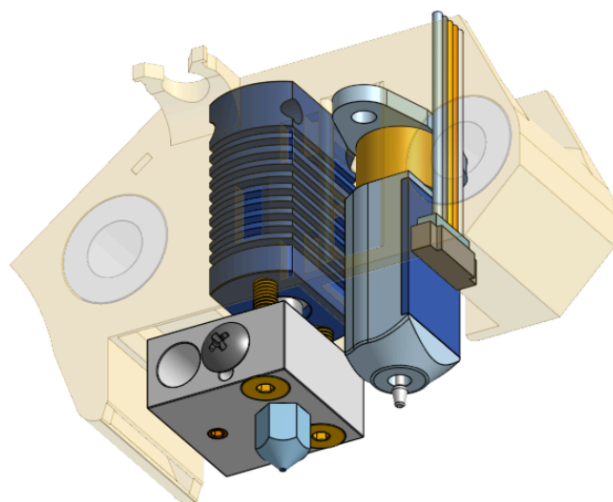


3. To fix them, use hex bolts as shown in the image.

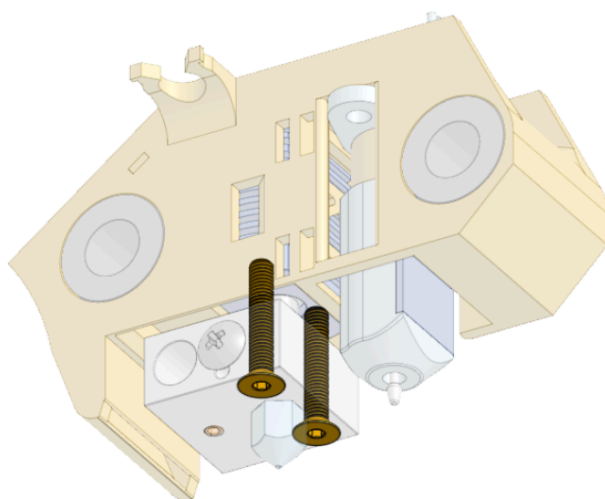


8x200mm assembling


1. Before assembling the carriers, pass the rods through the hotend, and then before joining the main parts of the carrier, place both rods. They will fit under pressure once the carriers are assembled.

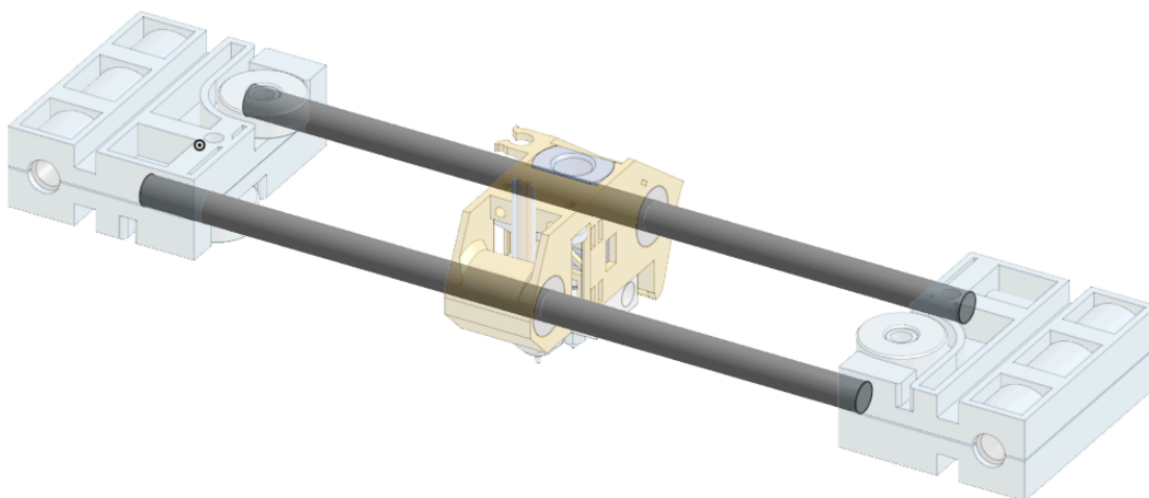


Left and right carrier assembling

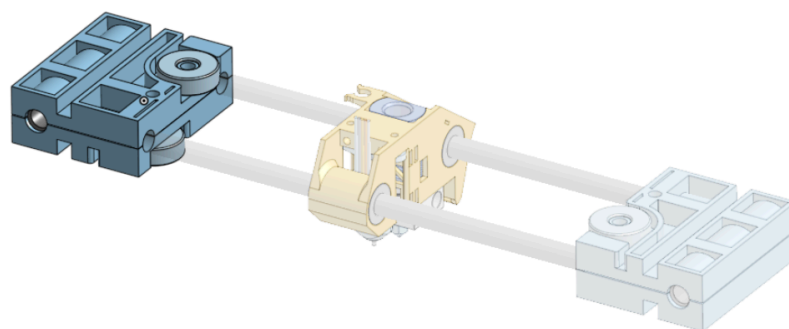


1. Join the two main components of the carrier, don't forget to put the Linear Bearings in place.

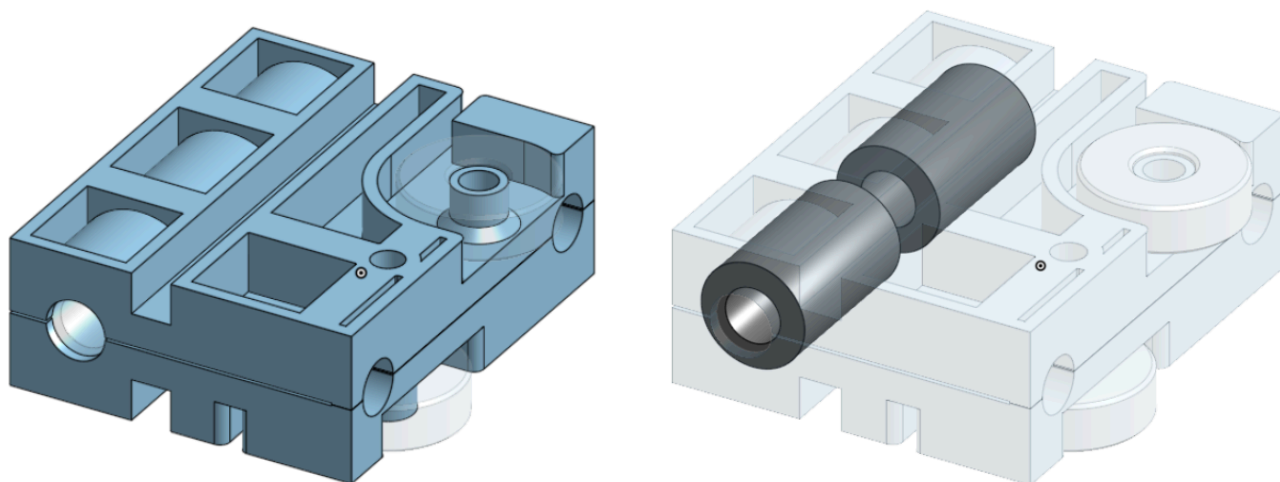


2. Place the pulleys (1m8uu) that will guide the belts.

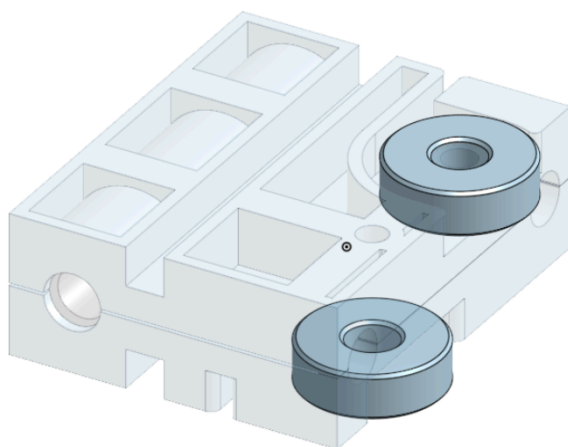


1. First, attach the legs to the table. The image shows the separation distance. It is important to take accurate measurements in this step, as a small error can lead to poor results.

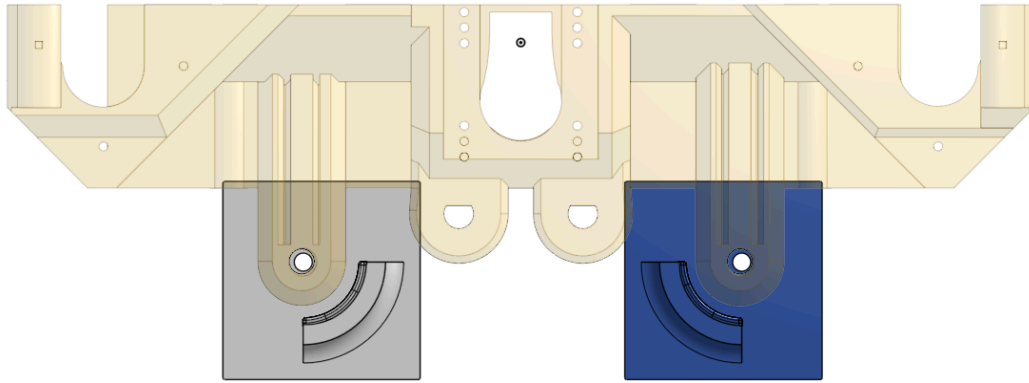


2. Place the worm gears and then secure them with the motor side threaded pins for worm gears that were previously 3D printed. Do the same with the 608 bearings and secure them with the smooth pins, also previously printed.

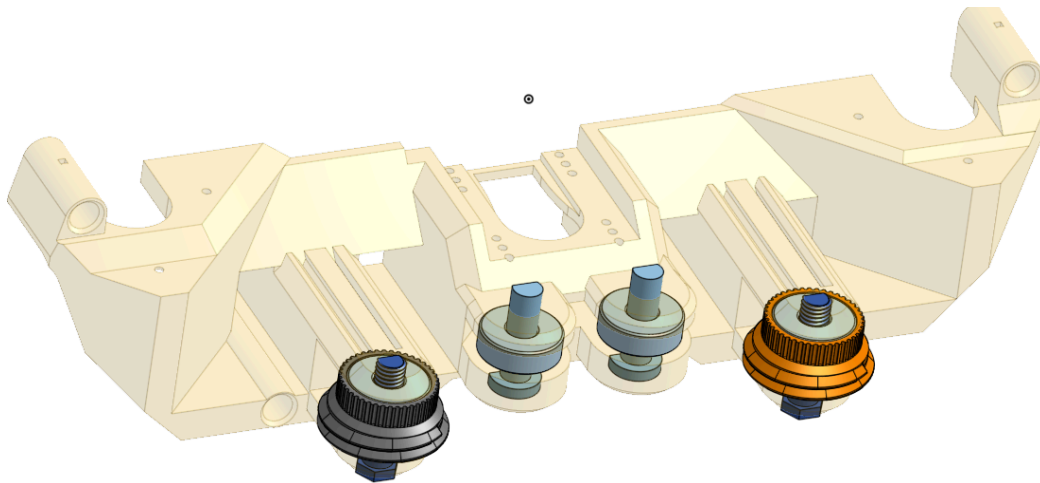



3. Next, place the motors as shown in the image and put the pulley with teeth on their shaft.

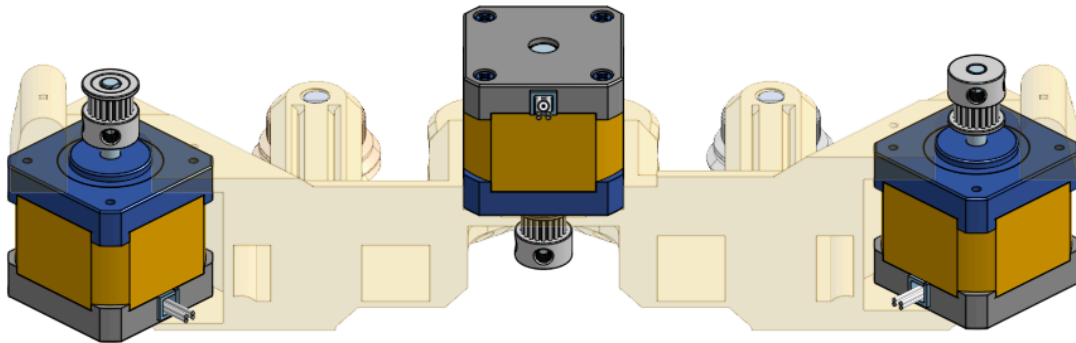



Frame tensioner side assembling

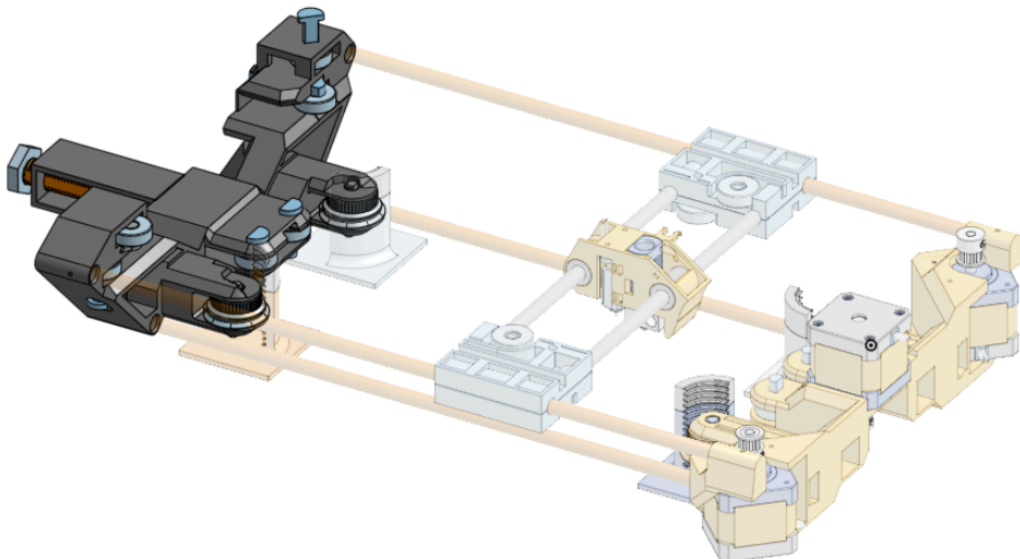


1. Place the worm gears and then secure them with the motor side threaded pins for worm gears that were previously 3D printed to the "frame_tensioner_side"

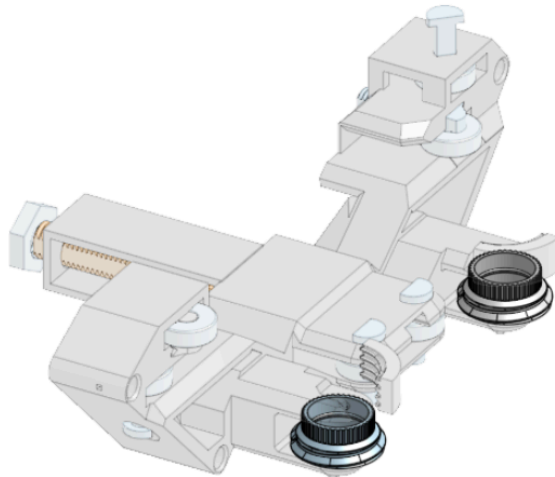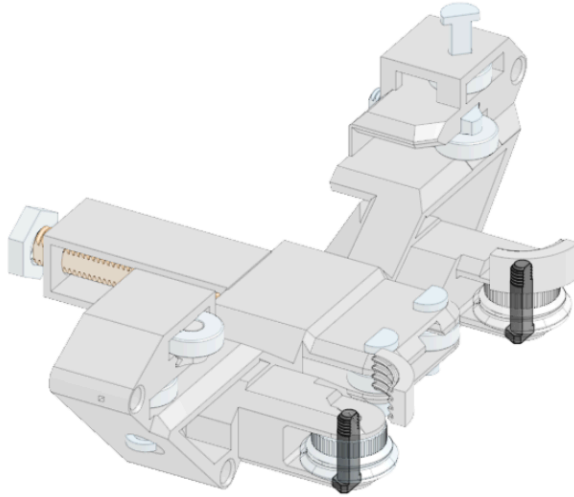


2. Do the same with the 608 bearings and secure them with the smooth pins.

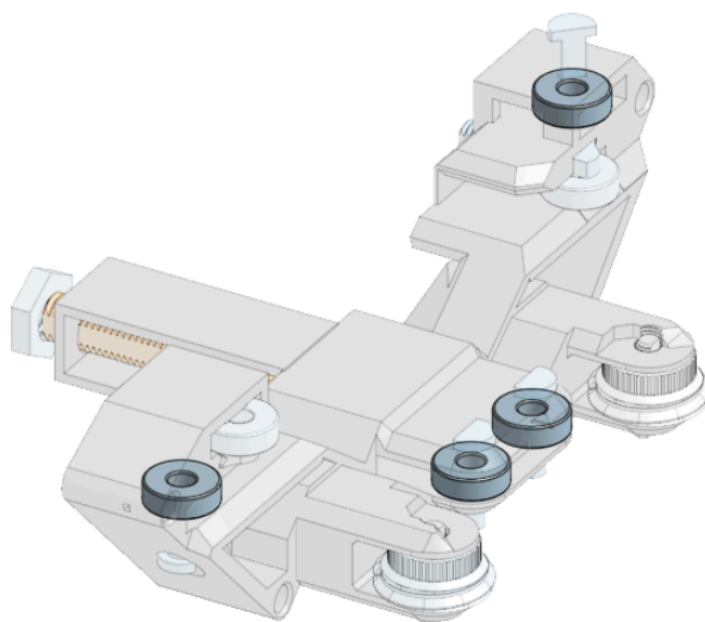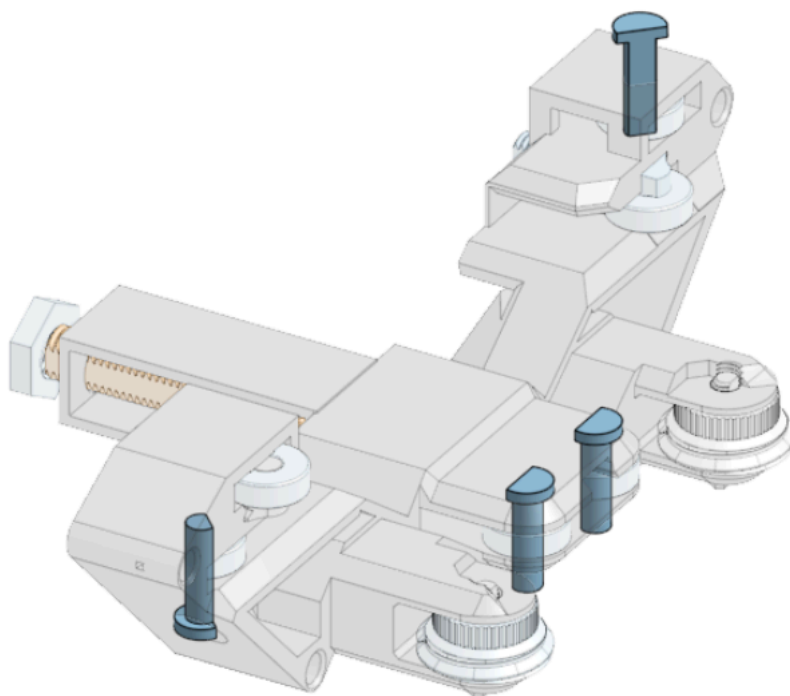


3. Then, to connect the remaining bearings, X-Y Tensioners are used to attach them to the main part.

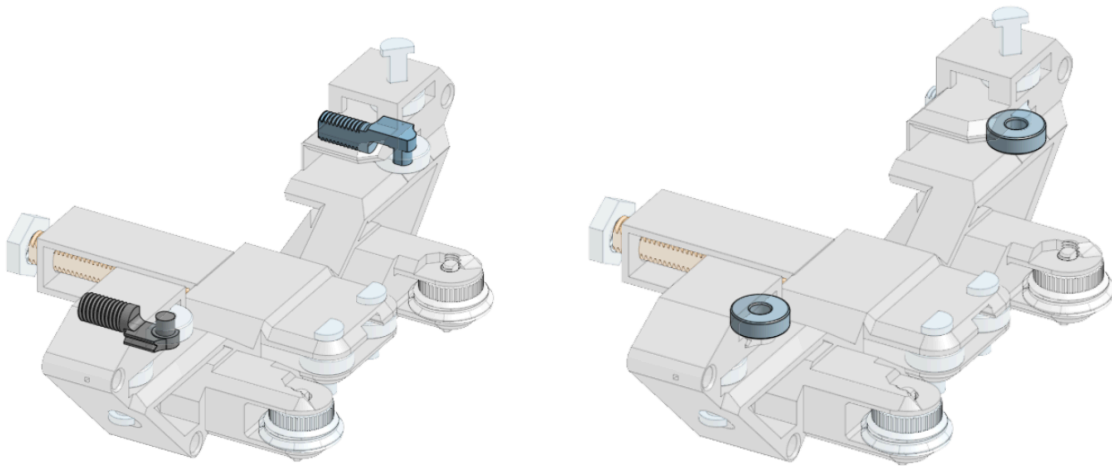


Assembly of the external part of the frame tensioner

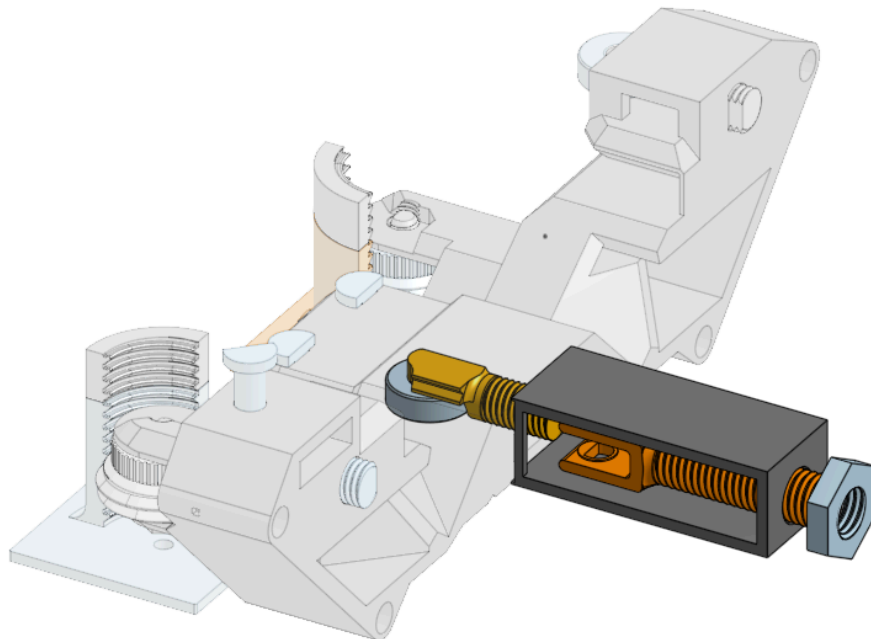


1. First, attach a 608 bearing to an X-Y Tensioner as shown in the image.

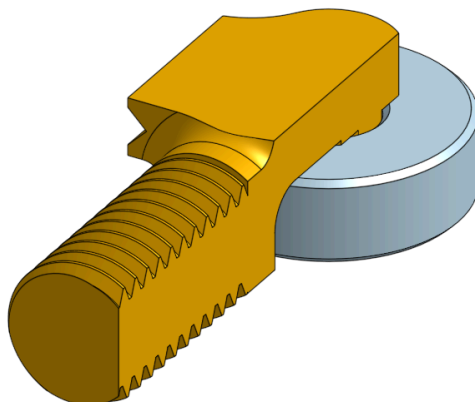

2. Then, insert this part into the rear of the frame tensioner.

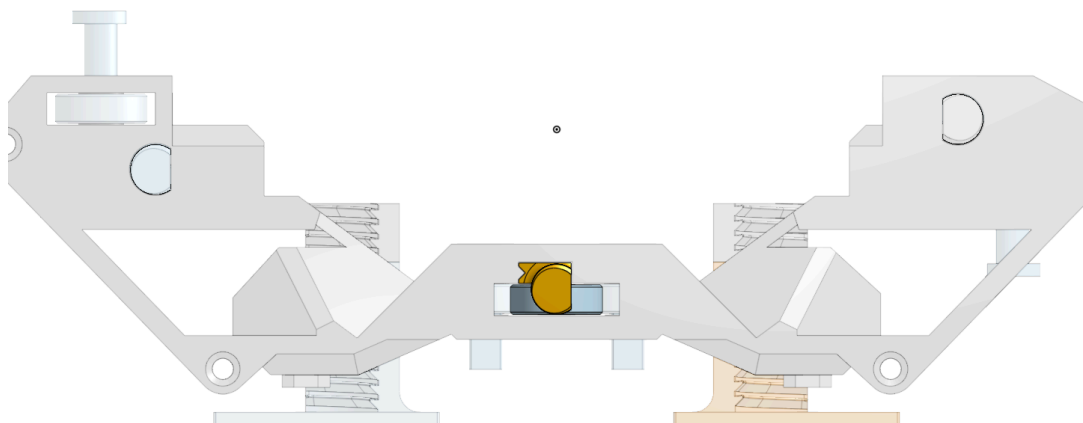


3. Finally, assemble the external part of the frame tensioner with the Z-tensioner and attach it to the frame body.

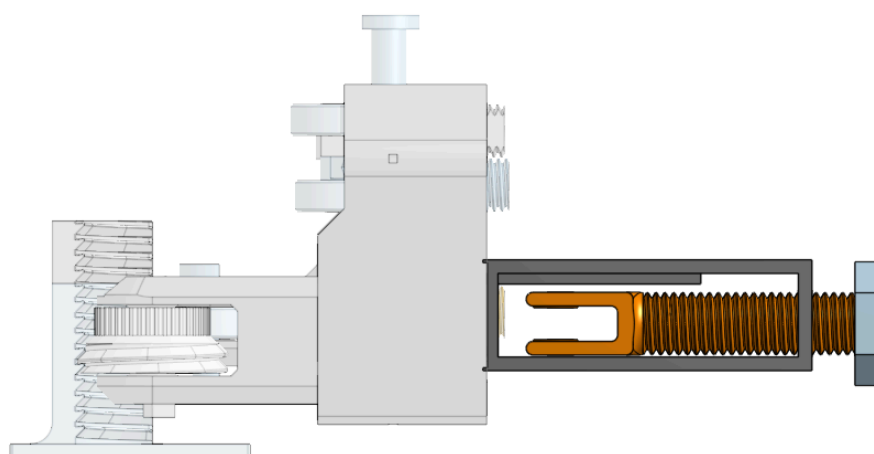

Assembly of the 400*8mm rods and the last two legs

1. Finally, place the rods in the same way as shown in the image.

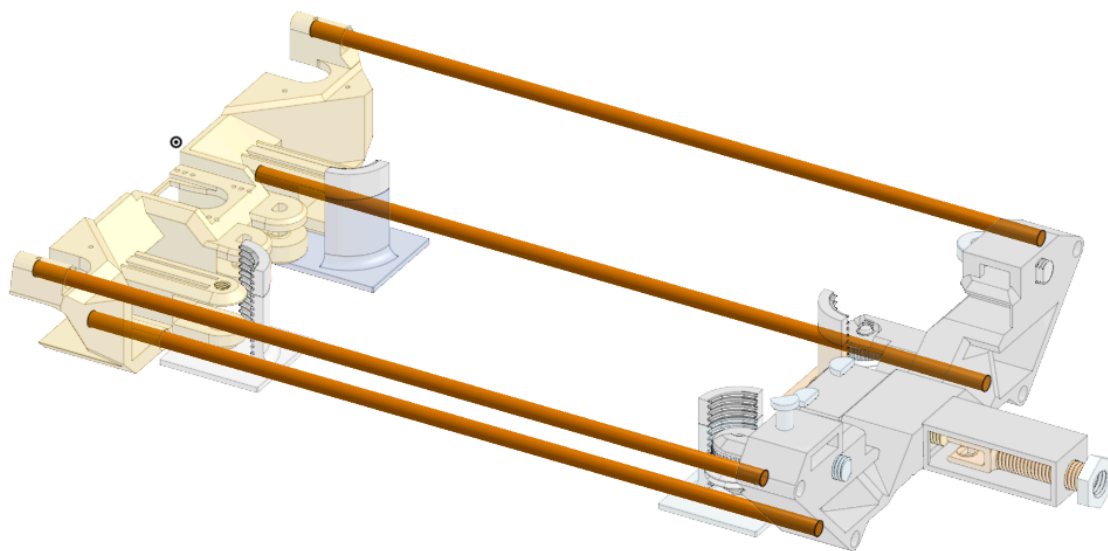

2. Once the rods are installed and the final distance between the sides is determined, place the frame tensioner legs on the table in this position.

