SUPPLEMENT







ORDER NO. VRT-010

VIDEO DISC PLAYER

PR-8210


NOTE:

This service manual describes different items from VRT-006.


1. PR-8210 service parts contrast table

	PR-8210 without JAKB		PR-8210 with JAKB	
Part name	Part no.	Described on page of VRT-006	Part no.	
Front acryl	VNK-066	Page 51, 52	VNK-133	
Front panel assembly	VXX-060	51, 52	VXX-114	
JAKB	_	_	VWG-075	
Connecter assembly KEYC — N25	_	_	VKP-188	
Remote control unit	VXX-073	61, 62	RU-8210	
Operating instructions	VRB-009	61, 62	VRB-017	
Simplified instructions	VRN-010	61, 62	VRN-017	

2. JAKB LOCATION

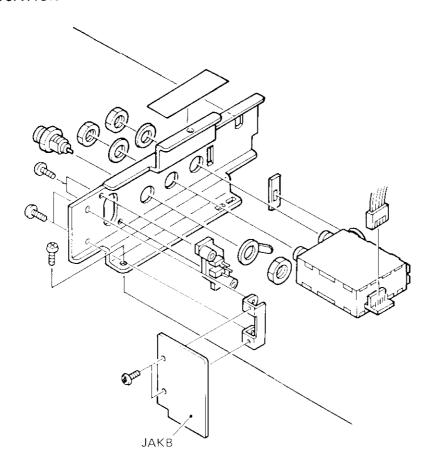


3. JAKB, KEYC & IRAB

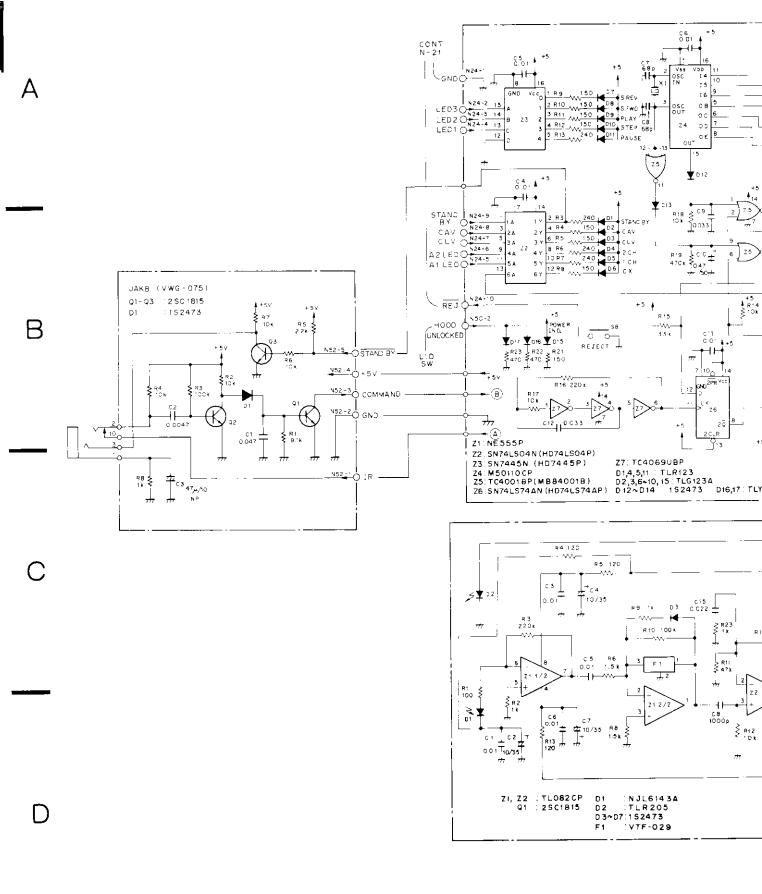

]

3

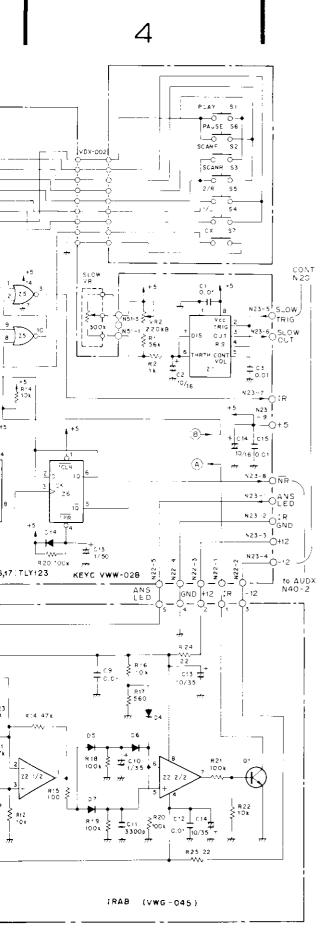

JAKB (VWG-075)

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
	2SC1815-O/Y/GR	Q1-Q3
	1 S 2473	D1

CAPACITORS

Mark	Part No.	Symbol & Description	
	CQMA473J50	C1	
	CQMA472J50	C 2	
	CEA470M10NP	C3	

RESISTORS

Mark	Part No.	Symbol & Description	
	RD1/4VS912J	R1	
	RD1/4V\$103J	R2, R4, R6, R7	
	RD1/4VS104J	R3	
	RD1/4VS222J	R5	
	RD1/4VS102J	R8	

OTHERS

Mark	Part No.	Symbol & Description
	VKN-092	Phone lack stereo mini

6

