GAME NO: 568 AUGUST, 1973

Midway's

SPORTSMAN

PARTS CATALOG



MIDWAY MFG. CO. 3750 RIVER ROAD SCHILLER PARK, ILLINOIS, 60176, U.S.A.

PHONE: (312) 678-1350

CABLE ADDRESS MIDCO

www. besementercode.com OLASDES

TABLE OF CONTENTS

	Page No.
TROUBLE SHOOTING INFORMATION	1-2-3
TARGET ALIGNMENT	4
COUGAR TARGET ASSEMBLY	5-6
CROW ASSEMBLY	7-8
REAR DUCK ASSEMBLY	9-10
DIAGONAL DUCK ASSEMBLY	11-12
RIFLE ASSEMBLY	13-14
STYLUS ADJUSTMENT	15—16
SHOT UNIT	17-18
SCORE, CREDIT & CONTROL UNIT	19-20
STEP-UP UNIT	21 — 22
TAPE DECK	23-24
ADDITIONAL PARTS	25-26
NOTES	27 – 28
EQUIPMENT CHART	Inside Cover

SPORTSMAN TROUBLE SHOOTING TARGET OPERATION

COMPLAINT:

Ducks, crow, and cougar fail to move.

CHECK THE FOLLOWING:

- 1. MT-25 transformer and associated wiring.
- 2. 2 amp slow blow fuse (two).
- 3. Motor speed unit jack connection pin #8, #9, #11, #12, and #15.
- 4. Motor speed unit (PC 568-914).

COMPLAINT:

Cougar fails to operate.

CHECK THE FOLLOWING:

- 1. Cougar unit binding condition.
- 2. 12 VDC cougar motor and associated wiring (40-2236).
- 3. Motor speed unit jack connection pin #4 and #7.
- 4. Left cougar program relay switch adjustment (Green-White and Brown) or (Green-White and jumper).
- 5. Right cougar program relay switch adjustment (Green and jumper).
- 6. Open left or right cougar program relay coil (M 36-3300).
- 7. Left and right limit circuit wiper adjustment and associated wiring (PC 568-925).
- 8. Motor speed unit (PC 568-914).

COMPLAINT:

Rear duck fails to operate.

CHECK THE FOLLOWING:

- 1. Rear duck unit binding condition.
- 2. 12VDC rear duck motor and associated wiring (40-2237).
- 3. Motor speed unit jack connection pin #3 and #6.
- 4. Left rear duck program relay switch adjustment (White-Brown and Red-Black) or (White-Brown and jumper).

MIDWAY MFG. CO.

3750 N. RIVER ROAD

SCHILLER PARK, ILLINOIS



SPORTSMAN TROUBLE SHOOTING TARGET OPERATION

(Continued)

- 5. Right rear duck program relay switch adjustment (Green and jumper).
- 6. Open left or right rear duck program relay coil (M 36-3300).
- 7. Left and right limit circuit wiper adjustment and associated wiring (PC 568-915).
- 8. Motor speed unit (PC 568-914).

COMPLAINT:

Diagonal duck motor fails to operate.

CHECK THE FOLLOWING:

- 1. Diagonal duck unit binding condition.
- 2. 12VDC diagonal duck motor and associated wiring (40-2227).
- 3. Motor speed control unit jack connection pin #16 and #19.
- 4. Left diagonal duck program relay switch adjustment (Blue-Black and Red-Black) or Blue-Black and jumper).
- 5. Right diagonal duck program relay switch adjustment (Green and jumper).
- 6. Open left or right program relay coils (M 36-3300).
- 7. Left and right limit circuit wiper adjustment and associated wiring (PC 568-901).
- 8. Motor speed unit (PC 568-914).

COMPLAINT:

Crow fails to operate.

CHECK THE FOLLOWING:

- 1. Crow unit binding condition.
- 2. 12VDC crow motor and associated wiring (40-2228).
- 3. Motor speed unit jack connection pin #17 and #20.
- 4. Left crow program relay switch adjustment (Yellow-Black and Red-Black) or Yellow-Black and jumper).
- 5. Right crow program relay switch adjustment (Green and jumper).
- 6. Open left or right program relay coil (M 36-3300).
- 7. Left and right limit circuit wiper adjustment and associated wiring (PC 568-908).
- 8. Motor speed unit (PC 568-914).

SPORTSMAN TROUBLE SHOOTING TARGET OPERATION

COMPLAINT:

Cougar fails to reverse on hit.

CHECK THE FOLLOWING:

- 1. Cougar target assembly binding condition.
- 2. 12VDC cougar target motor and associated wiring (40-611).
- 3. Motor speed unit jack connection pin #1, #14 and #22.
- 4. Cougar hit relay switch adjustment (Brown-Black).
- 5. Left and right cougar program relay switch adjustment (Red-White or Brown-Black).
- 6. Motor speed unit (PC 568-914).

TROUBLE SHOOTING TIME DELAY RELAY OPERATION.

COMPLAINT:

Game timer fails to start with 8 to 10 second delay (operates with 1st shot).

CHECK THE FOLLOWING:

- 1. Time delay unit jack connections pin #8 and #9.
- 2. Trouble in time delay unit (PC 568-929).


COMPLAINT:

Targets fail to program automatically via time delay unit.

CHECK THE FOLLOWING:


- 1. Program reset relay switch adjustment (Yellow-Brown and Brown-Blue, or Gray-White).
- 2. Time delay unit jack connections pins #1, #3, #4, #6, and #7.
- 3. Delay relay switch adjustment (Orange).
- 4. Open delay relay coil (M 35-3000 DC).
- 5. Defective time delay unit (PC 568-929).

TARGET ALIGNMENT FOR SPORTSMAN

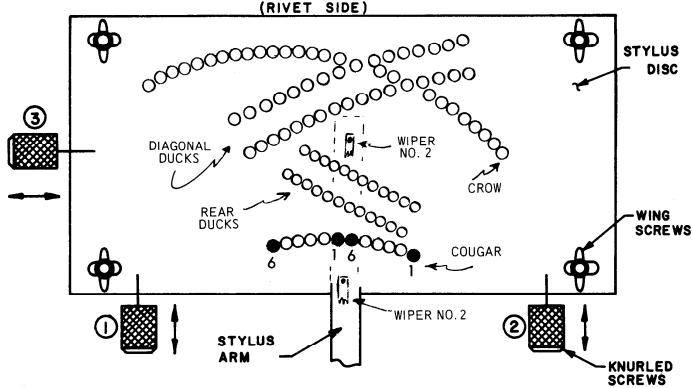

- 1. Loosen the four (4) wing screws slightly.
- 2. Swing cougar target to vertical center between segments 1 and 6 PC 568-525.
- 3. Sight gun on cougar.
- 4. The cougar stylus should be between rivets 1 and 6 of rifle disc.
- 5. For up and down adjustment, use knurled screws (1) & (2).
- 6. Side adjustment is made with knurled screw (3).
- 7. Swing cougar target over to segment 6 (far end).
- 8. Sight gun on cougar.
- 9. Cougar stylus should be on rivet 6. Use knurled screws (1), (2), and (3) for necessary adjustment.
- 10. Repeat above procedure for segment 1 (other end).
- 11. Tighten wing screws and check to see that disc is lightly lubricated.
- 12. Do not alter rifle disc adjustment for crow and ducks.
- 13. The crow and duck target panels are move in and out for height adjustment.
- 14. The crow and duck adjustment left and right should be done with wiper or disc movement.
- 15. Adjust crow and duck targets for proper lead.
- 16. Check out by operating game electrically.




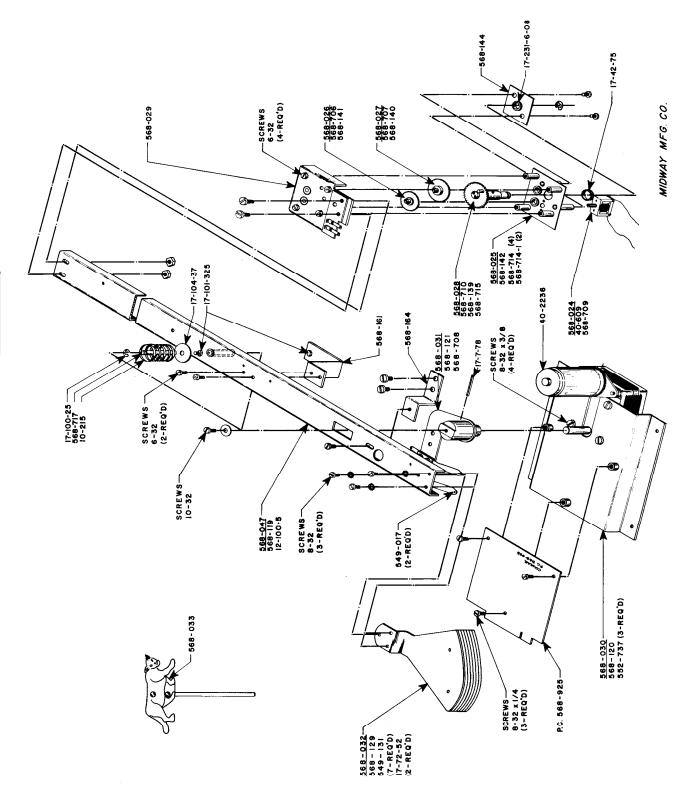

NO. 568 SPORTSMAN - COUGAR TARGET ASSEMBLY

PRICE LIST

PART NO.	DESCRIPTION	PRICE
10-215	SPRING	.12 EA.
17-7-78	PIN ROLL 1/8" X 13/16"	
17-42-75	BEARING (NYLINER)	.10 EA. .10 EA.
17-72-52	RIVET 1/8" X 1/8" (2 REQUIRED)	.10 EA.
17-100-25	"E" RING (2 REQUIRED)	.10 EA.
17-100-25	SCREW 10-32 X 1/4" HEX HD. NYLON (2 Reg'd.)	.12 EA.
17-101-323	WASHER 3/4" O.D. X .145 I.D. X 1/16"	.12 LA. .08 EA.
17-104-37	BEARING	.06 LA. .25 EA.
40-2236	MOTOR	22.00 EA.
549-017	WIPER ASSEMBLY (2 REQUIRED)	.50 EA.
549-131	WEIGHT (7 REQUIRED)	.30 LA. .40 EA.
568-024	MOTOR ASSEMBLY	2.25 EA.
568-025	BASE PLATE ASSEMBLY	3.90 EA.
568-026	PINION ASSEMBLY - 1ST. STAGE	2.25 EA.
568-027	PINION ASSEMBLY – 2ND STAGE	2.25 EA.
568-028	OUTPUT GEAR ASSEMBLY	3.50 EA.
568-029	BOTTOM HOUSING SUB. ASSEMBLY	4.00 EA.
568-03C	MOTOR BRACKET ASSEMBLY	2.00 EA.
568-031	HUB ASSEMBLY	3.30 EA.
568-032	COUNTER BALANCE ASSEMBLY	4.50 EA.
568-033	COUGAR TARGET ASSEMBLY	3.50 EA.
568-047	DRIVE ARM SUB. ASSEMBLY	4.00 EA.
568-129	BASE PLATE - COUNTER BALANCE	1.00 EA.
568-144	COVER PLATE - GEAR UNIT	1.50 EA.
568-161	GUIDE BRACKET	.55 EA.
568-164	SUPPORT BRACKET	.40 EA.
568-709	PINION MOTOR, 64P, 10T, 20°PA	.60 EA.
568-716	SÙPPORT – TARGET	.40 EA.
568-717	ROD - TENSION	.40 EA.
568-909	COUGAR (LEFT & RIGHT)	1.60 SET
568-925	PRINTED CIRCUIT	4.50 EA.
		4
1		

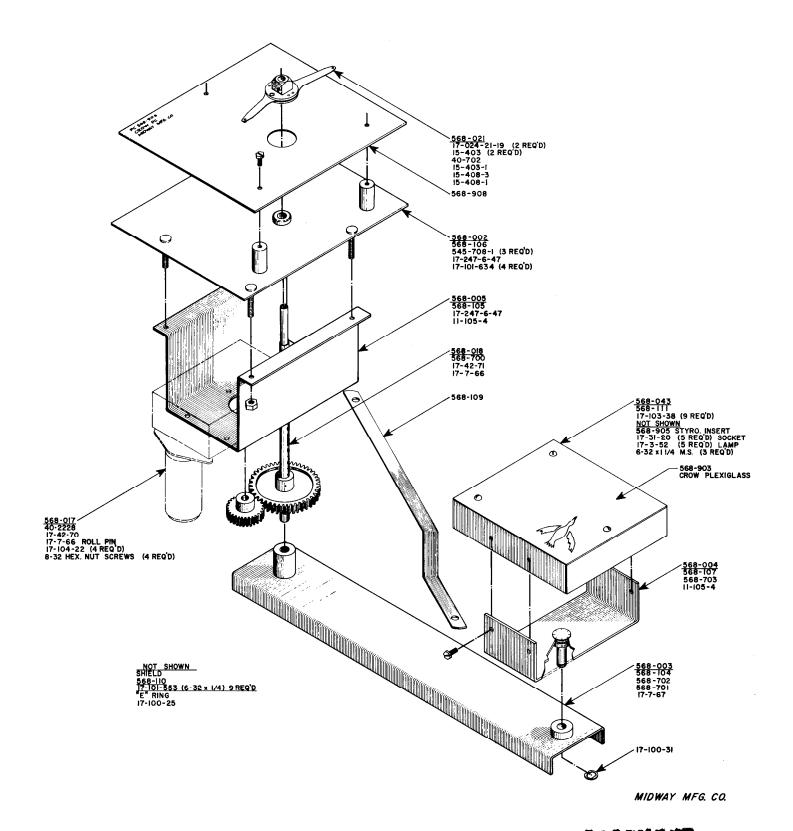

DASCADE WWW. basementarcade.com OLASSICAGE 7

NO. 568 SPORTSMAN - CROW ASSEMBLY


PRICE LIST

ARRANGED IN NUMERICAL ORDER

PART NO.	DESCRIPTION	PRICE
15-403	STEEL WASHER (2 REQUIRED)	.12 EA.
15-403-1	FIBRE WASHER (2 REQUIRED)	.10 EA.
15-408-1	WIPER BALDE	.20 EA.
15-408-3	WIPER BLADE	.20 EA.
17-3-52	LAMP (5 REQUIRED)	.20 EA.
17-7-66	ROLL PIN 3/32" X 5/8"	.10 EA.
17-7-67	ROLL PIN	.10 EA.
17-31-20	SOCKETS (5 REQUIRED)	.20 EA.
17-42-70	GEAR (24 TOOTH)	.40 EA.
17-42-71	GEAR (48 TOOTH)	1.20 EA.
17-100-25	"E" RING	.60 DZ.
17-100-31	"E" RING	.60 DZ.
17-101-553	6-32 X ¼" SCREWS (9 REQUIRED)	.60 DZ.
17-104-22	FL. WASHER	.10 EA.
40-2228	MOTOR 12V D.C.	21.00 EA.
568-002	P. C. PLATE ASSEMBLY	3.20 EA.
568-003	ARM & BUSHING SUB. ASSEMBLY	2.20 EA.
568-004	YOKE & PIN SUB. ASSEMBLY	1.20 EA.
568-005	MOTOR BRACKET SUB. ASSEMBLY	2.70 EA.
568-017	MOTOR & GEAR ASSEMBLY	22.50 EA.
568-018	SHAFT & GEAR SUB. ASSEMBLY	2.30 EA.
568-021	WIPER ASSEMBLY	3.20 EA.
568-043	CROW BOX ASSEMBLY	4.60 EA.
568-104	ARM .	1.10 EA.
568-109	LINK OFFSET	.60 EA.
568-110	SHIELD	.60 EA.
568-700	SHAFT	1.20 EA.
568-903	CROW PLEX.	5.60 EA.
568-905	STYRO INSERT	1.20 EA.
568-908	P. C. CROW	5.40 EA.


MIDWAY MFG. CO.

PRICES

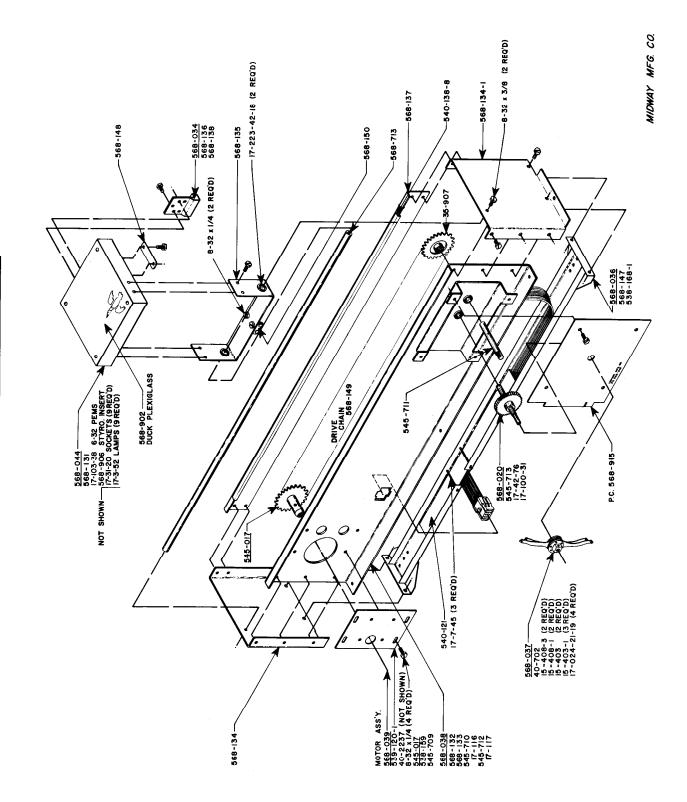

NO. 568 SPORTSMAN – REAR DUCK ASSEMBLY PRICE LIST

PART NO.	DESCRIPTION	PRICE
17-3-52 17-7-45 17-31-20 17-42-76 17-024-21-19 17-100-31 17-116 17-117 17-223-42-18 35-907 40-2237 540-121 540-138-8 545-017 545-711 545-713 568-020 568-034 568-036 568-037 568-038 568-038 568-039 568-044 568-134-1 568-134-1 568-135 568-137 568-137 568-148 568-149 568-150 568-713 568-902 568-906 568-915	No. 1895 LAMP (9 REQUIRED) COTTER PIN (3 REQUIRED) SOCKET (9 REQUIRED) GEAR 32P, 72T CONTACT (4 REQUIRED) "E" RING 5/16" BEARING BEARING NYLINER (2 REQUIRED) SPROCKET MOTOR D.C., 110 R.P.M. COVER — CABLE CABLE — PROTECTOR BUSHING & SPROCKET PINION SHAFT SHAFT SHAFT SHAFT & GEAR SUB. ASSEMBLY GLIDE BRACKET SUB. ASSEMBLY WIPER ASSEMBLY WIPER ASSEMBLY MAIN BRACKET SUB. ASSEMBLY MOTOR ASSEMBLY SIDE BRACKET R.H. SIDE BRACKET L.H. CHAIN — BRACKET SUPPORT BRACKET SUPPORT BRACKET CLAMP — CABLE DRIVE CHAIN LINK — CHAIN RUNNER BAR REAR DUCK PLEXIGLASS REAR DUCK INSERT (STYRO.) P. C. REAR DUCKS	.20 EA70 DZ20 EA. 1.00 EA10 EA60 DZ70 EA80 EA10 EA20 EA. 1.60 EA. 2.50 EA. 1.60 EA. 2.50 EA. 1.40 EA. 2.80 EA. 1.40 EA. 2.80 EA. 1.00 EA. 2.00 EA. 2.00 EA. 2.00 EA. 2.00 EA. 2.00 EA. 1.00 EA. 2.00 EA. 1.00 EA.
	1	

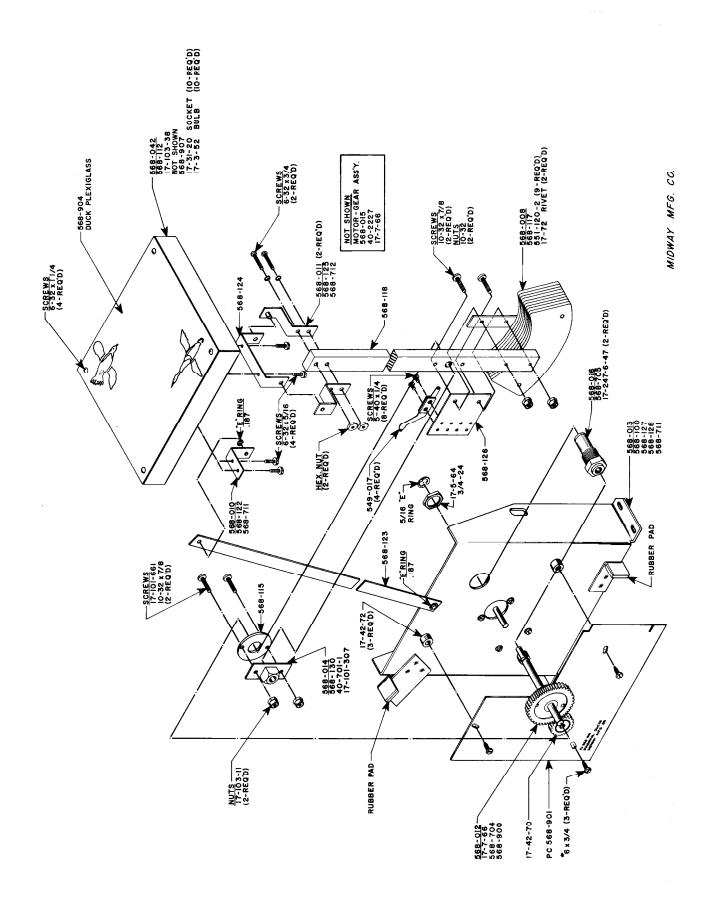


PASEMENT ARCADE www.besementarcade.com O4A% PAGE 11

NO. 568 SPORTSMAN - DIAGONAL DUCK ASSEMBLY

PRICE LIST


PART NO.	DESCRIPTION	PRICE
17-3-52 17-7-66 17-31-20 17-42-70 17-42-72 17-72-53 17-103-38 17-247-6-47 40-2227 549-017 551-120-2 568-008 568-010 568-011 568-012 568-013 568-014 568-015 568-015 568-115 568-115 568-115 568-115 568-122 568-123 568-124 568-125 568-124 568-125 568-126 568-704 568-705 568-900 568-901 568-901	BULB (10 REQUIRED) ROLL PIN 3/32" DIA. X 5/8" LG. (2 REQ'D.) SOCKET (10 REQUIRED) GEAR 24P, 24T PLASTI – GROMMET (FASTEX) STEEL OVAL HEAD RIVET 1/8" X 1-1/4" PEMS NUT No. 6-32 (9 REQUIRED) FLANGE BEARING 5/16" X 3/8" (2 REQ'D.) D. C. MOTOR (MULTI) WIPER ASSEMBLY WEIGHT (9 REQUIRED) WEIGHT WELDING RIVET ASSEMBLY SUPPORT ARM ASSEMBLY SUPPORT FRAME ASSEMBLY SUPPORT FRAME ASSEMBLY HUB & PLATE ASSEMBLY HOTOR – GEAR ASSEMBLY BEARING ASSEMBLY ALUMINUM BOX ASSEMBLY SPACER, GEAR PLATE, WEIGHT ATTACHING ARM, LIGHT BOX BRACKET, LINK CONNECTING LINK PIVOT BRACKET SUPPORT ARM PLATE, CONTACT BLADE SHAFT BUSHING, BEARING GEAR P. C. DUCKS TOP PLATE W/ART WORK INSERT	.20 EA06 EA20 EA40 EA16 EA06 EA10 EA40 EA10 EA50 EA70 EA70 EA70 EA60 EA60 EA90 EA22.00 EA30 EA700 EA30 EA40 EA50 EA50 EA700 EA50 EA700 EA50 EA700 EA.

NO. 568 SPORTSMAN - RIFLE ASS'Y.

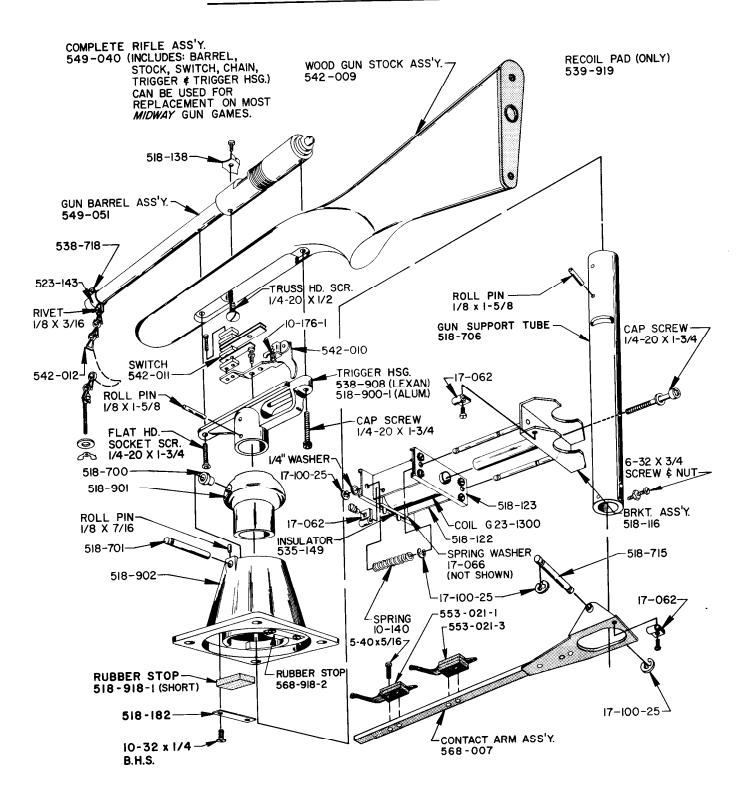

NO. 568 SPORTSMAN - RIFLE ASSEMBLY


PRICE LIST

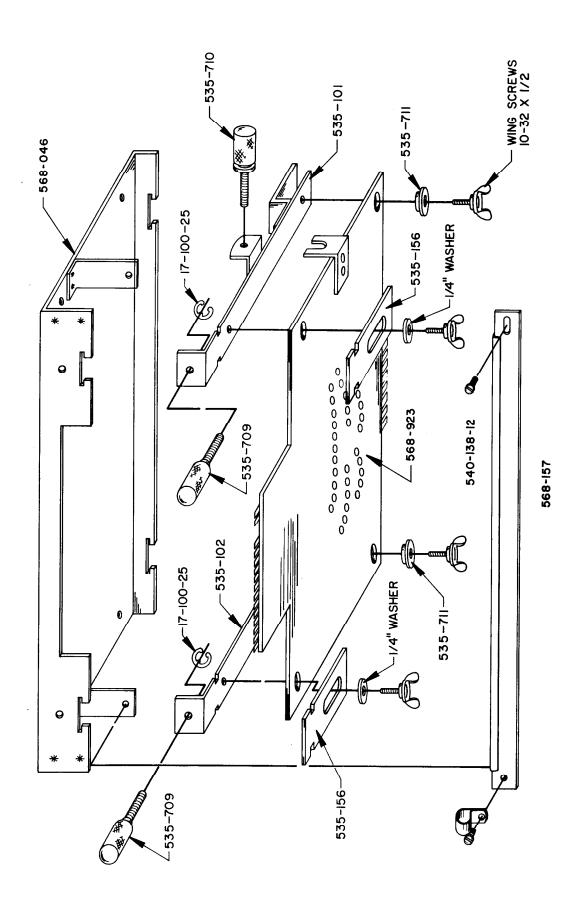

NO. 568 SPORTSMAN — STYLUS ADJUSTMENT **PRICE LIST**

ARRANGED IN NUMERICAL ORDER


PART NO.	DESCRIPTION	PRICE
17-100-25	1/4'' ''E'' RING (2 REQUIRED)	.10 EA.
535-101	CROSS BAR ASSEMBLY R.H.	2.00 EA.
535-102	CROSS BAR ASSEMBLY L.H.	1.60 EA.
535-156	LOCK PLATE (2 REQUIRED)	.45 EA.
535-709	VERTICAL ADJ. KNOB (2 REQUIRED)	.70 EA.
535-710	HORIZONTAL ADJ. KNOB	.70 EA.
535-711	SHOULDER BUSHING (2 REQUIRED)	.20 EA.
540-138-12	WEAR STRIP	1.40 EA.
568-046	STYLUS MOUNTING BRACKET ASSEMBLY	4.50 EA.
568-157	SUPPORT	.60 EA.
568-923	P. C. BLANK	23.00 EA.
		!

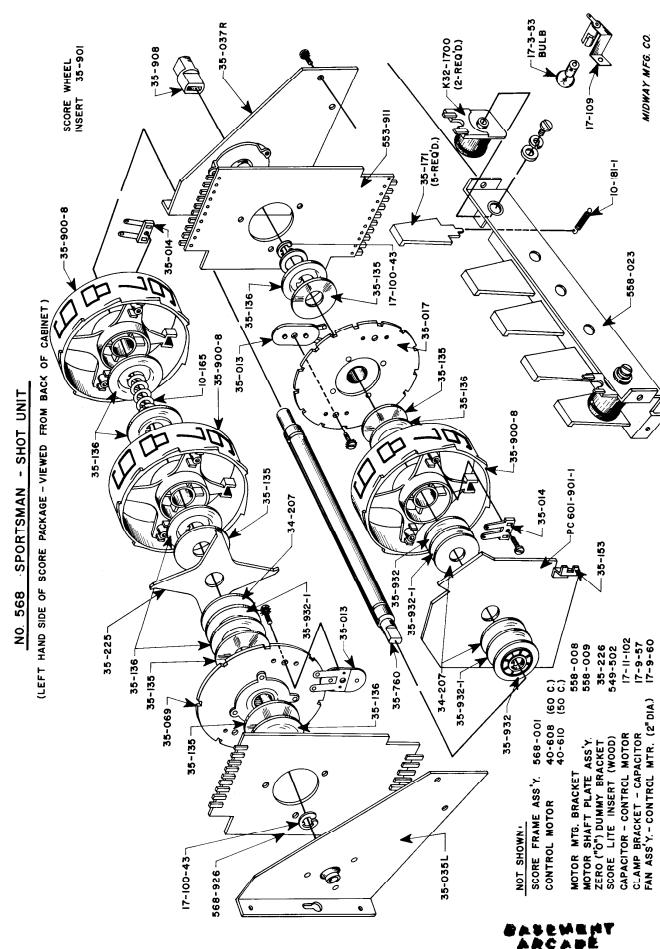

NO. 568 SPORTSMAN — SHOT UNIT

PRICE LIST

PART NO.	DESCRIPTION	PRICE
10-165	SPRING	.60 DZ.
10-181-1	SPRING - RELAY (5 REQUIRED)	.10 EA.
17-3-53	BULB	.20 EA.
17-9-57	CLAMP BRACKET - CAPACITOR	.20 EA.
17-9-60	FAN BLADE ASSEMBLY (2" DIA.)	.80 EA.
17-11-102	CAPACITOR - CONTROL MOTOR	6.00 EA.
17-100-43	"E" RING (7/16")	.60 DZ.
17-109-31-09	SOCKET - LAMP	.20 EA.
K32-1700	COIL	1.50 EA.
34-207	WASHER - TEFLON	.12 EA.
35-013	WIPER FINGER & MOUNTING PAD ASS'Y.	1.00 EA.
35-014	WIPER FINGER & MOUNTING PAD ASS'Y.	1.00 EA.
35-017	20 NOTCH CAM & CLUTCH PLATE ASS'Y.	2.50 EA.
35-035L	END BEARING PLATE ASSEMBLY (LEFT)	1.60 EA.
35-037R	END BEARING PLATE ASSEMBLY (RIGHT)	1.50 EA.
35-069	6 NOTCH CAM & CLUTCH PLATE ASS'Y.	2.20 EA.
35-135	WASH - LEATHER (6 REQUIRED)	.15 EA.
35-136	WASHER – DISHED (8 REQUIRED)	.15 EA.
35-153	CIRCUIT BOARD LOCATOR	.30 EA.
35-171	ARMATURE (2 REQUIRED)	.30 EA.
35-225	TIMING ARM	.60 EA.
35-226	ZERO(''0'') DUMMY BRACKET	1.00 EA.
35-760	DRIVE SHAFT	3.50 EA.
35-900-8	SCORE WHEEL (0-9) (3 REQUIRED)	1.00 EA.
35-901	INSERT - SCORE WHEEL	.20 EA.
35-908	COUPLING	.20 EA.
35-932	WASHER - NYLON (2 REQUIRED)	.20 EA.
35-932-1	WASHER - NYLON (2 REQUIRED)	.20 EA.
40-608	CONTROL MOTOR (60C., 40 R.P.M.) Domestic	30.00 EA.
40-610	CONTROL MOTOR (50C., 40 R.P.M.) Foreign	50.00 EA.
549-502	SCORE LITE INSERT (WOOD)	6.00 EA.
553-911	TOP SCORE RIVETED DISC.	8.50 EA.
558-008	MOTOR MOUNTING BRACKET	1.20 EA.
558-009	MOTOR SHAFT PLATE ASSEMBLY	1.20 EA.
558-023	COIL MOUNTING FRAME & EYELET ASS'Y.	1.80 EA.
568-001	MOUNTING FRAME ASSEMBLY (SCORE)	9.00 EA.
568-926	SHOT UNIT P. C. BOARD	8.00 EA.
601-901-1	TIME P. C.	5.50 EA.
		<u> </u>

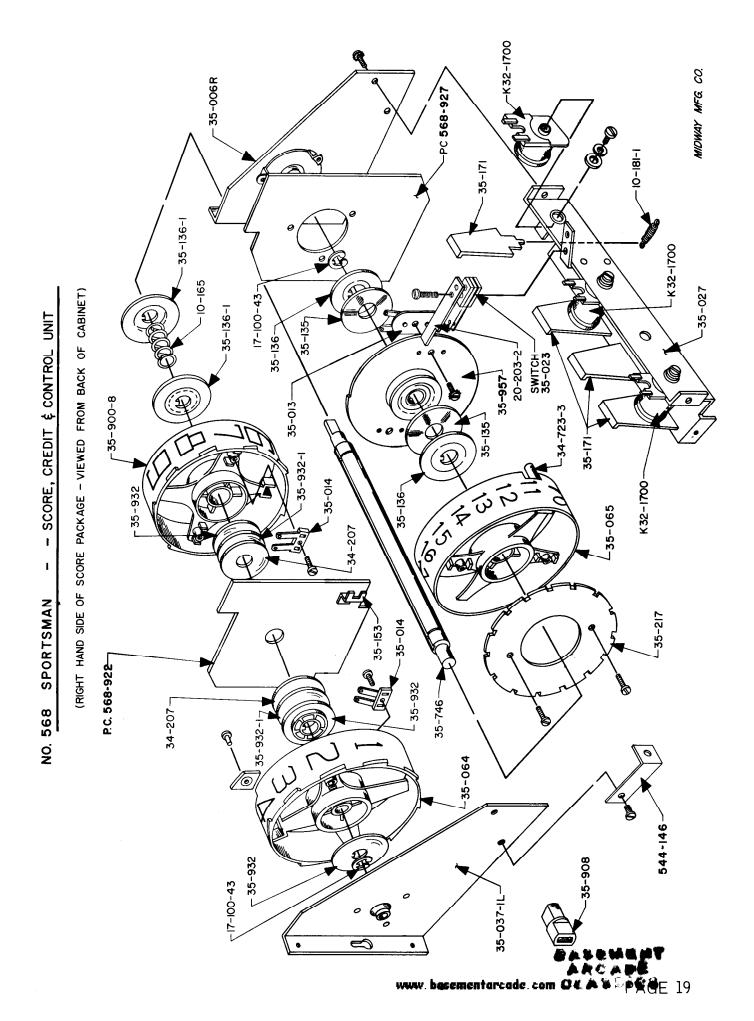


ARRANGED IN NUMERICAL ORDER

PART NO.	DESCRIPTION	PRICE
10-165 10-181-1 17-100-43 20-203-2 K32-1700 34-207 34-723-3 35-013 35-014 35-023 35-027 35-037-1L 35-064 35-065 35-135 35-136 35-136-1 35-153 35-171 35-217 35-746 35-900-8 35-908 35-932 35-932-1 35-957 544-146	SPRING SPRING - RELAY (4 REQUIRED) "E'' RING (2 REQUIRED) 7/16" GUARD STRIP COIL (3 REQUIRED) WASHER TEFLON (2 REQUIRED) POST - WHEEL WIPER FINGER & MOUNTING PAD ASS'Y. WIPER SUB. ASSEMBLY SWITCH ZERO CREDIT COIL BRACKET SUB. ASSEMBLY END BEARING PLATE SUB. ASSEMBLY END BEARING PLATE SUB. ASSEMBLY SCORE WHEEL SUB. ASSEMBLY WHEEL (1-19) WASHER - LEATHER (2 REQUIRED) WASHER - DISHED 1/16" WASHER - DISHED 3/32" (2 REQUIRED) CIRCUIT BOARD LOCATOR ARMATURE (4 REQUIRED) CAM (20 NOTCH) WHEEL DRIVE SHAFT (R.H.) SCORE WHEEL (0-9) (2 REQUIRED) COUPLING WASHER NYLON (4 REQUIRED) WASHER NYLON (2 REQUIRED) 1 NOTCH CAM CABLE CLAMP BRACKET (2 REQUIRED)	.60 DZ10 EA60 DZ15 EA. 1.50 EA12 EA20 EA. 1.00 EA. 1.00 EA. 1.50 EA. 1.75 EA15 EA20 EA30 EA30 EA20 EA.
1 "" " " " " " " " " " " " " " " " " "		


NO. 568- SPORTSMAN - STEP-UP UNIT

WIPER FINGERS (NOT SHOWN)
568-045
5 FINGER WIPER

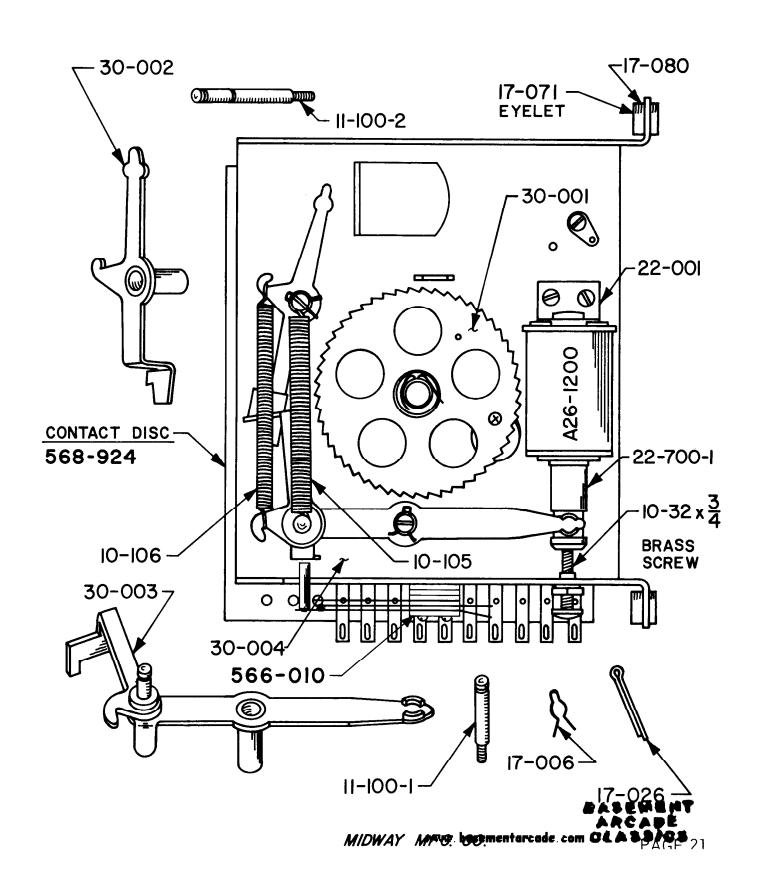

NO. 568 SPORTSMAN - STEP-UP UNIT PRICE LIST

PART NO.	DESCRIPTION	PRICE
10-105	DRIVE SPRING	.10 EA.
10-106	DRIVE SPRING	.15 EA.
11-100-1	POST – PIVOT	.20 EA.
11-100-2	POST – PIVOT	.20 EA.
17-006-7-17	3/16" HAIR PIN	.60 DZ.
17-026-7-42	COTTER PIN	.60 DZ.
17-071-71-14	EYELET	.10 EA.
17-080-41-13	RUBBER GROMMET	.10 EA.
22-700-1	PLUNGER - DRIVE	.60 EA.
30-001	RATCHET & SHAFT ASSEMBLY	2.00 EA.
30-002	RESET PAWL ASSEMBLY	1.00 EA.
30-003	DRIVE ARM & PAWL ASSEMBLY	1.60 EA.
30-004	STEP-UP UNIT FRAME ASSEMBLY	4.00 EA.
566-010	END OF STROKE SWITCH	.80 EA.
568-924	PROGRAM UNIT	6.50 EA.
1		

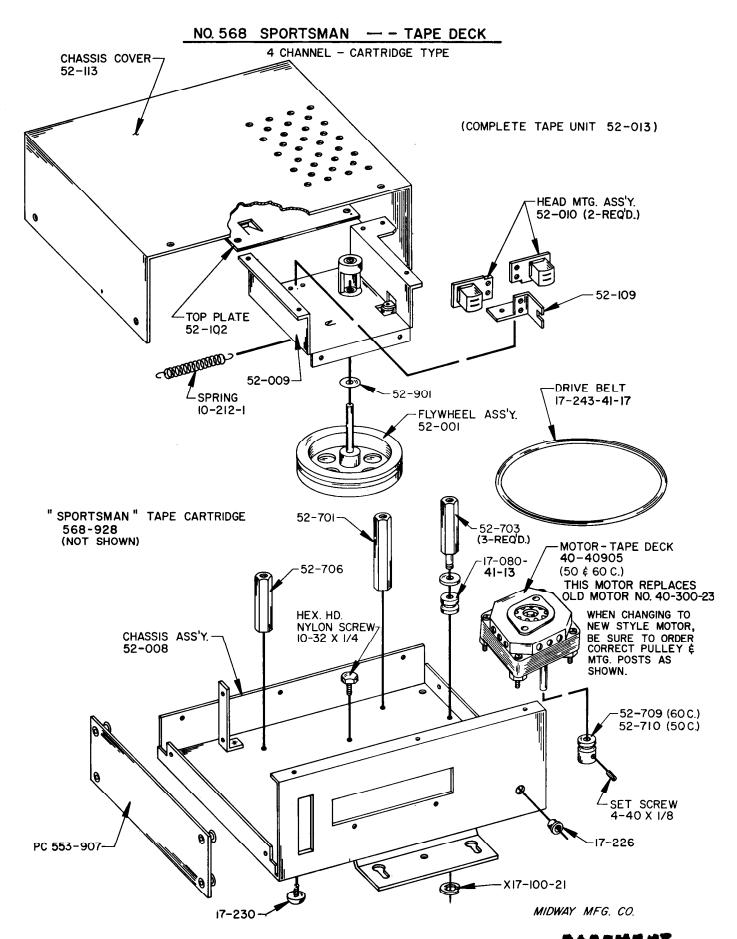

NO. 568 SPORTSMAN – TAPE DECK (4 CHANNEL) PRICE LIST

ARRANGED IN NUMERICAL ORDER

PART NO.	DESCRIPTION	PRICE
10-212-1	SPRING - DETENT	.15 EA.
17-080-41-13	RUBBER GROMMET	.60 DZ.
X17-100-21	"E" RING (7/32")	.60 DZ.
17-226	PLASTIC SNAP BUSHING	.60 DZ.
17-230	RUBBER FEET - SCREW TYPE	.15 EA.
17-243-41-17	DRIVE BELT (4" I.D.)	1.00 EA.
40-40905	MOTOR-TAPE DECK (50 & 60C.) 1600 R.P.M.	16.00 EA.
52-001	FLYWHEEL ASSEMBLY	7.00 EA.
52-008	CHASSIS ASSEMBLY	6.80 EA.
52-009	BEARING PLATE ASSEMBLY	7.00 EA.
52-010	HEAD MOUNTING ASSEMBLY (2 REQUIRED)	5.00 EA.
52-013	COMPLETE TAPE UNIT	90.00 EA.
52-102	TOP PLATE	1.00 EA.
52-109	TAPE GUIDE	.60 EA.
52-113	CHASSIS COVER	3.00 EA.
52-701	MOUNTING POST (2-11/16" LONG)	.75 EA.
52-703	MOTOR MOUNTING POST (3 REQUIRED)	.45 EA.
52-706	MOUNTING POST (1-1/2" LONG)	.70 EA.
52-709	MOTOR PULLEY (60 C.)	2.00 EA.
52-710	MOTOR PULLEY (50 C.)	1.75 EA.
52-901	WASHER - SPECIAL	.15 EA.
PC553-907	TAPE DECK PRE-AMP P. C.	32.00 EA.
568-928	TAPE CARTRIDGE	7.00 EA.

ADDITIONAL PARTS FOR SPORTSMAN GAME NO. 568

PRICE LIST

ARRANGED IN NUMERICAL ORDER

PART NO.	DESCRIPTION	PRICE
MT-15	TRANSFORMER 60 CYCLE	25.00 EA.
MT-16	TRANSFORMER 50 CYCLE	29.00 EA.
17-3-110	FLUORESCENT LAMP 24" B.L.	5.00 EA.
17-9-104	MIRROR (MIRROPANE) 1/4" X 14" X 26-3/8"	40.00 EA.
17-9-105	MIRROR (REGULAR) 1/4" X 14-5/16" X 26-3/8"	13.80 EA.
17-11-113	CAPACITOR (DOMESTIC) 60	3.50 EA.
17-11-143	CAPACITOR (FOREIGN) 50	4.90 EA.
17-050-5-46	LOCK (1350) WITH KEYS - CABINET DOOR	3.00 EA.
17-050-1	1350 KEY (ONLY)	.80 EA.
17-093-102-48	2" LEG LEVELERS & NUT	.40 EA.
17-098-3-27	COUNTER (50 V.)	6.00 EA.
17-125-3-65	A. C. LINE CORD (16 FT.)	3.50 EA.
17-175-3-32	4'' SPEAKER	5.40 EA.
G-23-1300	GUN SOLENOID COIL	4.50 EA.
MT-25	TRANSFORMER 50 & 60 CYCLE	11.00 EA.
A-26-1200	PROGRAM UNIT ADVANCE COIL	2.00 EA.
M-29-800	EXTENDED PLAY & STOP TOP SCORE RELAY COIL (2 REQUIRED)	5.00 EA.
G-31-1800	RELAY COILS (EQUIP. CHART) (4 Req'd.)	1.50 EA.
M-32-1500	RELAYTRIP COILS (EQUIP. CHART) (5 Req'd.)	2.00 EA.
K-32-1700	RELEASR COILS (EQUIP. CHART) (5 Req'd.)	1.50 EA.
M-34-2400	RESET COILS (EQUIP. CHART) (7 Req'd.)	4.50 EA.
M-35-3000 DC	RELAYS (EQUIP. CHART) (2 Req'd.)	6.00 EA.
M-36-3300	TRIP COILS (EQUIP. CHART) (18 Reg'd.)	2.00 EA.
40-608	CONTROL MOTOR 40 R.P.M.	30.00 EA.
40-40905	TAPE DECK MOTOR 1600 R.P.M.	16.00 EA.
537-138-1	26" GLASS LIFT CHANNEL	2.00 EA.
547-035	SPEAKER BEZEL (2 REQUIRED)	1.50 EA.
549-043	SIDE ACCESS DOOR ASSEMBLY (WHITE)	10.00 EA.
		BASEWER

ADDITIONAL PARTS FOR SPORTSMAN GAME NO. 568

PRICE LIST

ARRANGED IN NUMERICAL ORDER

PART NO.	DESCRIPTION	PRICE	
549-128	GRILL (2 REQUIRED)	1.00 EA.	
549-141	GLASS LOCK BRACKETS (2 REQUIRED)	.80 EA.	
553-907	PRE AMP	34.00 EA.	
553-911	TOP THIS SCORE UNIT	8.50 EA.	
568-035	FLUORESCENT BRACKET ASSEMBLY	18.75 EA.	
568-113	COIN BOX	4.50 EA.	
568-114	COIN BOX COVER	1.40 EA.	
568-151	SCENERY HANGER BAR	1.00 EA.	
568-152	SCENERY HANGER BRACKET	.20 EA.	
568-501	SCENERY BOARD	16.00 EA.	
568-910	VACUUM FORMED SCENERY	27.00 EA.	
568-911	SKY CARDBOARD	21.00 EA.	
568-912	SCORE GLASS (DOMESTIC)	30.00 EA.	
568-912-1	SCORE GLASS (FOREIGN)	36.00 EA.	
568-914	MOTOR SPEED UNIT	75.00 EA.	
568-916	INTERIOR REFLECTIVE SIDE (R&L)	15.00 EA.	
568-917	CROW DIODE BOARD	4.20 EA.	
568-918	REAR DUCK DIODE BOARD	5.80 EA.	
568-919	DIAGONAL DUCK DIODE BOARD	7.50 EA.	
568-920	PULSER UNIT	50.00 EA.	
568-921	AMPLIFIER UNIT	60.00 EA.	
568-922	100-1000 SCORE UNIT	5.00 EA.	
568-924	PROGRAM UNIT	6.50 EA.	
568-926	SHOT UNIT	8.00 EA.	
568-927	CONTROL UNIT	4.50 EA.	
568-929	TIME DELAY	49.00 EA.	
601-901-1	TIME UNIT	5.50 EA.	

SPORTSMAN EQUIPMENT CHART

J. OK. JANAN EQUIPMENT CHART				
COIL	PER GAME	APPLICATION		
A-26-1200	1	Program Unit advance coil.		
G-23-1300	1	Gun Solenoid coil.		
G-31-1800	4	Start, Shot, Left Rear Duck Program and Right Rear		
V 20 4700		Duck Program relay coils.		
K-32-1700	5	Control, Credit, 100 Score, Score Topped and Shots Units Release Coils.		
M-29-800	2	Extended Play and Stop Top Score relay coils.		
M-32-1500	5	Top Duck Hit, Bottom Duck Hit, Crow Hit, Cougar		
M-32-1300		Hit, Targets Hit relay Trip coils.		
M-34-2400	7	25c Top Duck Hit, Bottom Duck Hit, Crow Hit,		
		Cougar Hit, Targets Hit and Score Topped		
		relay Reset coils.		
M-35-3000 D.C.	2	Start Time and Time Delay relays.		
M-36-3300	18	0°, 345°, Reset, Lock, Program Reset, Game-Over,		
		Trigger, 2nd Speed, 3rd Speed, End of Travel, Left		
	! 	Diagonal Duck Program, Right Diagonal Duck Program, Left Crow Program, Right Crow Program,		
		Left Cougar Program, Right Cougar Program,		
		Targets, Hi-Speed and Score Topped relay Trip coils.		
MISCELLANEOUS				
MT-15	1	60 cycle Transformer		
MT-16	1	50 cycle Transformer		
MT-25	1	50 & 60 cycle Transformer		
40-608	1	Control Motor 40 RPM.		
40-611	1	Cougar Target Reverse Motor 3600 RPM.		
40-2227	1	Diagonal Duck Target Motor 15 RPM.		
40-2228	1	Crow Target Motor 20 RPM.		
40-2236	1	Cougar Target Motor 4 RPM.		
40-2237	1	Rear Duck Target Motor 110 RPM.		
40-40905	1	Tape Deck Motor 1600 RPM.		
PRINTED CIRCUITS				
553-907	1	Pre Amp		
568-901	1	Diagonal Duck Targets		
568-908	1	Crow Targets		
568-914	1	Motor Speed Unit		
568-915	1	Rear Duck Targets		
568-917	1	Crow Diode Board		
568-918	1	Rear Duck Diode Board		
568-919	1	Diagonal Duck Diode Board		
568-920	1	Pulser Unit		
568-921	1	Amplifier Unit		
568-922	1	100 - 1000 Score Unit		
568-925	1	Cougar Target		
568-927	1	Control Unit		
568-929	1	Time Delay		
601-901-1	1	Time Unit		
RIVETED DISCS				
553-911	1	Top This Score Unit		
568-923	1	Stylus Unit		
568-924	1	Program Unit		
568-926	1	Shot Unit		