

MANUFACTURED BY

Gremlin'/SEGA

MANUAL PART NO. 420.0358

OWNER'S MANUAL

MONACO GP Game Description:

When the coins are deposited, the player's red car appears in the lower right corner of the screen. Drive the car using the steering wheel and accelerator pedal, avoiding collisions with the computer cars. Game time is set to a count of 90.

Player goes into extended play when he reaches a score of 2000 points. In extended play, the player wins an extra car; and, one extra car is awarded after every additional 2000 points. The game becomes more difficult after a score of 6000 points. The player's car speeds up and, at 8000 points, the computer cars speed up.

The game's front panel displays your score and the top 5 high scores. Also, each player is given a ranking out of the total numbers of players to date.

Adjustments and Options:

There are 2 game options, located on the #96577A main logic board:

- 1. VR1- trim pot- adjusts game time
- 2. SW1- slide switch- selects either 1 or 2 plays per coin.

NOTE: On the sound board (#96598) there are 7 trim pots: These are for adjusting the FANFARE sound. They are pre-set by the factory.

Also on this board are 2 switches, SW1 and SW2. SW1 should be set so that positions 1,2, and 3 are OFF. Position 4 should be ON.


Switch SW2 should be set to positions 1 and 2 OFF.

Descriptions and Part Numbers of MONACO GP logic boards:

Logic board	Part Number Stamped on Board
Main logic, A	96577-P
Main logic, B	96578-P
Sound (Oscillator)	96598-P
Display board	96597-P
Display board	MO-4202
Accelerator board	96599-P
Edge connector board	96620-P
Edge connector board	96624-P

FRONT CABINET ACCESSORY ASSY


MONACO GP

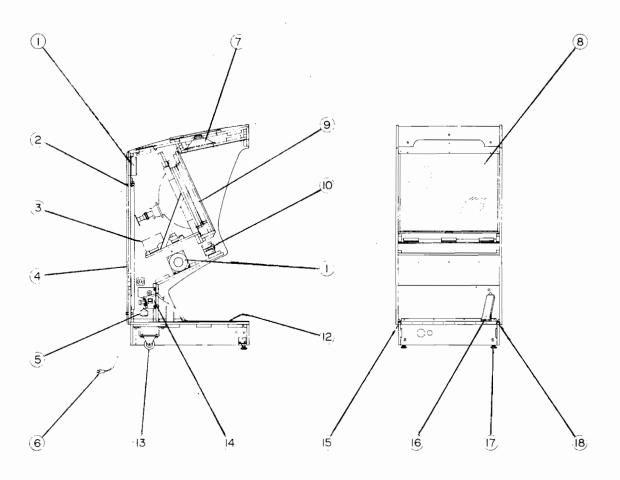

Iten	n Part No.	Description
1 2 3	S-96626 LS-1064	Axial Flow Fan, AC 100V Ace Cylinder Lock, L.S. Type
3	96595-P	Color Display Assy, 20 Type, 120V
4	96577-P 96578-P 96598-P 96624-P	IC Board Assy, Monaco GP, A IC Board Assy, Monaco GP, B Oscillator, Monaco GP Mother Board Assy, Monaco GP
5	S-96634	Noise Filter, AC 250V, 4A
6	90759X	Cable & Plug Assy
7	S-93425	Speaker, 20cm, 8Ω, 10W
8	MO-1005	Front Glass
9	MO-4200	Score Board Assy
		(See Page 21 for Detail)
10	S-83034	Toggle Hook, Hook
12	MO-1017	Floor Mat
13	S-81159	Caster
14	MO-1016	Accelerator Pedal Assy
	PC-1206	Photocoupler Unit, A
	PC-1207	Photocoupler Unit, B
	GP-1042	Extension Spring
	FL-3031	Extension Spring
15	MO-1020	Protector, Right
16		Accelerator Pedal
17		Leg Adjuster
18	MO-1021	Protector, Left

MONACO GP


REAR CABINET ACCESSORY ASSY

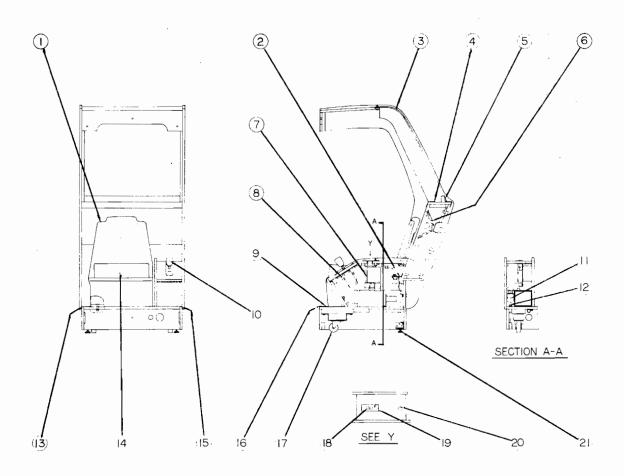

Item	n Part No.	Description
1	MO-1110	Chair
2	S-96397	Push Button Switch, 1M, w/o Button
	S-96400	Push Button, Ivory, 8¢
	S-95657	C & R Combination Element, 0.1μ & 120Ω
	S-93157	Volume Control, B-25KΩ
	S-93467	Switch, Micro Type, Push Button, Red
3	MO-1123	Hood
4	MO-1125	Ornament Frame, B
5	MO-1124	Ornament Frame, A
6	S-93425	Speaker, 20cm, 8Ω,10W
7	CC-2100	Coin Chute, Rejector Type,
		¥100
8	MO-1127	Transmission Assy
	MO-1128	Handle Retainer Assy
	2P-11600	Rubber Bumper
	FC-2541	Compression Spring
	S-91421	Switch, Micro Type
9	MO-1106	Floor Mat
10	MO-1129	Shift Knob Assy
11	AH-1062	Reject Cup & Flap Door Assy
12	S-91654	Rectifier, Silicon Diode
13	MO-1109	Protector, C
14 15	MO-1111	Saddle
16	MO-1108 MO-1107	Protector, B
17	S-82660	Protector, A Caster, Nylon Wheel
18	PT-0212	Coin Entry Plate, ¥100
	MO-1419	Coin Entry Plate
	LS-1064	Ace Cylinder Lock, L.S. Type
21	M-163-4(L)	Leg Adjuster
2.	100 -(L/	Log / tajastoi

FRONT PANEL & HANDLE UNIT


MONACO GP

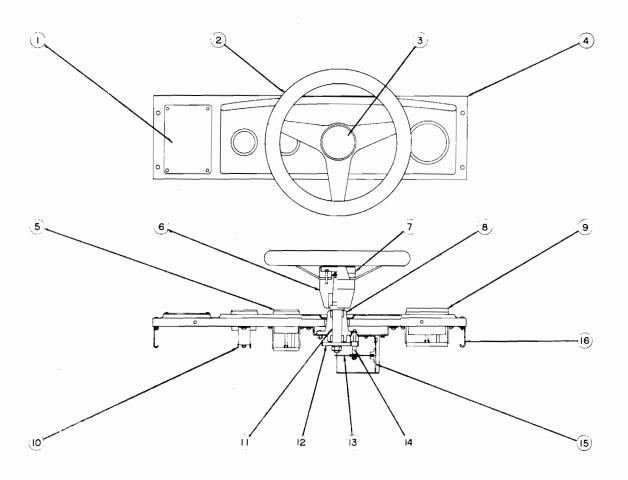

lten	n Part No.	Description
1	MO-2011	Play Instructions
2	S-81620X	Steering Handle
3	MO-2016	Steering Handle Ornament
4	MO-2001	Front Panel
5	S-96637	Oil Pressure Gauge
6	RR-2013	Steering Handle Boss, Lower
7	RR-2014	Steering Handle Boss, Upper
8	MO-2004	Housing
9	S-96635	Tachometer
10	S-96636	Driving Meter
11	MO-2005	Steering Wheel Shaft
12	MO-2009	Spur Gear, 60T
13	MO-2007	Disc
14	MO-2008	Spur Gear, 14T
15	96599-P	IC Board Assy, Monaco GP, C
16	MO-2015	Hook


MONACO GP


POWER SUPPLY ASSY

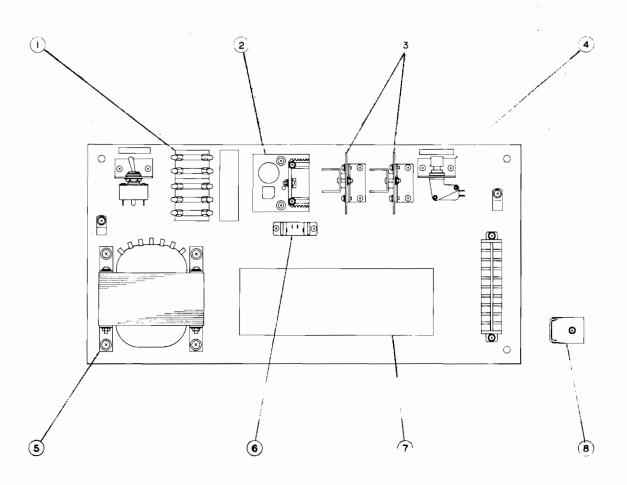


	lter	n Part No.	Description
•	1	S-90644	Fuse, 2A
		S-91941	Fuse, 4A
		S-91151	Fuse, 8A
	2	MQ-4002	Regulator Unit, DC 12V, 20V
		S-95596	IC. 4A78M12UC
	3	BC-4603X	Power Amplifier, 5W
	4	S-93467	Switch, Micro Type, Push
			Button, Red
	5	96627	Power Transformer, 90-120V,
			7V, 11V, 16V, 100-120V
	6	S-94441	Rectifier, Silicon Diode
	7	S-96638	Switching Regulator, AC 100V,
			5V, 15A
	8	S-96262	AC Cord Connector Body, Flat
			Type, 125V-15A


MONACO GP

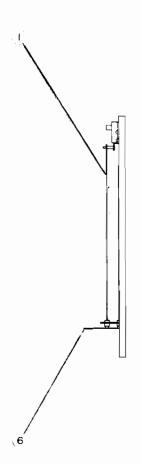


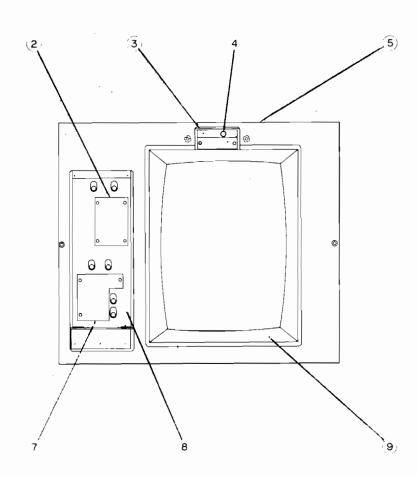



Iten	n Part No.	Description
1	96597-P	Score Display 1C Board Assy
2	MO-4206	Mask, High Score
3	MO-4205	Timer LED Assy
	S-96600	L.E.D., Numeric Display, Red
4	S-94428	Bulb, 6.3V, 0.25A, Bush Type
5	MO-4208	Mask, Timer
6	96620-P	Score Display Mother Board
		Assv
7	MO-4207	Mask, Score
8	MO-4202	Score Display L.E.D. Board Assy
•	S-96600	L.E.D., Numeric Display, Red
	S-96601	L.E.D., Numeric Display,
	0 0000.	2 Digit, Red
9	MO-4210	TV Mask

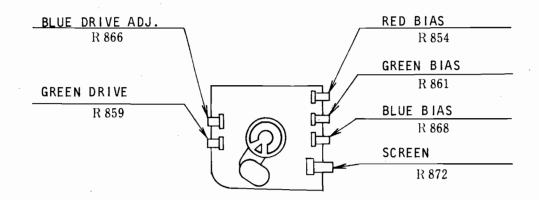


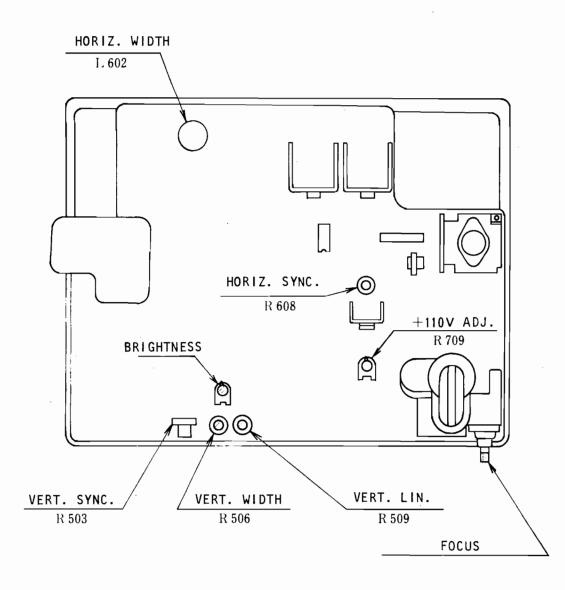

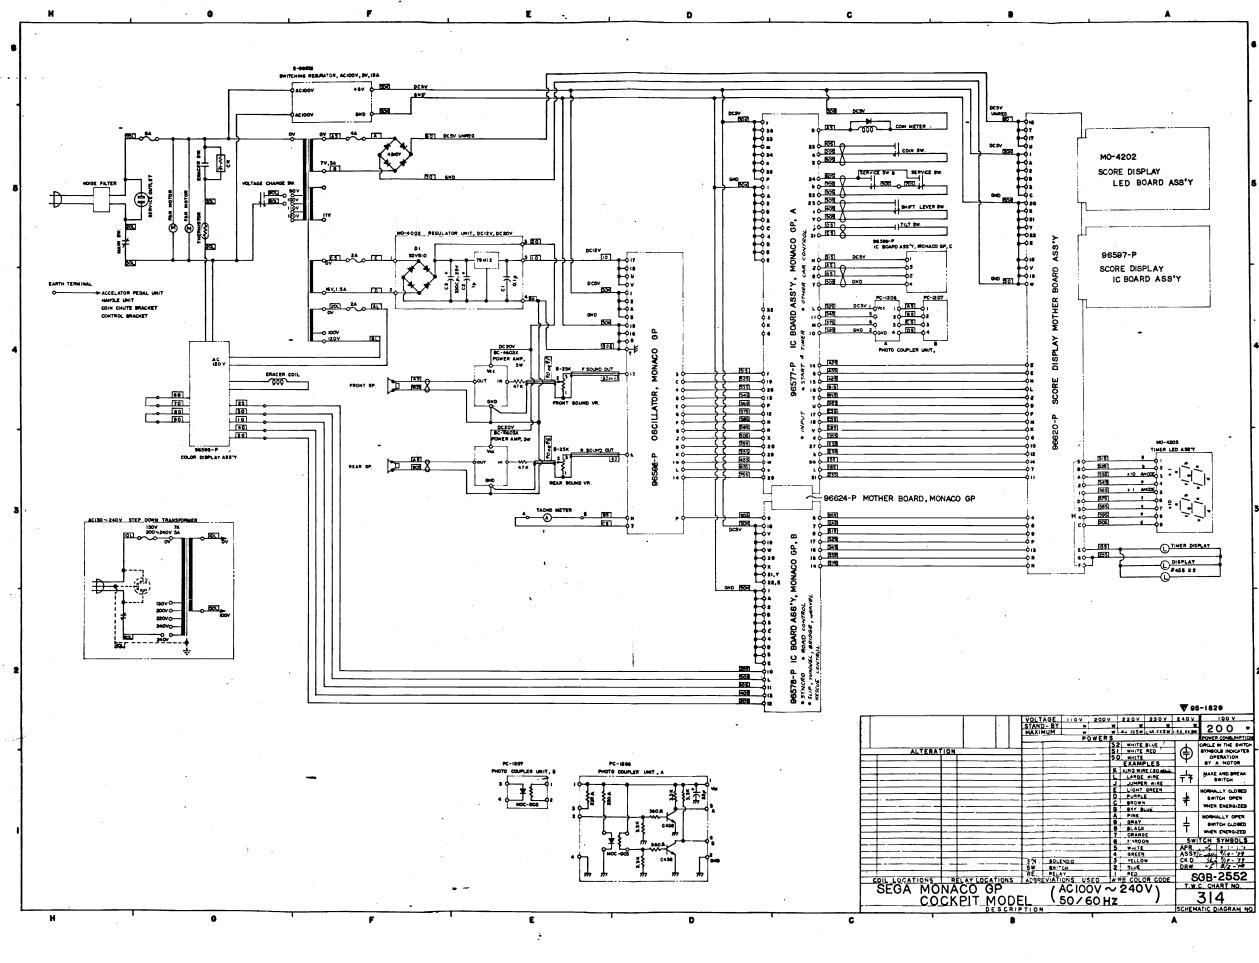


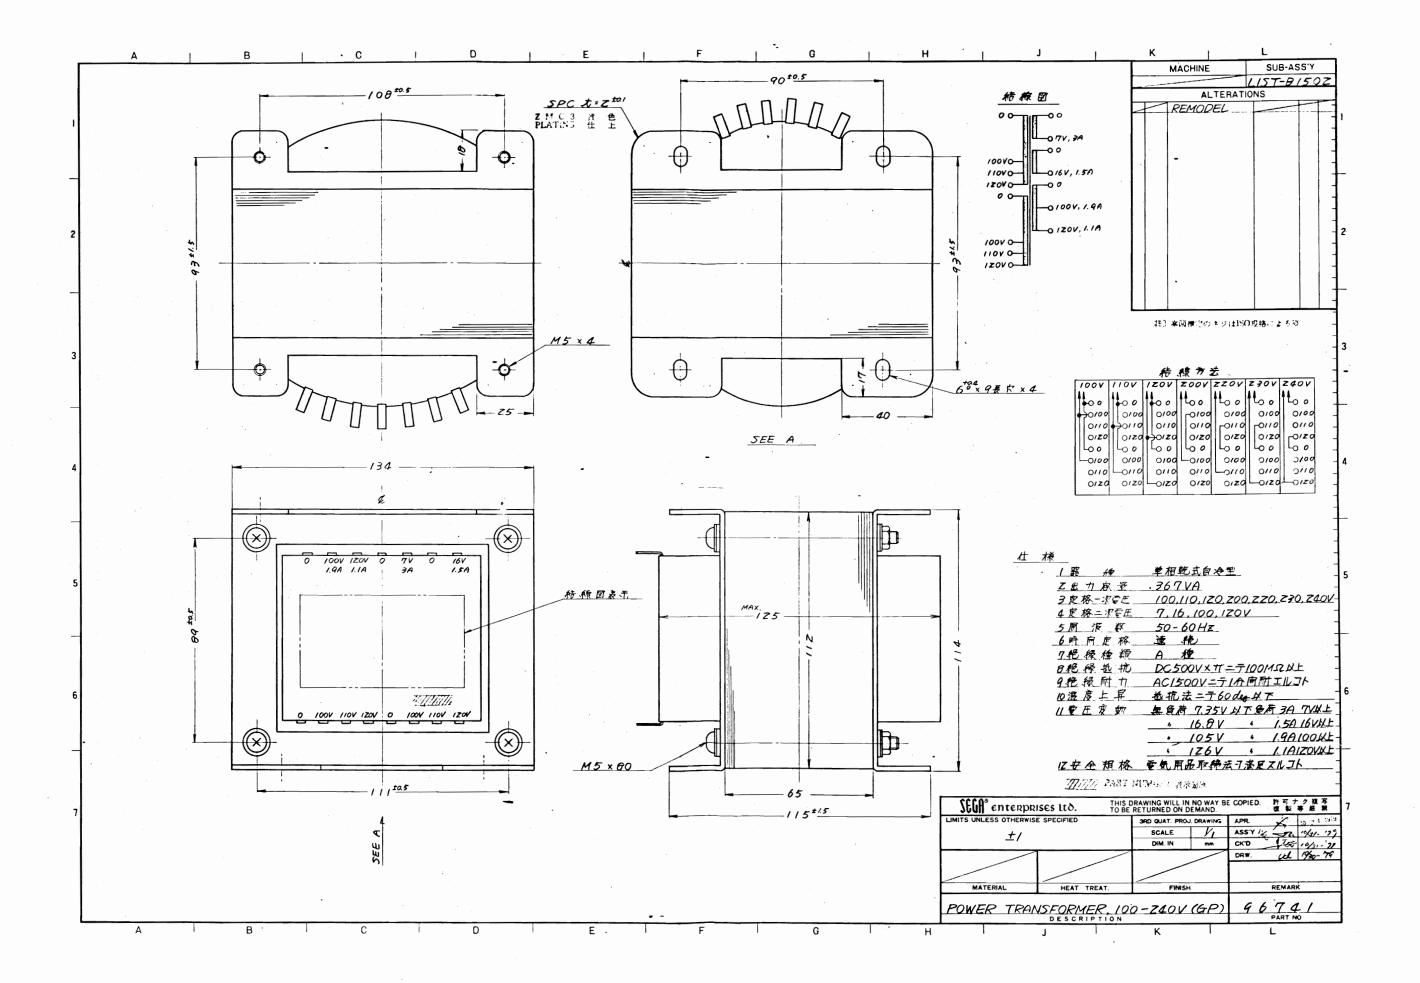


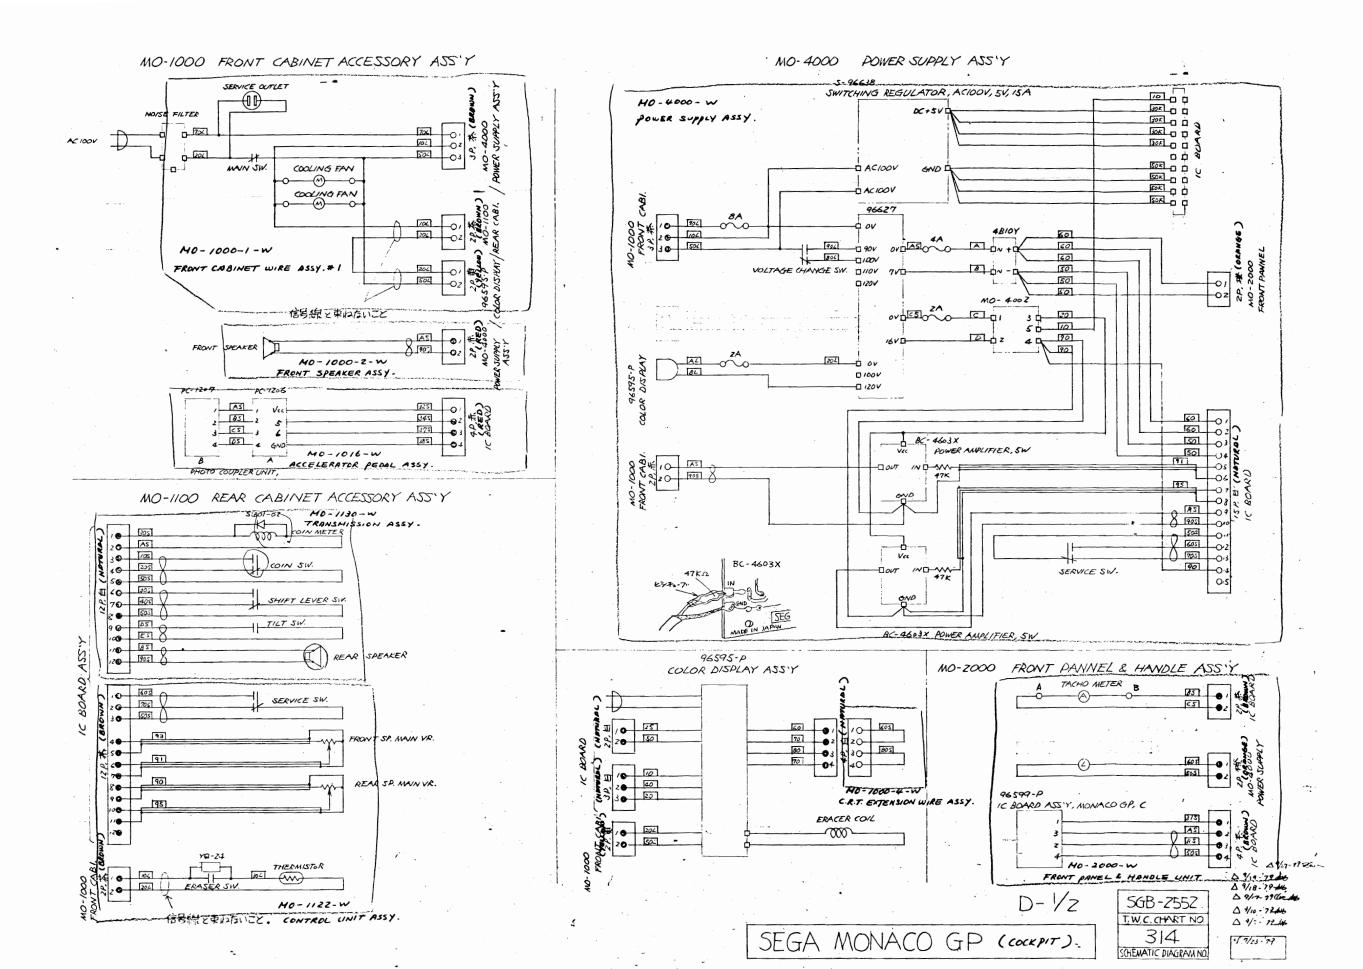


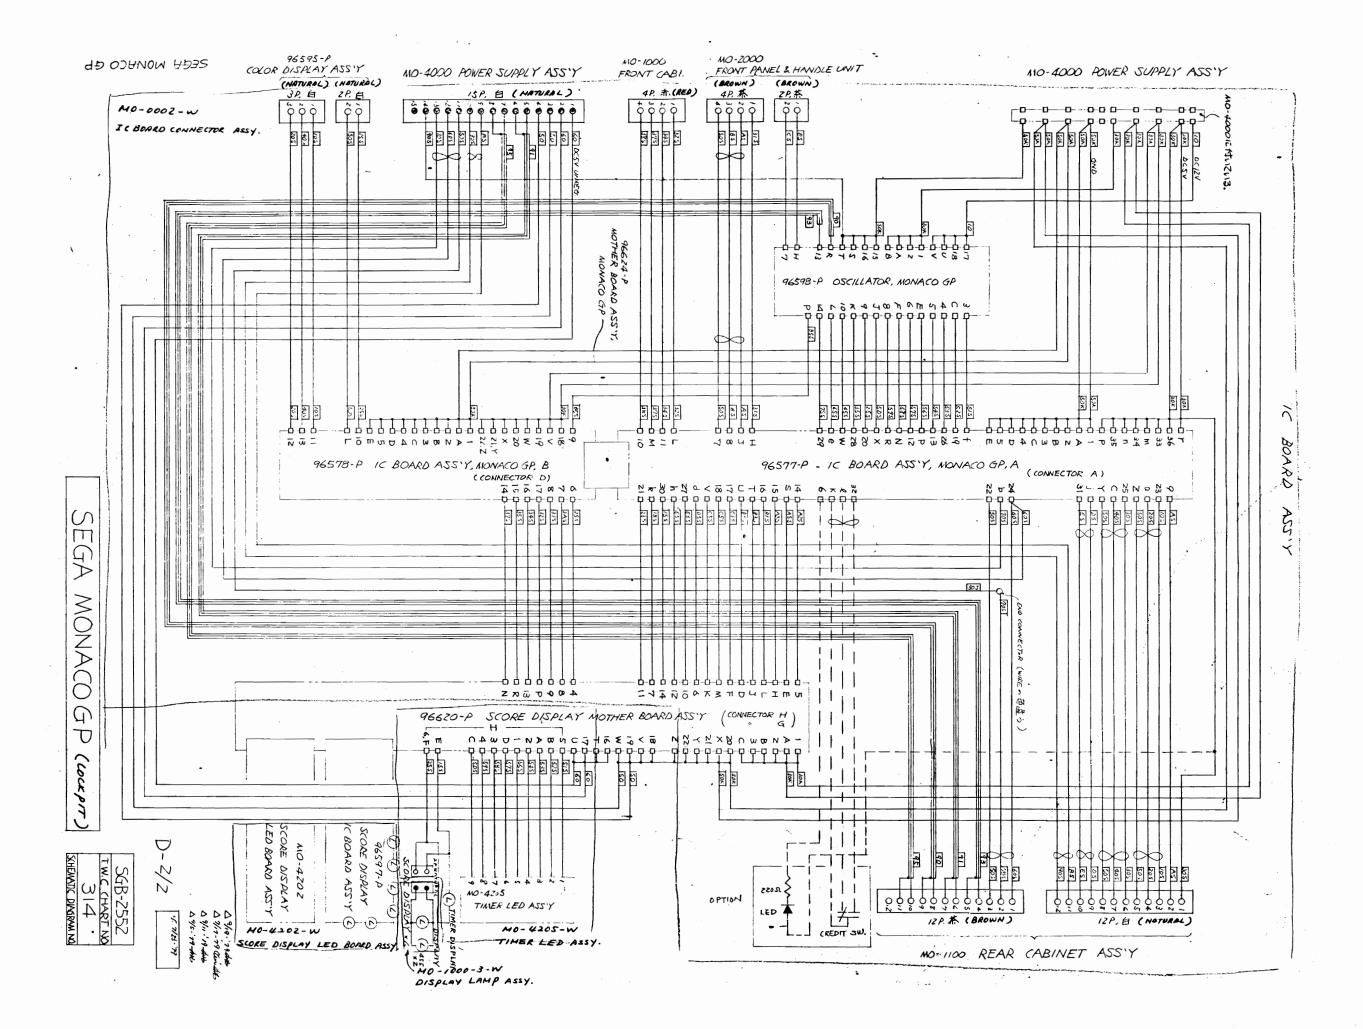


1037 1602 WON TO PALED JAKE: HANDLE, LOGIC DIAGRAM (ACCELERATOR BOARD) Ñ S B 74/07/2 2/60126 PHOTO-MICRO SENSOR 8 96599-P BOARD ASSY 220 r 7.87.6 HM/ +50 RZ 3 CHAN-R-(PE **⊖нам-4-ср** €

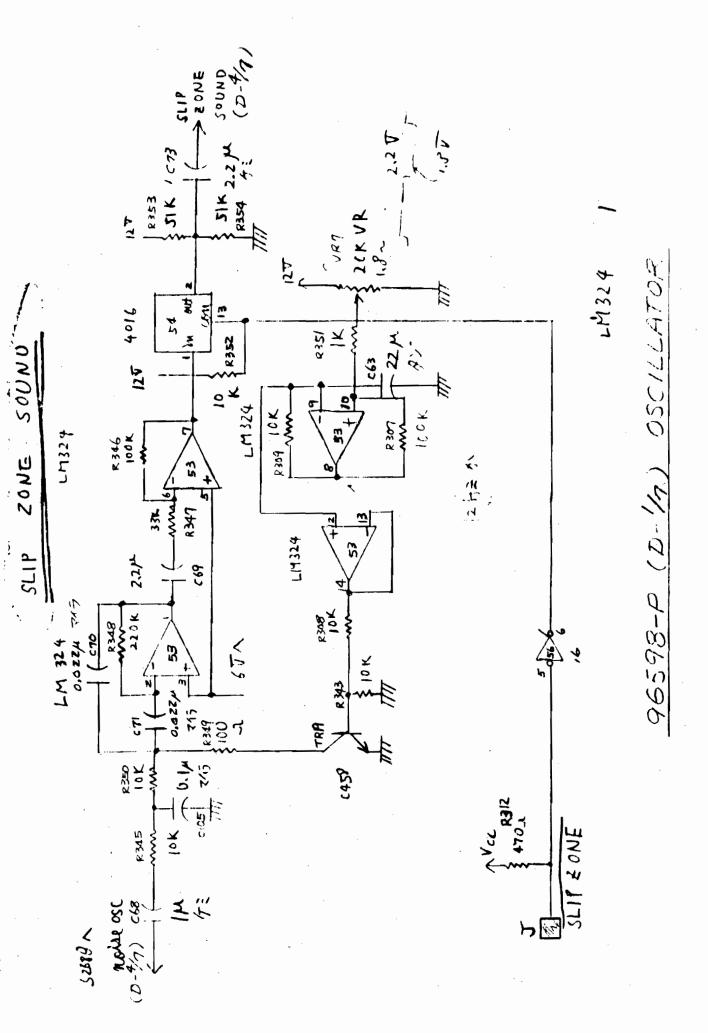


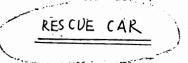


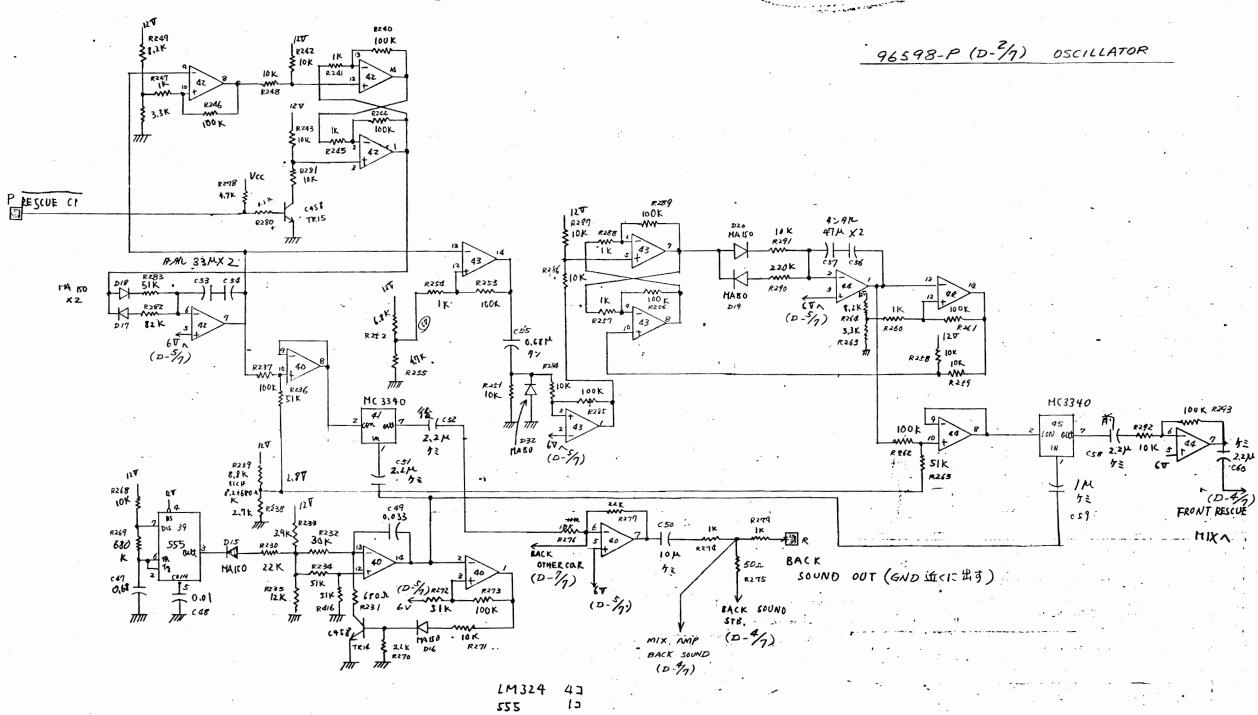


MC3340

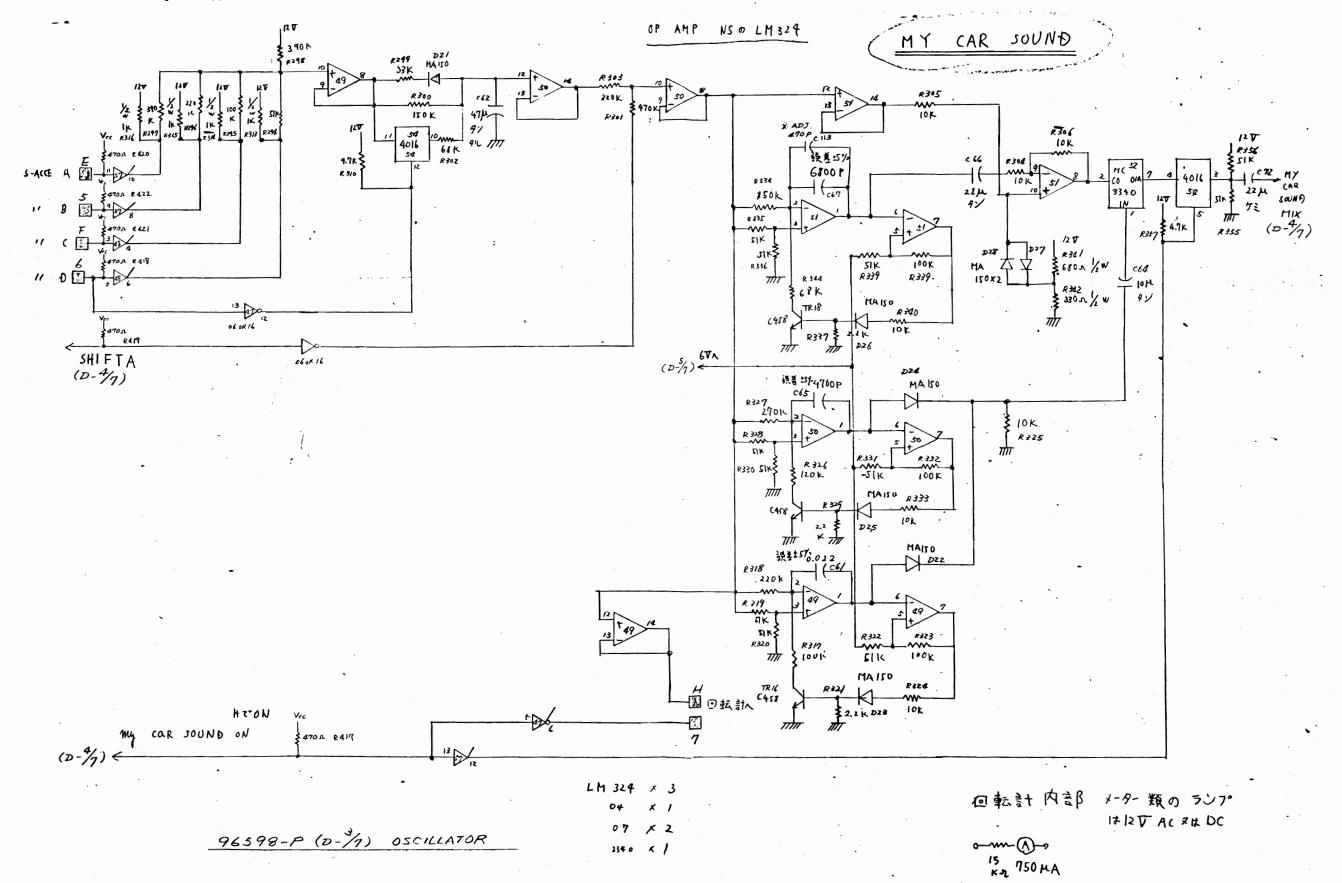


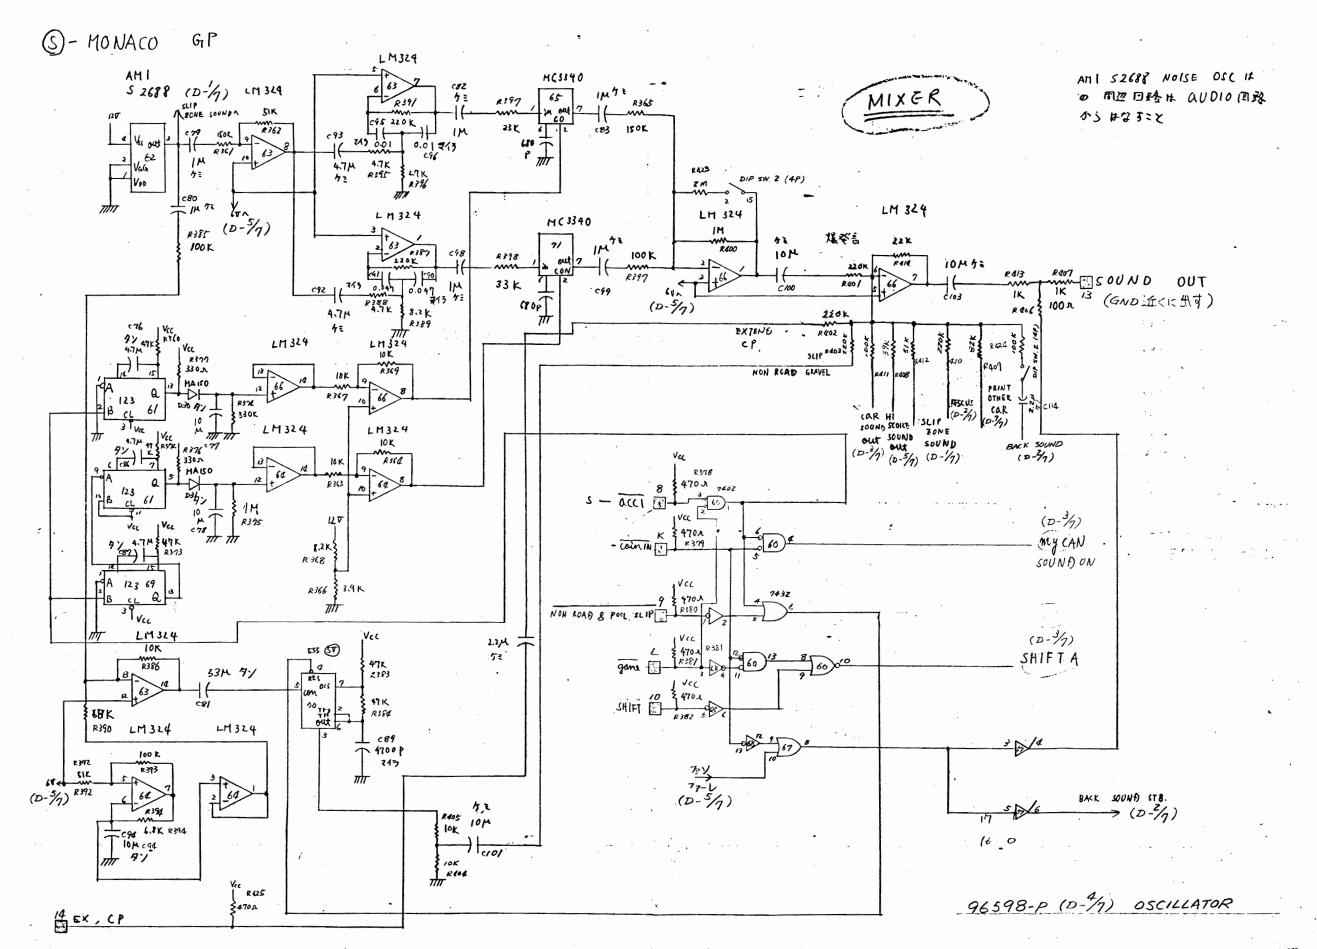


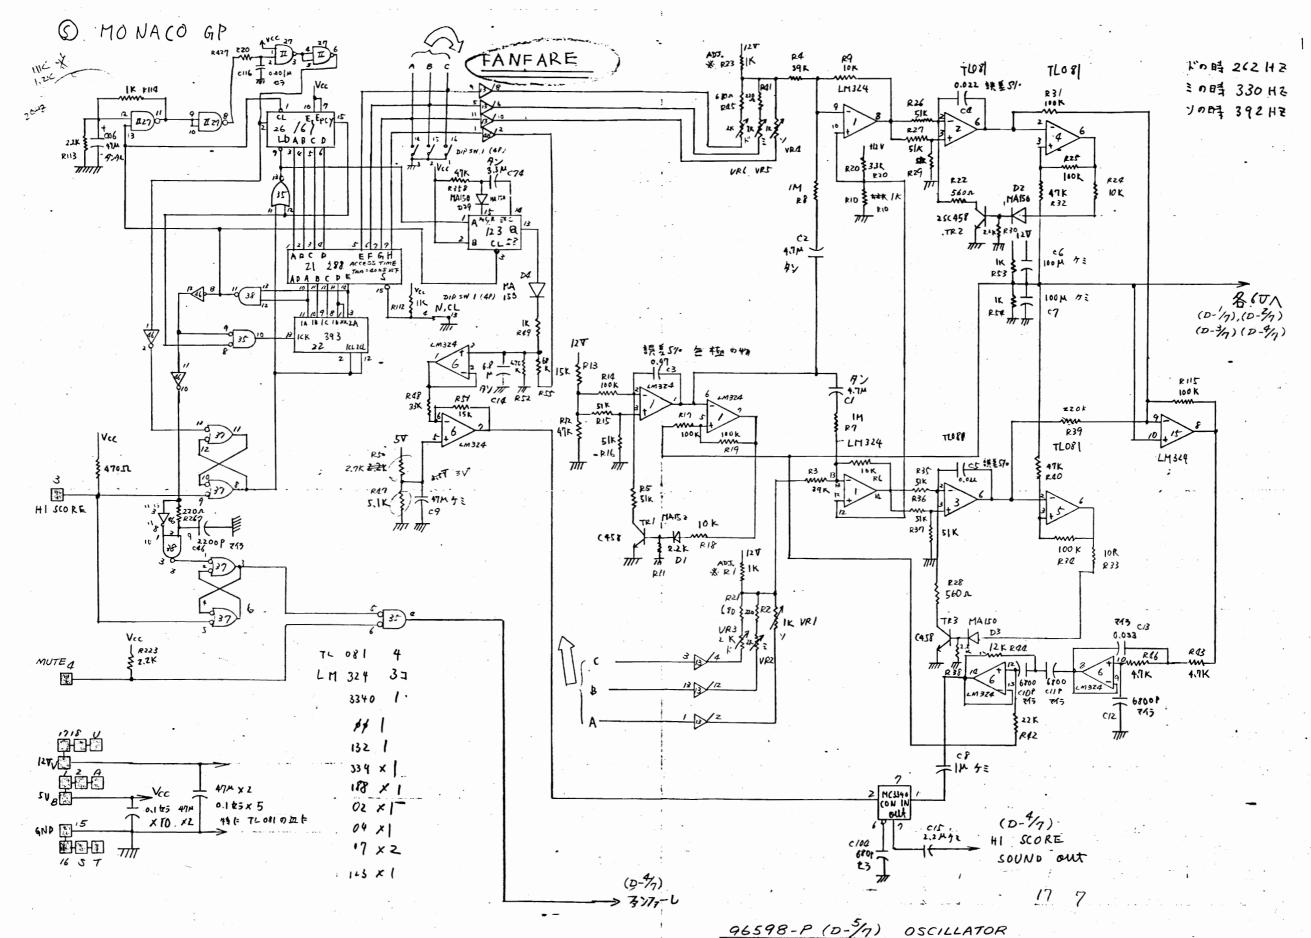

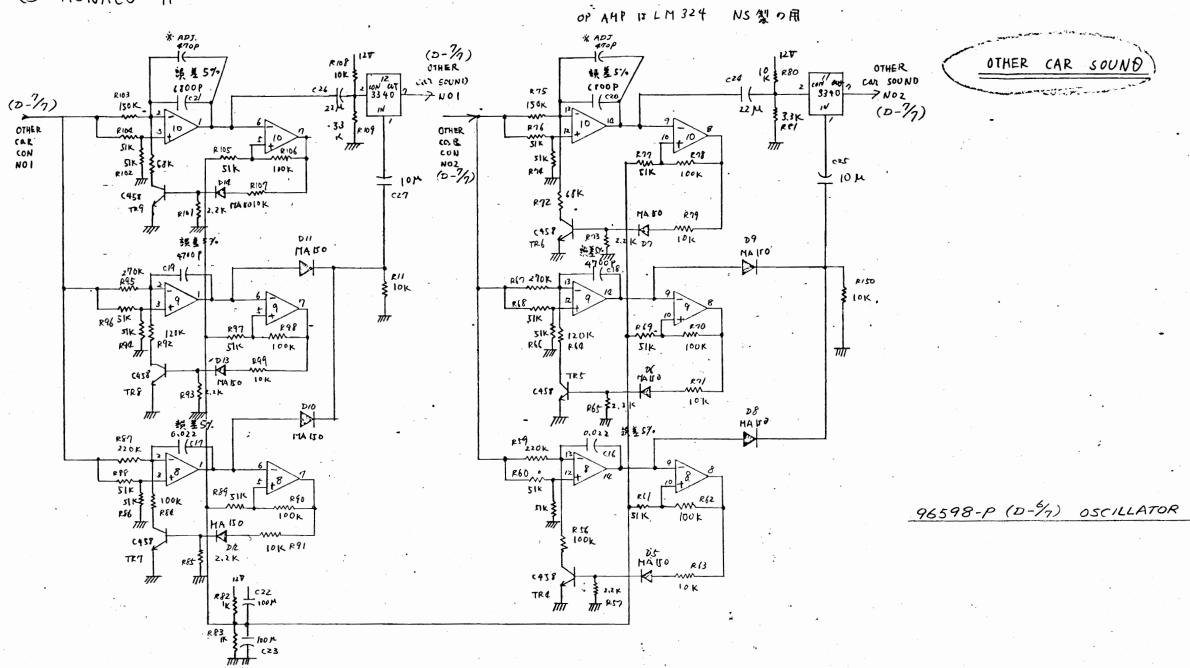


LM 324 X3

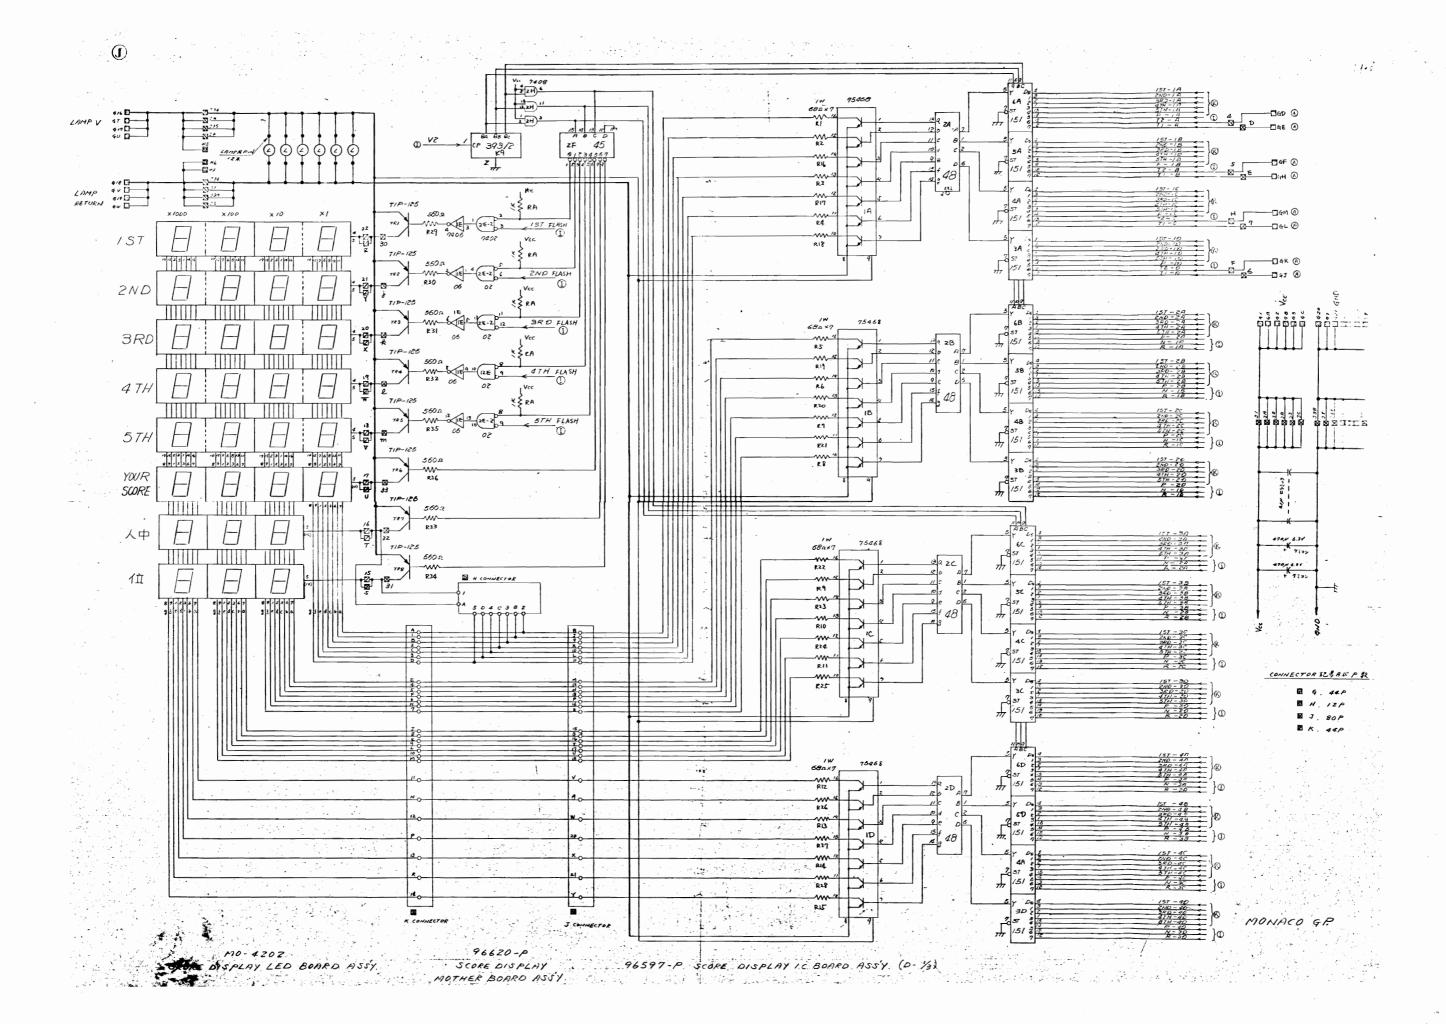


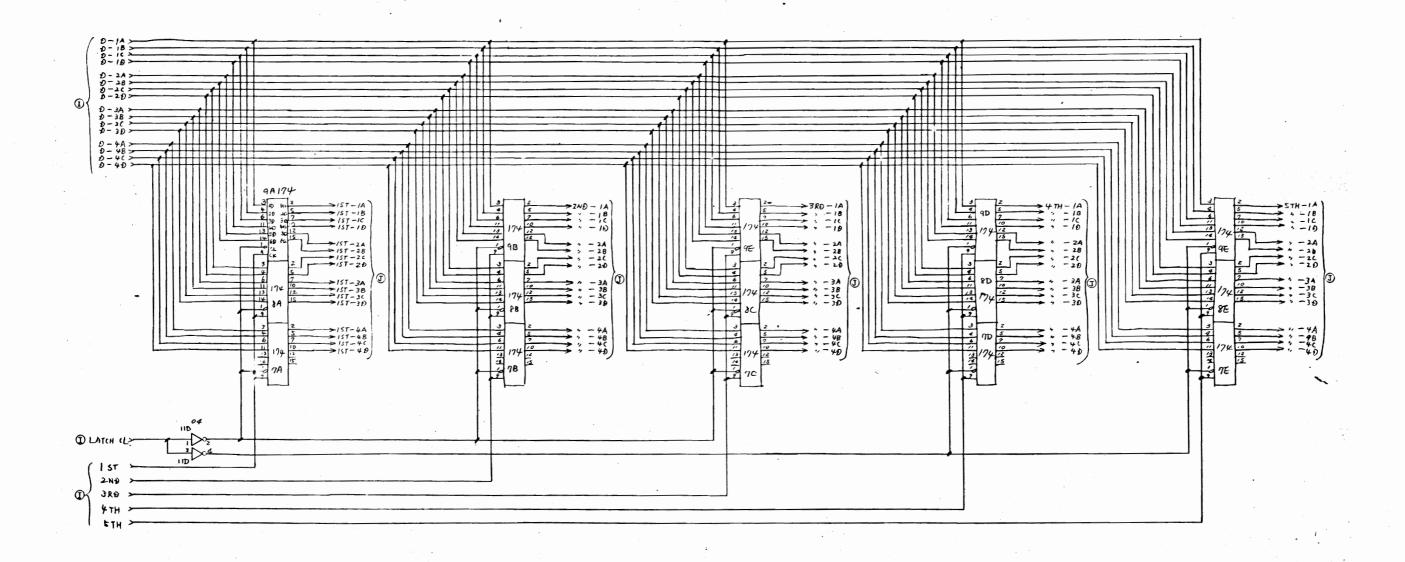



96597-P SCORE DISPLAY IC BOARD ASS'Y.(D-3/3)


MONACO GP

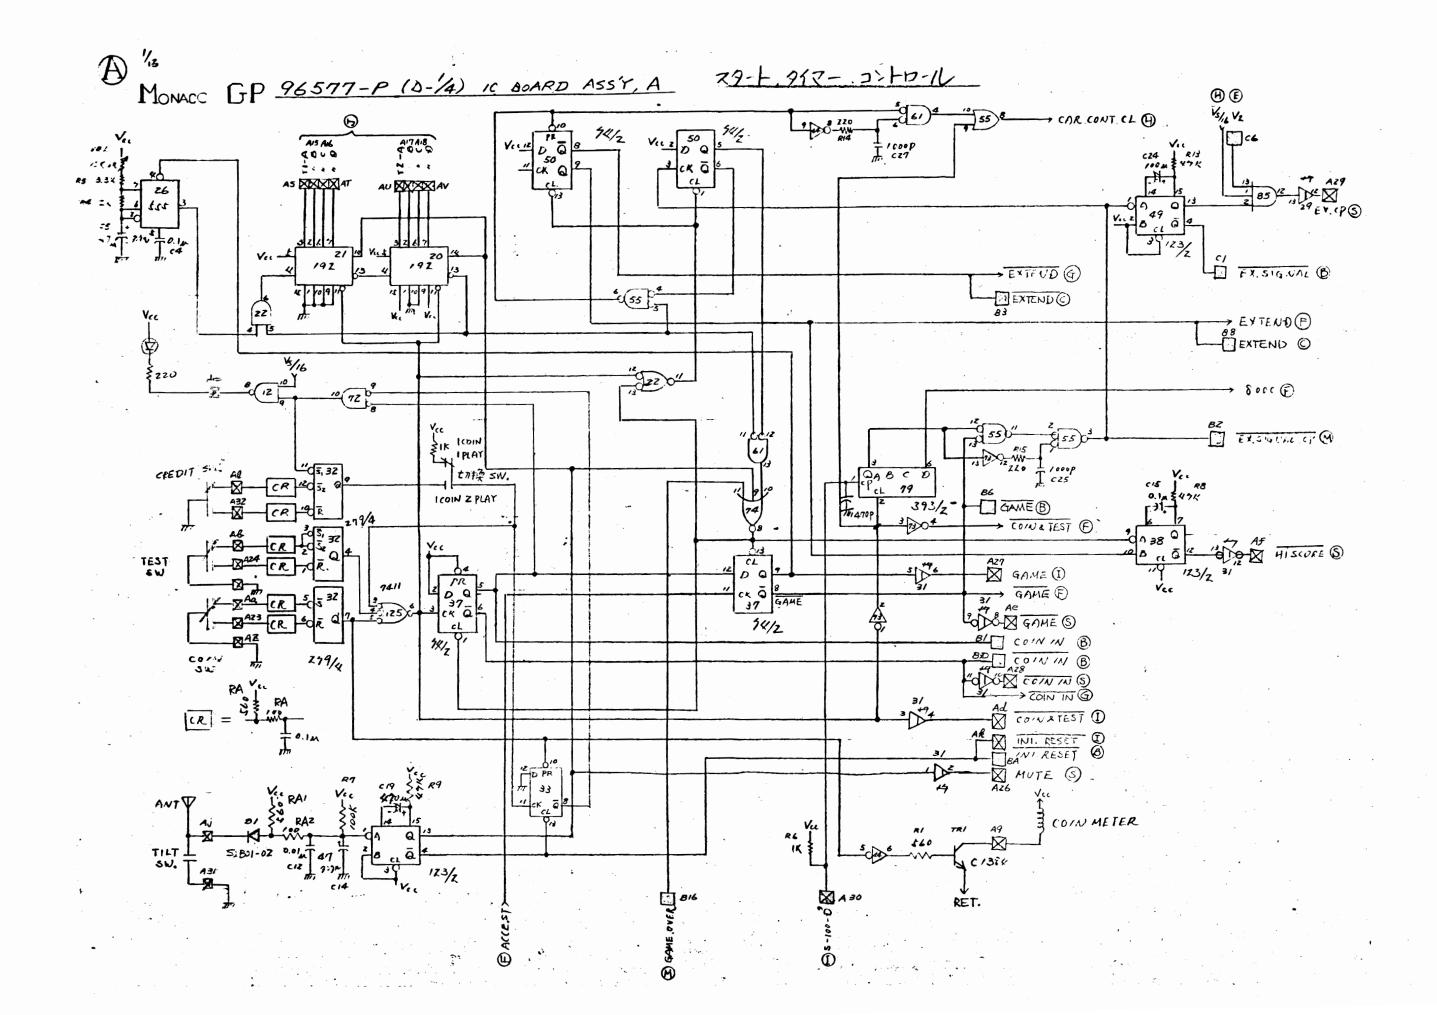


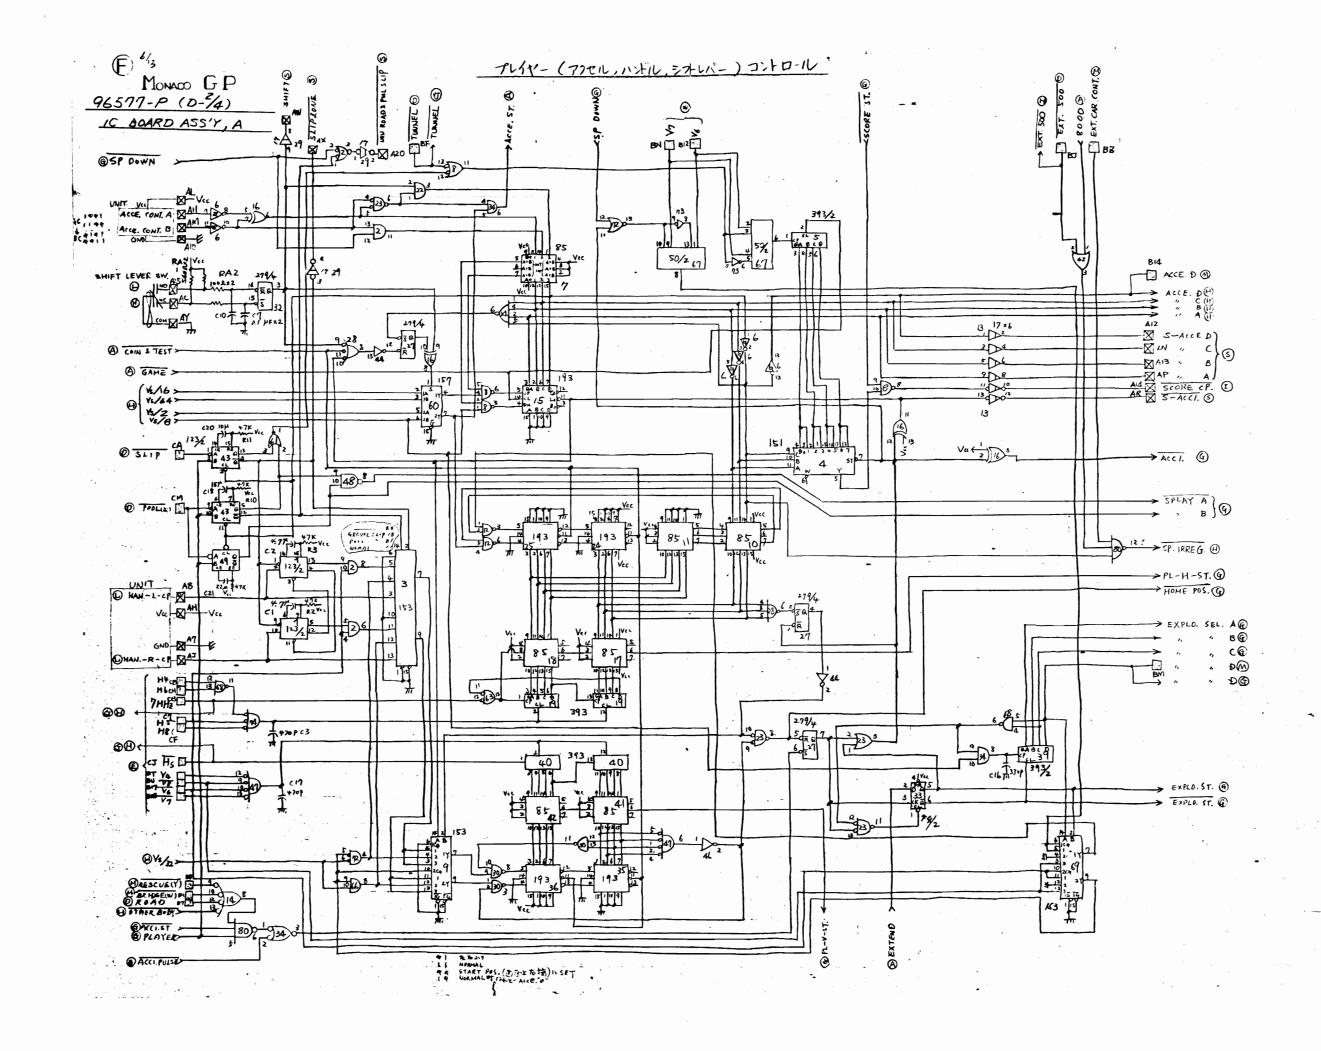


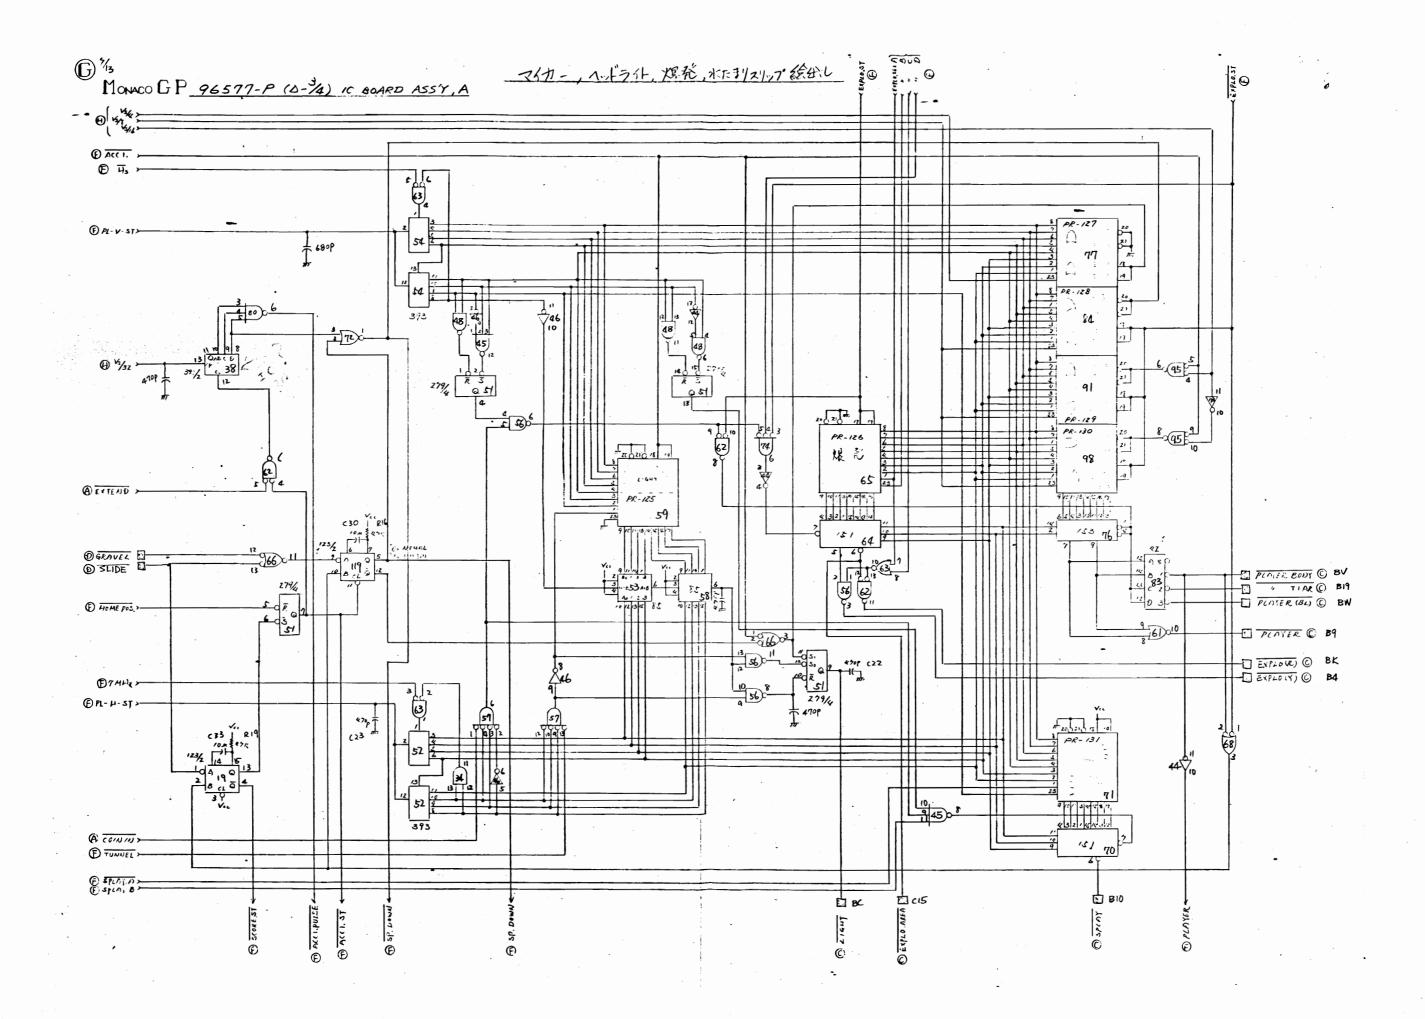


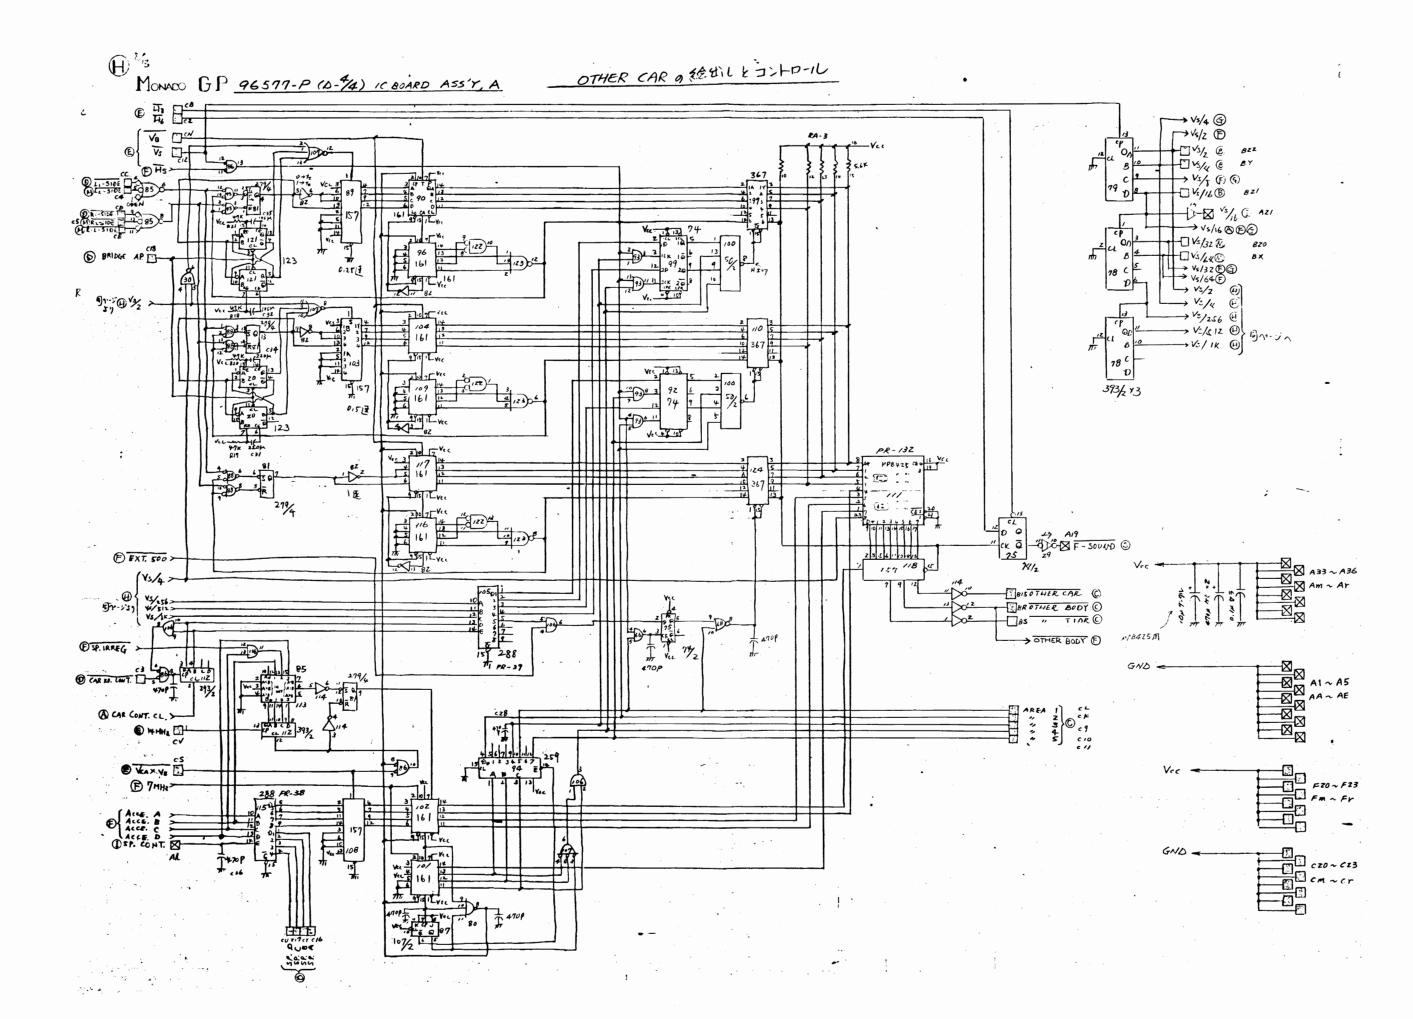

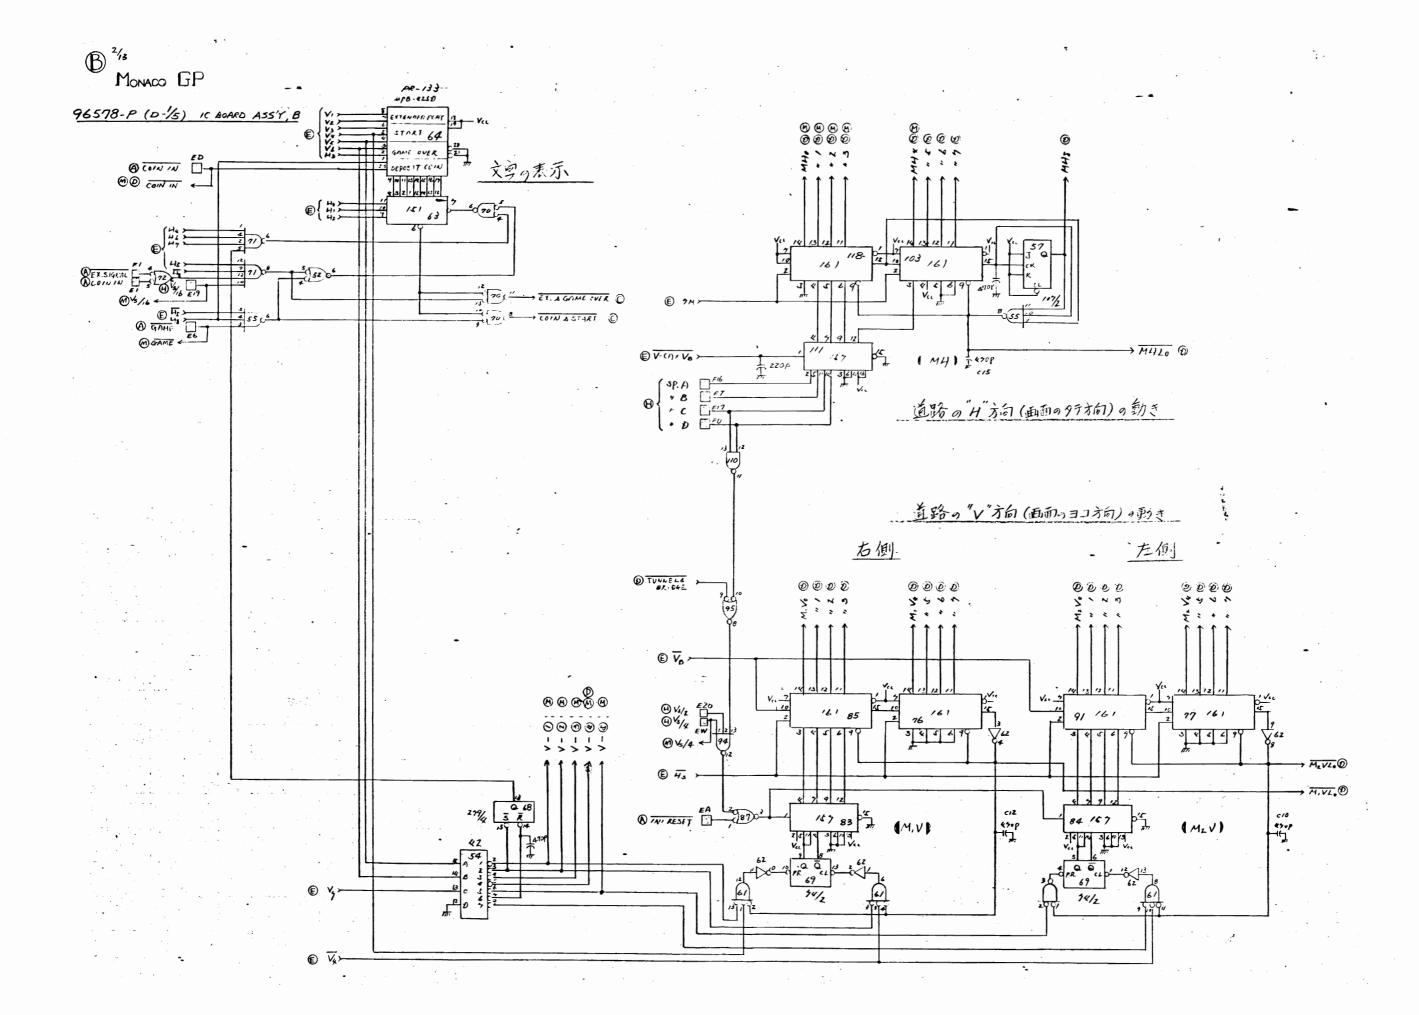

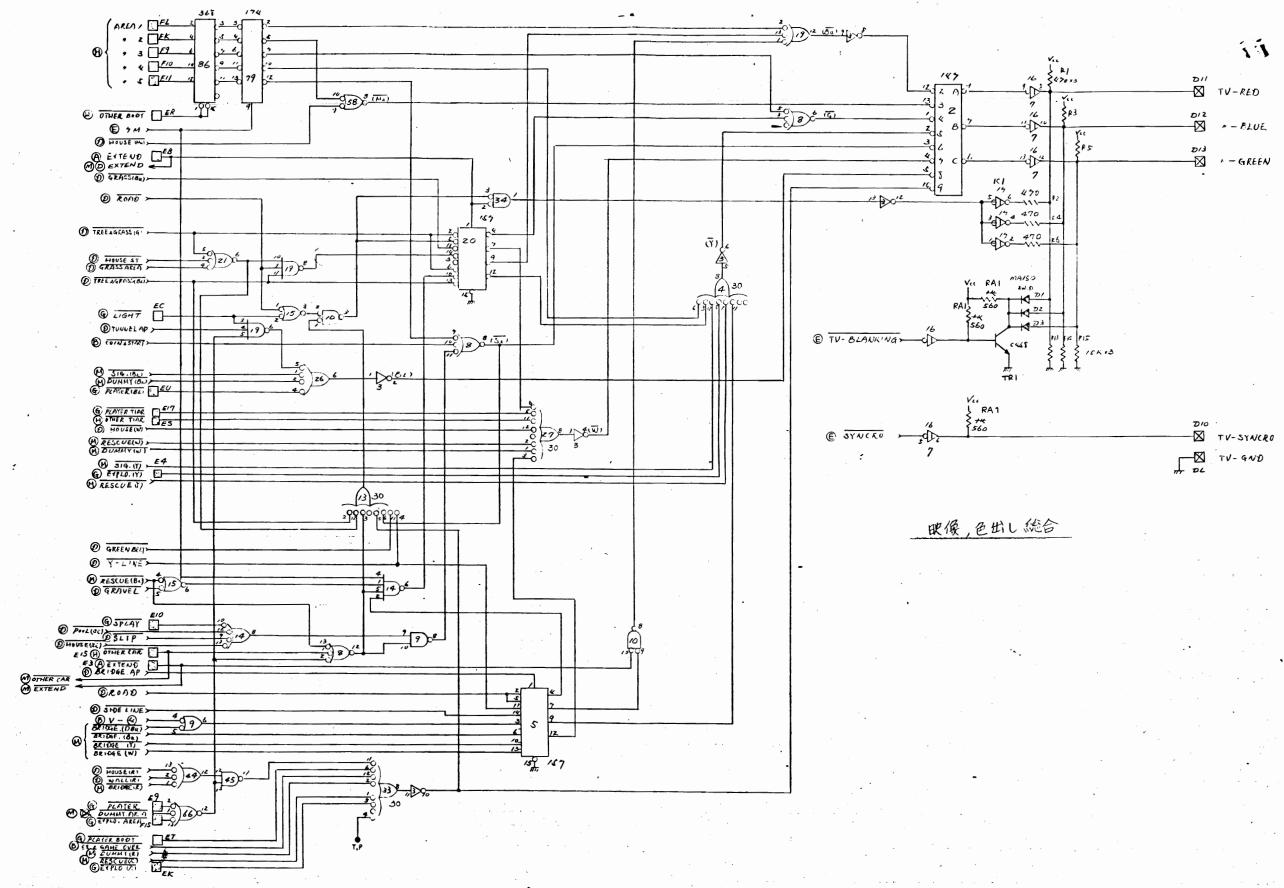

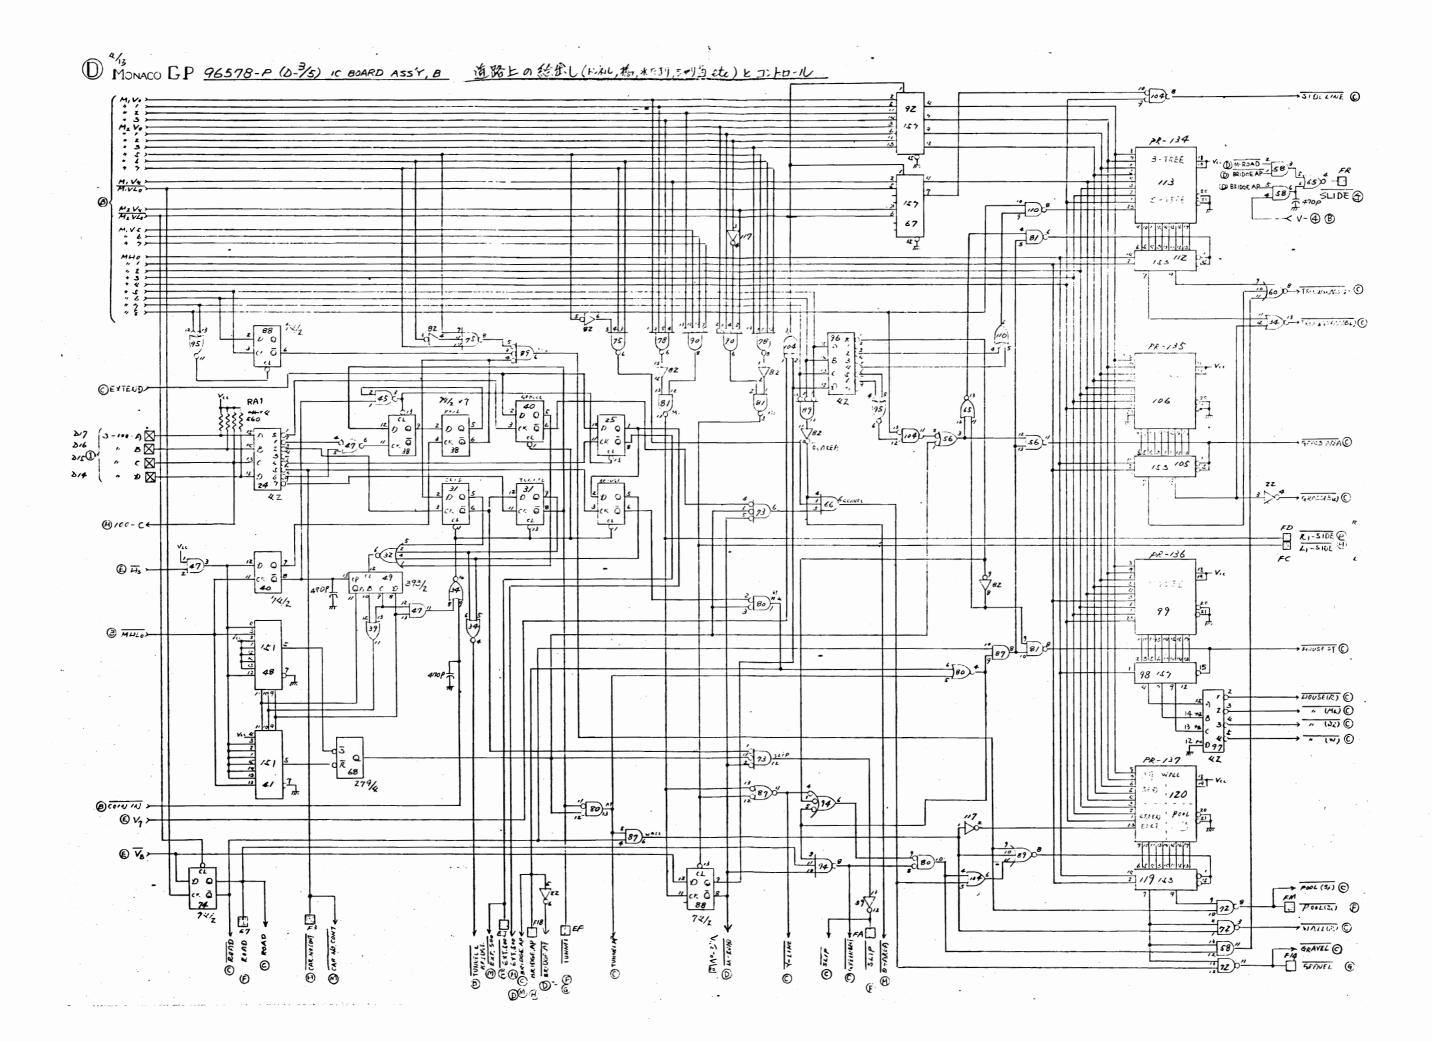

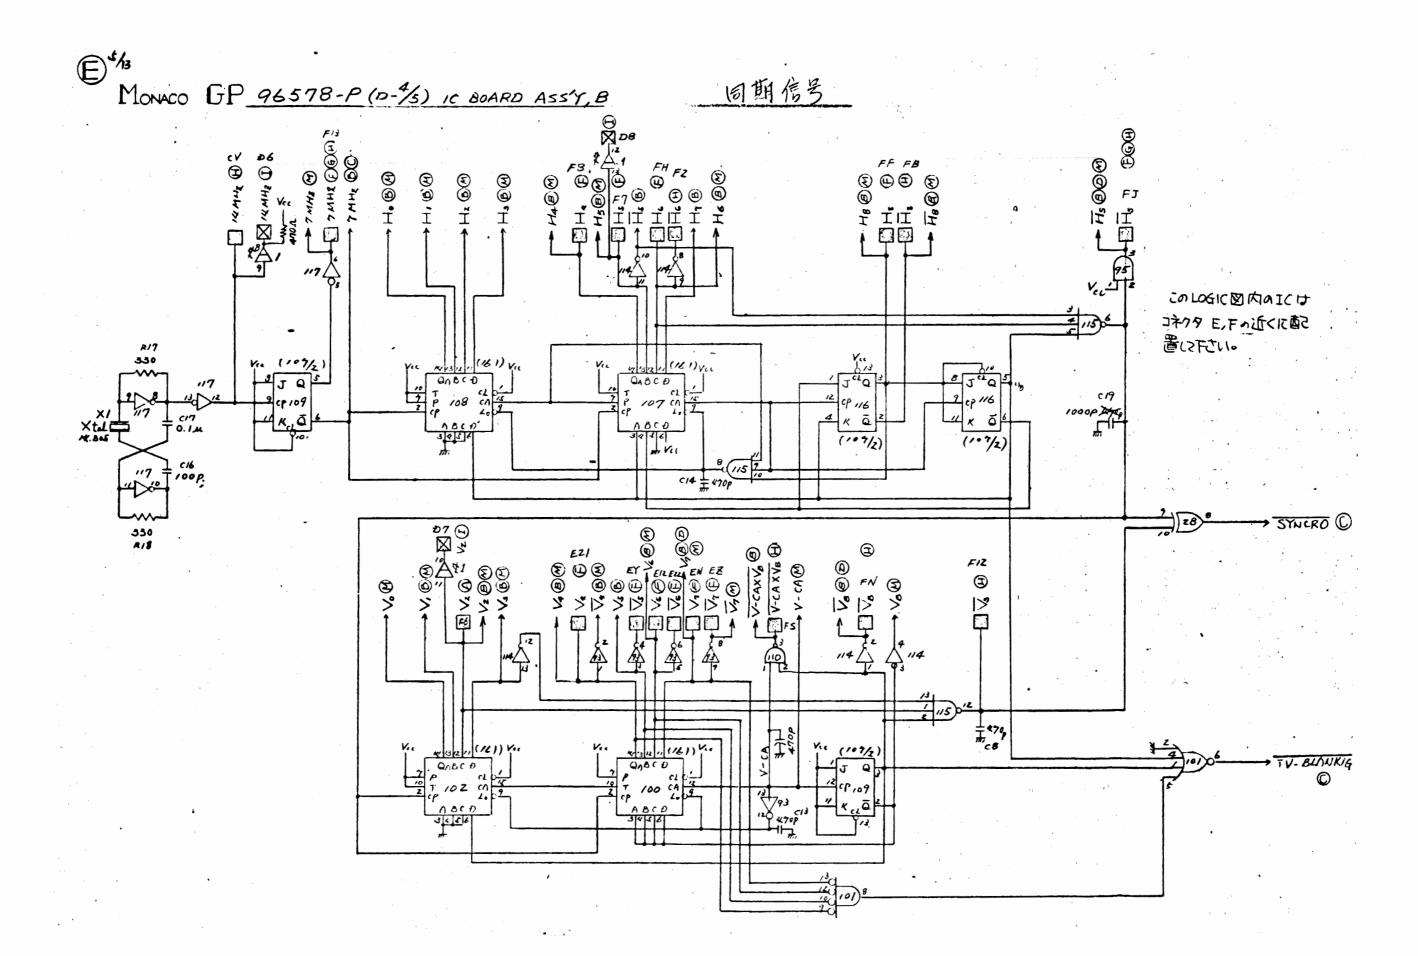

(B) COWY