


Yamaha C3 piano mics, top-down view

Carole King & James Taylor Story · full-stick lid · side wedges · approx. scale, 186 × 149 cm case · plate holes placed from a real C3 photo · mic spots finalized by ear on site



wedge L

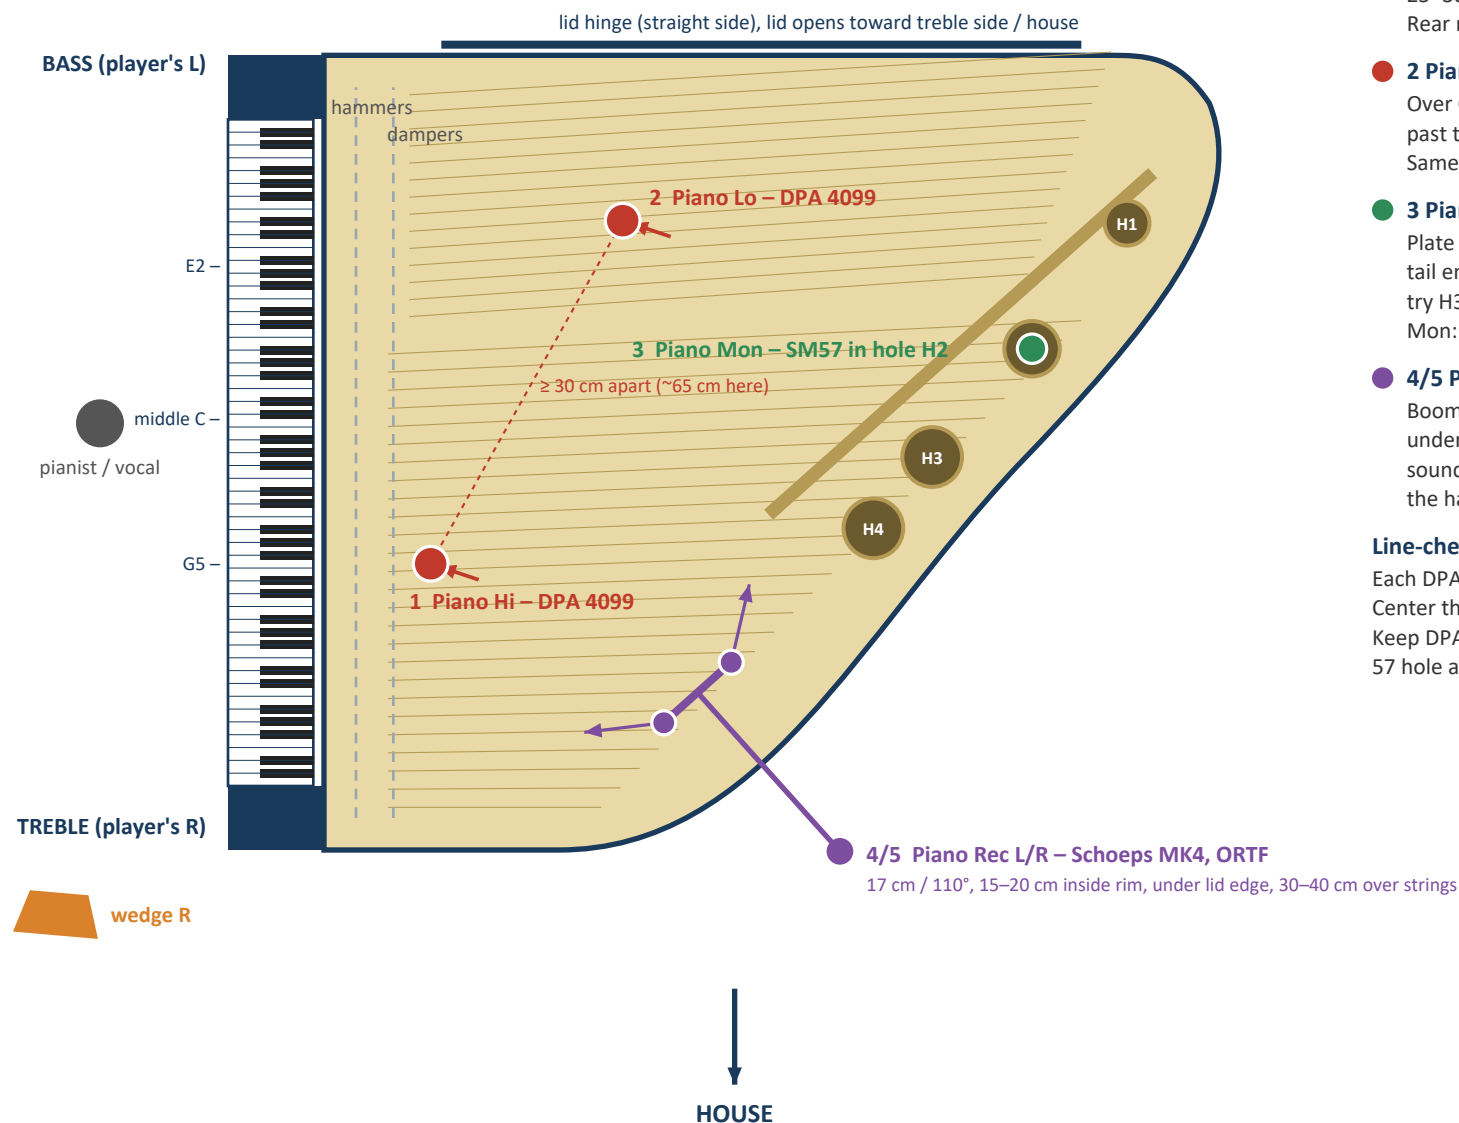

Channels and placement

- **1 Piano Hi · DPA 4099 · PA**
P-clip magnet on plate, just past the dampers around G5 (1.5 oct above mid C). 25–30 cm over strings, angled down. Rear null faces up at the lid.
- **2 Piano Lo · DPA 4099 · PA**
Over C2–G2, about 1/3 down the strings past the dampers, well into the case. Same height and angle as Hi.
- **3 Piano Mon · SM57 · wedges only**
Plate holes run along the rim at the tail end (H1 smallest to H4). Start in H2, try H3. Pointing down.
Mon: HPF 150–180, scoop 300–500.
- **4/5 Piano Rec · MK4 ORTF · multitrack**
Boom from outside the bend, bar under the lid edge, aimed at mid-soundboard behind the dampers, not the hammers. Too wide? Narrow to 90°.

Line-check order

Each DPA alone with EQ flat, then mono-sum. Center thins: flip one or move Lo a few inches. Keep DPA cables along the rim, clear of the 57 hole and the Schoeps bar. Needs 2× P-clips.