

## CLOSER REINFORCEMENTS


## CORPORATION REDIFICAME

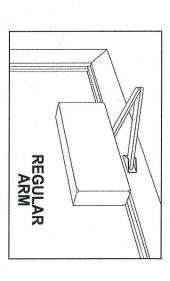


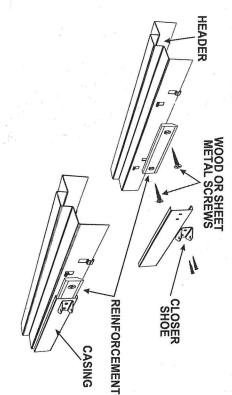

## REGULAR ARM CLOSER INSTALLATION

- 1. Position closer reinforcement on header where the door closer shoe is to be mounted.
- 2 header face. Mount the reinforcement flush with the
- 3. Drill pilot holes (2) in the header through and secure with wood or sheet metal screws the countersunk holes in the reinforcement
- Install header casing.
  Position closer shoe o closer reinforcement. holes through the casing and regular arm Position closer shoe on frame and drill pilot
- Tap these holes as per the Closer Installation Instructions.
- 7. Secure the closer shoe to the frame.

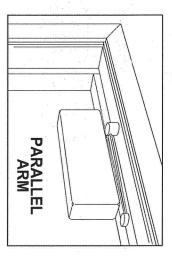

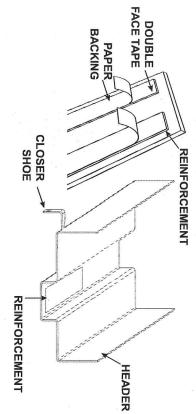

## PARALLEL ARM CLOSER INSTALLATION

- Clean with solvent. reinforcement is to be positioned on header Locate area where parallel arm closer
- 2 Expose double face tape by removing paper position to secure the sleeve to the header. backing on the two strips of tape; press into
- ω Drill and tap through frame and reinforcement for closer shoe attachment.
- 4 Install frame and door in conventiona manner.

