ASSEMBLY SPOT: hold part(s) 0 exactly on the orange area (dashed: finished assembly from above)
move robot: +x ->  pickup area: +y
board x [-10.00, 10.00] cm, y [-34.35, -5.65] cm

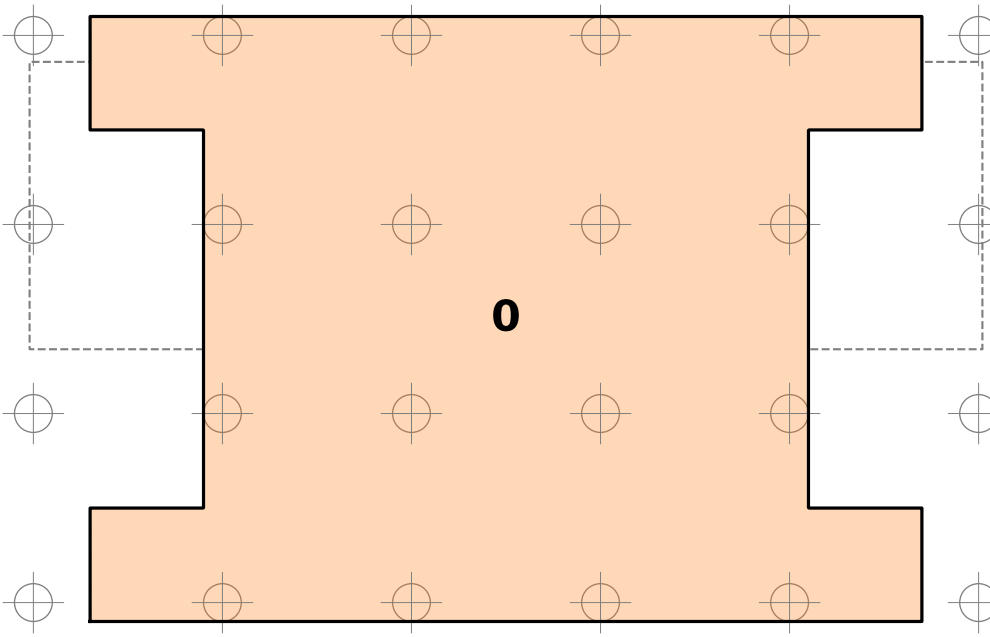


10 cm (print at 100%, no "fit to page")