


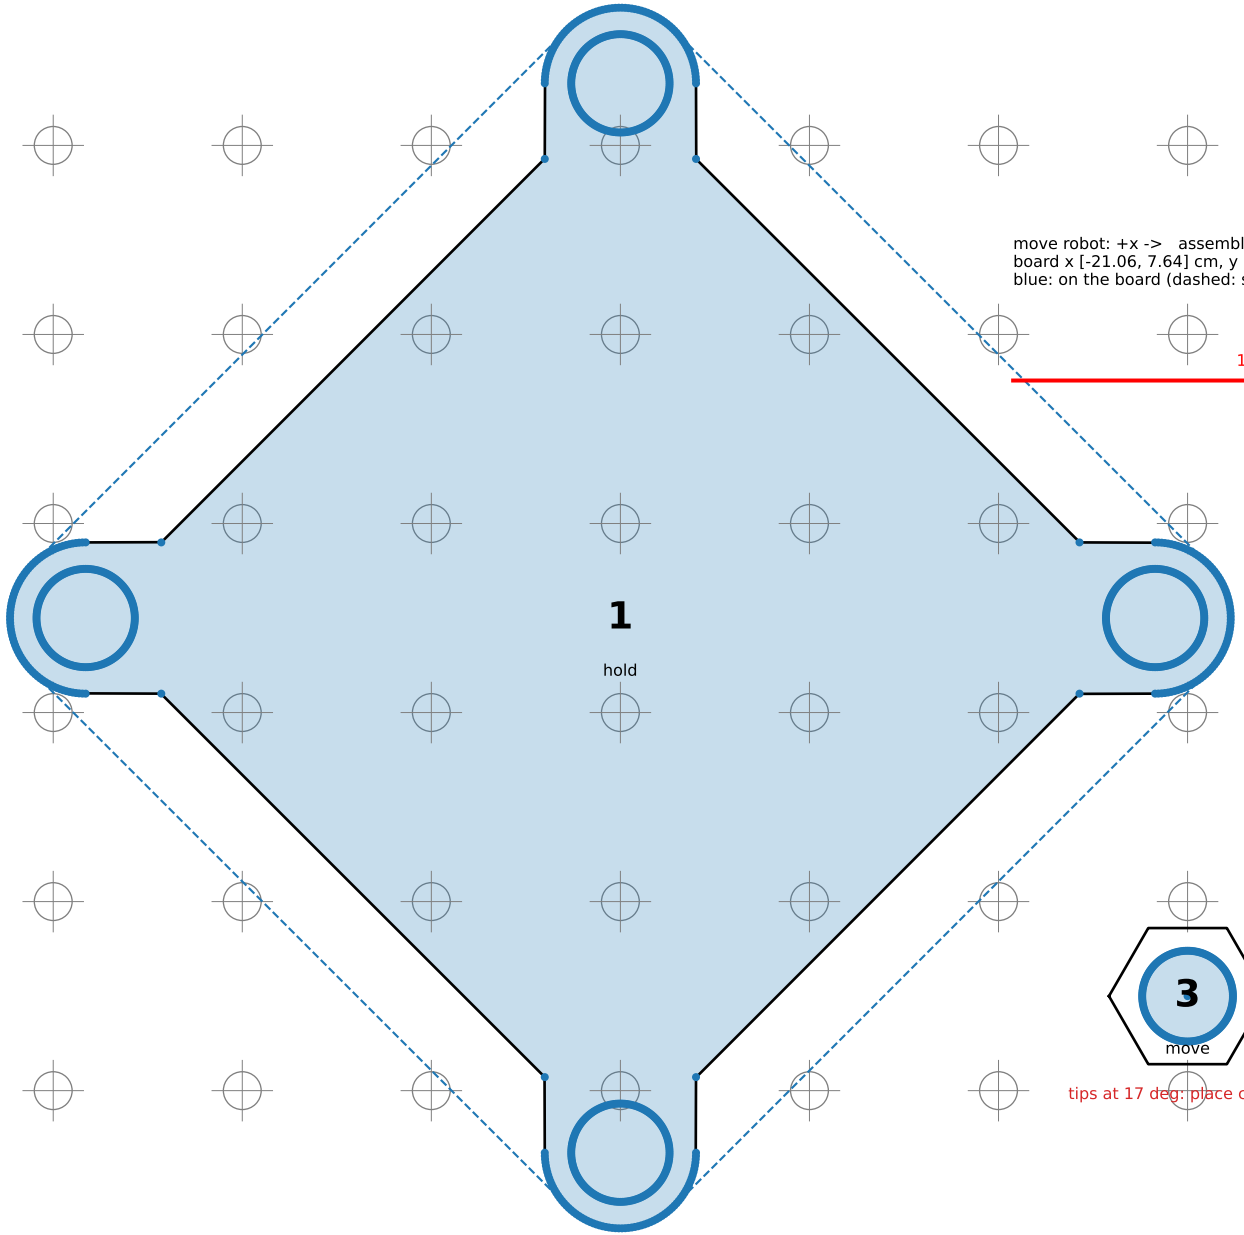


move robot: +x -> assembly spot: -y
board x [-21.06, 7.64] cm, y [-0.86, 19.14] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")

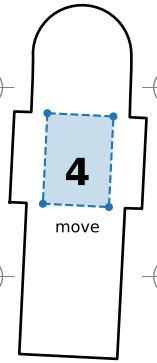

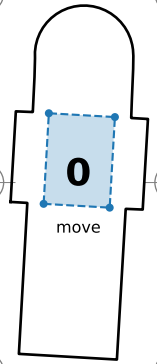


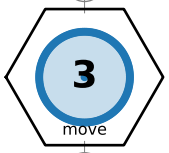


tips at 17 deg: place carefully



tips at 17 deg: place carefully

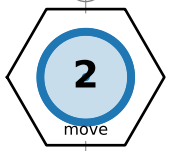

tips at 17 deg: place carefully

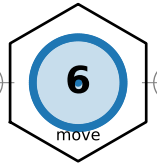

tips at 17 deg: place carefully