




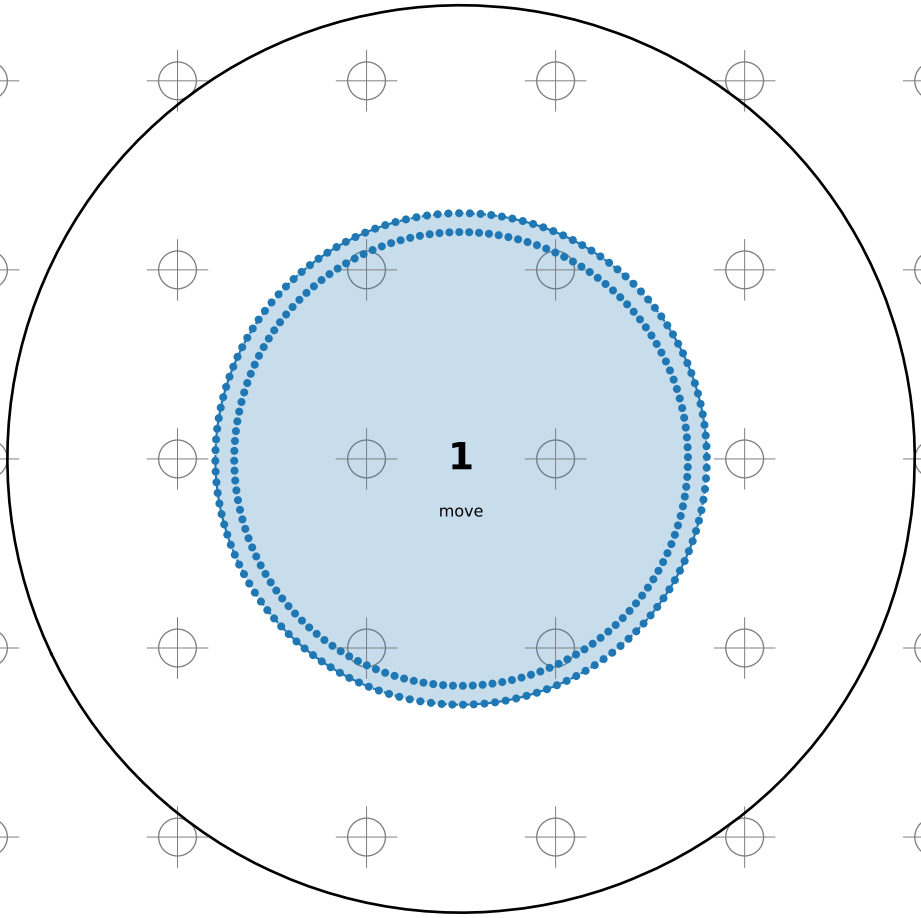

tips at 16 deg: place carefully

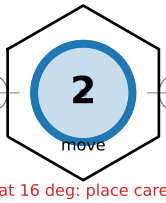


tips at 16 deg: pl

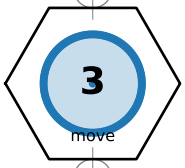


tips at 16 deg: place carefully

SHEET 1/2 (column 1/2 from the left, row 1/1 from the top); green dashed: 1 cm overlap, lay the neighbouring sheet on it, crosses on crosses
move robot: +x -> assembly spot: -y
board x [-19.78, 0.22] cm, y [-10.60, 18.10] cm
blue: on the board (dashed: support area, dots: contact corners)


10 cm (print at 100%, no "fit to page")

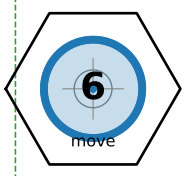


tips at 16 deg: place carefully

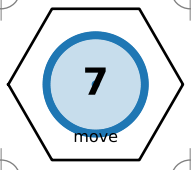


tips at 16 deg: place carefully

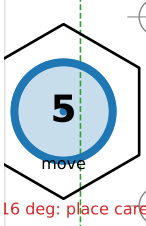

16 deg: place carefully

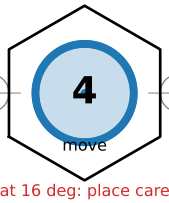

tips at 16 deg: place carefully

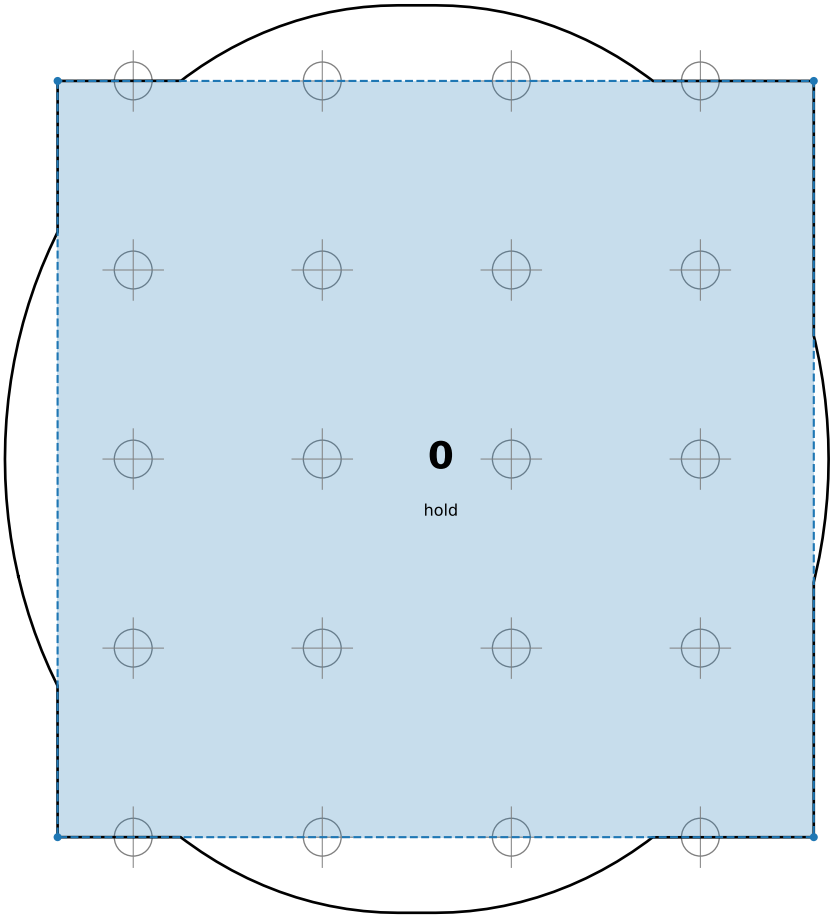

SHEET 2/2 (column 2/2 from the left, row 1/1 from the top); green dashed: 1 cm overlap, lay the neighbouring sheet on it, crosses on crosses
move robot: +x -> assembly spot: -y
board x [-0.78, 19.22] cm, y [-10.60, 18.10] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")