



tips at 18 deg: place carefully




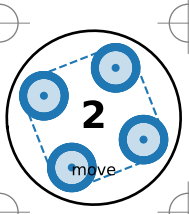



tips at 18 deg: place carefully

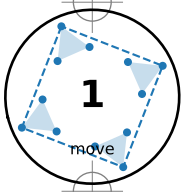

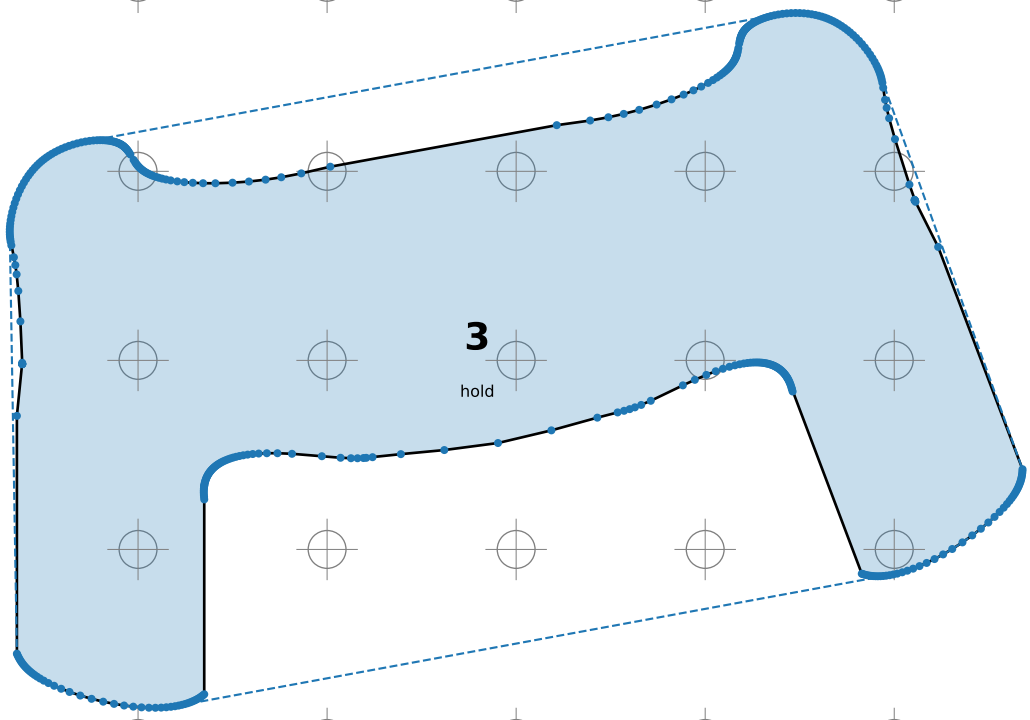

move robot: +x -> assembly spot: -y
board x [-20.27, -0.27] cm, y [12.35, 41.05] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")